

Test Procedure for the ADT7473EBZEVB Evaluation Board

OBJECTIVE

The evaluation board allows all the input and output functions of the ADT7473 to be demonstrated. The software allows control and monitoring of the ADT7473's internal registers. Using the evaluation board and its accompanying software, the ADT7473 can be interfaced to any personal computer running Windows XP or Windows 2000 via the USB port.

EVALUATION BOARD HARDWARE

The evaluation board contains:

- An ADT7473 device
- Two remote transistors for temperature sensing
- Two 5V fans and fan drive circuitry
- 12V fan connectors
- Electronic configuration switches
- Indicator LEDs
- On-board heaters (allows demonstration of fan response over temperature)
- USB interface circuitry
- External 12V power connectors (required for fans and heaters, the ADT7473 device is powered from the USB port)
- Potentiometer for voltage adjustment
- Push button for THERM assertion.

QUICK GUIDE TO SETTING UP AND USING THE ADT7473 EVALUATION KIT.

- Install software before connecting the ADT7473 evaluation board to the USB port. Software is available on the enclosed CD.
- The ADT7473 evaluation board can be powered from the USB port. A separate 12V power supply is required to run the fans.
- Open the ADT74XX software Start>All Programs> ON Semiconductor> ADT74XX EvaluationSoftware> ADT74XX Evaluation Software. The ADT74XX software, once started, looks for the device it is about to communicate with. The following screens appear.



Figure 1. Finding the device. Click the 'Next' button.



iearch Wizard				
🗖 Parallel Prin	nter Port			
🦵 On-Board SMBus		Search on the SMBus		
USB		USB support is available.		
Click 'Next' to search	for the xxx			
Cancel	< Back	Next > Finish		

Figure 2. Click 'Next', this searches the USB for and ADT74XX devices.

Search Wizard	
Search Results	
An ADT7473 was found at:2Eh, on the USB	
Please select one of the ADT7467/8s found above.	
	Skip
Click 'Finish' to Continue	
Cancel < Back Next >	lish

Figure 3. Select the device from the results and click 'Finish'

Once this is done the software starts up. To open the graphing window go to the main toolbar, >Main >Visual Display.

ADT7473 Evaluation Software						
File	Board Setup	Main	Fans	Temperature	Ab	out
		Visual Display				S 👔 🌉
		Register Access				
		Eval Board configuration				

Figure 4. Opening Graphing window

> The graphing window displays the temperature of the local and remote sensors, the fan RPM and the PWM %duty





cycle for each of the PWM channels. It also displays the different voltage readings taken from the board.



Figure 5. Graphing Window

- Limits for: Local, Remote 1, Remote 2, Fan 1, Fan 2, Fan 3, Fan 4, Vccp, Vcc, 5V, 12V and 2.5V channels can be adjusted using the slider bars in the graph. The upper limit (red) and lower limit (blue) are adjusted by clicking and dragging the slider up or down. The Status will change from green to red on an out of limit event for the corresponding channel.
- > The on-board potentiometer can be used to adjust the Vccp voltage.
- Some pins on the ADT7473 share functionality (pins 5, 9, and 15) To change the function of these pins you need to open the Eval Board Configuration window. On the main toolbar click 'Main'> 'Eval Board Configuration'





Figure 6. Eval Board Configuration Window

The onboard heaters can be turned on and off in this same window by clicking the appropriate heater (Q1 or Q2). In figure 6 heater Q1 is turned on.



Figure 7. Onboard heater control.

AUTOMATIC FAN CONTROL:

Automatic fan control can be configured by opening the automatic fan control window. The fans may be configured to be controlled by any temperature and the associated settings (T_{MIN} T_{RANGE} , PWM_{MIN}, PWM_{MAX} etc...) can be changed in this window.

(Note: slide bars should be dragged to the right to increase the value and to the left to decrease the value.)

- 'Max PWM1 Duty Cycle' changes the maximum speed that the fan can run at while the temperature reading is below the Therm limit.
- 'Min PWM1 Duty Cycle' changes the minimum speed that the fan can run at while the temperature reading is above the TMIN limit.
- > 'TMIN' indicates at what temperature at which the fan will turn on. At this temperature the fans run at the value of

ON Semiconductor



'Min PWM1 Duty Cycle'

- > 'T THERM' is the temperature at which the fan goes to full speed. (Most likely a critical temperature).
- > 'Temp Hyst' is the range the temperature reading must reduce below before the fan will decrease its speed.
- 'TRange' defines the slope of the line from 'Min PWM1 Duty Cycle' to 'Max PWM1 Duty Cycle'.
- Operating Point' is a temperature that the user wishes to maintain. This is used in an algorithm to dynamically adjust the fan speed.
- 'Min Temp Limit' if the temperature reading drops below this limit, an error flag is set in the status register and an SMBALERT interrupt is generated.
- 'Max Temp Limit' if the temperature reading exceeds this limit, an error flag is set in the status register and an SMBALERT interrupt is generated.



Figure 8. Automatic Fan Control Window

DYNAMIC TMIN CONTROL:

Dynamic Tmin control allows the ADT7473 to intelligently adapt the system's cooling solution for best system performance or lowest possible system acoustics, depending on user or design requirements. The ADT7473 can self-adjust its fan control loop to maintain either an operating temperature or a system target temperature. For example, it can be specified that the ambient temperature in a system should be maintained at 50°C. If the temperature is below 50°C, then fans might not need to run, or might run very slowly. If the temperature is higher than 50°C, the fans need to throttle up.

The dynamic Tmin control settings can be adjusted in the Automatic Fan Control window (Figure 7). The 'Enable Dynamic tmin' checkbox must be checked in order for this function to work.

ORDERING GUIDE





Model	Package Description		
ADT7473ZEVB	Evaluation Board		

 1 Z = RoHS Compliant Part.

For more information on the ADT7473 device, see the product datasheet.



ООО "ЛайфЭлектроникс"

ИНН 7805602321 КПП 780501001 Р/С 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru

www.lifeelectronics.ru