

#### InvenSense Inc.

1197 Borregas Ave, Sunnyvale, CA 94089 U.S.A. Tel: +1 (408) 988-7339 Fax: +1 (408) 988-8104 Website: www.invensense.com Document Number: RM-MPU-6000A-00 Revision: 4.0

Release Date: 03/09/2012

# MPU-6000 and MPU-6050 Register Map and Descriptions Revision 4.0



Document Number: RM-MPU-6000A-00

Revision: 4.0 Release Date: 03/09/2012

### **CONTENTS**

1	REVIS	SION HISTORY	4
2	PURF	POSE AND SCOPE	5
3	REGI	STER MAP	6
4	REGI	STER DESCRIPTIONS	
	4.1	REGISTERS 13 TO 16 – SELF TEST REGISTERS	9
	4.2	REGISTER 25 – SAMPLE RATE DIVIDER.	11
	4.3	REGISTER 26 – CONFIGURATION	13
	4.4	REGISTER 27 – GYROSCOPE CONFIGURATION.	14
	4.5	REGISTER 28 – ACCELEROMETER CONFIGURATION.	15
	4.6	REGISTER 31 – MOTION DETECTION THRESHOLD	16
	4.7	REGISTER 35 – FIFO ENABLE	
	4.8	REGISTER 36 – I <sup>2</sup> C MASTER CONTROL	
	4.9	REGISTERS 37 TO 39 – I <sup>2</sup> C SLAVE 0 CONTROL	20
	4.10	REGISTERS 40 TO 42 – I <sup>2</sup> C SLAVE 1 CONTROL	23
	4.11	REGISTERS 43 TO 45 – I <sup>2</sup> C SLAVE 2 CONTROL	23
	4.12	REGISTERS 46 TO 48 – I <sup>2</sup> C SLAVE 3 CONTROL	23
	4.13	REGISTERS 49 TO 53 – I <sup>2</sup> C SLAVE 4 CONTROL	24
	4.14	REGISTER 54 – I <sup>2</sup> C MASTER STATUS	26
	4.15	REGISTER 55 – INT PIN / BYPASS ENABLE CONFIGURATION	27
	4.16	REGISTER 56 – INTERRUPT ENABLE	28
	4.17	REGISTER 58 – INTERRUPT STATUS	29
	4.18	REGISTERS 59 TO 64 – ACCELEROMETER MEASUREMENTS	30
	4.19	REGISTERS 65 AND 66 – TEMPERATURE MEASUREMENT	31
	4.20	REGISTERS 67 TO 72 – GYROSCOPE MEASUREMENTS	32
	4.21	REGISTERS 73 TO 96 – EXTERNAL SENSOR DATA	33
	4.22	REGISTER 99 – I <sup>2</sup> C SLAVE 0 DATA OUT	35
	4.23	REGISTER 100 – I <sup>2</sup> C SLAVE 1 DATA OUT	35
	4.24	REGISTER 101 – I <sup>2</sup> C SLAVE 2 DATA OUT	36
	4.25	REGISTER 102 – I <sup>2</sup> C SLAVE 3 DATA OUT	36
	4.26	REGISTER 103 – I <sup>2</sup> C MASTER DELAY CONTROL	37
	4.27	REGISTER 104 – SIGNAL PATH RESET	38
	4.28	REGISTER 105 – MOTION DETECTION CONTROL	39
	4.29	REGISTER 106 – USER CONTROL	39



Document Number: RM-MPU-6000A-00 Revision: 4.0 Release Date: 03/09/2012

4.30	REGISTER 107 – POWER MANAGEMENT 1	41
4.31	REGISTER 108 – POWER MANAGEMENT 2	43
4.32	REGISTER 114 AND 115 – FIFO COUNT REGISTERS	44
4.33	REGISTER 116 – FIFO READ WRITE	45
131	RECISTED 117 - WHO AM I	16



Document Number: RM-MPU-6000A-00 Revision: 4.0 Release Date: 03/09/2012

### **Revision History**

Revision Date	Revision	Description
11/29/2010	1.0	Initial Release
04/20/2011	1.1	Updated register map and descriptions to reflect enhanced register functionality.
05/19/2011	2.0	Updates for Rev C silicon: Edits for readability (section 2.1) Edits for changes in functionality (section 3, 4.4, 4.6, 4.7, 4.8, 4.21, 4.22, 4.23, 4.37)
10/07/2011	3.0	Updates for Rev D silicon: Updated accelerometer sensitivity specifications (sections 4.6, 4.8, 4.10, 4.23)
10/24/2011	3.1	Edits for clarity
11/14/2011	3.2	Updated reset value for register 107 (section 3) Updated register 27 with gyro self-test bits (section 4.4) Provided gyro self-test instructions and register bits (section 4.4) Provided accel self-test instructions (section 4.5)
3/9/2012	4.0	Updated register map to include Self-Test registers (section 3) Added description of Self-Test registers (section 4.1) Revised temperature register section (section 4.19) Corrections in registers 107 and 108 (section 4.30)



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### 2 Purpose and Scope

This document provides preliminary information regarding the register map and descriptions for the Motion Processing Units™ MPU-6000™ and MPU-6050™, collectively called the MPU-60X0™ or MPU™.

The MPU devices provide the world's first integrated 6-axis motion processor solution that eliminates the package-level gyroscope and accelerometer cross-axis misalignment associated with discrete solutions. The devices combine a 3-axis gyroscope and a 3-axis accelerometer on the same silicon die together with an onboard Digital Motion Processor<sup>TM</sup> (DMP<sup>TM</sup>) capable of processing complex 9-axis sensor fusion algorithms using the field-proven and proprietary MotionFusion<sup>TM</sup> engine.

The MPU-6000 and MPU-6050's integrated 9-axis MotionFusion algorithms access external magnetometers or other sensors through an auxiliary master I<sup>2</sup>C bus, allowing the devices to gather a full set of sensor data without intervention from the system processor. The devices are offered in the same 4x4x0.9 mm QFN footprint and pinout as the current MPU-3000™ family of integrated 3-axis gyroscopes, providing a simple upgrade path and facilitating placement on already space constrained circuit boards.

For precision tracking of both fast and slow motions, the MPU-60X0 features a user-programmable gyroscope full-scale range of  $\pm 250$ ,  $\pm 500$ ,  $\pm 1000$ , and  $\pm 2000^{\circ}$ /sec (dps). The parts also have a user-programmable accelerometer full-scale range of  $\pm 2g$ ,  $\pm 4g$ , and  $\pm 16g$ .

The MPU-6000 family is comprised of two parts, the MPU-6000 and MPU-6050. These parts are identical to each other with two exceptions. The MPU-6050 supports I<sup>2</sup>C communications at up to 400kHz and has a VLOGIC pin that defines its interface voltage levels; the MPU-6000 supports SPI at up to 20MHz in addition to I<sup>2</sup>C, and has a single supply pin, VDD, which is both the device's logic reference supply and the analog supply for the part.

For more detailed information for the MPU-60X0 devices, please refer to the "MPU-6000 and MPU-6050 Product Specification".





Document Number: RM-MPU-6000A-00

Revision: 4.0 Release Date: 03/09/2012

#### 3 **Register Map**

The register map for the MPU-60X0 is listed below.

Addr (Hex)	Addr (Dec.)	Register Name	Serial I/F	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0D	13	SELF_TEST_X	R/W		XA_TEST[4-2]				XG_TEST[4-0]	•	
0E	14	SELF_TEST_Y	R/W		YA_TEST[4-2]				YG_TEST[4-0]		
0F	15	SELF_TEST_Z	R/W		ZA_TEST[4-2]				ZG_TEST[4-0]		
10	16	SELF_TEST_A	R/W	RESE	RVED	XA_TE	ST[1-0]	YA_TE	ST[1-0]	ZA_TE	ST[1-0]
19	25	SMPLRT_DIV	R/W		SMPLRT_DIV[7:0]						
1A	26	CONFIG	R/W	-	-	E)	(T_SYNC_SEΤ[2	2:0]		DLPF_CFG[2:0]	
1B	27	GYRO_CONFIG	R/W	-	-	-	FS_SI	EL [1:0]	-	-	-
1C	28	ACCEL_CONFIG	R/W	XA_ST	YA_ST	ZA_ST	AFS_S	SEL[1:0]			
1F	31	MOT_THR	R/W				MOT_1	HR[7:0]			
23	35	FIFO_EN	R/W	TEMP _FIFO_EN	XG _FIFO_EN	YG _FIFO_EN	ZG _FIFO_EN	ACCEL _FIFO_EN	SLV2 _FIFO_EN	SLV1 _FIFO_EN	SLV0 _FIFO_EN
24	36	I2C_MST_CTRL	R/W	MULT _MST_EN	WAIT _FOR_ES	SLV_3 _FIFO_EN	I2C_MST _P_NSR		I2C_MST	_CLK[3:0]	
25	37	I2C_SLV0_ADDR	R/W	I2C_SLV0 _RW			120	C_SLV0_ADDR[6	6:0]		
26	38	I2C_SLV0_REG	R/W				I2C_SLV0	_REG[7:0]			
27	39	I2C_SLV0_CTRL	R/W	I2C_SLV0 _EN	I2C_SLV0 _BYTE_SW	I2C_SLV0 _REG_DIS	I2C_SLV0 _GRP	<b>&gt;</b>	I2C_SLV0	D_LEN[3:0]	
28	40	I2C_SLV1_ADDR	R/W	I2C_SLV1 _RW			I2C_SLV1_ADDR[6:0]				
29	41	I2C_SLV1_REG	R/W				l2C_SLV1_REG[7:0]				
2A	42	I2C_SLV1_CTRL	R/W	I2C_SLV1 _EN	I2C_SLV1 _BYTE_SW	I2C_SLV1 _REG_DIS	12C_SLV1 _GRP 12C_SLV1_LEN[3:0]				
2B	43	I2C_SLV2_ADDR	R/W	I2C_SLV2 _RW			120	C_SLV2_ADDR[6	6:0]		
2C	44	I2C_SLV2_REG	R/W				I2C_SLV2	P_REG[7:0]			
2D	45	I2C_SLV2_CTRL	R/W	I2C_SLV2 _EN	I2C_SLV2 _BYTE_SW	I2C_SLV2 _REG_DIS	I2C_SLV2 _GRP		I2C_SLV2	2_LEN[3:0]	
2E	46	I2C_SLV3_ADDR	R/W	I2C_SLV3 _RW			120	C_SLV3_ADDR[6	6:0]		
2F	47	I2C_SLV3_REG	R/W				I2C_SLV3	3_REG[7:0]			
30	48	I2C_SLV3_CTRL	R/W	I2C_SLV3 _EN	I2C_SLV3 _BYTE_SW	I2C_SLV3 _REG_DIS	I2C_SLV3 _GRP		I2C_SLV3	3_LEN[3:0]	
31	49	I2C_SLV4_ADDR	R/W	I2C_SLV4 _RW			120	C_SLV4_ADDR[6	6:0]		
32	50	I2C_SLV4_REG	R/W				I2C_SLV4	_REG[7:0]			
33	51	I2C_SLV4_DO	R/W				I2C_SLV	4_DO[7:0]			
34	52	I2C_SLV4_CTRL	R/W	I2C_SLV4 _EN	I2C_SLV4 _INT_EN	I2C_SLV4 _REG_DIS		Ľ	2C_MST_DLY[4:	0]	
35	53	I2C_SLV4_DI	R				I2C_SLV4_DI[7:0]				
36	54	I2C_MST_STATUS	R	PASS_ THROUGH	I2C_SLV4 _DONE	I2C_LOST _ARB	I2C_SLV4 _NACK	I2C_SLV3 _NACK	I2C_SLV2 _NACK	I2C_SLV1 _NACK	I2C_SLV0 _NACK
37	55	INT_PIN_CFG	R/W	INT_LEVEL	INT_OPEN	LATCH _INT_EN	INT_RD _CLEAR	FSYNC_ INT_LEVEL	FSYNC _INT_EN	I2C _BYPASS _EN	-
38	56	INT_ENABLE	R/W	-	MOT_EN	-	FIFO _OFLOW _EN	I2C_MST _INT_EN	-	-	DATA _RDY_EN



Document Number: RM-MPU-6000A-00 Revision: 4.0 Release Date: 03/09/2012

Addr (Hex)	Addr (Dec.)	Register Name	Serial I/F	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
ЗА	58	INT_STATUS	R	-	MOT_INT	-	FIFO _OFLOW _INT	I2C_MST _INT	-	-	DATA _RDY_INT	
3B	59	ACCEL_XOUT_H	R		ACCEL_XOUT[15:8]							
3C	60	ACCEL_XOUT_L	R				ACCEL_X	KOUT[7:0]				
3D	61	ACCEL_YOUT_H	R				ACCEL_Y	OUT[15:8]				
3E	62	ACCEL_YOUT_L	R				ACCEL_	YOUT[7:0]				
3F	63	ACCEL_ZOUT_H	R				ACCEL_Z	OUT[15:8]				
40	64	ACCEL_ZOUT_L	R				ACCEL_	ZOUT[7:0]				
41	65	TEMP_OUT_H	R		TEMP_OUT[15:8]							
42	66	TEMP_OUT_L	R		TEMP_OUT[7:0]							
43	67	GYRO_XOUT_H	R		GYRO_XOUT[15:8]							
44	68	GYRO_XOUT_L	R				GYRO_>	(OUT[7:0]				
45	69	GYRO_YOUT_H	R		GYRO_YOUT[15:8]							
46	70	GYRO_YOUT_L	R				GYRO_Y	OUT[7:0]				
47	71	GYRO_ZOUT_H	R		GYRO_ZOUT[15:8]							
48	72	GYRO_ZOUT_L	R				GYRO_Z	OUT[7:0]				
49	73	EXT_SENS_DATA_00	R		EXT_SENS_DATA_00[7:0]							
4A	74	EXT_SENS_DATA_01	R		EXT_SENS_DATA_01[7:0]							
4B	75	EXT_SENS_DATA_02	R		EXT_SENS_DATA_02[7:0]							
4C	76	EXT_SENS_DATA_03	R				EXT_SENS_	DATA_03[7:0]				
4D	77	EXT_SENS_DATA_04	R				EXT_SENS_	DATA_04[7:0]				
4E	78	EXT_SENS_DATA_05	R				EXT_SENS_	DATA_05[7:0]				
4F	79	EXT_SENS_DATA_06	R				EXT_SENS_	DATA_06[7:0]				
50	80	EXT_SENS_DATA_07	R				EXT_SENS_	DATA_07[7:0]				
51	81	EXT_SENS_DATA_08	R				EXT_SENS_	DATA_08[7:0]				
52	82	EXT_SENS_DATA_09	R				EXT_SENS_	DATA_09[7:0]				
53	83	EXT_SENS_DATA_10	R				EXT_SENS_	DATA_10[7:0]				
54	84	EXT_SENS_DATA_11	R				EXT_SENS_	DATA_11[7:0]				
55	85	EXT_SENS_DATA_12	R				EXT_SENS_	DATA_12[7:0]				
56	86	EXT_SENS_DATA_13	R				EXT_SENS_	DATA_13[7:0]				
57	87	EXT_SENS_DATA_14	R				EXT_SENS_	DATA_14[7:0]				
58	88	EXT_SENS_DATA_15	R				EXT_SENS_	DATA_15[7:0]				
59	89	EXT_SENS_DATA_16	R				EXT_SENS_	DATA_16[7:0]				
5A	90	EXT_SENS_DATA_17	R				EXT_SENS_	DATA_17[7:0]				
5B	91	EXT_SENS_DATA_18	R				EXT_SENS_	DATA_18[7:0]				
5C	92	EXT_SENS_DATA_19	R		EXT_SENS_DATA_19[7:0]							
5D	93	EXT_SENS_DATA_20	R		EXT_SENS_DATA_20[7:0]							
5E	94	EXT_SENS_DATA_21	R	EXT_SENS_DATA_21[7:0]								
5F	95	EXT_SENS_DATA_22	R	EXT_SENS_DATA_22[7:0]								
60	96	EXT_SENS_DATA_23	R	EXT_SENS_DATA_23[7:0]								
63	99	I2C_SLV0_DO	R/W				I2C_SLV	0_DO[7:0]				
64	100	I2C_SLV1_DO	R/W				I2C_SLV	1_DO[7:0]				



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

Addr (Hex)	Addr (Dec.)	Register Name	Serial I/F	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
65	101	I2C_SLV2_DO	R/W		I2C_SLV2_D0[7:0]							
66	102	I2C_SLV3_DO	R/W		I2C_SLV3_DO[7:0]							
67	103	I2C_MST_DELAY_CT RL	R/W	DELAY_ES _SHADOW	-	-	I2C_SLV4 _DLY_EN	I2C_SLV3 _DLY_EN	I2C_SLV2 _DLY_EN	I2C_SLV1 _DLY_EN	I2C_SLV0 _DLY_EN	
68	104	SIGNAL_PATH_RES ET	R/W	-	-	-	-	-	GYRO _RESET	ACCEL _RESET	TEMP _RESET	
69	105	MOT_DETECT_CTRL	R/W	-	-	ACCEL_ON	_DELAY[1:0]					
6A	106	USER_CTRL	R/W	-	FIFO_EN	I2C_MST _EN	I2C_IF _DIS	-	FIFO _RESET	I2C_MST _RESET	SIG_COND _RESET	
6B	107	PWR_MGMT_1	R/W	DEVICE _RESET	SLEEP	CYCLE	-	TEMP_DIS		CLKSEL[2:0]		
6C	108	PWR_MGMT_2	R/W	LP_WAKE	_CTRL[1:0]	STBY_XA	STBY_YA	STBY_ZA	STBY_XG	STBY_YG	STBY_ZG	
72	114	FIFO_COUNTH	R/W				FIFO_CO	UNT[15:8]				
73	115	FIFO_COUNTL	R/W		FIFO_COUNT[7:0]							
74	116	FIFO_R_W	R/W		FIFO_DATA[7:0]							
75	117	WHO_AM_I	R	-			WHO_A	M_I[6:1]			-	

Note: Register Names ending in \_H and \_L contain the high and low bytes, respectively, of an internal register value.

In the detailed register tables that follow, register names are in capital letters, while register values are in capital letters and italicized. For example, the ACCEL\_XOUT\_H register (Register 59) contains the 8 most significant bits, ACCEL\_XOUT[15:8], of the 16-bit X-Axis accelerometer measurement, ACCEL\_XOUT.

The reset value is 0x00 for all registers other than the registers below.

- Register 107: 0x40.
- Register 117: 0x68.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### 4 Register Descriptions

This section describes the function and contents of each register within the MPU-60X0.

Note: The device will come up in sleep mode upon power-up.

### 4.1 Registers 13 to 16 – Self Test Registers SELF TEST X, SELF TEST Y, SELF TEST Z, and SELF TEST A

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
0D	13	XA_TEST[4-2]			XG_TEST[4-0]						
0E	14	Υ	YA_TEST[4-2]			YG_TEST[4-0]					
0F	15	Z	ZA_TEST[4-2]			ZG_TEST[4-0]					
10	16	RESER	RVED XA_TES		ST[1-0]	YA_TE	ST[1-0]	ZA_TES	ST[1-0]		

#### **Description:**

These registers are used for gyroscope and accelerometer self-tests that permit the user to test the mechanical and electrical portions of the gyroscope and the accelerometer. The following sections describe the self-test process.

#### 1. Gyroscope Hardware Self-Test: Relative Method

Gyroscope self-test permits users to test the mechanical and electrical portions of the gyroscope. Code for operating self-test is included within the MotionApps™ software provided by InvenSense. Please refer to the next section (*Obtaining the Gyroscope Factory Trim (FT) Value*) if not using MotionApps software.

When self-test is activated, the on-board electronics will actuate the appropriate sensor. This actuation will move the sensor's proof masses over a distance equivalent to a pre-defined Coriolis force. This proof mass displacement results in a change in the sensor output, which is reflected in the output signal. The output signal is used to observe the self-test response.

The self-test response (STR) is defined as follows:

Gyroscope Output with Self-Test Enabled - Gyroscope Output with Self-Test Disabled

This self test-response is used to determine whether the part has passed or failed self-test by finding the change from factory trim of the self-test response as follows:

Change from Factory Trim of the Self-Test Response(%) = 
$$\frac{(STR - FT)}{FT}$$

where,

 $FT = Factory\ trim\ value\ of\ selftest\ response, available\ via\ MotionApps\ software$ 

This change from factory trim of the self-test response must be within the limits provided in the MPU-6000/MPU-6050 Product Specification document for the part to pass self-test. Otherwise, the part is deemed to have failed self-test.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### Obtaining the Gyroscope Factory Trim (FT) Value

If InvenSense MotionApps software is not used, the procedure detailed below should be followed to obtain the Factory trim value of the self test response (FT) mentioned above. For the specific registers mentioned below, please refer to registers 13-15.

The Factory trim value of the self test response (FT) is calculated as shown below. FT[Xg], FT[Yg], and FT[Zg] refer to the factory trim (FT) values for the gyroscope X, Y, and Z axes, respectively. XG\_TEST is the decimal version of XG\_TEST[4-0], YG\_TEST is the decimal version of YG\_TEST[4-0], and ZG\_TEST is the decimal version of ZG\_TEST[4-0].

When performing self test for the gyroscope, the full-scale range should be set to ±250dps.

$$\begin{cases} \text{FT [Xg]} = 25 * 131 * 1.046^{(XG\_TEST-1)} & \text{if XG\_TEST} \neq 0 \\ \text{FT [Xg]} = 0 & \text{if XG\_TEST} \neq 0 \end{cases}$$

$$\begin{cases} \text{FT [Yg]} = -25 * 131 * 1.046^{(YG\_TEST-1)} & \text{if YG\_TEST} \neq 0 \\ \text{FT [Yg]} = 0 & \text{if YG\_TEST} \neq 0 \end{cases}$$

$$\begin{cases} \text{FT [Zg]} = 25 * 131 * 1.046^{(ZG\_TEST-1)} & \text{if ZG\_TEST} \neq 0 \\ \text{FT [Zg]} = 0 & \text{if ZG\_TEST} \neq 0 \end{cases}$$

#### 2. Accelerometer Hardware Self-Test: Relative Method

Accelerometer self-test permits users to test the mechanical and electrical portions of the accelerometer. Code for operating self-test is included within the MotionApps software provided by InvenSense. Please refer to the next section (titled Obtaining the Accelerometer Factory Trim (FT) Value) if not using MotionApps software.

When self-test is activated, the on-board electronics will actuate the appropriate sensor. This actuation simulates an external force. The actuated sensor, in turn, will produce a corresponding output signal. The output signal is used to observe the self-test response.

The self-test response (STR) is defined as follows:

This self test-response is used to determine whether the part has passed or failed self-test by finding the change from factory trim of the self-test response as follows:

Change from Factory Trim of the Self-Test Response 
$$(\%) = \frac{(STR - FT)}{FT}$$

 $FT = Factory\ trim\ value\ of\ selftest\ response, available\ via\ MotionApps\ software$ 

This change from factory trim of the self-test response must be within the limits provided in the MPU-6000/MPU-6050 Product Specification document for the part to pass self-test. Otherwise, the part is deemed to have failed self-test.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### Obtaining the Accelerometer Factory Trim (FT) Value

If InvenSense MotionApps software is not used, the procedure detailed below should be followed to obtain the Factory trim value of the self test response (FT) mentioned above. For the specific registers mentioned below, please refer to registers 13-16.

The Factory trim value of the self test response (FT) is calculated as shown below. FT[Xa], FT[Ya], and FT[Za] refer to the factory trim (FT) values for the accelerometer X, Y, and Z axes, respectively. In the equations below, the factory trim values for the accel should be in decimal format, and they are determined by concatenating the upper accelerometer self test bits (bits 4-2) with the lower accelerometer self test bits (bits 1-0).

When performing accelerometer self test, the full-scale range should be set to ±8g.

$$\begin{cases} FT[Xa] = 4096 * 0.34 * \frac{0.92 {(\frac{XA\_TEST-1}{2^5-2})}}{0.34} & \text{if } XA\_TEST \neq 0. \\ FT[Xa] = 0 & \text{if } XA\_TEST = 0. \end{cases}$$

$$\begin{cases} FT[Ya] = 4096 * 0.34 * \frac{0.92}{0.34} \frac{(YA\_TEST-1)}{2^{5}-2} & \text{if } YA\_TEST \neq 0. \\ FT[Ya] = 0 & \text{if } YA\_TEST = 0. \end{cases}$$

$$\begin{cases} FT[Za] = 4096 * 0.34 * \frac{0.92}{0.34} \frac{(ZA\_TEST-1)}{2^{5}-2} & \text{if } ZA\_TEST \neq 0. \\ FT[Za] = 0 & \text{if } ZA\_TEST = 0. \end{cases}$$

#### Parameters:

XA_TEST	5-bit unsigned value. FT[Xa] is determined by using this value as explained above.
XG_TEST	5-bit unsigned value. FT[Xg] is determined by using this value as explained above.
YA_TEST	5-bit unsigned value. FT[Ya] is determined by using this value as explained above.
YG_TEST	5-bit unsigned value. FT[Yg] is determined by using this value as explained above.
ZA_TEST	5-bit unsigned value. FT[Za] is determined by using this value as explained above.
ZG_TEST	5-bit unsigned value. FT[Zg] is determined by using this value as explained above.

### 4.2 Register 25 – Sample Rate Divider SMPRT DIV

#### Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
19	25		SMPLRT_DIV[7:0]						

#### **Description:**



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

This register specifies the divider from the gyroscope output rate used to generate the Sample Rate for the MPU-60X0.

The sensor register output, FIFO output, DMP sampling and Motion detection are all based on the Sample Rate.

The Sample Rate is generated by dividing the gyroscope output rate by SMPLRT\_DIV:

Sample Rate = Gyroscope Output Rate / (1 + SMPLRT\_DIV)

where Gyroscope Output Rate = 8kHz when the DLPF is disabled (*DLPF\_CFG* = 0 or 7), and 1kHz when the DLPF is enabled (see Register 26).

<u>Note:</u> The accelerometer output rate is 1kHz. This means that for a Sample Rate greater than 1kHz, the same accelerometer sample may be output to the FIFO, DMP, and sensor registers more than once.

For a diagram of the gyroscope and accelerometer signal paths, see Section 8 of the MPU-6000/MPU-6050 Product Specification document.

#### **Parameters:**

SMPLRT\_DIV

8-bit unsigned value. The Sample Rate is determined by dividing the gyroscope output rate by this value.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.3 Register 26 – Configuration CONFIG

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
1A	26		-	EXT_SYNC_SET[2:0]			DLPF_CFG[2:0]		

#### **Description:**

This register configures the external Frame Synchronization (FSYNC) pin sampling and the Digital Low Pass Filter (DLPF) setting for both the gyroscopes and accelerometers.

An external signal connected to the FSYNC pin can be sampled by configuring EXT\_SYNC\_SET.

Signal changes to the FSYNC pin are latched so that short strobes may be captured. The latched FSYNC signal will be sampled at the Sampling Rate, as defined in register 25. After sampling, the latch will reset to the current FSYNC signal state.

The sampled value will be reported in place of the least significant bit in a sensor data register determined by the value of *EXT\_SYNC\_SET* according to the following table.

EXT_SYNC_SET	FSYNC Bit Location				
0	Input disabled				
1	TEMP_OUT_L[0]				
2	GYRO_XOUT_L[0]				
3	GYRO_YOUT_L[0]				
4	GYRO_ZOUT_L[0]				
5	ACCEL_XOUT_L[0]				
6	ACCEL_YOUT_L[0]				
7	ACCEL_ZOUT_L[0]				

The DLPF is configured by *DLPF\_CFG*. The accelerometer and gyroscope are filtered according to the value of *DLPF\_CFG* as shown in the table below.

DLPF_CFG	Acceleror (F <sub>s</sub> = 1k		Gyroscope				
	Bandwidth (Hz)	Delay (ms)	Bandwidth (Hz)	Delay (ms)	Fs (kHz)		
0	260	0	256	0.98	8		
1	184	2.0	188	1.9	1		
2	94	3.0	98	2.8	1		
3	44	4.9	42	4.8	1		
4	21	8.5	20	8.3	1		
5	10	13.8	10	13.4	1		
6	5	19.0	5	18.6	1		
7	RESERVED		RESERV	'ED	8		

Bit 7 and bit 6 are reserved.

#### **Parameters:**

EXT\_SYNC\_SET 3-bit unsigned value. Configures the FSYNC pin sampling.

DLPF\_CFG 3-bit unsigned value. Configures the DLPF setting.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.4 Register 27 – Gyroscope Configuration GYRO CONFIG

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
1B	27	XG_ST	YG_ST	ZG_ST	FS_S	EL[1:0]	-	-	-

#### **Description:**

This register is used to trigger gyroscope self-test and configure the gyroscopes' full scale range.

Gyroscope self-test permits users to test the mechanical and electrical portions of the gyroscope. The self-test for each gyroscope axis can be activated by controlling the  $XG\_ST$ ,  $YG\_ST$ , and  $ZG\_ST$  bits of this register. Self-test for each axis may be performed independently or all at the same time.

When self-test is activated, the on-board electronics will actuate the appropriate sensor. This actuation will move the sensor's proof masses over a distance equivalent to a pre-defined Coriolis force. This proof mass displacement results in a change in the sensor output, which is reflected in the output signal. The output signal is used to observe the self-test response.

The self-test response is defined as follows:

Self-test response = Sensor output with self-test enabled - Sensor output without self-test enabled

The self-test limits for each gyroscope axis is provided in the electrical characteristics tables of the MPU-6000/MPU-6050 Product Specification document. When the value of the self-test response is within the min/max limits of the product specification, the part has passed self test. When the self-test response exceeds the min/max values specified in the document, the part is deemed to have failed self-test.

FS\_SEL selects the full scale range of the gyroscope outputs according to the following table.

FS_SEL	Full Scale Range
0	± 250 °/s
1	± 500 °/s
2	± 1000 °/s
3	± 2000 °/s

Bits 2 through 0 are reserved.

#### **Parameters:**

XG_ST	Setting this bit causes the X axis gyroscope to perform self test.
YG_ST	Setting this bit causes the Y axis gyroscope to perform self test.
ZG_ST	Setting this bit causes the Z axis gyroscope to perform self test.
FS_SEL	2-bit unsigned value. Selects the full scale range of gyroscopes.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.5 Register 28 – Accelerometer Configuration ACCEL CONFIG

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
1C	28	XA_ST	YA_ST	ZA_ST	AFS_SEL[1:0]			-	

#### **Description:**

This register is used to trigger accelerometer self test and configure the accelerometer full scale range. This register also configures the Digital High Pass Filter (DHPF).

Accelerometer self-test permits users to test the mechanical and electrical portions of the accelerometer. The self-test for each accelerometer axis can be activated by controlling the XA\_ST, YA\_ST, and ZA\_ST bits of this register. Self-test for each axis may be performed independently or all at the same time.

When self-test is activated, the on-board electronics will actuate the appropriate sensor. This actuation simulates an external force. The actuated sensor, in turn, will produce a corresponding output signal. The output signal is used to observe the self-test response.

The self-test response is defined as follows:

Self-test response = Sensor output with self-test enabled - Sensor output without self-test enabled

The self-test limits for each accelerometer axis is provided in the electrical characteristics tables of the MPU-6000/MPU-6050 Product Specification document. When the value of the self-test response is within the min/max limits of the product specification, the part has passed self test. When the self-test response exceeds the min/max values specified in the document, the part is deemed to have failed self-test.

AFS\_SEL selects the full scale range of the accelerometer outputs according to the following table.

AFS_SEL	Full Scale Range
0	±2g
1	± 4 <i>g</i>
2	±8g
3	± 16 <i>g</i>



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### **Parameters:**

XA\_ST
 When set to 1, the X- Axis accelerometer performs self test.
 YA\_ST
 When set to 1, the Y- Axis accelerometer performs self test.
 ZA ST
 When set to 1, the Z- Axis accelerometer performs self test.

AFS\_SEL 2-bit unsigned value. Selects the full scale range of accelerometers.

### 4.6 Register 31 – Motion Detection Threshold MOT THR

#### Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
1F	31	MOT_THR[7:0]							

#### **Description:**

This register configures the detection threshold for Motion interrupt generation. The mg per LSB increment for MOT\_THR can be found in the Electrical Specifications table of the MPU-6000/MPU-6050 Product Specification document.

Motion is detected when the absolute value of any of the accelerometer measurements exceeds this Motion detection threshold.

The Motion interrupt will indicate the axis and polarity of detected motion in MOT\_DETECT \_STATUS (Register 97).

For more details on the Motion detection interrupt, see Section 8.3 of the MPU-6000/MPU-6050 Product Specification document as well as Registers 56 and 58 of this document.

#### **Parameters:**

MOT\_THR 8-bit unsigned value. Specifies the Motion detection threshold.

### 4.7 Register 35 – FIFO Enable FIFO EN

#### Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
23	35	TEMP_ FIFO_EN	XG_ FIFO_EN	YG_ FIFO_EN	ZG_ FIFO_EN	ACCEL _FIFO_EN	SLV2 _FIFO_EN	SLV1 _FIFO_EN	SLV0 _FIFO_EN

#### **Description:**

This register determines which sensor measurements are loaded into the FIFO buffer.

Data stored inside the sensor data registers (Registers 59 to 96) will be loaded into the FIFO buffer if a sensor's respective FIFO\_EN bit is set to 1 in this register.

When a sensor's FIFO\_EN bit is enabled in this register, data from the sensor data registers will be loaded into the FIFO buffer. The sensors are sampled at the Sample Rate as defined in Register 25. For further information regarding sensor data registers, please refer to Registers 59 to 96



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

When an external Slave's corresponding FIFO\_EN bit (*SLVx\_FIFO\_EN*, where x=0, 1, or 2) is set to 1, the data stored in its corresponding data registers (EXT\_SENS\_DATA registers, Registers 73 to 96) will be written into the FIFO buffer at the Sample Rate. EXT\_SENS\_DATA register association with I<sup>2</sup>C Slaves is determined by the I2C\_SLVx\_CTRL registers (where x=0, 1, or 2; Registers 39, 42, and 45). For information regarding EXT\_SENS\_DATA registers, please refer to Registers 73 to 96

Note that the corresponding FIFO\_EN bit (*SLV3\_FIFO\_EN*) is found in I2C\_MST\_CTRL (Register 36). Also note that Slave 4 behaves in a different manner compared to Slaves 0-3. Please refer to Registers 49 to 53 for further information regarding Slave 4 usage.

#### Parameters:

TEMP_FIFO_EN	When set to 1, this bit enables TEMP_OUT_H and TEMP_OUT_L (Registers 65 and 66) to be written into the FIFO buffer.
XG_ FIFO_EN	When set to 1, this bit enables GYRO_XOUT_H and GYRO_XOUT_L (Registers 67 and 68) to be written into the FIFO buffer.
YG_ FIFO_EN	When set to 1, this bit enables GYRO_YOUT_H and GYRO_YOUT_L (Registers 69 and 70) to be written into the FIFO buffer.
ZG_ FIFO_EN	When set to 1, this bit enables GYRO_ZOUT_H and GYRO_ZOUT_L (Registers 71 and 72) to be written into the FIFO buffer.
ACCEL_ FIFO_EN	When set to 1, this bit enables ACCEL_XOUT_H, ACCEL_XOUT_L, ACCEL_YOUT_H, ACCEL_YOUT_L, ACCEL_ZOUT_H, and ACCEL_ZOUT_L (Registers 59 to 64) to be written into the FIFO buffer.
SLV2_ FIFO_EN	When set to 1, this bit enables EXT_SENS_DATA registers (Registers 73 to 96) associated with Slave 2 to be written into the FIFO buffer.
SLV1_ FIFO_EN	When set to 1, this bit enables EXT_SENS_DATA registers (Registers 73 to 96) associated with Slave 1 to be written into the FIFO buffer.
SLV0_ FIFO_EN	When set to 1, this bit enables EXT_SENS_DATA registers (Registers 73 to 96) associated with Slave 0 to be written into the FIFO buffer.

<u>Note</u>: For further information regarding the association of EXT\_SENS\_DATA registers to particular slave devices, please refer to Registers 73 to 96.

### 4.8 Register 36 – I<sup>2</sup>C Master Control I2C\_MST\_CTRL

Type: Read/Write

Regis (Hex	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
24	36	MULT _MST_EN	WAIT _FOR_ES	SLV_3 _FIFO_EN	I2C_MST _P_NSR		I2C_MST	_CLK[3:0]	

#### **Description:**

This register configures the auxiliary I<sup>2</sup>C bus for single-master or multi-master control. In addition, the register is used to delay the Data Ready interrupt, and also enables the writing of Slave 3 data into the FIFO buffer. The register also configures the auxiliary I<sup>2</sup>C Master's transition from one slave read to the next, as well as the MPU-60X0's 8MHz internal clock.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

Multi-master capability allows multiple  $I^2C$  masters to operate on the same bus. In circuits where multi-master capability is required, set  $MULT\_MST\_EN$  to 1. This will increase current drawn by approximately  $30\mu A$ .

In circuits where multi-master capability is required, the state of the I<sup>2</sup>C bus must always be monitored by each separate I<sup>2</sup>C Master. Before an I<sup>2</sup>C Master can assume arbitration of the bus, it must first confirm that no other I<sup>2</sup>C Master has arbitration of the bus. When *MULT\_MST\_EN* is set to 1, the MPU-60X0's bus arbitration detection logic is turned on, enabling it to detect when the bus is available.

When the WAIT\_FOR\_ES bit is set to 1, the Data Ready interrupt will be delayed until External Sensor data from the Slave Devices are loaded into the EXT\_SENS\_DATA registers. This is used to ensure that both the internal sensor data (i.e. from gyro and accel) and external sensor data have been loaded to their respective data registers (i.e. the data is synced) when the Data Ready interrupt is triggered.

When the Slave 3 FIFO enable bit (*SLV\_3\_FIFO\_EN*) is set to 1, Slave 3 sensor measurement data will be loaded into the FIFO buffer each time. EXT\_SENS\_DATA register association with I<sup>2</sup>C Slaves is determined by I2C\_SLV3\_CTRL (Register 48).

For further information regarding EXT\_SENS\_DATA registers, please refer to Registers 73 to 96.

The corresponding FIFO\_EN bits for Slave 0, Slave 1, and Slave 2 can be found in Register 35.

The *I2C\_MST\_P\_NSR* bit configures the I<sup>2</sup>C Master's transition from one slave read to the next slave read. If the bit equals 0, there will be a restart between reads. If the bit equals 1, there will be a stop followed by a start of the following read. When a write transaction follows a read transaction, the stop followed by a start of the successive write will be always used.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

*I2C\_MST\_CLK* is a 4 bit unsigned value which configures a divider on the MPU-60X0 internal 8MHz clock. It sets the I<sup>2</sup>C master clock speed according to the following table:

I2C_MST_CLK	I <sup>2</sup> C Master Clock Speed	8MHz Clock Divider
0	348 kHz	23
1	333 kHz	24
2	320 kHz	25
3	308 kHz	26
4	296 kHz	27
5	286 kHz	28
6	276 kHz	29
7	267 kHz	30
8	258 kHz	31
9	500 kHz	16
10	471 kHz	17
11	444 kHz	18
12	421 kHz	19
13	400 kHz	20
14	381 kHz	21
15	364 kHz	22

#### **Parameters:**

MUL\_MST\_EN When set to 1, this bit enables multi-master capability.

WAIT\_FOR\_ES When set to 1, this bit delays the Data Ready interrupt until External Sensor

data from the Slave devices have been loaded into the EXT SENS DATA

registers.

SLV3\_FIFO\_EN When set to 1, this bit enables EXT\_SENS\_DATA registers associated with

Slave 3 to be written into the FIFO. The corresponding bits for Slaves 0-2 can

be found in Register 35.

I2C\_MST\_P\_NSR Controls the I<sup>2</sup>C Master's transition from one slave read to the next slave

au.

When this bit equals 0, there is a restart between reads.

When this bit equals 1, there is a stop and start marking the beginning of the

next read.

When a write follows a read, a stop and start is always enforced.

12C\_MST\_CLK 4 bit unsigned value. Configures the I<sup>2</sup>C master clock speed divider.

<u>Note</u>: For further information regarding the association of EXT\_SENS\_DATA registers to particular slave devices, please refer to Registers 73 to 96.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.9 Registers 37 to 39 – I<sup>2</sup>C Slave 0 Control I2C SLV0 ADDR, I2C SLV0 REG, and I2C SLV0 CTRL

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
25	37	I2C_SLV0 _RW							
26	38				I2C_SLV	)_REG[7:0]			
27	39	I2C_SLV0 _EN	I2C_SLV0 _BYTE _SW	I2C_SLV0_ REG_DIS	I2C_SLV 0_GRP		I2C_SLV0	_LEN[3:0]	

#### **Description:**

These registers configure the data transfer sequence for Slave 0. Slaves 1, 2, and 3 also behave in a similar manner to Slave 0. However, Slave 4's characteristics differ greatly from those of Slaves 0-3. For further information regarding Slave 4, please refer to registers 49 to 53.

I<sup>2</sup>C slave data transactions between the MPU-60X0 and Slave 0 are set as either read or write operations by the *I2C\_SLV0\_RW* bit. When this bit is 1, the transfer is a read operation. When the bit is 0, the transfer is a write operation.

I2C\_SLV0\_ADDR is used to specify the I<sup>2</sup>C slave address of Slave 0.

Data transfer starts at an internal register within Slave 0. This address of this register is specified by *I2C SLV0 REG*.

The number of bytes transferred is specified by  $I2C\_SLV0\_LEN$ . When more than 1 byte is transferred ( $I2C\_SLV0\_LEN > 1$ ), data is read from (written to) sequential addresses starting from  $I2C\_SLV0\_REG$ .

In read mode, the result of the read is placed in the lowest available EXT\_SENS\_DATA register. For further information regarding the allocation of read results, please refer to the EXT\_SENS\_DATA register description (Registers 73 – 96).

In write mode, the contents of I2C\_SLVO\_DO (Register 99) will be written to the slave device.

 $I2C\_SLV0\_EN$  enables Slave 0 for  $I^2C$  data transaction. A data transaction is performed only if more than zero bytes are to be transferred ( $I2C\_SLV0\_LEN > 0$ ) between an enabled slave device ( $I2C\_SLV0\_EN = 1$ ).

*I2C\_SLV0\_BYTE\_SW* configures byte swapping of word pairs. When byte swapping is enabled, the high and low bytes of a word pair are swapped. Please refer to *I2C\_SLV0\_GRP* for the pairing convention of the word pairs. When this bit is cleared to 0, bytes transferred to and from Slave 0 will be written to EXT\_SENS\_DATA registers in the order they were transferred.

When *I2C\_SLVO\_REG\_DIS* is set to 1, the transaction will read or write data only. When cleared to 0, the transaction will write a register address prior to reading or writing data. This bit should equal 0 when specifying the register address within the Slave device to/from which the ensuing data transaction will take place.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

*I2C\_SLV0\_GRP* specifies the grouping order of word pairs received from registers. When cleared to 0, bytes from register addresses 0 and 1, 2 and 3, etc (even, then odd register addresses) are paired to form a word. When set to 1, bytes from register addresses are paired 1 and 2, 3 and 4, etc. (odd, then even register addresses) are paired to form a word.

I<sup>2</sup>C data transactions are performed at the Sample Rate, as defined in Register 25. The user is responsible for ensuring that I<sup>2</sup>C data transactions to and from each enabled Slave can be completed within a single period of the Sample Rate.

The I<sup>2</sup>C slave access rate can be reduced relative to the Sample Rate. This reduced access rate is determined by I2C\_MST\_DLY (Register 52). Whether a slave's access rate is reduced relative to the Sample Rate is determined by I2C MST\_DELAY\_CTRL (Register 103).

The processing order for the slaves is fixed. The sequence followed for processing the slaves is Slave 0, Slave 1, Slave 2, Slave 3 and Slave 4. If a particular Slave is disabled it will be skipped.

Each slave can either be accessed at the sample rate or at a reduced sample rate. In a case where some slaves are accessed at the Sample Rate and some slaves are accessed at the reduced rate, the sequence of accessing the slaves (Slave 0 to Slave 4) is still followed. However, the reduced rate slaves will be skipped if their access rate dictates that they should not be accessed during that particular cycle. For further information regarding the reduced access rate, please refer to Register 52. Whether a slave is accessed at the Sample Rate or at the reduced rate is determined by the Delay Enable bits in Register 103.

#### Parameters:

I2C_SLV0_RW I2C_SLV0_ADDR	When set to 1, this bit configures the data transfer as a read operation. When cleared to 0, this bit configures the data transfer as a write operation. 7-bit I <sup>2</sup> C address of Slave 0.
I2C_SLVO_REG	8-bit address of the Slave 0 register to/from which data transfer starts.
I2C_SLV0_EN	When set to 1, this bit enables Slave 0 for data transfer operations.  When cleared to 0, this bit disables Slave 0 from data transfer operations.
I2C_SLV0_BYTE_SW	When set to 1, this bit enables byte swapping. When byte swapping is enabled, the high and low bytes of a word pair are swapped. Please refer to I2C_SLV0_GRP for the pairing convention of the word pairs.
	When cleared to 0, bytes transferred to and from Slave 0 will be written to EXT_SENS_DATA registers in the order they were transferred.
I2C_SLV0_REG_DIS	When set to 1, the transaction will read or write data only. When cleared to 0, the transaction will write a register address prior to reading or writing data.
I2C_SLV0_GRP	1-bit value specifying the grouping order of word pairs received from registers. When cleared to 0, bytes from register addresses 0 and 1, 2 and 3, etc (even, then odd register addresses) are paired to form a word. When set to 1, bytes from register addresses are paired 1 and 2, 3 and 4, etc. (odd, then even register addresses) are paired to form a word.
I2C_SLVO_LEN	4-bit unsigned value. Specifies the number of bytes transferred to and from Slave 0.  Clearing this bit to 0 is equivalent to disabling the register by writing 0 to

I2C\_SLV0\_EN.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### Byte Swapping Example

The following example demonstrates byte swapping for  $I2C\_SLV0\_BYTE\_SW = 1$ ,  $I2C\_SLV0\_GRP = 0$ ,  $I2C\_SLV0\_REG = 0x01$ , and  $I2C\_SLV0\_LEN = 0x4$ :

- 1. The first byte, read from Slave 0 register 0x01, will be stored at EXT\_SENS\_DATA\_00. Because *I2C\_SLV0\_GRP* = 0, bytes from even, then odd register addresses will be paired together as word pairs. Since the read operation started from an odd register address instead of an even address, only one byte is read.
- 2. The second and third bytes will be swapped, since <code>I2C\_SLV0\_BYTE\_SW = 1</code> and <code>I2C\_SLV0\_REG[0] = 1</code>. The data read from 0x02 will be stored at EXT\_SENS\_DATA\_02, and the data read from 0x03 will be stored at EXT\_SENS\_DATA\_01.
- 3. The last byte, read from address 0x04, will be stored at EXT\_SENS\_DATA\_03. Because there is only one byte remaining in the read operation, byte swapping will not occur.

#### **Slave Access Example**

Slave 0 is accessed at the Sample Rate, while Slave 1 is accessed at half the Sample Rate. The other slaves are disabled. In the first cycle, both Slave 0 and Slave 1 will be accessed. However, in the second cycle, only Slave 0 will be accessed. In the third cycle, both Slave 0 and Slave 1 will be accessed. In the fourth cycle, only Slave 0 will be accessed. This pattern continues.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.10 Registers 40 to 42 – I<sup>2</sup>C Slave 1 Control I2C\_SLV1\_ADDR, I2C\_SLV1\_REG, and I2C\_SLV1\_CTRL

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
28	40	I2C_SLV1 _RW		I2C_SLV1_ADDR[6:0]					
29	41			I2C_SLV1_REG[7:0]					
2A	42	I2C_SLV1 _EN	I2C_SLV1 _BYTE _SW	I2C_SLV1_ REG_DIS	I2C_SLV 1_GRP	I2C_SLV1_LEN[3:0]			

#### **Description:**

These registers describe the data transfer sequence for Slave 1. Their functions correspond to those described for the Slave 0 registers (Registers 37 to 39).

### 4.11 Registers 43 to 45 – I<sup>2</sup>C Slave 2 Control I2C\_SLV2\_ADDR, I2C\_SLV2\_REG, and I2C\_SLV2\_CTRL

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
2B	43	I2C_SLV2 _RW	I2C_SLV2_ADDR[6:0]						
2C	44			I2C_SLV2_REG[7:0]					
2D	45	I2C_SLV2 _EN	I2C_SLV2 _BYTE _SW	I2C_SLV2_ REG_DIS	I2C_SLV 2_GRP	12_REG[7:0]			

#### **Description:**

These registers describe the data transfer sequence for Slave 2. Their functions correspond to those described for the Slave 0 registers (Registers 37 to 39).

### 4.12 Registers 46 to 48 – I<sup>2</sup>C Slave 3 Control I2C\_SLV3\_ADDR, I2C\_SLV3\_REG, and I2C\_SLV3\_CTRL

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
2E	46	I2C_SLV3 _RW		I2C_SLV3_ADDR[6:0]					
2F	47				I2C_SLV3	3_REG[7:0]			
30	48	I2C_SLV3 _EN	I2C_SLV3 _BYTE _SW	I2C_SLV3_ REG_DIS	I2C_SLV 3_GRP	I2C_SLV3_LEN[3:0]			

#### **Description:**

These registers describe the data transfer sequence for Slave 3. Their functions correspond to those described for the Slave 0 registers (Registers 37 to 39).



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.13 Registers 49 to 53 – I<sup>2</sup>C Slave 4 Control I2C SLV4 ADDR, I2C SLV4 REG, I2C SLV4 DO, I2C SLV4 CTRL, and I2C SLV4 DI

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
31	49	I2C_SLV4 _RW	I2C_SLV4_ADDR[6:0]						
32	50		I2C_SLV4_REG[7:0]						
33	51				I2C_SLV	4_DO[7:0]			
34	52	I2C_SLV4_ EN	I2C_SLV4 _INT_EN	I2C_SLV4 _REG_DIS	I2C_MST_DLY[4:0]				
35	53		•	I2C_SLV4_DI[7:0]					

#### **Description:**

These registers describe the data transfer sequence for Slave 4. The characteristics of Slave 4 differ greatly from those of Slaves 0-3. For further information regarding the characteristics of Slaves 0-3, please refer to Registers 37 to 48.

I<sup>2</sup>C slave data transactions between the MPU-60X0 and Slave 4 are set as either read or write operations by the *I2C\_SLV4\_RW* bit. When this bit is 1, the transfer is a read operation. When the bit is 0, the transfer is a write operation.

I2C\_SLV4\_ADDR is used to specify the I<sup>2</sup>C slave address of Slave 4.

Data transfer starts at an internal register within Slave 4. This register address is specified by I2C\_SLV4\_REG.

In read mode, the result of the read will be available in *I2C\_SLV4\_DI*. In write mode, the contents of *I2C\_SLV4\_DO* will be written into the slave device.

A data transaction is performed only if the *I2C\_SLV4\_EN* bit is set to 1. The data transaction should be enabled once its parameters are configured in the \_ADDR and \_REG registers. For write, the \_DO register is also required. *I2C\_SLV4\_EN* will be cleared after the transaction is performed once.

An interrupt is triggered at the completion of a Slave 4 data transaction if the interrupt is enabled. The status of this interrupt can be observed in Register 54.

When *I2C\_SLV4\_REG\_DIS* is set to 1, the transaction will read or write data instead of writing a register address. This bit should equal 0 when specifying the register address within the Slave device to/from which the ensuing data transaction will take place.

*I2C\_MST\_DLY* configures the reduced access rate of I<sup>2</sup>C slaves relative to the Sample Rate. When a slave's access rate is decreased relative to the Sample Rate, the slave is accessed every

This base Sample Rate in turn is determined by *SMPLRT\_DIV* (register 25) and *DLPF\_CFG* (register 26). Whether a slave's access rate is reduced relative to the Sample Rate is determined by I2C\_MST\_DELAY\_CTRL (register 103).

For further information regarding the Sample Rate, please refer to register 25.

Slave 4 transactions are performed after Slave 0, 1, 2 and 3 transactions have been completed. Thus the maximum rate for Slave 4 transactions is determined by the Sample Rate as defined in Register 25.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

Parameters:

*I2C\_SLV4\_RW* When set to 1, this bit configures the data transfer as a read operation.

When cleared to 0, this bit configures the data transfer as a write operation.

I2C SLV4 ADDR 7-bit I<sup>2</sup>C address for Slave 4.

I2C\_SLV4\_REG 8-bit address of the Slave 4 register to/from which data transfer starts.

*I2C\_SLV4\_DO* This register stores the data to be written into the Slave 4.

If I2C\_SLV4\_RW is set 1 (set to read), this register has no effect.

*I2C\_SLV4\_EN* When set to 1, this bit enables Slave 4 for data transfer operations.

When cleared to 0, this bit disables Slave 4 from data transfer operations.

I2C\_SLV4\_INT\_EN When set to 1, this bit enables the generation of an interrupt signal upon

completion of a Slave 4 transaction.

When cleared to 0, this bit disables the generation of an interrupt signal

upon completion of a Slave 4 transaction.

The interrupt status can be observed in Register 54.

I2C\_SLV4\_REG\_DIS When set to 1, the transaction will read or write data.

When cleared to 0, the transaction will read or write a register address.

I2C\_MST\_DLY Configures the decreased access rate of slave devices relative to the

Sample Rate.

I2C\_SLV4\_DI This register stores the data read from Slave 4.

This field is populated after a read transaction.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

#### 4.14 Register 54 – I<sup>2</sup>C Master Status I2C\_MST\_STATUS

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
36	54	PASS_ THROUGH	I2C_SLV4 _DONE	I2C_LOST _ARB	I2C_SLV4 _NACK	I2C_SLV3 _NACK	I2C_SLV2 _NACK	I2C_SLV1 _NACK	I2C_SLV0 _NACK

#### **Description:**

This register shows the status of the interrupt generating signals in the I<sup>2</sup>C Master within the MPU-60X0. This register also communicates the status of the FSYNC interrupt to the host processor.

Reading this register will clear all the status bits in the register.

Parameters:	
PASS_THROUGH	This bit reflects the status of the FSYNC interrupt from an external device into the MPU-60X0. This is used as a way to pass an external interrupt through the MPU-60X0 to the host application processor. When set to 1, this bit will cause an interrupt if <i>FSYNC_INT_EN</i> is asserted in INT_PIN_CFG (Register 55).
I2C_SLV4_DONE	Automatically sets to 1 when a Slave 4 transaction has completed. This triggers an interrupt if the <i>I2C_MST_INT_EN</i> bit in the INT_ENABLE register (Register 56) is asserted and if the <i>SLV_4_DONE_INT</i> bit is asserted in the I2C_SLV4_CTRL register (Register 52).
I2C_LOST_ARB	This bit automatically sets to 1 when the $I^2C$ Master has lost arbitration of the auxiliary $I^2C$ bus (an error condition). This triggers an interrupt if the $I2C\_MST\_INT\_EN$ bit in the INT_ENABLE register (Register 56) is asserted.
I2C_SLV4_NACK	This bit automatically sets to 1 when the I <sup>2</sup> C Master receives a NACK in a transaction with Slave 4. This triggers an interrupt if the I2C_MST_INT_EN bit in the INT_ENABLE register (Register 56) is asserted.
I2C_SLV3_NACK	This bit automatically sets to 1 when the I <sup>2</sup> C Master receives a NACK in a transaction with Slave 3. This triggers an interrupt if the I2C_MST_INT_EN bit in the INT_ENABLE register (Register 56) is asserted.
I2C_SLV2_NACK	This bit automatically sets to 1 when the I <sup>2</sup> C Master receives a NACK in a transaction with Slave 2. This triggers an interrupt if the I2C_MST_INT_EN bit in the INT_ENABLE register (Register 56) is asserted.
I2C_SLV1_NACK	This bit automatically sets to 1 when the I <sup>2</sup> C Master receives a NACK in a transaction with Slave 1. This triggers an interrupt if the I2C_MST_INT_EN bit in the INT_ENABLE register (Register 56) is asserted.
I2C_SLVO_NACK	This bit automatically sets to 1 when the I <sup>2</sup> C Master receives a NACK in a transaction with Slave 0. This triggers an interrupt if the I2C_MST_INT_EN bit in the INT_ENABLE register (Register 56) is asserted.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.15 Register 55 – INT Pin / Bypass Enable Configuration INT PIN CFG

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
37	55	INT_LEVEL	INT_OPEN	LATCH _INT_EN	INT_RD _CLEAR	FSYNC_ INT_LEVEL	FSYNC_ INT_EN	I2C _BYPASS _EN	-

#### **Description:**

This register configures the behavior of the interrupt signals at the INT pins. This register is also used to enable the FSYNC Pin to be used as an interrupt to the host application processor, as well as to enable Bypass Mode on the I<sup>2</sup>C Master. This bit also enables the clock output.

FSYNC\_INT\_EN enables the FSYNC pin to be used as an interrupt to the host application processor. A transition to the active level specified in FSYNC\_INT\_LEVEL will trigger an interrupt. The status of this interrupt is read from the PASS\_THROUGH bit in the I<sup>2</sup>C Master Status Register (Register 54).

When *I2C\_BYPASS\_EN* is equal to 1 and *I2C\_MST\_EN* (Register 106 bit[5]) is equal to 0, the host application processor will be able to directly access the auxiliary I<sup>2</sup>C bus of the MPU-60X0. When this bit is equal to 0, the host application processor will not be able to directly access the auxiliary I<sup>2</sup>C bus of the MPU-60X0 regardless of the state of *I2C\_MST\_EN*.

For further information regarding Bypass Mode, please refer to Section 7.11 and 7.13 of the MPU-6000/MPU-6050 Product Specification document.

#### **Parameters:**

*INT\_LEVEL* When this bit is equal to 0, the logic level for the INT pin is active high.

When this bit is equal to 1, the logic level for the INT pin is active low.

INT\_OPEN When this bit is equal to 0, the INT pin is configured as push-pull.

When this bit is equal to 1, the INT pin is configured as open drain.

LATCH\_INT\_EN When this bit is equal to 0, the INT pin emits a 50us long pulse.

When this bit is equal to 1, the INT pin is held high until the interrupt is

cleared.

INT\_RD\_CLEAR When this bit is equal to 0, interrupt status bits are cleared only by reading

INT STATUS (Register 58)

When this bit is equal to 1, interrupt status bits are cleared on any read

operation.

FSYNC INT LEVEL When this bit is equal to 0, the logic level for the FSYNC pin (when used as

an interrupt to the host processor) is active high.

When this bit is equal to 1, the logic level for the FSYNC pin (when used as

an interrupt to the host processor) is active low.

FSYNC\_INT\_EN When equal to 0, this bit disables the FSYNC pin from causing an interrupt to

the host processor.

When equal to 1, this bit enables the FSYNC pin to be used as an interrupt to

the host processor.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

I2C BYPASS EN

When this bit is equal to 1 and  $I2C\_MST\_EN$  (Register 106 bit[5]) is equal to 0, the host application processor will be able to directly access the auxiliary  $I^2C$  bus of the MPU-60X0.

When this bit is equal to 0, the host application processor will not be able to directly access the auxiliary I<sup>2</sup>C bus of the MPU-60X0 regardless of the state of I2C\_MST\_EN (Register 106 bit[5]).

### 4.16 Register 56 – Interrupt Enable INT ENABLE

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
38	56		MOT_EN		FIFO _OFLOW _EN	I2C_MST _INT_EN	-	-	DATA _RDY_EN

#### **Description:**

This register enables interrupt generation by interrupt sources.

For information regarding the interrupt status for each interrupt generation source, please refer to Register 58. Further information regarding I<sup>2</sup>C Master interrupt generation can be found in Register 54.

Bits 2 and 1 are reserved.

#### Parameters:

MOT EN When set to 1, this bit enables Motion detection to generate an interrupt.

FIFO\_OFLOW\_EN When set to 1, this bit enables a FIFO buffer overflow to generate an

interrupt.

I2C\_MST\_INT\_EN When set to 1, this bit enables any of the I2C Master interrupt sources to

generate an interrupt.

DATA\_RDY\_EN When set to 1, this bit enables the Data Ready interrupt, which occurs each

time a write operation to all of the sensor registers has been completed.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.17 Register 58 – Interrupt Status INT STATUS

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
ЗА	58	-	MOT_INT	-	FIFO _OFLOW _INT	I2C_MST _INT	-	-	DATA _RDY_INT

#### **Description:**

This register shows the interrupt status of each interrupt generation source. Each bit will clear after the register is read.

For information regarding the corresponding interrupt enable bits, please refer to Register 56.

For a list of I<sup>2</sup>C Master interrupts, please refer to Register 54.

Bits 2 and 1 are reserved.

#### **Parameters:**

MOT\_INT This bit automatically sets to 1 when a Motion Detection interrupt has been

generated.

The bit clears to 0 after the register has been read.

FIFO\_OFLOW\_INT This bit automatically sets to 1 when a FIFO buffer overflow interrupt has

been generated.

The bit clears to 0 after the register has been read.

I2C\_MST\_INT This bit automatically sets to 1 when an I2C Master interrupt has been

generated. For a list of I<sup>2</sup>C Master interrupts, please refer to Register 54.

The bit clears to 0 after the register has been read.

DATA\_RDY\_INT This bit automatically sets to 1 when a Data Ready interrupt is generated.

The bit clears to 0 after the register has been read.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

4.18 Registers 59 to 64 – Accelerometer Measurements
ACCEL\_XOUT\_H, ACCEL\_XOUT\_L, ACCEL\_YOUT\_H, ACCEL\_YOUT\_L, ACCEL\_ZOUT\_H, and
ACCEL\_ZOUT\_L

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
3B	59		ACCEL_XOUT[15:8]							
3C	60		ACCEL_XOUT[7:0]							
3D	61		ACCEL_YOUT[15:8]							
3E	62			AC	CEL_YOUT[	7:0]				
3F	63		ACCEL_ZOUT[15:8]							
40	64			AC	CEL_ZOUT[7	7:0]				

#### **Description:**

These registers store the most recent accelerometer measurements.

Accelerometer measurements are written to these registers at the Sample Rate as defined in Register 25.

The accelerometer measurement registers, along with the temperature measurement registers, gyroscope measurement registers, and external sensor data registers, are composed of two sets of registers: an internal register set and a user-facing read register set.

The data within the accelerometer sensors' internal register set is always updated at the Sample Rate. Meanwhile, the user-facing read register set duplicates the internal register set's data values whenever the serial interface is idle. This guarantees that a burst read of sensor registers will read measurements from the same sampling instant. Note that if burst reads are not used, the user is responsible for ensuring a set of single byte reads correspond to a single sampling instant by checking the Data Ready interrupt.

Each 16-bit accelerometer measurement has a full scale defined in *ACCEL\_FS* (Register 28). For each full scale setting, the accelerometers' sensitivity per LSB in *ACCEL\_xOUT* is shown in the table below.

AFS_SEL	Full Scale Range	LSB Sensitivity
0	±2 <i>g</i>	16384 LSB/g
1	±4 <i>g</i>	8192 LSB/g
2	±8 <i>g</i>	4096 LSB/g
3	±16 <i>g</i>	2048 LSB/g

#### **Parameters:**

ACCEL\_XOUT 16-bit 2's complement value.

Stores the most recent X axis accelerometer measurement.

ACCEL\_YOUT 16-bit 2's complement value.

Stores the most recent Y axis accelerometer measurement.

ACCEL ZOUT 16-bit 2's complement value.

Stores the most recent Z axis accelerometer measurement.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.19 Registers 65 and 66 – Temperature Measurement TEMP\_OUT\_H and TEMP\_OUT\_L

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
41	65				TEMP_OUT	[15:8]			
42	66				TEMP_OUT	[7:0]			

#### **Description:**

These registers store the most recent temperature sensor measurement.

Temperature measurements are written to these registers at the Sample Rate as defined in Register 25.

These temperature measurement registers, along with the accelerometer measurement registers, gyroscope measurement registers, and external sensor data registers, are composed of two sets of registers: an internal register set and a user-facing read register set.

The data within the temperature sensor's internal register set is always updated at the Sample Rate. Meanwhile, the user-facing read register set duplicates the internal register set's data values whenever the serial interface is idle. This guarantees that a burst read of sensor registers will read measurements from the same sampling instant. Note that if burst reads are not used, the user is responsible for ensuring a set of single byte reads correspond to a single sampling instant by checking the Data Ready interrupt.

The scale factor and offset for the temperature sensor are found in the Electrical Specifications table (Section 6.4 of the MPU-6000/MPU-6050 Product Specification document).

The temperature in degrees C for a given register value may be computed as:

Temperature in degrees C = (TEMP\_OUT Register Value as a signed quantity)/340 + 36.53

Please note that the math in the above equation is in decimal.

#### Parameters:

TEMP\_OUT 16-bit signed value.

Stores the most recent temperature sensor measurement.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

4.20 Registers 67 to 72 – Gyroscope Measurements GYRO\_XOUT\_H, GYRO\_XOUT\_L, GYRO\_YOUT\_H, GYRO\_YOUT\_L, GYRO\_ZOUT\_H, and GYRO\_ZOUT\_L

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
43	67		GYRO_XOUT[15:8]							
44	68		GYRO_XOUT[7:0]							
45	69		GYRO_YOUT[15:8]							
46	70			(	GYRO_YOU1	[7:0]				
47	71			(	GYRO_ZOUT	[15:8]				
48	72			(	GYRO_ZOUT	[7:0]				

#### **Description:**

These registers store the most recent gyroscope measurements.

Gyroscope measurements are written to these registers at the Sample Rate as defined in Register 25.

These gyroscope measurement registers, along with the accelerometer measurement registers, temperature measurement registers, and external sensor data registers, are composed of two sets of registers: an internal register set and a user-facing read register set.

The data within the gyroscope sensors' internal register set is always updated at the Sample Rate. Meanwhile, the user-facing read register set duplicates the internal register set's data values whenever the serial interface is idle. This guarantees that a burst read of sensor registers will read measurements from the same sampling instant. Note that if burst reads are not used, the user is responsible for ensuring a set of single byte reads correspond to a single sampling instant by checking the Data Ready interrupt.

Each 16-bit gyroscope measurement has a full scale defined in *FS\_SEL* (Register 27). For each full scale setting, the gyroscopes' sensitivity per LSB in *GYRO\_xOUT* is shown in the table below:

FS_SEL	Full Scale Range	LSB Sensitivity			
0	± 250 °/s	131 LSB/°/s			
1	± 500 °/s	65.5 LSB/°/s			
2	± 1000 °/s	32.8 LSB/°/s			
3	± 2000 °/s	16.4 LSB/°/s			

#### **Parameters:**

GYRO\_XOUT 16-bit 2's complement value.

Stores the most recent X axis gyroscope measurement.

GYRO YOUT 16-bit 2's complement value.

Stores the most recent Y axis gyroscope measurement.

GYRO\_ZOUT 16-bit 2's complement value.

Stores the most recent Z axis gyroscope measurement.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.21 Registers 73 to 96 – External Sensor Data EXT\_SENS\_DATA\_00 through EXT\_SENS\_DATA\_23

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
49	73		EXT_SENS_DATA_00[7:0]								
4A	74		EXT_SENS_DATA_01[7:0]								
4B	75		EXT_SENS_DATA_02[7:0]								
4C	76		EXT_SENS_DATA_03[7:0]								
4D	77				EXT_SENS_	DATA_04[7:0]					
4E	78				EXT_SENS_	DATA_05[7:0	]				
4F	79				EXT_SENS_	DATA_06[7:0	]				
50	80				EXT_SENS_	DATA_07[7:0]	]				
51	81				EXT_SENS_	DATA_08[7:0	]				
52	82				EXT_SENS_	DATA_09[7:0	]				
53	83				EXT_SENS_	DATA_10[7:0]	]				
54	84				EXT_SENS_	DATA_11[7:0]					
55	85				EXT_SENS_	DATA_12[7:0]	]				
56	86				EXT_SENS_	DATA_13[7:0]					
57	87				EXT_SENS_	DATA_14[7:0]					
58	88				EXT_SENS_	DATA_15[7:0]	]				
59	89				EXT_SENS_	DATA_16[7:0	]				
5A	90				EXT_SENS_	DATA_17[7:0]	]				
5B	91				EXT_SENS_	DATA_18[7:0]					
5C	92				EXT_SENS_	DATA_19[7:0]	]				
5D	93		EXT_SENS_DATA_20[7:0]								
5E	94		EXT_SENS_DATA_21[7:0]								
5F	95				EXT_SENS_	DATA_22[7:0					
60	96				EXT_SENS_	DATA_23[7:0]					

#### **Description:**

These registers store data read from external sensors by the Slave 0, 1, 2, and 3 on the auxiliary I<sup>2</sup>C interface. Data read by Slave 4 is stored in I2C SLV4 DI (Register 53).

External sensor data is written to these registers at the Sample Rate as defined in Register 25. This access rate can be reduced by using the Slave Delay Enable registers (Register 103).

External sensor data registers, along with the gyroscope measurement registers, accelerometer measurement registers, and temperature measurement registers, are composed of two sets of registers: an internal register set and a user-facing read register set.

The data within the external sensors' internal register set is always updated at the Sample Rate (or the reduced access rate) whenever the serial interface is idle. This guarantees that a burst read of sensor registers will read measurements from the same sampling instant. Note that if burst reads are not used, the user is responsible for ensuring a set of single byte reads correspond to a single sampling instant by checking the Data Ready interrupt.

Data is placed in these external sensor data registers according to I2C\_SLV0\_CTRL, I2C\_SLV1\_CTRL, I2C\_SLV2\_CTRL, and I2C\_SLV3\_CTRL (Registers 39, 42, 45, and 48). When more than zero bytes are read (*I2C\_SLVx\_LEN* > 0) from an enabled slave (*I2C\_SLVx\_EN* = 1), the slave is read at the Sample Rate (as defined in Register 25) or delayed rate (if specified in Register 52 and 103). During each Sample cycle, slave reads are performed in order of Slave number. If all slaves are enabled with more than zero bytes to be read, the order will be Slave 0, followed by Slave 1, Slave 2, and Slave 3.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

Each enabled slave will have EXT\_SENS\_DATA registers associated with it by number of bytes read (*I2C\_SLVx\_LEN*) in order of slave number, starting from EXT\_SENS\_DATA\_00. Note that this means enabling or disabling a slave may change the higher numbered slaves' associated registers. Furthermore, if fewer total bytes are being read from the external sensors as a result of such a change, then the data remaining in the registers which no longer have an associated slave device (i.e. high numbered registers) will remain in these previously allocated registers unless reset.

If the sum of the read lengths of all SLVx transactions exceed the number of available EXT\_SENS\_DATA registers, the excess bytes will be dropped. There are 24 EXT\_SENS\_DATA registers and hence the total read lengths between all the slaves cannot be greater than 24 or some bytes will be lost.

<u>Note</u>: Slave 4's behavior is distinct from that of Slaves 0-3. For further information regarding the characteristics of Slave 4, please refer to Registers 49 to 53.

#### **Example:**

Suppose that Slave 0 is enabled with 4 bytes to be read ( $I2C\_SLV0\_EN = 1$  and  $I2C\_SLV0\_LEN = 4$ ) while Slave 1 is enabled with 2 bytes to be read, ( $I2C\_SLV1\_EN = 1$  and  $I2C\_SLV1\_LEN = 2$ ). In such a situation, EXT\_SENS\_DATA \_00 through \_03 will be associated with Slave 0, while EXT\_SENS\_DATA \_04 and 05 will be associated with Slave 1.

If Slave 2 is enabled as well, registers starting from EXT\_SENS\_DATA\_06 will be allocated to Slave 2.

If Slave 2 is disabled while Slave 3 is enabled in this same situation, then registers starting from EXT\_SENS\_DATA\_06 will be allocated to Slave 3 instead.

#### Register Allocation for Dynamic Disable vs. Normal Disable

If a slave is disabled at any time, the space initially allocated to the slave in the EXT\_SENS\_DATA register, will remain associated with that slave. This is to avoid dynamic adjustment of the register allocation.

The allocation of the EXT\_SENS\_DATA registers is recomputed only when (1) all slaves are disabled, or (2) the *I2C\_MST\_RST* bit is set (Register 106).

This above is also true if one of the slaves gets NACKed and stops functioning.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.22 Register 99 – I<sup>2</sup>C Slave 0 Data Out I2C\_SLV0\_DO

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
63	99		I2C_SLV0_DO[7:0]						

#### **Description:**

This register holds the output data written into Slave 0 when Slave 0 is set to write mode.

For further information regarding Slave 0 control, please refer to Registers 37 to 39.

#### Parameters:

I2C\_SLV0\_DO

8 bit unsigned value that is written into Slave 0 when Slave 0 is set to write mode.

### 4.23 Register 100 – I<sup>2</sup>C Slave 1 Data Out I2C\_SLV1\_DO

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
64	100		I2C_SLV1_DQ[7:0]						

#### **Description:**

This register holds the output data written into Slave 1 when Slave 1 is set to write mode.

For further information regarding Slave 1 control, please refer to Registers 40 to 42.

#### Parameters:

I2C\_SLV1\_DO

8 bit unsigned value that is written into Slave 1 when Slave 1 is set to write mode.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.24 Register 101 – I<sup>2</sup>C Slave 2 Data Out I2C\_SLV2\_DO

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
65	101		I2C_SLV2_DO[7:0]						

#### **Description:**

This register holds the output data written into Slave 2 when Slave 2 is set to write mode.

For further information regarding Slave 2 control, please refer to Registers 43 to 45.

#### **Parameters:**

I2C\_SLV2\_DO

8 bit unsigned value that is written into Slave 2 when Slave 2 is set to write mode.

### 4.25 Register 102 – I<sup>2</sup>C Slave 3 Data Out I2C\_SLV3\_DO

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
66	102		I2C_SLV3_DO[7:0]							

#### **Description:**

This register holds the output data written into Slave 3 when Slave 3 is set to write mode.

For further information regarding Slave 3 control, please refer to Registers 46 to 48.

#### Parameters:

I2C\_SLV3\_DO

8 bit unsigned value that is written into Slave 3 when Slave 3 is set to write mode.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

# 4.26 Register 103 – I<sup>2</sup>C Master Delay Control I2C\_MST\_DELAY\_CTRL

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
67	103	DELAY _ES _SHADOW	-	-	I2C_SLV4 _DLY_EN	I2C_SLV3 _DLY_EN	I2C_SLV2 _DLY_EN	I2C_SLV1 _DLY_EN	I2C_SLV0 _DLY_EN

### **Description:**

This register is used to specify the timing of external sensor data shadowing. The register is also used to decrease the access rate of slave devices relative to the Sample Rate.

When *DELAY\_ES\_SHADOW* is set to 1, shadowing of external sensor data is delayed until all data has been received.

When I2C\_SLV4\_DLY\_EN, I2C\_SLV3\_DLY\_EN, I2C\_SLV2\_DLY\_EN, I2C\_SLV1\_DLY\_EN, and I2C\_SLV0\_DLY\_EN are enabled, the rate of access for the corresponding slave devices is reduced.

When a slave's access rate is decreased relative to the Sample Rate, the slave is accessed every

$$1/(1 + I2C_MST_DLY)$$
 samples.

This base Sample Rate in turn is determined by SMPLRT\_DIV (register 25) and DLPF\_CFG (register 26).

For further information regarding I2C\_MST\_DLY, please refer to register 52.

For further information regarding the Sample Rate, please refer to register 25.

Bits 6 and 5 are reserved.

#### Parameters:

DELAY_ES_SHADOW	When set, delays shadowing of external sensor data until all data has been received.
I2C_SLV4_DLY_EN	When enabled, slave 4 will only be accessed at a decreased rate.
I2C_SLV3_DLY_EN	When enabled, slave 3 will only be accessed at a decreased rate.
I2C_SLV2_DLY_EN	When enabled, slave 2 will only be accessed at a decreased rate.
I2C_SLV1_DLY_EN	When enabled, slave 1 will only be accessed at a decreased rate.
I2C_SLV0_DLY_EN	When enabled, slave 0 will only be accessed at a decreased rate.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

# 4.27 Register 104 – Signal Path Reset SIGNAL\_PATH\_RESET

**Type: Write Only** 

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
68	104	-	-	-	-	-	GYRO _RESET	ACCEL _RESET	TEMP _RESET

### **Description:**

This register is used to reset the analog and digital signal paths of the gyroscope, accelerometer, and temperature sensors.

The reset will revert the signal path analog to digital converters and filters to their power up configurations.

Note: This register does not clear the sensor registers.

Bits 7 to 3 are reserved.

### Parameters:

GYRO\_RESET When set to 1, this bit resets the gyroscope analog and digital signal paths.

ACCEL\_RESET When set to 1, this bit resets the accelerometer analog and digital signal

paths.

TEMP\_RESET When set to 1, this bit resets the temperature sensor analog and digital signal

paths.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

## 4.28 Register 105 – Motion Detection Control MOT\_DETECT\_CTRL

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
69	105	-	-	ACCEL_ON_DELAY[1:0]		-		-	

### **Description:**

This register is used to add delay to the accelerometer power on time. It is also used to configure the Motion detection decrement rate.

The accelerometer data path provides samples to the sensor registers and Motion detection detection modules. The signal path contains filters which must be flushed on wake-up with new samples before the detection modules begin operations. The default wake-up delay, of 4ms can be lengthened by up to 3ms. This additional delay is specified in *ACCEL\_ON\_DELAY* in units of 1 LSB = 1 ms. The user may select any value above zero unless instructed otherwise by InvenSense. Please refer to Section 8 of the MPU-6000/MPU-6050 Product Specification document for further information regarding the detection modules.

Bits 7 and 6 are reserved.

#### **Parameters:**

ACCEL\_ON\_DELAY 2-bit unsigned value. Specifies the additional power-on delay applied to accelerometer data path modules.

Unit of 1 LSB = 1 ms.

# 4.29 Register 106 – User Control USER\_CTRL

Type: Read/Write

	ister ex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
6	iΑ	106	-	FIFO_EN	I2C_MST _EN	I2C_IF _DIS	-	FIFO _RESET	I2C_MST _RESET	SIG_COND _RESET

#### **Description:**

This register allows the user to enable and disable the FIFO buffer, I<sup>2</sup>C Master Mode, and primary I<sup>2</sup>C interface. The FIFO buffer, I<sup>2</sup>C Master, sensor signal paths and sensor registers can also be reset using this register.

When *I2C\_MST\_EN* is set to 1, I<sup>2</sup>C Master Mode is enabled. In this mode, the MPU-60X0 acts as the I<sup>2</sup>C Master to the external sensor slave devices on the auxiliary I<sup>2</sup>C bus. When this bit is cleared to 0, the auxiliary I<sup>2</sup>C bus lines (AUX\_DA and AUX\_CL) are logically driven by the primary I<sup>2</sup>C bus (SDA and SCL). This is a precondition to enabling Bypass Mode. For further information regarding Bypass Mode, please refer to Register 55.

MPU-6000: The primary SPI interface will be enabled in place of the disabled primary I<sup>2</sup>C interface

when I2C IF DIS is set to 1.

MPU-6050: Always write 0 to I2C\_IF\_DIS.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

When the reset bits (*FIFO\_RESET*, *I2C\_MST\_RESET*, and *SIG\_COND\_RESET*) are set to 1, these reset bits will trigger a reset and then clear to 0.

Bits 7 and 3 are reserved.

**Parameters:** 

FIFO\_EN When set to 1, this bit enables FIFO operations.

When this bit is cleared to 0, the FIFO buffer is disabled. The FIFO buffer

cannot be written to or read from while disabled.

The FIFO buffer's state does not change unless the MPU-60X0 is power

cycled.

*I2C\_MST\_EN* When set to 1, this bit enables I<sup>2</sup>C Master Mode.

When this bit is cleared to 0, the auxiliary I2C bus lines (AUX\_DA and

AUX\_CL) are logically driven by the primary I<sup>2</sup>C bus (SDA and SCL).

I2C\_IF\_DIS MPU-6000: When set to 1, this bit disables the primary I2C interface and

enables the SPI interface instead.

MPU-6050: Always write this bit as zero.

FIFO\_RESET This bit resets the FIFO buffer when set to 1 while FIFO\_EN equals 0. This

bit automatically clears to 0 after the reset has been triggered.

I2C\_MST\_RESET This bit resets the I<sup>2</sup>C Master when set to 1 while I2C\_MST\_EN equals 0.

This bit automatically clears to 0 after the reset has been triggered.

SIG\_COND\_RESET When set to 1, this bit resets the signal paths for all sensors (gyroscopes,

accelerometers, and temperature sensor). This operation will also clear the sensor registers. This bit automatically clears to 0 after the reset has been

triggered.

When resetting only the signal path (and not the sensor registers), please

use Register 104, SIGNAL\_PATH\_RESET.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

# 4.30 Register 107 – Power Management 1 PWR MGMT 1

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
6B	107	DEVICE _RESET	SLEEP	CYCLE	-	TEMP_DIS	CLKSEL[2:0]		

### **Description:**

This register allows the user to configure the power mode and clock source. It also provides a bit for resetting the entire device, and a bit for disabling the temperature sensor.

By setting *SLEEP* to 1, the MPU-60X0 can be put into low power sleep mode. When *CYCLE* is set to 1 while *SLEEP* is disabled, the MPU-60X0 will be put into Cycle Mode. In Cycle Mode, the device cycles between sleep mode and waking up to take a single sample of data from accelerometer at a rate determined by *LP\_WAKE\_CTRL* (register 108). To configure the wake frequency, use *LP\_WAKE\_CTRL* within the Power Management 2 register (Register 108).

An internal 8MHz oscillator, gyroscope based clock, or external sources can be selected as the MPU-60X0 clock source. When the internal 8 MHz oscillator or an external source is chosen as the clock source, the MPU-60X0 can operate in low power modes with the gyroscopes disabled.

Upon power up, the MPU-60X0 clock source defaults to the internal oscillator. However, it is highly recommended that the device be configured to use one of the gyroscopes (or an external clock source) as the clock reference for improved stability. The clock source can be selected according to the following table.

CLKSEL	Clock Source					
0	Internal 8MHz oscillator					
1	PLL with X axis gyroscope reference					
2	PLL with Y axis gyroscope reference					
3	PLL with Z axis gyroscope reference					
4	PLL with external 32.768kHz reference					
5	PLL with external 19.2MHz reference					
6	Reserved					
7	Stops the clock and keeps the timing generator in reset					

For further information regarding the MPU-60X0 clock source, please refer to the MPU-6000/MPU-6050 Product Specification document.

Bit 4 is reserved.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

**Parameters:** 

DEVICE\_RESET When set to 1, this bit resets all internal registers to their default values.

The bit automatically clears to 0 once the reset is done.

The default values for each register can be found in Section 3.

SLEEP When set to 1, this bit puts the MPU-60X0 into sleep mode.

CYCLE When this bit is set to 1 and SLEEP is disabled, the MPU-60X0 will cycle

between sleep mode and waking up to take a single sample of data from

active sensors at a rate determined by LP\_WAKE\_CTRL (register 108).

TEMP\_DIS When set to 1, this bit disables the temperature sensor.

CLKSEL 3-bit unsigned value. Specifies the clock source of the device.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.31 Register 108 – Power Management 2 PWR MGMT 2

Type: Read/Write

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
6C	108	LP_WAKE_CTRL[1:0]		STBY_XA	STBY_YA	STBY_ZA	STBY_XG	STBY_YG	STBY_ZG

### **Description:**

This register allows the user to configure the frequency of wake-ups in Accelerometer Only Low Power Mode. This register also allows the user to put individual axes of the accelerometer and gyroscope into standby mode.

The MPU-60X0 can be put into Accelerometer Only Low Power Mode using the following steps:

- (i) Set CYCLE bit to 1
- (ii) Set SLEEP bit to 0
- (iii) Set TEMP\_DIS bit to 1
- (iv) Set STBY\_XG, STBY\_YG, STBY\_ZG bits to 1

All of the above bits can be found in Power Management 1 register (Register 107).

In this mode, the device will power off all devices except for the primary  $I^2C$  interface, waking only the accelerometer at fixed intervals to take a single measurement. The frequency of wake-ups can be configured with  $LP\_WAKE\_CTRL$  as shown below.

LP_WAKE_CTRL	Wake-up Frequency
0	1.25 Hz
1	5 Hz
2	20 Hz
3	40 Hz

For further information regarding the MPU-6050's power modes, please refer to Register 107.

The user can put individual accelerometer and gyroscopes axes into standby mode by using this register. If the device is using a gyroscope axis as the clock source and this axis is put into standby mode, the clock source will automatically be changed to the internal 8MHz oscillator.

### Parameters:

LP_WAKE_CTRL	2-bit unsigned value.
	Specifies the frequency of wake-ups during Accelerometer Only Low Power Mode.
STBY_XA	When set to 1, this bit puts the X axis accelerometer into standby mode.
STBY_YA	When set to 1, this bit puts the Y axis accelerometer into standby mode.
STBY_ZA	When set to 1, this bit puts the Z axis accelerometer into standby mode.
STBY_XG	When set to 1, this bit puts the X axis gyroscope into standby mode.
STBY_YG	When set to 1, this bit puts the Y axis gyroscope into standby mode.
STBY_ZG	When set to 1, this bit puts the Z axis gyroscope into standby mode.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

## 4.32 Register 114 and 115 – FIFO Count Registers FIFO\_COUNT\_H and FIFO\_COUNT\_L

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
72	114		FIFO_COUNT[15:8]								
73	115		FIFO_COUNT[7:0]								

### **Description:**

These registers keep track of the number of samples currently in the FIFO buffer.

These registers shadow the FIFO Count value. Both registers are loaded with the current sample count when FIFO\_COUNT\_H (Register 72) is read.

Note: Reading only FIFO\_COUNT\_L will not update the registers to the current sample count. FIFO\_COUNT\_H must be accessed first to update the contents of both these registers.

FIFO\_COUNT should always be read in high-low order in order to guarantee that the most current FIFO Count value is read.

#### Parameters:

FIFO\_COUNT

16-bit unsigned value. Indicates the number of bytes stored in the FIFO buffer. This number is in turn the number of bytes that can be read from the FIFO buffer and it is directly proportional to the number of samples available given the set of sensor data bound to be stored in the FIFO (register 35 and 36).



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

### 4.33 Register 116 – FIFO Read Write FIFO R W

Type: Read/Write

	Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
Ī	74	116		FIFO_DATA[7:0]							

### **Description:**

This register is used to read and write data from the FIFO buffer.

Data is written to the FIFO in order of register number (from lowest to highest). If all the FIFO enable flags (see below) are enabled and all External Sensor Data registers (Registers 73 to 96) are associated with a Slave device, the contents of registers 59 through 96 will be written in order at the Sample Rate.

The contents of the sensor data registers (Registers 59 to 96) are written into the FIFO buffer when their corresponding FIFO enable flags are set to 1 in FIFO\_EN (Register 35). An additional flag for the sensor data registers associated with I<sup>2</sup>C Slave 3 can be found in I2C\_MST\_CTRL (Register 36).

If the FIFO buffer has overflowed, the status bit *FIFO\_OFLOW\_INT* is automatically set to 1. This bit is located in INT\_STATUS (Register 58). When the FIFO buffer has overflowed, the oldest data will be lost and new data will be written to the FIFO.

If the FIFO buffer is empty, reading this register will return the last byte that was previously read from the FIFO until new data is available. The user should check *FIFO\_COUNT* to ensure that the FIFO buffer is not read when empty.

#### Parameters:

FIFO DATA

8-bit data transferred to and from the FIFO buffer.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

# 4.34 Register 117 – Who Am I WHO\_AM\_I

Type: Read Only

Register (Hex)	Register (Decimal)	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
75	117	-	WHO_AM_I[6:1]						-

### **Description:**

This register is used to verify the identity of the device. The contents of WHO\_AM\_I are the upper 6 bits of the MPU-60X0's 7-bit I<sup>2</sup>C address. The least significant bit of the MPU-60X0's I<sup>2</sup>C address is determined by the value of the AD0 pin. The value of the AD0 pin is not reflected in this register.

The default value of the register is 0x68.

Bits 0 and 7 are reserved. (Hard coded to 0)

### **Parameters:**

WHO\_AM\_I Contains the 6-bit I<sup>2</sup>C address of the MPU-60X0.

The Power-On-Reset value of Bit6:Bit1 is 110 100.



Document Number: RM-MPU-6000A-00

Revision: 4.0

Release Date: 03/09/2012

This information furnished by InvenSense is believed to be accurate and reliable. However, no responsibility is assumed by InvenSense for its use, or for any infringements of patents or other rights of third parties that may result from its use. Specifications are subject to change without notice. InvenSense reserves the right to make changes to this product, including its circuits and software, in order to improve its design and/or performance, without prior notice. InvenSense makes no warranties, neither expressed nor implied, regarding the information and specifications contained in this document. InvenSense assumes no responsibility for any claims or damages arising from information contained in this document, or from the use of products and services detailed therein. This includes, but is not limited to, claims or damages based on the infringement of patents, copyrights, mask work and/or other intellectual property rights.

Certain intellectual property owned by InvenSense and described in this document is patent protected. No license is granted by implication or otherwise under any patent or patent rights of InvenSense. This publication supersedes and replaces all information previously supplied. Trademarks that are registered trademarks are the property of their respective companies. InvenSense sensors should not be used or sold in the development, storage, production or utilization of any conventional or mass-destructive weapons or for any other weapons or life threatening applications, as well as in any other life critical applications such as medical equipment, transportation, aerospace and nuclear instruments, undersea equipment, power plant equipment, disaster prevention and crime prevention equipment.

InvenSense® is a registered trademark of InvenSense, Inc. MPU<sup>TM</sup>, MPU-6000<sup>TM</sup>, MPU-6050<sup>TM</sup>, MPU-60X0<sup>TM</sup>, Digital Motion Processor<sup>TM</sup>, DMP Motion Processing Unit MotionFusion<sup>TM</sup>, and MotionApps<sup>TM</sup> are trademarks of InvenSense, Inc.

©2011 InvenSense, Inc. All rights reserved.





OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

### Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru