

Grove - Infrared Receiver User Manual

Release date: 2015/9/22

Version: 1.0

Wiki: <u>http://www.seeedstudio.com/wiki/Grove_-_Infrared_Receiver</u>

Bazaar: http://www.seeedstudio.com/depot/Grove-Infrared-Receiver-p-994.html?cPath=19_23



Document Revision History

Revision	Date	Author	Description		
1.0	Sep 22, 2015	Loovee	Create file		



Contents

Doc	cume	nt Revis	ion History ····· 2						
1.	Intro	oduction							
2.	Spee	cification	n ····· 3						
3.	Demonstration 4								
4.	With Arduino/Seeeduino								
	4.1	Sug	gest Reading for Starter						
	4.2 IRSendRev Library								
		4.2.1	Setup						
	4.3	Infr	ared Receiver Examples/Applications						
		4.3.1	Receiver						
		4.3.2	Emitter 8						
5.	Reso	ources							



Disclaimer

For physical injuries and possessions loss caused by those reasons which are not related to product quality, such as operating without following manual guide, natural disasters or force majeure, we take no responsibility for that.

Under the supervision of Seeed Technology Inc., this manual has been compiled and published which covered the latest product description and specification. The content of this manual is subject to change without notice.

Copyright

The design of this product (including software) and its accessories is under tutelage of laws. Any action to violate relevant right of our product will be penalized through law. Please consciously observe relevant local laws in the use of this product.



1. Introduction

The Infrared Receiver is used to receive infrared signals and also used for remote control detection. There is an IR detector on the Infrared Receiver which is used to get the infrared light emitted by the Infrared Emitter. The IR detector have a demodulator inside that looks for modulated IR at 38 KHz. The Infrared Receiver can receive signals well within 10 meters. If more than 10 meters, the receiver may not get the signals. We often use the two Groves-the Infrared Receiver and the <u>Grove</u>

- Infrared Emitter to work together.





2. Specification

- Voltage: 3.3-5V
- Distance: 10m



3. Demonstration

We will use Grove-Infrared Receiver and Grove - Infrared Emitter in this demonstration. The Infrared Receiver will receive the data that the Grove - Infrared Emitter sends.

- Connect the Grove Infrared Emitter to D3;
- Connect the Grove Infrared Receiver to D2;





4. With Arduino/Seeeduino

4.1 Suggest Reading for Starter

- Download Arduino and install Arduino driver
- Getting Started with Seeeduino/Arduino

4.2 IRSendRev Library

We have created a library to help you start playing quickly with the Seeeduino/Arduino, in this section we'll show you how to set up the library.

4.2.1 Setup

- Download the library code as a zip file from the IRSendRev github page.
- Unzip the downloaded file into your *···/arduino/libraries*.
- Rename the unzipped folder "IRSendRev"
- Start the Arduino IDE (or restart if it is open).

4.3 Infrared Receiver Examples/Applications

These example are going to show you how to use features of Grove - Infrared Receiver. You can use Infrared Receiver combination with <u>Infrared Emitter Grove</u>. Connect the IR receiver pins to D2 for this demo.

4.3.1 Receiver

• Open File->Examples->IRSendRev->example->recv sketch for a complete example, or copy and

paste code below to a new Arduino sketch.

Description:

This example connect the IR receiver pins to D2 for this demo. You can see the remote control's infrared data that received through a serial port terminal, then write the received infrared data into send.ino and upload to the board with Infrared Emitter Grove, so you can send the same data with remote control's button.

Application:

You can note the remote control's infrared data down through Infrared Receiver, then send the



#include <IRSendRev.h>

same data through Infrared Emitter in some cases, such as open the fan switch when indoor temperature is greater than 26 degrees.

```
#define BIT_LEN
                       0
#define BIT_START_H
                        1
#define BIT_START_L
                        2
#define BIT_DATA_H
                       3
#define BIT_DATA_L
                       4
#define BIT_DATA_LEN
                        5
#define BIT_DATA
                        6
const int pinRecv = 2;
                                  // ir receiver connect to D2
void setup()
{
    Serial.begin(115200);
    IR.Init(pinRecv);
    Serial.println("init over");
unsigned char dta[20];
void loop()
{
    if(IR.IsDta())
                                  // get IR data
    {
        IR.Recv(dta);
                                  // receive data to dta
        Serial.println("+---
                                                                               -+");
        Serial.print("LEN = ");
        Serial.println(dta[BIT_LEN]);
        Serial.print("START_H: ");
        Serial.print(dta[BIT_START_H]);
        Serial.print("\tSTART_L: ");
        Serial.println(dta[BIT_START_L]);
        Serial.print("DATA_H: ");
        Serial.print(dta[BIT_DATA_H]);
        Serial.print("\tDATA_L: ");
        Serial.println(dta[BIT_DATA_L]);
        Serial.print("\r\nDATA_LEN = ");
        Serial.println(dta[BIT_DATA_LEN]);
```



```
Serial.print("DATA: ");
    for(int i=0; i<dta[BIT_DATA_LEN]; i++)</pre>
    {
        Serial.print("0x");
        Serial.print(dta[i+BIT_DATA], HEX);
        Serial.print("\t");
    }
    Serial.println();
    Serial.print("DATA: ");
    for(int i=0; i<dta[BIT_DATA_LEN]; i++)</pre>
    {
        Serial.print(dta[i+BIT_DATA], DEC);
        Serial.print("\t");
    }
    Serial.println();
    Serial.println("+-
                                                                               +\r(n\r);
}
```

- Upload the code to the development board.
- Open the serial monitor window and wait for the input.
- Using IR remote control sending data (This example use MIDEA Company's IR remote control of fans, and press the open/close key.).
- You can see the information below.



COMP						
						Send
+						-+
LEN = 11						
START_H: 181	START_	L: 91				
DATA_H: 11	DATA_I	.: 33				
DATA_LEN = 6						
DATA: 0x80	0x7F	0xC0	0x3F	0xC0	0x3F	
DATA: 128	127	192	63	192	63	
+						-+
+						-+
START H: 180	START	L: 91				
DATA_H: 11	DATA_L: 33					
DATA_LEN = 6						
DATA: 0x80	0x7F	0xC0	0x3F	0xC0	0x3F	
DATA: 128	127	192	63	192	63	
+						-+
Autoscroll			No li	g 👻 115200 baud		

4.3.2 Emitter

Open File->Examples->IRSendRev->example->send sketch for a complete example, or copy and paste code below to a new Arduino sketch.

Description:

Connect the IR send pins to D3 for this demo. You can see the remote control's infrared data that received through Infrared Receiver, such as the example above. Then write the received infrared data into this example and upload to the board with <u>Infrared Emitter Grove</u>, so you can send the same data with remote control's button.

Application

You can note the remote control's infrared data down through Infrared Receiver, then send the same data through Infrared Emitter in some cases, such as open the fan switch when indoor temperature is greater than 26 degrees.

Notice: Must connect the IR send pins to D3 for this demo.

#include <IRSendRev.h>

#define BIT_LEN 0
#define BIT_START_H 1
#define BIT_START_L 2
#define BIT_DATA_H 3



```
#define BIT_DATA_L
                        4
#define BIT_DATA_LEN
                        5
#define BIT_DATA
                        6
                                      // 38k
const int ir_freq = 38;
unsigned char dtaSend[20];
void dtaInit()
{
    dtaSend[BIT_LEN]
                            = 11;
                                            // all data that needs to be sent
    dtaSend[BIT_START_H]
                            = 180;
                                             // the logic high duration of "Start"
    dtaSend[BIT\_START\_L]
                            = 91;
                                             // the logic low duration of "Start"
    dtaSend[BIT_DATA_H]
                                             // the logic "long" duration in the communication
                            = 11;
    dtaSend[BIT_DATA_L]
                                             /\!/ the logic "short" duration in the communication
                            = 33;
    dtaSend[BIT_DATA_LEN]
                           = 6;
                                            // Number of data which will sent. If the number is
other, you should increase or reduce dtaSend[BIT_DATA+x].
    dtaSend[BIT_DATA+0]
                            = 128;
                                              // data that will sent
    dtaSend[BIT_DATA+1]
                            = 127;
    dtaSend[BIT_DATA+2]
                            = 192;
    dtaSend[BIT_DATA+3]
                            = 63;
    dtaSend[BIT_DATA+4]
                            = 192;
    dtaSend[BIT_DATA+5]
                            = 63;
void setup()
{
    dtaInit();
void loop()
{
    IR.Send(dtaSend, 38);
    delay(2000);
```



5. Resources

- Grove Infrared Receiver eagle files
- IR Send and Receiver Library
- IR Receive Library for LinkIt ONE
- TSOP282 Datasheet



ООО "ЛайфЭлектроникс"

ИНН 7805602321 КПП 780501001 Р/С 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru

www.lifeelectronics.ru