

FLUKE®

51-54 Series II

Thermometer

Product Overview

PN 1276114

September 1999 Rev. 2, 3/11

© 1999-2011 Fluke Corporation. All rights reserved. Printed in USA. Specifications are subject to change without notice.

All product names are trademarks of their respective companies.

LIMITED WARRANTY & LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for three years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

51–54 Series II

Introduction

The Fluke Models 51, 52, 53, and 54 Thermometers (“the thermometer”) are microprocessor-based, digital thermometers.

This guide provides an overview of the thermometers. Detailed *Users Manuals* are available on the accompanying CD-ROM. Each thermometer comes with a 3-year warranty, which is described in the *Users Manual*.

Model	Inputs	Thermocouple Types
51	Single	J, K, T, E
52	Dual	J, K, T, E
53	Single	J, K, T, E, R, S, N
54	Dual	J, K, T, E, R, S, N

The Models 53 and 54 have logging and PC interface capabilities.

51-54 Series II

Product Overview

Contacting Fluke

To order accessories, a printout of the *Users Manual*, receive assistance, or locate the nearest Fluke distributor or Service Center, call:

USA: 1-888-99-FLUKE (1-888-993-5853)

Canada: 1-800-36-FLUKE (1-800-363-5853)

Europe: +31 402-678-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-446-5500

Address correspondence to:

Fluke Corporation

P.O. Box 9090

Everett, WA 98206-9090

USA

Fluke Europe B.V.

P.O. Box 1186

5602 BD Eindhoven

The Netherlands

Visit us on the World Wide Web at: www.fluke.com

To register your product, visit www.fluke-warranty.com

Replacement Parts and Accessories

Accessory	Part Number
Holster and Flex Stand™ Assembly	1272438
AA NEDA 15A IEC LR6 batteries	376756
80PK-1 K-Type Bead Thermocouple	773135
CD-ROM	1276106
Service Manual	1276123

Safety Information

Warning

A Warning identifies conditions and actions that pose hazards to the user. To avoid electrical shock or personal injury, follow these guidelines:

- Before using the thermometer inspect the case. Do not use the thermometer if it appears damaged. Look for cracks or missing plastic. Pay particular attention to the insulation around the connectors.
- Disconnect the thermocouple(s) from the thermometer before opening the case.
- Replace the batteries as soon as the battery indicator (■) appears. The possibility of false readings can lead to personal injury.
- Do not use the thermometer if it operates abnormally. Protection may be impaired. When in doubt, have the thermometer serviced.
- Do not operate the thermometer around explosive gas, vapor, or dust.
- Reflective objects result in lower than actual temperature measurements. These objects pose a burn hazard.
- Do not connect to voltages >30 V ac rms, 42 V pk, 60 V dc from earth ground.

Warning (cont.)


- **Models 52 and 54:** Measurement errors may occur if voltages on the measurement surfaces result in potentials greater than 1 V between the two thermocouples. When potential differences are anticipated between the thermocouples, use electrically insulated thermocouples.
- When servicing the thermometer, use only specified replacement parts.
- Do not use the thermometer with any part of the case or cover removed.

Caution

To avoid damaging the thermometer or the equipment under test.

- Use the proper thermocouples, function, and range for your thermometer.
- Do not attempt to recharge the batteries.
- Do not throw batteries into a fire to prevent explosion.
- Follow local laws or regulations when disposing batteries.
- Match the + and – polarities of the battery with the battery case.


Components

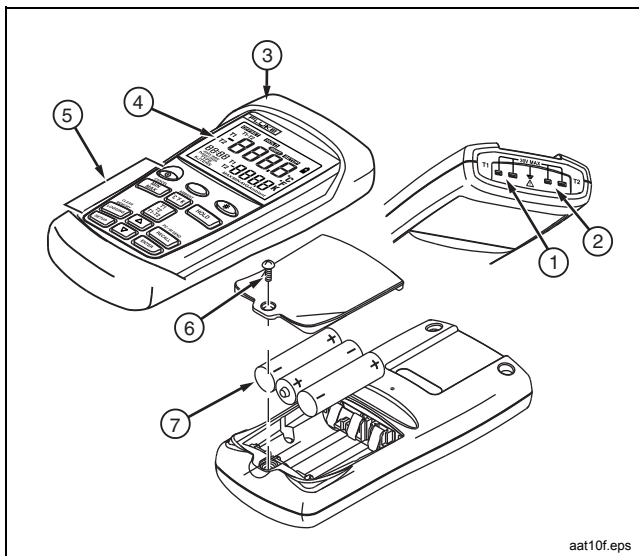

aat10f.eps




 


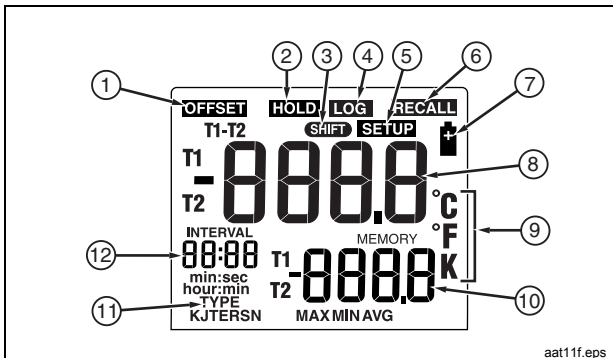


 
 

 
 
 
 
 

 
①	Thermocouple T1 input	⑤	Buttons
②	<i>Models 52 and 54:</i> Thermocouple T2 input	⑥	Battery door
③	Holster	⑦	Batteries
④	Display		

Display Elements



①	Measurement includes an offset.	⑦	Low battery.
②	Displayed readings are frozen.	⑧	Primary Display.
③	Shift function is in progress.	⑨	Temperature units.
④	Readings are being logged.*	⑩	Secondary Display.
⑤	Setup is in progress.	⑪	Thermocouple type.
⑥	Logged readings are displayed.*	⑫	Time Display.
* Models 53 and 54			

Buttons

	Turn the thermometer on or off.
 (Shift function)	 ,  = stop displaying the minimum, maximum, and average readings.  ,  = delete logged readings from memory.  ,  = toggle the IR port on and off.
	Turn the backlight on and off.
	Step through the maximum, minimum, and average readings.
	Switch between Celsius (°C), Fahrenheit (°F), and Kelvin (K).
	Freeze or unfreeze the displayed readings.
	Toggle showing the T1, T2, and T1-T2. (<i>Models 52 and 54</i>)
	Start or exit Setup.
	Scroll to a Setup option or increase the displayed setting.
	Scroll to a Setup option or decrease the displayed setting.
	Enter a Setup option or store the displayed setting.
	Start or stop logging.*
	Show toggle showing logged and MIN MAX readings.*
* <i>Models 53 and 54</i>	

Changing Setup Options


1. Press **SETUP** to start or exit Setup.
2. Press **▲** or **▼** to scroll to the setup option you want to change.
3. Press **ENTER** to indicate that you want to change this setting.
4. Press **▲** or **▼** until the setting you want to use appears on the display.
5. Press **ENTER** to store the new setting in memory.

Setup Options

Option	Menu Item	Settings
Logging Interval*	INTERVAL	0, 1, 2, 3, 4, or USER
Thermocouple	TYPE	JKTERSN
Offset	OFFSET	T1 or T2
Sleep Mode	SLP	on or OFF
Time*	--:--	0 to 24 for hours 0 to 60 for minutes
Line Frequency Noise Rejection	L i n e F	60 H (60 Hz North America) 50 H (50 Hz other countries)
* Models 53 and 54		

Specifications

General

Weight	280 g (10 oz)
Dimensions (without holster)	2.8 cm × 7.8 cm × 16.2 cm (1.1 in × 3 in × 6.4 in)
Battery	3 AA batteries
Certification	CE, 
Safety	CAN/CSA C22.2 No. 61010-1-04, ANSI/UL 61010-1:2004, EN/IEC 61010-1:2001
EMC	EN/IEC 61326-1:2006
CAT I	OVERVOLTAGE (Installation) CATEGORY I, Pollution Degree 2 per IEC1010-1*
* Refers to the level of Impulse Withstand Voltage protection provided. Category 1 products should not be attached to mains circuits.	

Environmental

Operating Temperature	-10 °C to 50 °C (14 °F to 122 °F)
Storage Temperature	-40 °C to +60 °C (-40 °F to +140 °F)
Humidity	Non condensing <10 °C (<50 °F) 95% RH: 10 °C to 30 °C (50 °F to 86 °F) 75% RH: 30 °C to 40 °C (86 °F to 104 °F) 45% RH: 40 °C to 50 °C (104 °F to 122 °F)

51-54 Series II

Product Overview

Electrical

Measurement Range	J-type: $-210\text{ }^{\circ}\text{C}$ to $+1200\text{ }^{\circ}\text{C}$ ($-346\text{ }^{\circ}\text{F}$ to $+2192\text{ }^{\circ}\text{F}$) K-type: $-200\text{ }^{\circ}\text{C}$ to $+1372\text{ }^{\circ}\text{C}$ ($-328\text{ }^{\circ}\text{F}$ to $+2501\text{ }^{\circ}\text{F}$) T-type: $-250\text{ }^{\circ}\text{C}$ to $+400\text{ }^{\circ}\text{C}$ ($-418\text{ }^{\circ}\text{F}$ to $+752\text{ }^{\circ}\text{F}$) E-type: $-150\text{ }^{\circ}\text{C}$ to $+1000\text{ }^{\circ}\text{C}$ ($-238\text{ }^{\circ}\text{F}$ to $+1832\text{ }^{\circ}\text{F}$) N-type: $-200\text{ }^{\circ}\text{C}$ to $+1300\text{ }^{\circ}\text{C}$ ($-328\text{ }^{\circ}\text{F}$ to $+2372\text{ }^{\circ}\text{F}$) R- and S-type: $0\text{ }^{\circ}\text{C}$ to $+1767\text{ }^{\circ}\text{C}$ ($+32\text{ }^{\circ}\text{F}$ to $+3212\text{ }^{\circ}\text{F}$)
Display Resolution	$0.1\text{ }^{\circ}\text{C} / ^{\circ}\text{F} / \text{K} < 1000^{\circ}$ $1.0\text{ }^{\circ}\text{C} / ^{\circ}\text{F} / \text{K} \geq 1000^{\circ}$
Measurement Accuracy	J-, K-, T-, E-, and N-type: $\pm[0.05\text{ \% of reading} + 0.3\text{ }^{\circ}\text{C} (0.5\text{ }^{\circ}\text{F})]$ [Below $-100\text{ }^{\circ}\text{C}$ ($-148\text{ }^{\circ}\text{F}$): add 0.15 \% of reading for J, K, E, and N; and 0.45 \% of reading for T] R- and S-type: $\pm[0.05\text{ \% of reading} + 0.4\text{ }^{\circ}\text{C} (0.7\text{ }^{\circ}\text{F})]$
Temperature Coefficient	$0.01\text{ \% of reading} + 0.03\text{ }^{\circ}\text{C per }^{\circ}\text{C}$ ($0.05\text{ }^{\circ}\text{F per }^{\circ}\text{F}$) outside the specified $+18\text{ }^{\circ}\text{C}$ to $28\text{ }^{\circ}\text{C}$ ($+64\text{ }^{\circ}\text{F}$ to $+82\text{ }^{\circ}\text{F}$) range [Below $-100\text{ }^{\circ}\text{C}$ ($-148\text{ }^{\circ}\text{F}$): add 0.04 \% of reading for J-, K-, E-, and N-type; and 0.08 \% of reading for T-type]
Electromagnetic Compatibility	Susceptibility: $\pm 2\text{ }^{\circ}\text{C}$ ($\pm 3.6\text{ }^{\circ}\text{F}$) for 80 MHz to 200 MHz in 1.5 V/m field, for 200 MHz to 1000 MHz in 3 V/m field. Emissions: Commercial Limits per EN50081-1
Maximum Differential Common Mode Voltage	1 V (Maximum voltage difference between T1 and T2)
Temperature Scale	ITS-90
Applicable Standards	NIST-175
Accuracy is specified for ambient temperatures between $18\text{ }^{\circ}\text{C}$ ($64\text{ }^{\circ}\text{F}$) and $28\text{ }^{\circ}\text{C}$ ($82\text{ }^{\circ}\text{F}$) for a period of 1 year. The above specifications do not include thermocouple error.	

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкуренеспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru