

This connector requires delicate and careful handling. Read through the instructions shown below and handle the connector properly. Each values indicating here are for reference and may differ from standard value.

INSTRUCTIONS FOR MOUNTING ON THE BOARD!

♦ Warp of Board

Minimize warp of the board as much as possible. Lead co-planarity including reinforced metal fittings is 0.1 mm or less. Too much warp of the board may result in a soldering failure.

♦Flexible board design

Please make sure to put a stiffener on the backside of the flexible board. We recommend a glass epoxy material with the thickness of 0.3mm MIN.

♦Load to Connector

Do not add 1N or greater external force when unreel or pick and place the connector etc. or it may get broken.

In addition, do not insert the FFC/FPC or operate the connector before mounting it

INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR!

♦ Lord to Board

·Splitting a large board into several pieces

·Screwing the board


Avoid the handling described above so that no force is exerted on the board during the assembly process. Otherwise, the connector may become defective.


♦ Amount of Warp

FORM HC0011-5-8 1

The warp of a 100mm wide board should be 1 mm or less.

The warp of board suffers stress on connector and the connector may become defective.

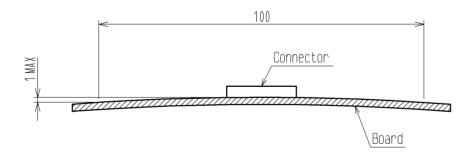

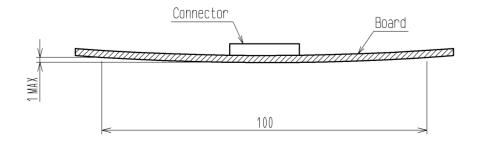


ITNSTRUCTIONS ON INSERTING FEC/FPC AND CONNECTION!

♦ Use of the Actuator

Deformation of the terminal


1. Be very careful not to apply excessive force when releasing the actuator in the initial position.

If you use your nail or finger as shown below, the terminals may be deformed.

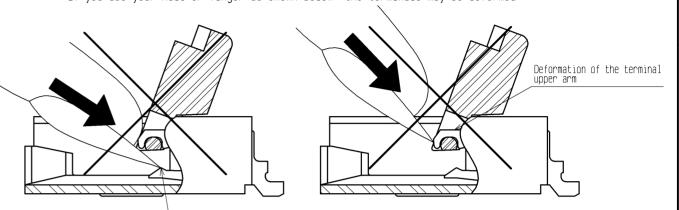


2. The actuator rotates around the rotational axis as shown below. Rotate the actuator.

3. The actuator will not open more than 110°. Do not apply any force backward beyond this point. Otherwise, the actuator may come off or break.

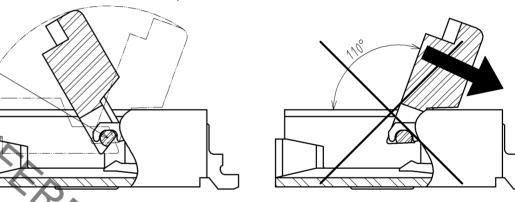

4. Move the actuator at approximately the center.5. Do not pinch or pick the actuator to lift it as shown below. Otherwise, it may break. (Do not carry out any operation other than rotating the actuator as shown in 2 above.)

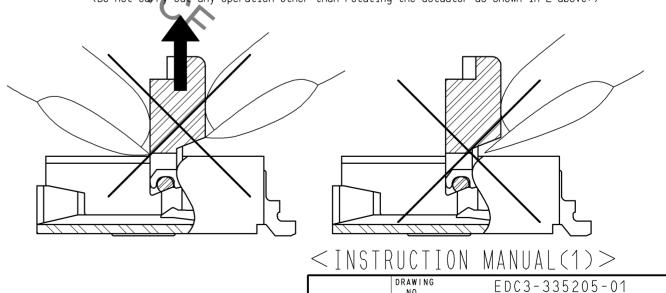


FH52-12S-1SH

CL580-3323-5-00

♦ Direction of Contacts
This connector has contacts on the bottom. Thus, insert FFC/FPC with the exposed conductors face down.

♦ Inserting the FFC/FPC

1. Insert the FFC/FPC by about 10 degrees along the surface and at a right angle to the connector. Insert it properly to the very end.

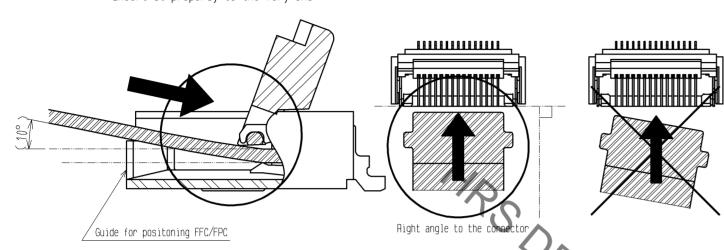


2. Do not insert the FFC/FPC diagonally from above.


If the FFC/FPC is inserted at a slant (incorrectly) as shown below in the FFC/FPC insertion process the edge of the FFC/FPC may catch in the terminals, resulting in deformation of the terminals. The FFC/FPC may bend and patterns may break or the FFC may not insert completely, resulting in improper conduction.

*Keep a sufficient FFC/FPC insertion space in the stage of the layout in order to avoid incorrect FFC/FPC insertion.
Besides, it is not difficult to insert FFC/FPC correctly all the way to the end.
Design the proper layout of parts.

₩ Make adjustments with the FFC/FPC manufacturer for FFC/FPC bending perfomance and wire breakage.

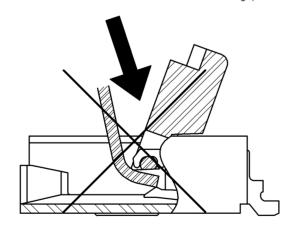

3. Do not rotate the actuator when FFC/FPC TAB is on right and left guides for positioning FFC/FPC. Make sure the position of FFC TAB and guides before rotate the actuator.

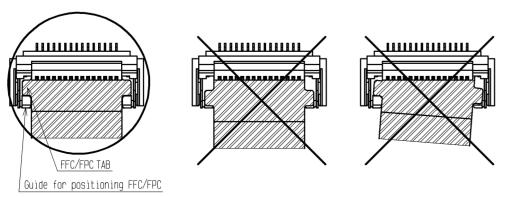

♦ Checking the Locking Condition


In the locked condition, make sure that the actuator is horizontal on the board surface. Do not apply excessive force to it near the 0° position of the actuator. Otherwise, the terminals may be deformed.

INSTRUCTIONS ON FFC/FPC LAYOUT AFTER CONNECTION

♦ Load to FFC/FPC

Be very careful not to apply any force to the connector directly after inserting FFC/FPC. Otherwise, the connector may become unlocked or the FFC/FPC may break. In particular, design the FFC/FPC layout with care not to bend it sharply upward in a vertial direction near the insertion opening. Fix the FFC/FPC when loads are applied to it continuously.


Load:0.10 X n N MAX
(n:number of contacts)

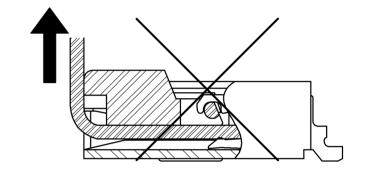

INSTRUCTIONS ON REMOVING FEC/FPC)

- ♦ Move the actuator at approximately the center.
- ♦ Release the actuator to remove the FFC/FPC.

 Remove the FFC/FPC by about 10 degrees along the surface.

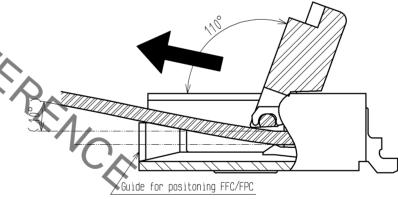

[OTHER INSTRUCTIONS]

♦ Instructions on Manual Soldering

Follow the instructions shown below when soldering the connector manually during repair work, etc.

- 1. Do not perform reflow soldering or manual soldering with the FFC/FPC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not use excessive solder (or flux).

 If excessive solder (or flux) is used on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator. Supplying excessive solder to the reinforcing bracket may hinder actuator rotation, resulting in breakage of the connector.

<INSTRUCTION MANUAL(2)>

ſ		DRAWING NO.	EDC3-335205-01	
	H 25	PART NO.	FH52-12S-1SH	
		CODE NO.	CL580-3323-5-00	5/5

FORM HC0011-5-8 1 2 3 4 5



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru