TOSHIBA BiCD Digital Integrated Circuit Silicon Monolithic

TB62D787FTG

24-channel constant current LED driver with single wire


The TB62D787FTG is a constant current driver designed for LED illumination.

The TB62D787FTG incorporates 7-bit PWM dimming controllers and 24 channels of constant current drivers. Twenty four constant current circuits are divided into three blocks corresponding to LED luminescence color, and each output current can be adjusted by the external resistors.

This product is controlled using only single DATA-IN input signal. The TB62D787FTG can be set maximum 64 ID recognition addresses with the ID setting pin.

The LDO function (7 to 28 V) to share this product with LED power supply is included.

Additionally the Bi-CMOS process adoption allows high-speed data transmission.

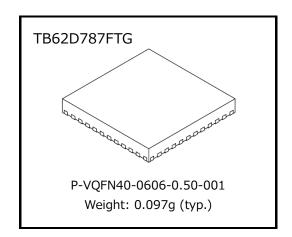

Feature

• Power supply voltage: VL = 7.0 to 28 V (The case used by sharing with a power supply of LED)

 $Vcc = 5.0 \text{ V } \pm 10\%$ (The case which supplies a power supply of LED and

a power supply of IC separately)

Output withstand voltage: 28 V (max)

Output current capability: 85 mA (max) × 24 channels
 Constant current output range: 5 to 40 mA × 24 channels

Voltage applied to constant current output pins:
 0.5 V (min, constant current 5 to 40 mA)

Designed for common-anode LEDs.

• The input interface is controlled by DATA-IN (single wire)

• Logical input signal voltage level: 5 V CMOS Interface (Schmitt trigger input)

PWM control circuit included: 7-bit PWM

Driver identification:
 Up to 64 drivers can be controlled individually

Thermal shut down (TSD) included.


Operating temperature range: Topr = -40 to 85°C
 Package: P-VQFN40-0606-0.50-001

Constant current accuracy

| Output voltage | Current accuracy between channels | Current accuracy between ICs | Output current | |
|----------------|-----------------------------------|------------------------------|----------------|--|
| 0.5 V | ±3.0% | ±6.0% | 15 mA | |

This product is very delicate because of elements of MOS structure. In handling, please take care of measures of static electricity, such as use of a ground band or an electric conduction mat, removal of static electricity by an ionizer, and management of temperature and humidity.


Pin Assignment (top view)

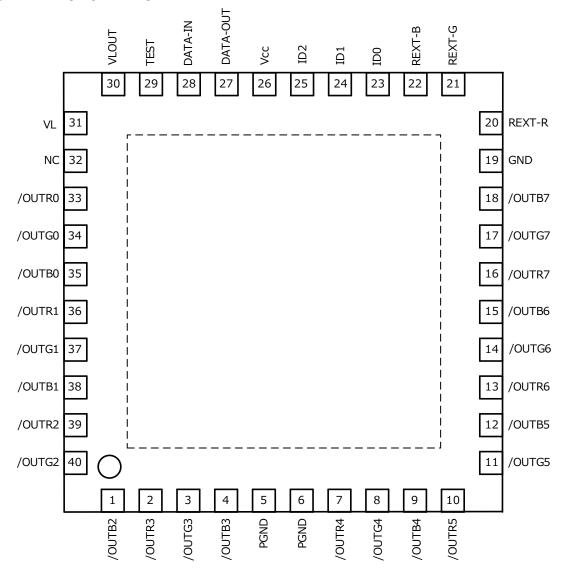

Please be sure to connect the back radiation PAD of a QFN package to GND of a substrate.

2

Block Diagram

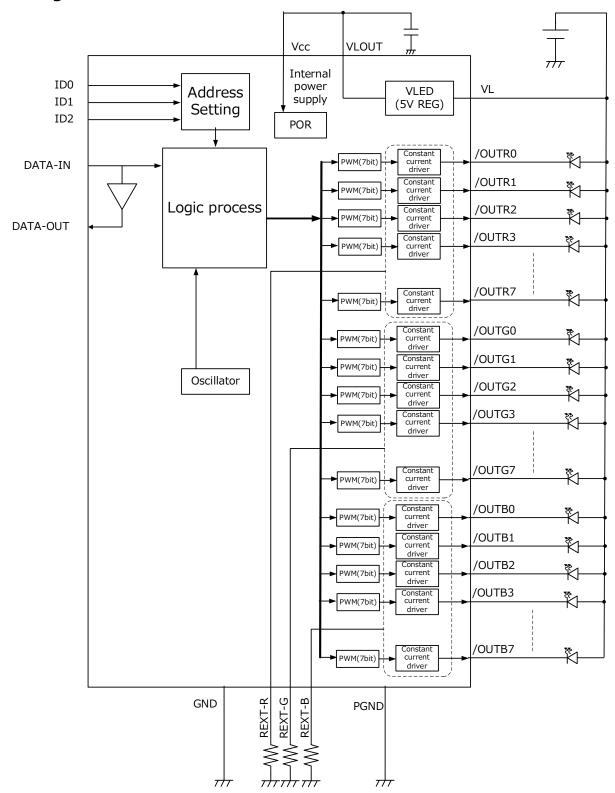


Note: Some of the functional blocks, circuits, or constants in the block diagram may be omitted or simplified for explanatory purposes.

Pin Description

| Pin No. | Pin name | Function description |
|---------|----------|---|
| 33 | /OUTR0 | Constant current output pin. (Open-drain type) |
| 34 | /OUTG0 | Constant current output pin. (Open-drain type) |
| 35 | /OUTB0 | Constant current output pin. (Open-drain type) |
| 36 | /OUTR1 | Constant current output pin. (Open-drain type) |
| 37 | /OUTG1 | Constant current output pin. (Open-drain type) |
| 38 | /OUTB1 | Constant current output pin. (Open-drain type) |
| 39 | /OUTR2 | Constant current output pin. (Open-drain type) |
| 40 | /OUTG2 | Constant current output pin. (Open-drain type) |
| 1 | /OUTB2 | Constant current output pin. (Open-drain type) |
| 2 | /OUTR3 | Constant current output pin. (Open-drain type) |
| 3 | /OUTG3 | Constant current output pin. (Open-drain type) |
| 4 | /OUTB3 | Constant current output pin. (Open-drain type) |
| 7 | /OUTR4 | Constant current output pin. (Open-drain type) |
| 8 | /OUTG4 | Constant current output pin. (Open-drain type) |
| 9 | /OUTB4 | Constant current output pin. (Open-drain type) |
| 10 | /OUTR5 | Constant current output pin. (Open-drain type) |
| 11 | /OUTG5 | Constant current output pin. (Open-drain type) |
| 12 | /OUTB5 | Constant current output pin. (Open-drain type) |
| 13 | /OUTR6 | Constant current output pin. (Open-drain type) |
| 14 | /OUTG6 | Constant current output pin. (Open-drain type) |
| 15 | /OUTB6 | Constant current output pin. (Open-drain type) |
| 16 | /OUTR7 | Constant current output pin. (Open-drain type) |
| 17 | /OUTG7 | Constant current output pin. (Open-drain type) |
| 18 | /OUTB7 | Constant current output pin. (Open-drain type) |
| 5,6 | PGND | Power ground pin. It should be connected to 19 pin (GND) externally. |
| 20 | REXT-R | External resistor pin for output current configuration (/OUTR0 to 7) High resistor should be connected even if the output is unused. |
| 21 | REXT-G | External resistor pin for output current configuration (/OUTG0 to 7) High resistor should be connected even if the output is unused. |
| 22 | REXT-B | External resistor pin for output current configuration (/OUTB0 to 7) High resistor should be connected even if the output is unused. |
| 19 | GND | Ground pin |
| 23 | ID0 | ID setting pin |
| 24 | ID1 | ID setting pin |
| 25 | ID2 | ID setting pin |
| 26 | Vcc | 5 V power supply input pin |
| 27 | DATA-OUT | Serial data output pin (Buffer output of DATA-IN input signal) |
| 28 | DATA-IN | Serial data input pin |
| 29 | TEST | The pin for vendor use. Please connect surely to GND in normal operation because it does not operate normally in high level or open process. |
| 30 | VLOUT | 5 V Regulator output pin. Please connect this pin and Vcc pin directly when internal power supply is used. In case the Vcc voltage is applied from external power supply, please connect VL pin to GND pin. |
| 31 | VL | Power supply input pin in the case of sharing a power supply of LED and the power supply of this product. |
| 32 | NC | Connect to GND in normal operation. |

Note: Please pay attention to short circuiting between adjacent pins when pin 29 is connected to GND.


Equivalent circuit for inputs and outputs

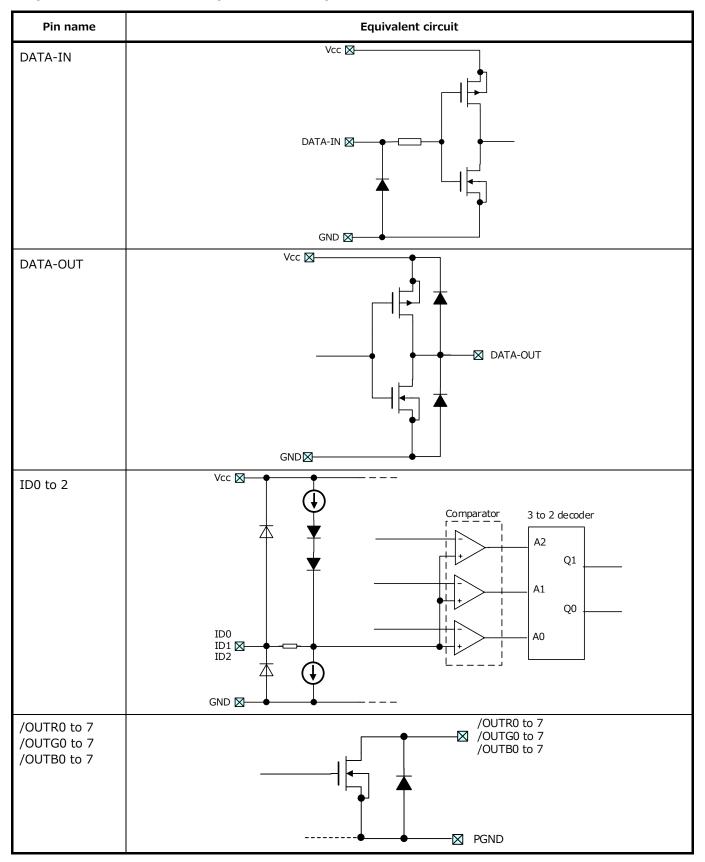

Note: The equivalent circuit diagrams may be simplified or some parts of them may be omitted for explanatory purposes.

Programming the TB62D787FTG

This product performs the control with single wire data signal. As compared with 2-wire data signal synchronous with the clock signal in conventional products, this product assigns each data state to the transition state (H to L or L to H) as shown below.

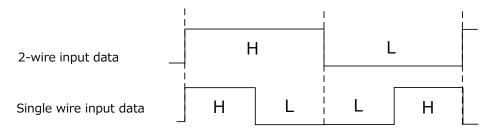

For setting data, select from (2) Normal programming mode, (3) Special programming mode, and a) 12-channel programming mode and b) 6-channel programming mode in (4) Dividing programming mode at (1) Data setting format.

(1) Data setting format

Each command setting input to DATA-IN is set with the following format.

This product recognizes the command frequency (1-bit data width) by taking in the start command (the start condition of data input).

 
Since this product continues to recognize the signal interval which recognizes at the start command until the period command, input the pulse width in 1 bit within 50% duty so that the period is not collapsed until completion of the period command.

(Refer to "Operating Ranges.")


After the completion of the period command input, make sure to set the interval ("L") more than 10 μs until next start command input.

<Input format>


Example) Basic input mode




Example 1) Start command 0xAA and 0xAA setting (original binary 11111111)

 

Example 2) Period command setting 0x95 and 0x56 (original binary 10000001)

 

<Block diagram of data setting block>

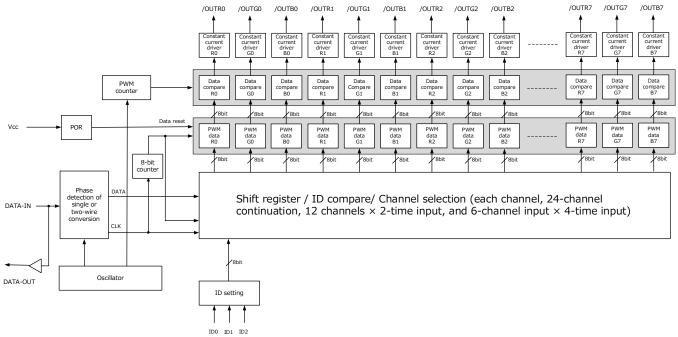

(2) Normal programming mode

Normal programming mode should be set as the following flow.

Start command -> Slave address -> Sub-address -> Data byte -> Period command

Slave address: ID setting of the chip, Sub-address: Output channel setting, Data byte: Data for PWM setting For each setting data, refer to the descriptions later.

| Interval | Start | Slave | Sub-address | Data byte | Period | Interval |
|-----------------------|---------|---------|------------------|---------------------|---------|-----------------------|
| ("L" more than 10 μs) | Command | Address | (channel select) | (PWM configuration) | Command | ("L" more than 10 μs) |

(3) Special programming mode

It is a setting method to set all channels individually.

Special mode setting (In case all channels are selected in order))

When the special mode is set to the sub-address, the illumination data of all channels can be set.

Special mode setting: 0110100101010101=0x69 and 0x55 (original binary: 01100000)

If it returns to Normal programming mode, input the start command (ALL "H" 8 bits). When this mode setting is used, the quantity of the data to be set can be reduced.

| Int | erval | Start | Slave | Sub-address | | Data | Data | Data | Data | Data | Data |
|-----------|-------------|---------|---------|------------------------|-------|--------|-------|-------|-------|-------|-------|
| ("L" more | than 10 μs) | command | Address | (Special mode setting) | | OUTR0 | OUTG0 | OUTB0 | OUTR1 | OUTG1 | OUTB1 |
| | | | | | | | | | | | |
| Data | Data | Data | Data | Data | Data | Data | Data | Data | Data | Data | Data |
| OUTR2 | OUTG2 | OUTB2 | OUTR3 | OUTG3 | OUTB3 | OUTR4 | OUTG4 | OUTB4 | OUTR5 | OUTG5 | OUTB5 |
| | | | | | | | | | | | |
| Data | Data | Data | Data | Data | Data | Period | | | | | |
| OUTR6 | OUTG6 | OUTB6 | OUTR7 | OUTG7 | | | | | | | |

Please set 24-channel data surely. (In case the data (more than 24 channels) provided the 25th and subsequent data are treated as invalid.)

7



(4) Dividing programming mode

a) 12-channel programming mode (12ch+12ch=24ch)

If 12-channel mode is set to sub-address, illumination data can be set in the range.

12-channel programming mode (1/2): 011010010111001=0x69 and 0x59 (original binary: 01100010)

12-channel programming mode (2/2): 0110100101100101=0x69 and 0x65 (original binary: 01100100)

| Interval | Start | Slave | Sub-address | Data | Data | Data | Data | Data | Data |
|-----------------------|---------|---------|------------------------|-------|-------|-------|-------|-------|-------|
| | | | (12ch programming 1/2) | OUTR0 | OUTG0 | OUTB0 | OUTR1 | OUTG1 | OUTB1 |
| ("L" more than 10 μs) | command | address | (12ch programming 2/2) | OUTR4 | OUTG4 | OUTB4 | OUTR5 | OUTG5 | OUTB5 |

| Period | Data | Data | Data | Data | Data | Data | |
|---------|-------|-------|-------|-------|-------|-------|--|
| | | OUTG3 | | | | | |
| command | OUTB7 | OUTG7 | OUTR7 | OUTB6 | OUTG6 | OUTR6 | |

b) 6-channel programming mode (6ch+6ch+6ch+6ch=24ch)

If 6-channel mode is set to sub-address, illumination data can be set in the range.

6-channel programming mode (1/4): 0110100101101001=0x69 and 0x69 (original binary:01100110)

6-channel programming mode (2/4): 0110100110010101=0x69 and 0x95 (original binary:01101000)

6-channel programming mode (3/4): 0110100110011001=0x69 and 0x99 (original binary:01101010)

6-channel programming mode (4/4): 0110100110100101=0x69 and 0xA5 (original binary:01101100)

| | | | | Sub-address | Data | Data | Data | Data | Data | Data | | |
|--------|------------------|---------|-----------------------|-----------------------|-----------------------|-------|-------|-------|-------|--------|--------|---------|
| | Total Chart | Claura | (6ch programming 1/4) | OUTR0 | OUTG0 | OUTB0 | OUTR1 | OUTG1 | OUTB1 | Dovind | | |
| (" " | Interval | Start | Slave | (6ch programming 2/4) | OUTR2 | OUTG2 | OUTB2 | OUTR3 | OUTG3 | OUTB3 | Period | |
| ("L" m | nore than 10 μs) | command | command add | command address | (6ch programming 3/4) | OUTR4 | OUTG4 | OUTB4 | OUTR5 | OUTG5 | OUTR5 | command |
| | | | | (6ch programming 4/4) | OUTR6 | OUTG6 | OUTB6 | OUTR7 | OUTG7 | OUTB7 | | |

(5) Data settings

The start command at the beginning and the period command at the end are shown in the following table. The slave address, sub-address, and PWM data byte shown below are input to between the start command and period command.

| | Original binary | Single wire input | Hexadecimal | Decimal |
|-------|-----------------|-------------------|-------------|---------|
| Start | 11111111 | 1010101010101010 | 0xAA,0xAA | 170,170 |

| | Original binary | Single wire input | Hexadecimal | Decimal | |
|--------|-----------------|-------------------|-------------|---------|--|
| Period | 10000001 | 1001010101010110 | 0x95,0x56 | 149,86 | |

a) Slave address

Input voltages and logic states of the ID0, ID1, and ID2 pins are determined as follows.

*: Please set it as a pin for one of REXT-R, -G, and -B.

| ID | | Slave address | | | | ID setting | |
|----|-----------------|-------------------|-------------|---------|-----|-------------|-------------|
| ID | Original binary | Single wire input | Hexadecimal | Decimal | ID2 | ID1 | ID0 |
| 0 | 00000000 | 0101010101010101 | 0x55,0x55 | 85,85 | GND | GND | GND |
| 1 | 00000010 | 0101010101011001 | 0x55,0x59 | 85,89 | GND | GND | REXT-R/G/B* |
| 2 | 00000100 | 0101010101100101 | 0x55,0x65 | 85,101 | GND | GND | Open |
| 3 | 00000110 | 0101010101101001 | 0x55,0x69 | 85,105 | GND | GND | Vcc |
| 4 | 00001000 | 0101010110010101 | 0x55,0x95 | 85,149 | GND | REXT-R/G/B* | GND |
| 5 | 00001010 | 0101010110011001 | 0x55,0x99 | 85,153 | GND | REXT-R/G/B* | REXT-R/G/B* |
| 6 | 00001100 | 0101010110100101 | 0x55,0xA5 | 85,165 | GND | REXT-R/G/B* | Open |
| 7 | 00001110 | 0101010110101001 | 0x55,0xA9 | 85,169 | GND | REXT-R/G/B* | Vcc |
| 8 | 00010000 | 0101011001010101 | 0x56,0x55 | 86,85 | GND | Open | GND |
| 9 | 00010010 | 0101011001011001 | 0x56,0x59 | 86,89 | GND | Open | REXT-R/G/B* |
| 10 | 00010100 | 0101011001100101 | 0x56,0x65 | 86,101 | GND | Open | Open |
| 11 | 00010110 | 0101011001101001 | 0x56,0x69 | 86,105 | GND | Open | Vcc |

TOSHIBA TB62D787FTG

a) Slave address (continues) **: The original binary number of all the selections is defined as x = 0.

| a) . | Slave address (co | <u> </u> | ie originai bina | ry number | or all the selec | tions is defined | as $x = 0$. |
|------|-------------------|-------------------|------------------|-----------|------------------|------------------|--------------|
| ID | | Slave address | | I | | ID setting | T |
| 10 | Original binary | Single wire input | Hexadecimal | Decimal | ID2 | ID1 | ID0 |
| 12 | 00011000 | 0101011010010101 | 0x56,0x95 | 86,149 | GND | Vcc | GND |
| 13 | 00011010 | 0101011010011001 | 0x56,0x99 | 86,153 | GND | Vcc | REXT-R/G/B* |
| 14 | 00011100 | 0101011010100101 | 0x56,0xA5 | 86,165 | GND | Vcc | Open |
| 15 | 00011110 | 0101011010101001 | 0x56,0xA9 | 86,169 | GND | Vcc | Vcc |
| 16 | 00100000 | 0101100101010101 | 0x59,0x55 | 89,85 | REXT-R/G/B* | GND | GND |
| 17 | 00100010 | 0101100101011001 | 0x59,0x59 | 89,89 | REXT-R/G/B* | GND | REXT-R/G/B* |
| 18 | 00100100 | 0101100101100101 | 0x59,0x65 | 89,101 | REXT-R/G/B* | GND | Open |
| 19 | 00100110 | 0101100101101001 | 0x59,0x69 | 89,105 | REXT-R/G/B* | GND | Vcc |
| 20 | 00101000 | 0101100110010101 | 0x59,0x95 | 89,149 | REXT-R/G/B* | REXT-R/G/B* | GND |
| 21 | 00101010 | 0101100110011001 | 0x59,0x99 | 89,153 | REXT-R/G/B* | REXT-R/G/B* | REXT-R/G/B* |
| 22 | 00101100 | 0101100110100101 | 0x59,0xA5 | 89,165 | REXT-R/G/B* | REXT-R/G/B* | Open |
| 23 | 00101110 | 0101100110101001 | 0x59,0xA9 | 89,169 | REXT-R/G/B* | REXT-R/G/B* | Vcc |
| 24 | 00110000 | 0101101001010101 | 0x5A,0x55 | 90,85 | REXT-R/G/B* | Open | GND |
| 25 | 00110010 | 0101101001011001 | 0x5A,0x59 | 90,89 | REXT-R/G/B* | Open | REXT-R/G/B* |
| 26 | 00110100 | 0101101001100101 | 0x5A,0x65 | 90,101 | REXT-R/G/B* | Open | Open |
| 27 | 00110110 | 0101101001101001 | 0x5A,0x69 | 90,105 | REXT-R/G/B* | Open | Vcc |
| 28 | 00111000 | 0101101010010101 | 0x5A,0x95 | 90,149 | REXT-R/G/B* | Vcc | GND |
| 29 | 00111010 | 0101101010011001 | 0x5A,0x99 | 90,153 | REXT-R/G/B* | Vcc | REXT-R/G/B* |
| 30 | 00111100 | 0101101010100101 | 0x5A,0xA5 | 90,165 | REXT-R/G/B* | Vcc | Open |
| 31 | 00111110 | 0101101010101001 | 0x5A,0xA9 | 90,169 | REXT-R/G/B* | Vcc | Vcc |
| 32 | 01000000 | 0110010101010101 | 0x65,0x55 | 101,85 | Open | GND | GND |
| 33 | 01000010 | 0110010101011001 | 0x65,0x59 | 101,89 | Open | GND | REXT-R/G/B* |
| 34 | 01000100 | 0110010101100101 | 0x65,0x65 | 101,101 | Open | GND | Open |
| 35 | 01000110 | 0110010101101001 | 0x65,0x69 | 101,105 | Open | GND | Vcc |
| 36 | 01001000 | 0110010110010101 | 0x65,0x95 | 101,149 | Open | REXT-R/G/B* | GND |
| 37 | 01001010 | 0110010110011001 | 0x65,0x99 | 101,153 | Open | REXT-R/G/B* | REXT-R/G/B* |
| 38 | 01001100 | 0110010110100101 | 0x65,0xA5 | 101,165 | Open | REXT-R/G/B* | Open |
| 39 | 01001110 | 0110010110101001 | 0x65,0xA9 | 101,169 | Open | REXT-R/G/B* | Vcc |
| 40 | 01010000 | 0110011001010101 | 0x66,0x55 | 102,85 | Open | Open | GND |
| 41 | 01010010 | 0110011001011001 | 0x66,0x59 | 102,89 | Open | Open | REXT-R/G/B* |
| 42 | 01010100 | 0110011001100101 | 0x66,0x65 | 102,101 | Open | Open | Open |
| 43 | 01010110 | 0110011001101001 | 0x66,0x69 | 102,105 | Open | Open | Vcc |
| 44 | 01011000 | 0110011010010101 | 0x66,0x95 | 102,149 | Open | Vcc | GND |
| 45 | 01011010 | 0110011010011001 | 0x66,0x99 | 102,153 | Open | Vcc | REXT-R/G/B* |
| 46 | 01011100 | 0110011010100101 | 0x66,0xA5 | 102,165 | Open | Vcc | Open |
| 47 | 01011110 | 0110011010101001 | 0x66,0xA9 | 102,169 | Open | Vcc | Vcc |
| 48 | 01100000 | 0110100101010101 | 0x69,0x55 | 105,85 | Vcc | GND | GND |
| 49 | 01100010 | 0110100101011001 | 0x69,0x59 | 105,89 | Vcc | GND | REXT-R/G/B* |
| 50 | 01100100 | 0110100101100101 | 0x69,0x65 | 105,101 | Vcc | GND | Open |
| 51 | 01100110 | 0110100101101001 | 0x69,0x69 | 105,105 | Vcc | GND | Vcc |
| 52 | 01101000 | 0110100110010101 | 0x69,0x95 | 105,149 | Vcc | REXT-R/G/B* | GND |
| 53 | 01101010 | 0110100110011001 | 0x69,0x99 | 105,153 | Vcc | REXT-R/G/B* | REXT-R/G/B* |
| 54 | 01101100 | 0110100110100101 | 0x69,0xA5 | 105,165 | Vcc | REXT-R/G/B* | Open |
| 55 | 01101110 | 0110100110101001 | 0x69,0xA9 | 105,169 | Vcc | REXT-R/G/B* | Vcc |
| 56 | 01110000 | 0110101001010101 | 0x6A,0x55 | 106,85 | Vcc | Open | GND |
| 57 | 01110010 | 0110101001011001 | 0x6A,0x59 | 106,89 | Vcc | Open | REXT-R/G/B* |
| 58 | 01110100 | 0110101001100101 | 0x6A,0x65 | 106,101 | Vcc | Open | Open |
| 59 | 01110110 | 0110101001101001 | 0x6A,0x69 | 106,105 | Vcc | Open | Vcc |
| 60 | 01111000 | 0110101010010101 | 0x6A,0x95 | 106,149 | Vcc | Vcc | GND |
| 61 | 01111010 | 0110101010011001 | 0x6A,0x99 | 106,153 | Vcc | Vcc | REXT-R/G/B* |
| 62 | 01111100 | 0110101010100101 | 0x6A,0xA5 | 106,165 | Vcc | Vcc | Open |
| 63 | 01111110 | 0110101010101001 | 0x6A,0xA9 | 106,169 | Vcc | Vcc | Vcc |
| ** | 0XXXXXX1 | 0101010101010110 | 0x55,0x56 | 85,86 | | All select | |

b) Sub-address Output channels, all channels selection, special programming mode, 6-channel programming mode, or 12-channel programming mode can be set.

| | Sub-address | er programmi | ig inouc co | dir be set. | Target setting of PWM |
|-----------------|-------------------|--------------|-------------|-----------------------------------|----------------------------------|
| Original binary | Single wire input | Hexadecimal | Decimal | LED output | data |
| 00000010 | 0101010101011001 | 0x55,0x59 | 85,89 | /OUTR0 | data |
| 0000010 | 0101010101011001 | 0x55,0x65 | 85,101 | /OUTG0 | |
| 00000110 | 0101010101101001 | 0x55,0x69 | 85,105 | /OUTB0 | |
| 00001000 | 0101010110010101 | 0x55,0x95 | 85,149 | /OUTR1 | |
| 00001010 | 0101010110011001 | 0x55,0x99 | 85,153 | /OUTG1 | |
| 00001100 | 0101010110100101 | 0x55,0xA5 | 85,165 | /OUTB1 | |
| 00001110 | 0101010110101001 | 0x55,0xA9 | 85,169 | /OUTR2 | |
| 00010000 | 0101011001010101 | 0x56,0x55 | 86,85 | /OUTG2 | |
| 00010010 | 0101011001011001 | 0x56,0x59 | 86,89 | /OUTB2 | |
| 00010100 | 0101011001100101 | 0x56,0x65 | 86,101 | /OUTR3 | |
| 00010110 | 0101011001101001 | 0x56,0x69 | 86,105 | /OUTG3 | |
| 00011000 | 0101011010010101 | 0x56,0x95 | 86,149 | /OUTB3 | One channel is set |
| 00011010 | 0101011010011001 | 0x56,0x99 | 86,153 | /OUTR4 | separately. |
| 00011100 | 0101011010100101 | 0x56,0xA5 | 86,165 | /OUTG4 | · |
| 00011110 | 0101011010101001 | 0x56,0xA9 | 86,169 | /OUTB4 | |
| 00100000 | 0101100101010101 | 0x59,0x55 | 89,85 | /OUTR5 | |
| 00100010 | 0101100101011001 | 0x59,0x59 | 89,89 | /OUTG5 | |
| 00100100 | 0101100101100101 | 0x59,0x65 | 89,101 | /OUTB5 | |
| 00100110 | 0101100101101001 | 0x59,0x69 | 89,105 | /OUTR6 | |
| 00101000 | 0101100110010101 | 0x59,0x95 | 89,149 | /OUTG6 | |
| 00101010 | 0101100110011001 | 0x59,0x99 | 89,153 | /OUTB6 | |
| 00101100 | 0101100110100101 | 0x59,0xA5 | 89,165 | /OUTR7 | |
| 00101110 | 0101100110101001 | 0x59,0xA9 | 89,169 | /OUTG7 | |
| 00110000 | 0101101001010101 | 0x5A,0x55 | 90,85 | /OUTB7 | |
| 01000000 | 0110010101010101 | 0x65,0x55 | 101,85 | All channel select | All 24 channels are set as same. |
| 01100000 | 0110100101010101 | 0x69,0x55 | 105,85 | Special programming mode | 24 channels are set at one time. |
| 01100010 | 0110100101011001 | 0x69,0x59 | 105,89 | 12-channel programming mode (1/2) | 12 channels are set at |
| 01100100 | 0110100101100101 | 0x69,0x65 | 105,101 | 12-channel programming mode (2/2) | two times. |
| 01100110 | 0110100101101001 | 0x69,0x69 | 105,105 | 6-channel programming mode (1/4) | |
| 01101000 | 0110100110010101 | 0x69,0x95 | 105,149 | 6-channel programming mode (2/4) | 6 channels are set at |
| 01101010 | 0110100110011001 | 0x69,0x99 | 105,153 | 6-channel programming mode (3/4) | four times. |
| 01101100 | 0110100110100101 | 0x69,0xA5 | 105,165 | 6-channel programming mode (4/4) | |

TOSHIBA


c) Data byte Data bytes set PWM dimming data.

| c) Data byte | Data bytes set PWM dimn | | | , | |
|-----------------|-------------------------|-------------|---------|-------------|-----------------------------|
| | PWM data byte | | | PWM dimming | Note |
| Original binary | Single wire input | Hexadecimal | Decimal | _ | 11000 |
| 00000000 | 0101010101010101 | 0x55,0x55 | 85,85 | 0/127 | |
| 00000010 | 0101010101011001 | 0x55,0x59 | 85,89 | 1/127 | |
| 00000100 | 0101010101100101 | 0x55,0x65 | 85,101 | 2/127 | |
| 00000110 | 0101010101101001 | 0x55,0x69 | 85,105 | 3/127 | |
| 00001000 | 0101010110010101 | 0x55,0x95 | 85,149 | 4/127 | |
| 00001010 | 0101010110011001 | 0x55,0x99 | 85,153 | 5/127 | |
| 00001100 | 0101010110100101 | 0x55,0xA5 | 85,165 | 6/127 | |
| 00001110 | 0101010110101001 | 0x55,0xA9 | 85,169 | 7/127 | |
| 00010000 | 0101011001010101 | 0x56,0x55 | 86,85 | 8/127 | |
| to | to | _ | _ | to | |
| 00011110 | 0101011010101001 | 0x56,0xA9 | 86,169 | 15/127 | |
| 00100000 | 0101100101010101 | 0x59,0x55 | 89,85 | 16/127 | |
| to | to | _ | _ | to | |
| 00101110 | 0101100110101001 | 0x59,0xA9 | 89,169 | 23/127 | |
| 00110000 | 0101101001010101 | 0x5A,0x55 | 90,85 | 24/127 | |
| to | to | | | to | |
| 00111110 | 0101101010101001 | 0x5A,0xA9 | 90,169 | 31/127 | |
| 01000000 | 0110010101010101 | 0x65,0x55 | 101,85 | 32/127 | |
| to | to | _ | _ | to | |
| 01001110 | 0110010110101001 | 0x65,0xA9 | 101,169 | 39/127 | |
| 01010100 | 011001011010101 | 0x66,0x55 | 102,85 | 40/127 | |
| to | to | | - | to | |
| 01011110 | 0110011010101001 | 0x66,0xA9 | 102,169 | 47/127 | The initial state is set to |
| 01100000 | 0110110101010101 | 0x69,0x55 | 105,85 | 48/127 | 0/127 and is always |
| to | to | - | - | to | OFF state. |
| 01101110 | 0110100110101001 | 0x69,0xA9 | 105,169 | 55/127 | |
| 0111110 | 011010011010101 | 0x6A,0x55 | 106,85 | 56/127 | As the original binary, |
| to | to | — UXUA,UX33 | | to | set "0" to LSB, and do |
| 01111110 | 0110101010101001 | 0x6A,0xA9 | 106,169 | 63/127 | not set "1." |
| 10000000 | 1001010101010101 | 0x95,0x55 | 149,85 | 64/127 | |
| to | to | - 0,55,0,55 | | to | 127/127 is always ON |
| 10001110 | 1001010110101001 | 0x95,0xa9 | 149,169 | 71/127 | state. |
| 1001110 | 1001010101010101 | 0x96,0x55 | 150,85 | 72/127 | |
| to | to | 0,0,0,0,0 | 130,63 | to | |
| 10011110 | 1001011010101001 | 0x96,0xa9 | 150,169 | 79/127 | |
| 10100000 | 1001011010101001 | 0x99,0x55 | 153,85 | 80/127 | |
| | to | 0x99,0x55 | 155,65 | · | |
| to 10101110 | 1001100110101001 | 0,000,000 | 152 160 | to 87/127 | |
| 10101110 | | 0x99,0xa9 | 153,169 | | |
| | 1001101001010101 | 0x9a,0x55 | 154,85 | 88/127 | |
| to | to | 0,,02,0,,20 | 154.160 | to | |
| 10111110 | 1001101010101001 | 0x9a,0xa9 | 154,169 | 95/127 | |
| 11000000 | 1010010101010101 | 0xa5,0x55 | 165,85 | 96/127 | |
| to | to | - | - | to | |
| 11001110 | 1010010110101001 | 0xa5,0xa9 | 165,169 | 103/127 | |
| 11010000 | 1010011001010101 | 0xa6,0x55 | 166,85 | 104/127 | |
| to | to | - | - | to | |
| 11011110 | 1010011010101001 | 0xa6,0xa9 | 166,169 | 111/127 | |
| 11100000 | 1010100101010101 | 0xa9,0x55 | 169,85 | 112/127 | |
| to | to | | | to | |
| 11101110 | 1010100110101001 | 0xa9,0xa9 | 169,169 | 119/127 | |
| 11110000 | 1010101001010101 | 0xaa,0x55 | 170,85 | 120/127 | |
| to | to | | | to | |
| 11111110 | 1010101010101001 | 0xAA,0xA9 | 170,169 | 127/127 | |

(6) Notes of data setting


This product has the specification of data recognition or processing with only a data signal (asynchronous input signal). The data period (communication speed) is learned with the start command (data input start condition). Data are recognized according to this learning period, and are stored to the internal register after the period command (a condition of data input completion). Therefore, the data are not recognized if the data period is collapsed between the start command and the period command (see the following a)). Then the period learned during an interval period is reset and it waits for next communication.

a) Learning data period

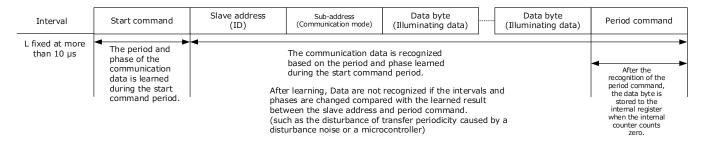

b) Data recognition

The duty of H/L pulse width to input to this product should be set within $\pm 10\%$ as shown below. If the duty is out of this range, data cannot be recognized correctly. (Refer to the following "Operating Ranges.")

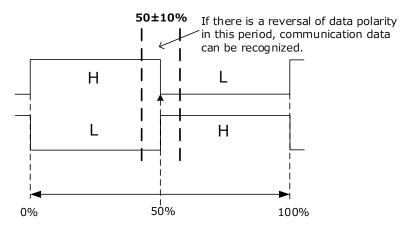

<Reference: Example of control data input>

(7) Example of basic data input to the same ID

 
When data is input to the same ID, next data should be input at the interval of 3 ms or more (128 times of internal PWM clocks) regardless of same or change of sub-address at last input. If the setting to the same channel is overlapped, PWM control cannot perform correctly.

If data is input to other slave address, it is not necessary.

The following from a) to e) corresponds to them if a sub-address is in each output channel, all channels select or special programming mode.

Refer to f) to g) if a sub-address is in 6-channel programming mode or 12-channel programming mode.


a) In case DATA "A" is input up to the rising edge of 127 internal PWM clocks.



Output DATA "A" starts at the rising edge of zero internal PWM clocks.

Inputting is invalid from the rising edge of 127 internal PWM clocks to the rising edge of zero internal PWM clocks which are just after these 127 PWM clocks.


b) In case DATA "A" is input after the rising edge of 127 internal PWM clocks.

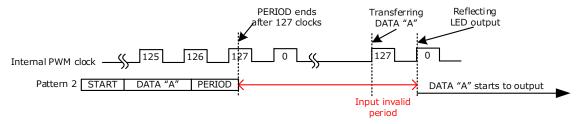

DATA "A" cannot be transferred at the rising edge of 127 internal PWM clocks just after inputting DATA "A." Therefore, DATA "A" starts an output at the rising edge of zero PWM clocks, after passing the rising edge of next 127 internal PWM clocks.

The input invalid period is the period to the rising edge of internal PWM clock 0 of which DATA "A" starts to output.

c) In case DATA "B" is input after starting the output of pattern 1

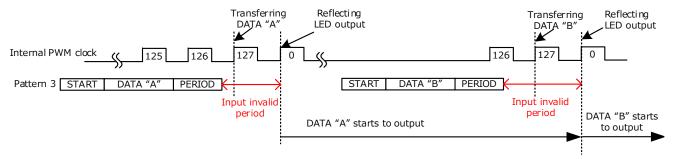


DATA "A" starts an output at the rising edge of zero internal PWM clocks just after DATA "A" period. Then DATA "B" starts an output at rising edge of zero internal PWM clocks just after DATA "B" period.


The input invalid period is the period from the rising edge of 127 internal PWM clocks just after the period input to the rising edge of zero internal PWM clocks.

Pay attention that the IC does not operate according to the configuration while the following patterns (patterns 4 and 5) are input.

d) In case DATA "B" is input before DATA "A" starts output

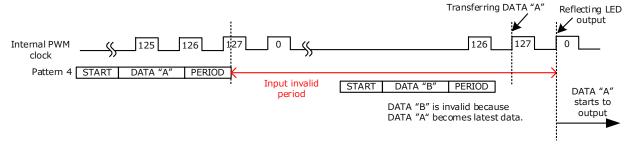


The period between DATA "A" period end and the second rising edge of zero internal PWM clocks is the input invalid period. Therefore, DATA "B" is invalid and DATA "A" is output.

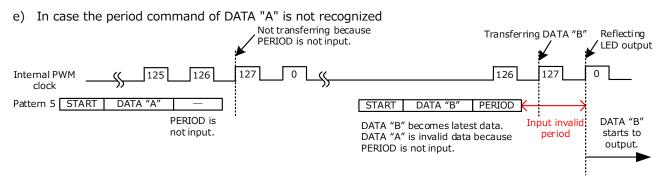

When the period of DATA "A" is not input and the period of next DATA "B" is input, DATA "B" starts output immediately after at the rising edge of zero internal PWM clocks.


f) 6-channel programming mode / 12-channel programming mode
When a 6-channel programming mode group (1/4 -> 2/4 -> 3/4 -> 4/4) or 12-channel programming mode
group (1/2-> 2/2) is input continuously in order, the interval of 3 ms or more is not necessary.
However when same IDs and same channel data in 6 or 12-channel programming mode are input, the interval of
3 ms or more is necessary. PWM control may not be performed correctly.

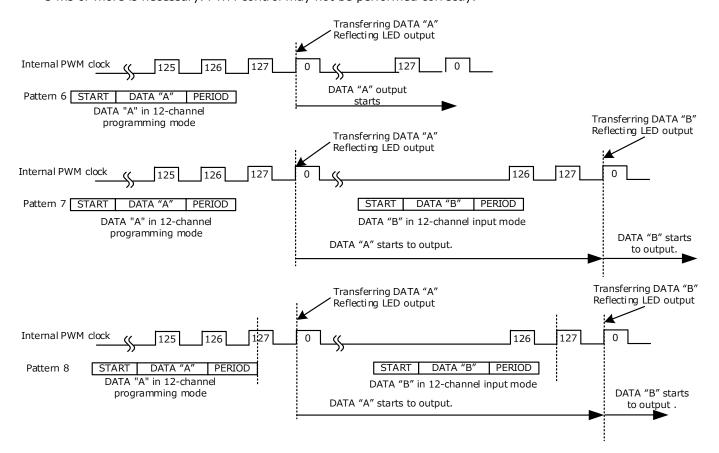


Since there is no input invalid period, an input data are started to output at the rising edge of the first zero internal PWM clocks after inputting the period command.

Therefore, when other programming mode is input immediately after 6-channel or 12-channel programming, the 6-channel or 12-channel programming data immediately before are re-written to the data input in other programming mode.

When 6-channel or 12-channel programming is used, 24-channel units of input are recommended.

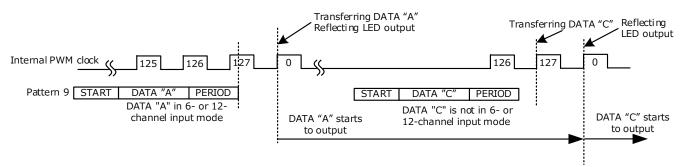


g) In case the period command mistakes

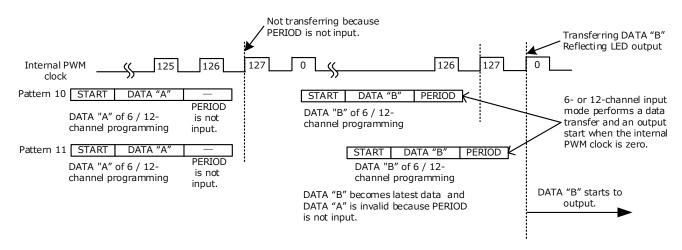

DATA "B" starts to output at the rising edge of zero internal PWM clocks if the period of DATA "A" is not input and the period of next DATA "B" is input.

- (8) Example of basic data input to the different ID.
 - a) In case DATA "B" is input to slave (= 02h) just after DATA "A" is input to slave (= 00h).

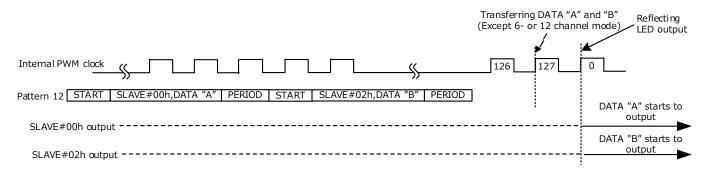


Both DATA "A" and DATA "B" are output at the rising edge of zero internal PWM clock which is just after DATA "A" and DATA "B" inputs.

<Reference>


Pay attention that the IC does not operate according to the configuration while following patterns (patterns 13 and 14) are input.

b) In case period command after inputting DATA "A" to the slave (= 00h) is missed or omitted. In case period command after inputting DATA "B" to the slave (= 02h) is missed or omitted.

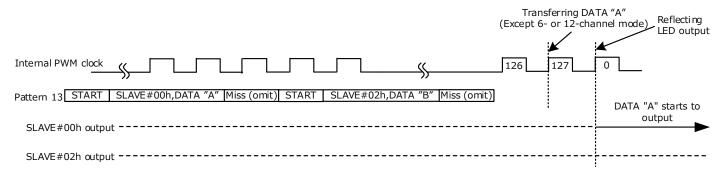

DATA "A" is output. DATA "B" is not output.

c) In case start command is input after DATA "B" of pattern 13 is input.

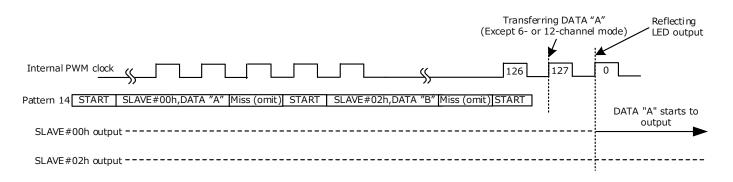

17

DATA "A" is output. DATA "B" is not output.


Power Supply Block

The power supply of this product can be set with the following 2 ways shown in (1) and (2).

- (1) When the power supply of LEDs and those of this product are shared (The power supply function of this product is used.)
- (2) When this product is operated with 5 V power supply input, not sharing the power supply of LEDs (The power supply function of this product is not used.)

Each settings are shown below.


(1) When the power supply of LEDs and those of this product are shared

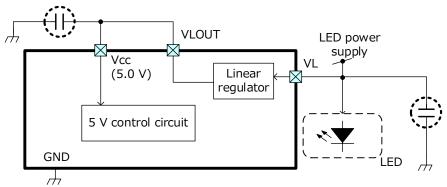

As shown in the above, the power supply (7.0 to 28 V) is applied to the VL pin, and VOUT and Vcc pins are connected directly.

VLOUT pin output (5 V) should be connected within 15 mA dc (@ all LED outputs 40 mA) except connecting to Vcc of own product.

(2) When 5 V power supply is input to Vcc pin directly

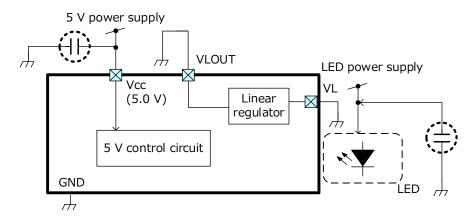

When 5 V power supply is applied to this product without using the built-in power supply, ground VL pin and VLOUT pin to GND.

Note: Add decoupling capacitors to VL pin and Vcc pin. The recommended values are as follows.

Recommended value of decoupling capacitors between VL (LED power supply) and GND: $1\mu\text{F}$ of electrolytic capacitor

*: Evaluate appropriately since it is dependent on the main power supply performance.


Recommended value of decoupling capacitors between Vcc (5 V power supply) and GND: $1\mu F$ of electrolytic capacitor and $0.1\mu F$ of ceramic capacitor

*: Evaluate appropriately since it is dependent on the LED current to be set and current supply amount of VLOUT.

Data buffer


Data buffer is built in between DATA-IN and DATA-OUT, and it can be used for the cascade connection of two or more these products.

In the case of cascade connection with this buffer, connect up to 5 pieces (@2MHz communication) on the same board.

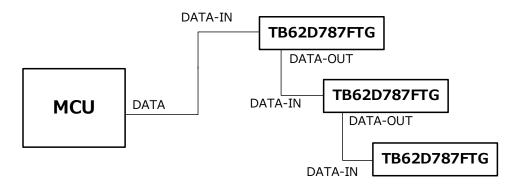

Power on reset (POR)

It avoids the malfunction by the reset all internal data of IC and setting default in startup. POR circuit operates only when VDD rises from 0 V. To restart POR, Vcc should be 0 V. As for the voltage of storing the internal data, it is guaranteed after Vcc reaches 4.5 V or more once.

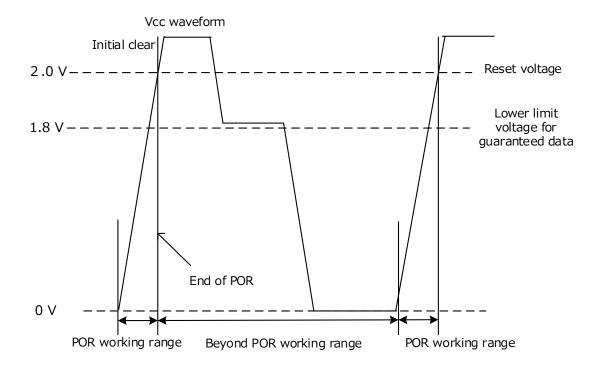

Thermal shutdown function (TSD)

When the temperature of internal IC exceeds 150°C, all constant current outputs are turned off by this function. The constant current is output again when the temperature decreases to the rating.

TSD operation temperature 150°C to 180°C

TSD reset temperature -20°C from TSD operation temperature

Note: TSD function aims at detecting abnormal heating of ICs. Please avoid positively using the TSD function.

Notes of setting

Output load

This product is the driver in which loads are LEDs. Do not connect loads except LEDs to the output.


External resistor for LED drive current setting (REXT-R, REXT-G, and REXT-B)

The external resistances to be connected to REXT-R, REXT-G, and REXT-B pins should be connected separately. Three pins should not be shared as one pin. The current error may occur in each RGB.

Operation sequence of ID setting

The ID setting can be available when Vcc exceeds 4.5 V after turning on.

However, in order to prevent malfunction of the ID setting, the transitional input signals of less than 2-clock period of external input data (DATA-IN) are not received.

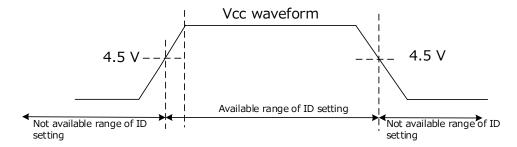

Data setting

The gradation signals should be input data for 24 channels in the special mode certainly.

When the data are input to over 24 channels, the data until the input channel are held and the data in 25th channel are invalid.

When the data are input to less than 24 channels, the data of channels to be input are held, and the data of channels not to be input are held data before the input.

The gradation signals should be input data for specified channels in 6- or 12-channel programming mode.

When the data are input to over specified channels, the data until input channel are held and the data over specified channels are invalid.

When the data input to less than specified channels, the data of channels to be input are held, and the data of channels not to be input are held data before the input.

Moreover, do not input data which are not indicated in this document.

Confirm "Programming the TB62D787FTG" and "(6) Notes of data setting."

5. Data setting timing

When data are input to same slave address, next data should be input with spacing the interval 3 ms or more (128 internal PWM clocks) because data may not be received.

When data are input to different slave address, the interval 3 ms (128 internal PWM clocks) or more is not required.


6. Decoupling capacitor

For the stabilization of power supply system, it is recommended that decoupling capacitor between power supply and GND should place as near IC as possible. For details, refer to "Power Supply Block."

State Transition Diagram


<With VL pin>

VLOUT pin and Vcc pin are wire-connected beforehand, and set each IC's ID (from ID0 to ID2 pin).

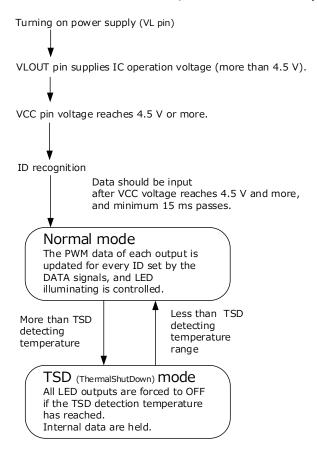

<Without VL pin>

VLOUT pin and VCC pin are wire-connected to GND beforehand, and set each IC's ID (from ID0 to ID2 pin).

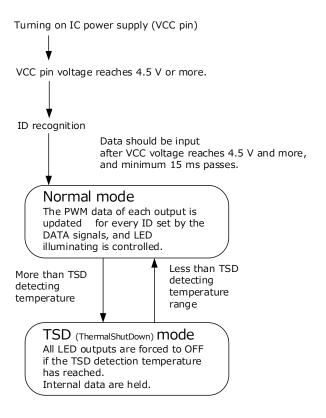

Absolute Maximum Ratings (Ta=25°C)

| Characteristics | Symbol | Rating | Unit | |
|------------------------------|-----------------------|----------------------|-------|--|
| VL pin power supply voltage | VL | 29 | V | |
| Vcc pin power supply voltage | Vcc | 6.0 | V | |
| Input voltage | V _{IN} | -0.3 to 6.0 | V | |
| Output current | I _{OUT} | 85 (Note 3) | mA/ch | |
| Output voltage | V _{OUT} | -0.3 to 29 | V | |
| Power dissipation | P _d | 4.3 (Note 1)(Note 2) | W | |
| Thermal resistance | R _{th (j-a)} | 29.1 (Note 1) | °C/W | |
| Operating Temperature Rating | T _{opr} | -40 to 85 | °C | |
| Storage Temperature Rating | T _{stg} | -55 to 150 | °C | |
| Maximum junction Temperature | Tj | 150 | °C | |

Note 1: When mounted on a PCB (Board size: $76.2 \times 114.3 \times 1.6$ mm, Cu=30%, 35μ m thickness, Compliant with SEMI, 4 layers)

Note 2: Power dissipation is reduced by 1/ $R_{th(j-a)}$ for each °C above 25°C ambient.

Note 3: Current may be further restricted due to ambient temperature or board condition.


Ta: Ambient temperature of ICs

Topr: Ambient temperature of ICs to be operated

Tj: IC chip temperature during operating

For the design, it is recommended that the maximum of T_j is considered of the amount of use dissipation at about 120°C.

Power Dissipation of package

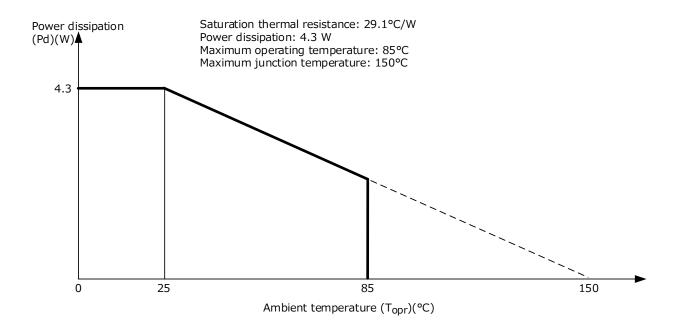


Operating Ranges (T_a=-40 to 85°C, unless otherwise specified)

| Characteristics | Symbol | Test Condition | Min | Тур. | Max | Unit |
|------------------------------|----------------------|---|---------------|-------|---------------|-------|
| VL pin power supply voltage | VL | _ | 7.0 | _ | 28 | V |
| Vcc pin power supply voltage | Vcc | _ | 4.5 | _ | 5.5 | V |
| Output voltage | V _{OUT(ON)} | All outputs | 0.5 | _ | 4 | V |
| Output current | I _{OUT} | All outputs | 5 | _ | 40 | mA/ch |
| Input DATA Frequency | Fin | _ | 0.5 | _ | 2.0 | MHz |
| Input DATA Duty | Fin(duty) | _ | 40 | 50 | 60 | % |
| | V _{IH} | DATA-IN | 0.7 × Vcc | _ | Vcc | V |
| | V _{IL} | | GND | _ | 0.3 × Vcc | |
| Input Voltage | V _{ID0} | | 0 | _ | 0.1 | |
| | V _{ID1} | ID0, ID1, ID2 | VREXT -0.1 | VREXT | VREXT +0.1 | |
| | V _{ID2} | | Vcc -0.1 | _ | Vcc | |
| VLOUT load current | ΔVI | Except Supply current LED current setting is up to 40 mA. | | _ | 15 | mA |

Electrical Characteristics (T_a=25°C, VL=15V, VCC=VLOUT, Unless otherwise specified)


| Characteristics | Symbol | Test Condition | Min | Тур. | Max | Unit | |
|---|--------------------------------|--|-------------|------|------|------|--|
| Output current | I _{OUT1} | $V_{OUT} = 0.5 \text{ V, REXT} = 1.2 \text{ k}\Omega$ | 12.5 | 13.3 | 14.1 | mA | |
| Output current accuracy between channels | ΔI _{OUT2} | V_{OUT} = 0.5 V, REXT = 1.2 k Ω All output ON | _ | _ | ±3.0 | % | |
| Output leakage current | I _{OZ} | V _{OUT} = 28 V | _ | _ | 1 | μΑ | |
| /LOUT pin voltage VLOUT — | | _ | 4.5 | _ | 5.5 | V | |
| Input current | I _{IH} | DATA-IN | _ | _ | 1 | | |
| | I _{IL} | DATA-IN | _ | _ | -1 | μΑ | |
| | I _{ID} | ID0, ID1, ID2 | _ | _ | ±10 | | |
| Output current dependent on Vcc | utput current dependent on Vcc | | _ | 1 | 2 | % | |
| Power supply current in operation | Icc (VL) | When applied VL=15 V REXT = 1.2 k Ω , V _{OUT} = 0.5 V, | _ | 12 | 19 | mA | |
| | Icc (Vcc) | When connected VL=GND REXT = 1.2 $k\Omega$, V_{OUT} = 0.5 V, | _ | 11.5 | 16 | | |
| H Level DATA-OUT pin Output Voltage | VOH | IOH= -1 mA | Vcc -0.4 | _ | _ | V | |
| L Level DATA-OUT pin Output Voltage | VOL | IOL= 1 mA | _ | _ | 0.4 | V | |
| DATA-IN–DATA-OUT Propagation Delay Time (Note) | tpLH | Cl = 15 p5 +f = +f = 2 pc | _ | _ | 20 | ns | |
| | tpHL | CL = 15 pF, tf = tf = 3 ns | _ | _ | 20 | | |
| PWM reference frequency | fPWM | Reference frequency of internal PWM counter | _ | 70 | _ | kHz | |

Note: DATA-IN - DATA-OUT definition

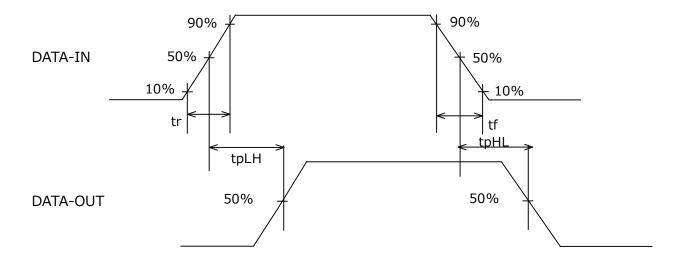


Test Circuit


Test Circuit 1 Input Current (IIH)

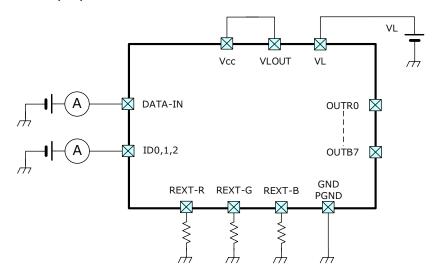


Test Circuit 2 Input Current (IIL)

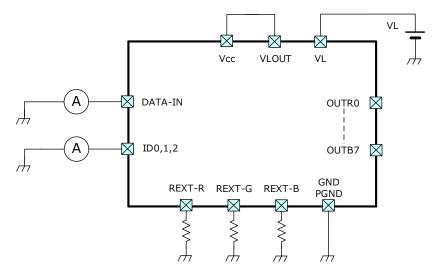


Test Circuit 3 Supply Current (VL)

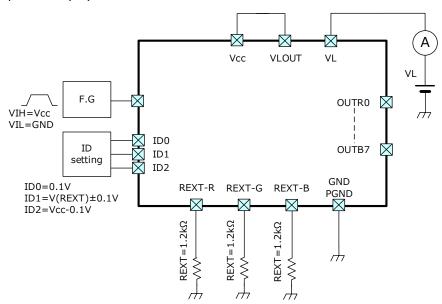

Test Circuit 4 Supply Current (Vcc)

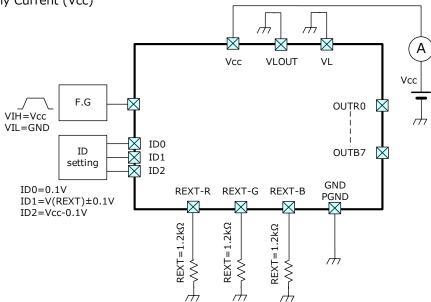



Test Circuit5 Output Current / Output Leakage Current / Output Current Accuracy / Changes in Constant Output current dependent on Vcc

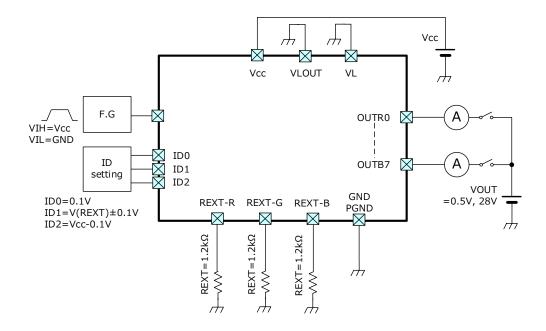



Output current - derating (illuminating rate) graph

Board condition: $76.2\times114.3\times1.6$ mm, Cu=30%, $35~\mu m$ thickness, compliant with SEMI When the pulse width is 25 ms or more, it is regarded as DC.

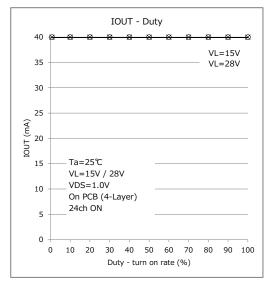


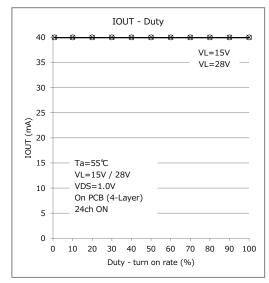

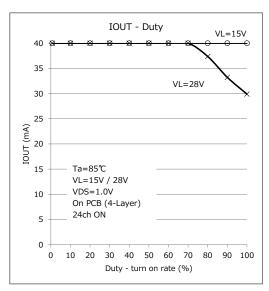


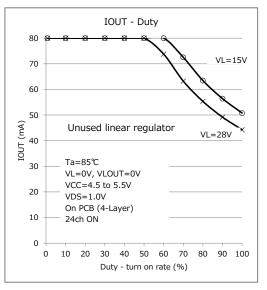

Output current - external resistance characteristic (typ.)

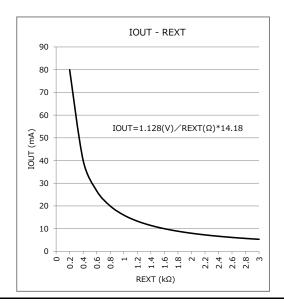

Application circuit 1

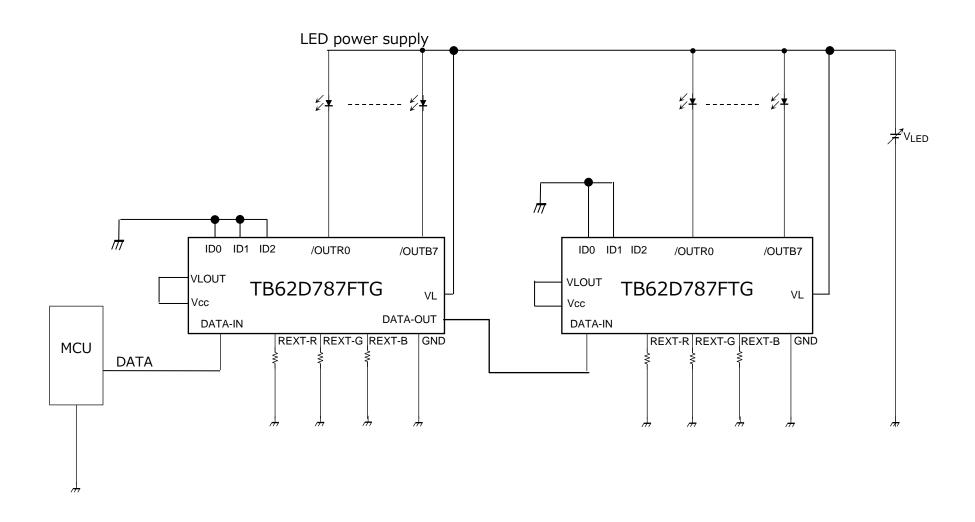



Application circuit 2


When it controls from the same ports of TB62D612FTG, which is 2-wire input control LED driver and the MCU, connect the Exclusive-OR gate (TC74VHC86) and D-Flip/Flop to preceding phase of the input of this product as shown below. At this time, the DATA and CLOCK of the interval period should be set to High level.


Since phase differences between DATA from MCU outputting and clock may occur, confirm the operation enough with the following configuration.

 System configuration

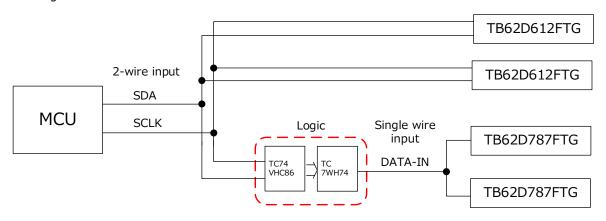

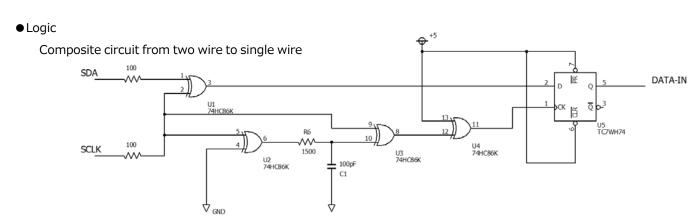



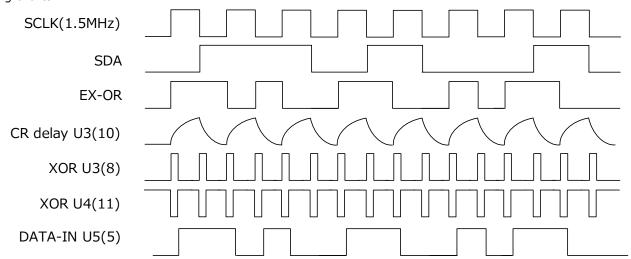


Note: When this circuit is used, the interval period should be fixed to SDA=SCLK=High.

Package Dimensions

P-VQFN40-0606-0.50-001

Unit: mm

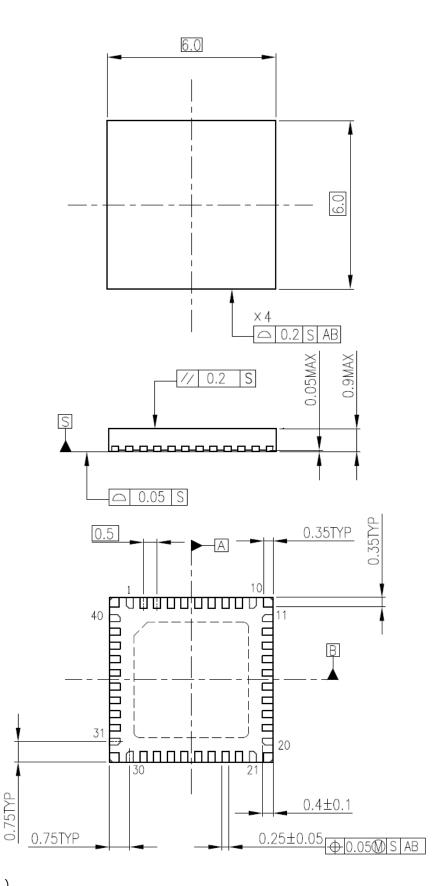

Weight: 0.097g (Typ.)

Notes of Contents

1. Block diagram

Some of the functional blocks, circuits, or constants in the block diagram may be omitted or simplified for explanatory purposes.

2. Equivalent circuits

The equivalent circuit diagrams may be simplified or some parts of them may be omitted for explanatory purposes.

3. Timing charts

Timing charts may be simplified for explanatory purposes.

4. Application circuits

The application circuits shown in this document are provided for reference purposes only. Thorough evaluation is required, especially at the mass production design stage. Toshiba does not grant any license to any industrial property rights by providing these examples of application circuits.

5. Test circuits

Components in the test circuits are used only to obtain and confirm the device characteristics. These components and circuits are not guaranteed to prevent malfunction or failure from occurring in the application equipment.

IC Usage Considerations

Notes on handling of ICs

- (1) The absolute maximum ratings of a semiconductor device are a set of ratings that must not be exceeded, even for a moment. Do not exceed any of these ratings.
 Exceeding the rating(s) may cause the device breakdown, damage or deterioration, and may result injury by explosion or combustion.
- (2) Use an appropriate power supply fuse to ensure that a large current does not continuously flow in case of over current and/or IC failure. The IC will fully break down when used under conditions that exceed its absolute maximum ratings, when the wiring is routed improperly or when an abnormal pulse noise occurs from the wiring or load, causing a large current to continuously flow and the breakdown can lead smoke or ignition. To minimize the effects of the flow of a large current in case of breakdown, appropriate settings, such as fuse capacity, fusing time and insertion circuit location, are required.
- (3) If your design includes an inductive load such as a motor coil, incorporate a protection circuit into the design to prevent device malfunction or breakdown caused by the current resulting from the inrush current at power ON or the negative current resulting from the back electromotive force at power OFF. IC breakdown may cause injury, smoke or ignition. Use a stable power supply with ICs with built-in protection functions. If the power supply is unstable, the protection function may not operate, causing IC breakdown. IC breakdown may cause injury, smoke or ignition.
- (4) Do not insert devices in the wrong orientation or incorrectly. Make sure that the positive and negative terminals of power supplies are connected properly. Otherwise, the current or power consumption may exceed the absolute maximum rating, and exceeding the rating(s) may cause the device breakdown, damage or deterioration, and may result injury by explosion or combustion. In addition, do not use any device that is applied the current with inserting in the wrong orientation or incorrectly even just one time.
- (5) Carefully select external components (such as inputs and negative feedback capacitors) and load components (such as speakers), for example, power amp and regulator.

 If there is a large amount of leakage current such as input or negative feedback condenser, the IC output DC voltage will increase. If this output voltage is connected to a speaker with low input withstand voltage, overcurrent or IC failure can cause smoke or ignition. (The over current can cause smoke or ignition from the IC itself.) In particular, please pay attention when using a Bridge Tied Load (BTL) connection type IC that inputs output DC voltage to a speaker directly.

Points to remember on handling of ICs

(1) Heat Radiation Design

In using an IC with large current flow such as power amp, regulator or driver, please design the device so that heat is appropriately radiated, not to exceed the specified junction temperature (Tj) at any time and condition. These ICs generate heat even during normal use. An inadequate IC heat radiation design can lead to decrease in IC life, deterioration of IC characteristics or IC breakdown. In addition, please design the device taking into considerate the effect of IC heat radiation with peripheral components.

(2) Back-EMF

When a motor rotates in the reverse direction, stops or slows down abruptly, a current flow back to the motor's power supply due to the effect of back-EMF. If the current sink capability of the power supply is small, the device's motor power supply and output pins might be exposed to conditions beyond absolute maximum ratings. To avoid this problem, take the effect of back-EMF into consideration in system design.

(3) Thermal Shutdown Circuit

Thermal shutdown circuits do not necessarily protect ICs under all circumstances. If the thermal shutdown circuits operate against the over temperature, clear the heat generation status immediately. Depending on the method of use and usage conditions, such as exceeding absolute maximum ratings can cause the thermal shutdown circuit to not operate properly or IC breakdown before operation.

RESTRICTIONS ON PRODUCT USE

- Toshiba Corporation, and its subsidiaries and affiliates (collectively "TOSHIBA"), reserve the right to make changes to the information in this document, and related hardware, software and systems (collectively "Product") without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE EXTRAORDINARILY
 HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF WHICH MAY CAUSE LOSS OF HUMAN
 LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC IMPACT ("UNINTENDED USE"). Except for specific
 applications as expressly stated in this document, Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment
 used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling
 equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and
 equipment used in finance-related fields. IF YOU USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR
 PRODUCT. For details, please contact your TOSHIBA sales representative.
- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of
 patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right
 is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR
 PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING
 WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT
 LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY
 AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION,
 INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF
 INFORMATION. OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the
 design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass
 destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations including,
 without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export
 of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please use
 Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without
 limitation, the EU RoHS Directive. TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR LOSSES OCCURRING AS A RESULT OF
 NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Toshiba:

TB62D787FTG,EL



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru