

.100 MTA CONNECTOR	CONNECTOR-HOLDING FIXTURE		MTA APPLICATOR ASSEMBLY	MTA TOOLING ASSEMBLY
	Feed-Through	Closed End		
Without Polarization Tabs	59845-1	59844-1	59842-1■	58039-1□ (408-6685)
	59845-3	—	58575-1 (408-4260)	
With or Without Polarization Tabs	58243-1	58242-1	59842-1■	
Posted	58636-1	58635-1	58575-1 (408-4260)	—
For Testing (All Types)	58243-2	58242-2	59842-1■	—
	58243-3	58242-3	58575-1 (408-4260)	

□ The tooling assembly must be used with Manual Arbor Frame Assembly 58024-1 (408-6923).

■ This applicator assembly must be used with Pneudraulic Tool 59809-2. The applicator assembly and pneudraulic tool are no longer available for new applications, however the fixtures can be used with existing applications.

Figure 1

1. INTRODUCTION

AMP* Mass Termination Assembly (MTA) .100 Connector-Holding Fixtures listed in Figure 1 are designed to hold .100 MTA connectors and discrete wires in position for termination. The fixture is used with the MTA applicator assembly or tooling assembly (also listed in Figure 1). The fixtures are designed for feed-through (wires are not cut) or closed end (wires are cut). The connectors are available with up to 28 contact positions on 2.54-mm [.100-in.] centerline spacing. Read these instructions and referenced material thoroughly before using the fixture.

NOTE

Dimensions in this instruction sheet are in millimeters [with inches in brackets]. Figures are not drawn to scale.

For information on operating the applicator or tooling assembly, refer to the instruction sheet (indicated in parenthesis in Figure 1) packaged with the tooling.

Reasons for reissue of this instruction sheet are provided in Section 7, REVISION SUMMARY.

2. DESCRIPTION

Each fixture consists of a one-piece locating plate, housing support, front wire comb, and rear wire comb. The polarizing tab is used to properly orient the applicator or tooling assembly with the fixture.

3. SETUP

Select the connector according to the color code that matches the wire size as follows:

WIRE SIZE (AWG)	CONNECTOR COLOR CODE
28	Green
26	Blue
24	Natural
22	Red

Then select the connector size according to the required number of contact positions. Refer to Figure 1 to make sure that the fixture is compatible with the connector and method of application.

Proceed as follows:

1. Prepare the cable according to 408-9515. If using the tooling assembly (58039-1), proceed to Section 4, otherwise continue with the following steps.
2. Determine the location for the fixture on the harness board. Make sure space is provided for lengths of wire between connectors. Refer to Figure 2.

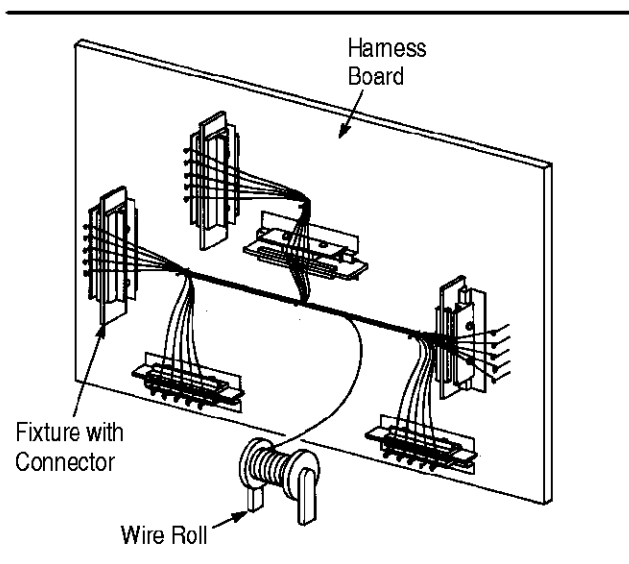


Figure 2

NOTE

The applicator assembly can be rotated 360°, however, to avoid unnecessary motion, the fixture should be positioned so that the least amount of rotation of the applicator assembly is required.

3. Drill holes in the board for mounting the fixture. Refer to Figure 3 for recommended board layout. If using connector assembly for testing, cut a slot for the post retainer assembly.
4. Attach the fixture to the board using screws, washers, and nuts, or suitable commercially available hardware.
5. Place wire roll at a convenient location for lacing into the fixture.

4. TERMINATION PROCEDURE

Refer to Figure 4, and proceed as follows:

1. Spread the fixture wire combs apart, and insert the connector, mating end first, into the center of the receiving track. Make sure that the connector shoulder is behind the locating plate and the connector ribs are aligned with the slots in the wire comb.

CAUTION

The connector must be located in the center of the receiving track. Do NOT place more than two connectors end to end in the fixture.

2. Lace a wire over the slot in the wire combs that aligns with the applicable connector contact. Make sure that the wire is straight, then press the wire into the slot until it bottoms in the wire combs. Repeat until all wires are positioned.
3. Terminate the connector according to 408-4260 (if using applicator assembly) or 408-6685 (if using tooling assembly).

Recommended Harness Board Layout


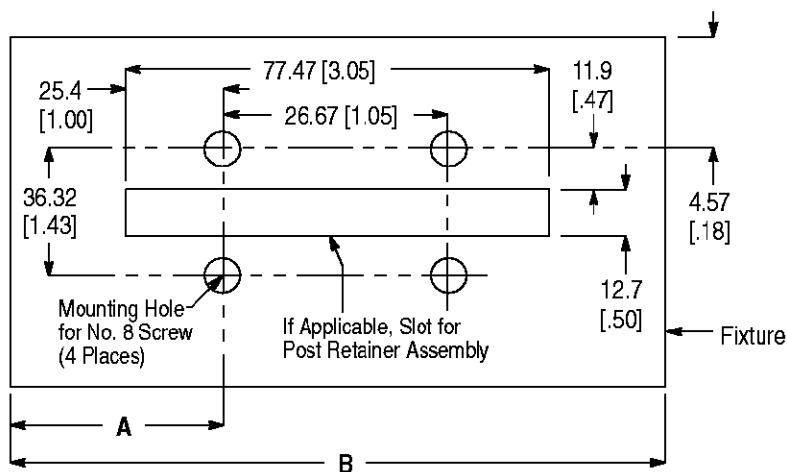


Figure 3

Note: Not to scale

FIXTURE	DIMENSION	
	A	B
58242-3, 58243-3, 59845-3	40.6 [1.60]	107.95 [4.25]
58242-1, 58242-2, 58243-1, 58243-2, 58635-1, 58636-1, 59844-1, 59845-1	31.8 [1.25]	90.17 [3.55]

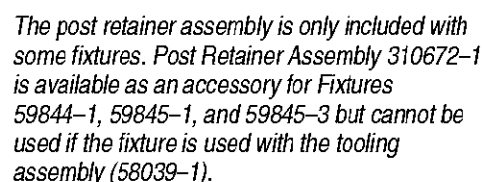


- Added Fixtures 58635-1 and 58636-1


For detailed inspection requirements, refer to Application Specification 114-1019.

The technical drawing illustrates the 6000 series ball bearing. The left view is a front elevation showing the outer ring with a height of 37 [1.45] mm and an overall width of 108 [4.25] mm. The right view is a cross-section showing the internal components: the outer ring (1), balls (2) held by a cage (3), the inner ring (4), and the shaft (5). A dimension of 59 [2.30] mm indicates the distance from the shaft centerline to the outer ring's outer edge.

Figure 5 (Cont'd)

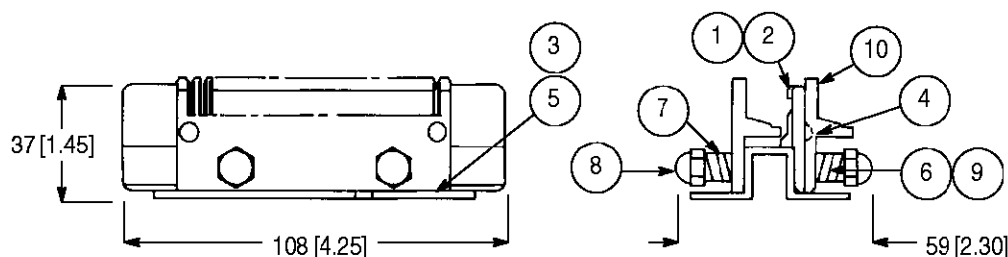

ITEM	PART NUMBER FOR FIXTURE			DESCRIPTION	QTY PER FIXTURE
	59844-1	59845-1	59845-3		
1	310827-1	—	—	BLADE, Cutoff	1
2	—	310829-1	310829-1	BLADE, Locating Feed-Through	1
3	310669-1	310669-1	—	SUPPORT, Housing	1
4	21017-1	—	—	SCREW, Drive	2
5	—	—	318580-1	BASE	2
6	310667-1			SCREW, Special, .875 Lg	2
7	310667-2			SCREW, Special, .750 Lg	2
8	17613-1			NUT, Acorn	4
9	2-22281-0			SPRING	4
10	310325-1			COMB and LOCATOR	2

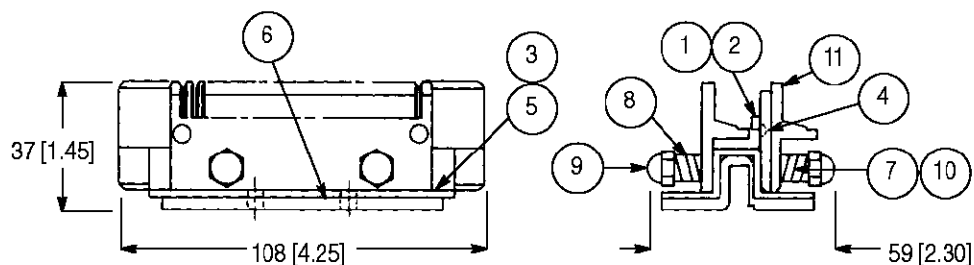

ITEM	PART NUMBER FOR FIXTURE						DESCRIPTION	QTY PER FIXTURE
	58242-1	58242-2	58242-3	58243-1	58243-2	58243-3		
1	313224-1	313224-1	313224-1	—	—	—	BLADE, Cutoff	1
2	—	—	—	313225-1	313225-1	313225-1	BLADE, Locating Feed-Through	1
3	310669-1	310669-1	—	310669-1	310669-1	—	SUPPORT, Housing	1
4	21017-1	21017-1	21017-1	—	—	—	SCREW, Drive	2
5	—	—	318580-1	—	—	318580-1	BASE	1
6	310672-2	310672-1	310672-1	310672-2	310672-1	310672-1	POST RETAINER ASSEMBLY	1
7	310667-1						SCREW, Special, .875 Lg	2
8	310667-2						SCREW, Special, .750 Lg	2
9	17613-1						NUT, Acorn	4
10	2-22281-0						SPRING	4
11	310325-1						COMB and LOCATOR	2

Figure 5 (End)

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru