

Joy Featherwing Created by Dean Miller



Last updated on 2020-04-15 10:31:48 AM EDT

Overview





Make a game or robotic controller with this **Joy**-ful **FeatherWing**. This FeatherWing has a 2-axis joystick and 5 momentary buttons (4 large and 1 small) so you can turn your feather board into a tiny game controller. This wing communicates with your host microcontroller over I2C so it's easy to use and doesn't take up any of your precious analog or digital pins. There is also an optional **interrupt pin** that can alert your feather when a button has been pressed or released to free up processor time for other tasks.



This FeatherWing features Adafruit **Seesaw** technology - a custom programmed little helper microcontroller that takes the two analog inputs from the joystick, and 5 button inputs, and converts it into a pretty I2C interface. This I2C interface means you don't 'lose' any GPIO or analog inputs when using this 'Wing, **and it works with any and all Feathers!** You can easily stack this with any other FeatherWing because I2C is a shared bus. If you have an I2C address conflict, or you want to connect more than one of these to a Feather, there are two address-select jumpers so you have 4 options of I2C addresses



There's an optional IRQ (interrupt) line that you can use if you'd like the Wing to let you know when a button has been pressed. Since its optional (and most Feathers are perfectly happy polling the Wing for data) we left a bunch of solder jumpers so you can select what pin has the IRQ on it. Or just leave it disconnected!



We have an Adafruit Seesaw library for Arduino, Python and CircuitPython so you can get started with the Joy FeatherWing in a jiffy.



Pinouts

Power and Reset Pins



The power to the Joy Featherwing comes from the host Feather's 3.3V regulator, 3.3V and ground are both required and are highlighted above

The Feather's Reset pin ends up coming from the left-most circled pin and connects to the on-board reset button. This is great for resetting when you have the Wing on top

I2C Data Pins



All data and control is done over I2C so it works with any and all Feathers! SDA and SCL are highlighted above. There are 10K pullups to 3.3V on each.

I2C Addressing



Because multiple featherwings of all kinds can be stacked, the I2C address can be changed if necessary. The Joy Featherwing's default I2C address is **0x49**, but soldering jumpers **A0** and/or **A1** can change this:

AO	A1	Addr
open	open	0x49 (default)
closed	open	0x4A
open	closed	0x4B
closed	closed	0x4C

Optional Interrupt Pin



Soldering one of the jumpers for the optional interrupt will connect that pin of your Feather to the interrupt line on the Joy Featherwing. This will allow your Feather to know whether a button has been pressed or released without having to read each button over and over in a loop.

Each Feather has different pin names/numbers so check your mainboard for which pin you want to use then solder that jumper closed



Assembly





Prepare the header strip: Cut the strip to length if necessary. It will be easier to solder if you insert it into a breadboard - **long pins down**



Add the FeatherWing: Place the featherwing over the pins so that the short pins poke through the two rows of breakout pads



And Solder! Be sure to solder all pins for reliable electrical contact.

(For tips on soldering, be sure to check out our Guide to Excellent Soldering (https://adafru.it/aTk)).

Start by soldering the first row of header





Now flip around and solder the other row completely



You're done with the two header strips.

Check your solder joints visually and continue onto the next steps



OK You're done! You can now plug your FeatherWing into your Feather and get your JOY on!



Arduino Wiring & Test

Adafruit seesaw Library

To use with the Arduino IDE, you will need to install the Adafruit_seesaw library (here's the Github repository (https://adafru.it/BrV).)

It is available from the Arduino library manager so we recommend using that.

From the IDE open up the library manager...

👓 demo Ai	rduino 1.8.4			
File Edit Sk	etch Tools Help			
demo // Demo	Verify/Compile Upload Upload Using Programmer Export compiled Binary	Ctrl+R Ctrl+U Ctrl+Shift+U Ctrl+Alt+S	△ Manage Libraries Add .ZIP Library	rn oi
<pre>#includ #includ #includ</pre>	Show Sketch Folder Include Library Add File	Ctrl+K	Arduino libraries ArduinoHttpClient ArduinoSound	
// we lig	ht one pixel at a time,	this is our	AudioZero Bridge	

And type in adafruit seesaw to locate the library. Click Install

💿 Library Manager	×
Type All Topic All Seesaw	
Adafruit seesaw Library by Adafruit Version 1.0.1 INSTALLED This is a library for the Adafruit seesaw helper IC. This is a library for the Adafruit seesaw helper IC. More info Version 1.0.0 Instal	•

For more details on how to install Arduino libraries, check out our detailed tutorial! (https://adafru.it/aYM)

Running the Example Code

The library comes with a Joy Featherwing example to get you started fast. Plug the Wing into the Feather and connect the Feather to your computer with the USB cable.

Open the Arudino IDE and load File->Examples->Adafruit_seesaw->joy_featherwing_example

The example assumes the interrupt pin is connected to pin 5 on the Feather via the first solder jumper on the far left. If you have not soldered this jumper the example code will need to be modified.

Click the Upload button and open the Serial Monitor at 115200 baud speed.

When you move the joystick you should see data appear in the format x,y

When you press a button, a notification should appear in the monitor.

💿 COM47 (Adafruit Feather M0)			_			×
						Send
576, 508						^
955, 305						
956, 268						
956, 256						
955, 234						
956, 205						
956, 152						
511, 509						
Button A pressed						
Button B pressed						
Button Y pressed						- 1
Button x pressed						
Button B pressed						
						~
Autoscroll	Newline	~ 11	5200 baud	\sim	Clea	ar output

FeatherJoyWing library!

If you'd like an all-in-one library that abstracts some of the FeatherWing for you, check out Leonid (https://adafru.it/ven)'s FeatherJoyWing library https://github.com/leonidlezner/FeatherJoyWing (https://adafru.it/Bsi)



Circuit Python Wiring & Test

Download Adafruit_CircuitPython_seesaw Library

To begin reading data from your Joy Featherwing, you will need to download Adafruit_CircuitPython_seesaw from our github repository. You can do that by visiting the github repo and manually downloading or, easier, just click this button to download the zip



Extract the zipped folder. And rename the **folder it contains** to **Adafruit_seesaw**.

Plug your CircuitPython device into your computer via the USB cable, and you should see the CIRCUITPY drive appear.

🕳 🛃 📙 🛨		Drive Tools	CIRCUITP	PY (D:)	_		\times
File Home St	nare View	Manage					^ 🕐
Pin to Quick Copy Pas	ite	ove to ▼ 🗶 🛙 py to ▼ 🖃 F	Delete ▼ Rename	New folder	Properties	I⊒ + 2 €	Select
Clipboard		Organize		New	Open		
\leftrightarrow \rightarrow \checkmark \bigstar \blacksquare \rightarrow	CIRCUITPY (D:)	>	~ Ū	Search CIR	CUITPY (D:)		P
seesaw	^ Name	,	^		Date modif	ied	Турє
🗸 💱 Dropbox (adafruit	lib				9/29/2017 1	2:34 PM	Filet
> 🁧 Fab	📄 boot_	out.txt			9/1/2016 4:4	43 PM	Text
> 🧱 shared_things	n code.	ру			10/6/2017 1	1:25 AM	Pyth
> 🍊 OneDrive	requir	rements.txt			10/4/2017 5	:32 PM	Text
> 💻 This PC							
🗸 👝 CIRCUITPY (D:)							
> 📊 lib							
> 💣 Network	v <						>
4 items						1	==

you should have the **lib** folder already on the drive. If you do not have the **lib** folder, or you encounter errors due to missing libraries, you can download the latest library package here (https://adafru.it/BsI).

Drag the Adafruit_seesaw folder you just renamed to the **CIRCUITPY/lib** folder on your CircuitPython drive. The folder should look like this:



open the code.py file in the root of the CIRCUITPY drive and copy and paste the following code:

```
import time
from board import SCL, SDA
import busio
from micropython import const
from adafruit seesaw.seesaw import Seesaw
# pylint: disable=bad-whitespace
BUTTON RIGHT = const(6)
BUTTON DOWN = const(7)
BUTTON LEFT = const(9)
BUTTON_UP = const(10)
BUTTON SEL = const(14)
# pylint: enable=bad-whitespace
button mask = const(
    (1 << BUTTON RIGHT)
   | (1 << BUTTON DOWN)
   | (1 << BUTTON LEFT)
   | (1 << BUTTON UP)
   | (1 << BUTTON SEL)
)
i2c bus = busio.I2C(SCL, SDA)
ss = Seesaw(i2c bus)
ss.pin_mode_bulk(button_mask, ss.INPUT_PULLUP)
last x = 0
last y = 0
while True:
   x = ss.analog_read(2)
    y = ss.analog read(3)
    if (abs(x - last x) > 3) or (abs(y - last y) > 3):
        print(x, y)
        last x = x
        last y = y
    buttons = ss.digital read bulk(button mask)
    if not buttons & (1 << BUTTON_RIGHT):</pre>
        print("Button A pressed")
    if not buttons & (1 << BUTTON DOWN):
        print("Button B pressed")
    if not buttons & (1 << BUTTON LEFT):
        print("Button Y pressed")
    if not buttons & (1 << BUTTON UP):
        print("Button x pressed")
    if not buttons & (1 << BUTTON SEL):
        print("Button SEL pressed")
    time.sleep(0.01)
```

Plug your Joy Featherwing onto the top of your CircuitPython Feather board.

When you open the REPL you should see output when you press buttons or move the joystick.



Downloads

Files

- Fritzing object in Adafruit Fritzing Library (https://adafru.it/aP3)
- PCB files (EAGLE format) (https://adafru.it/Bsm)

Schematic

click to enlarge



Dimensions

in Inches





ООО "ЛайфЭлектроникс"

ИНН 7805602321 КПП 780501001 Р/С 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru

www.lifeelectronics.ru