


Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

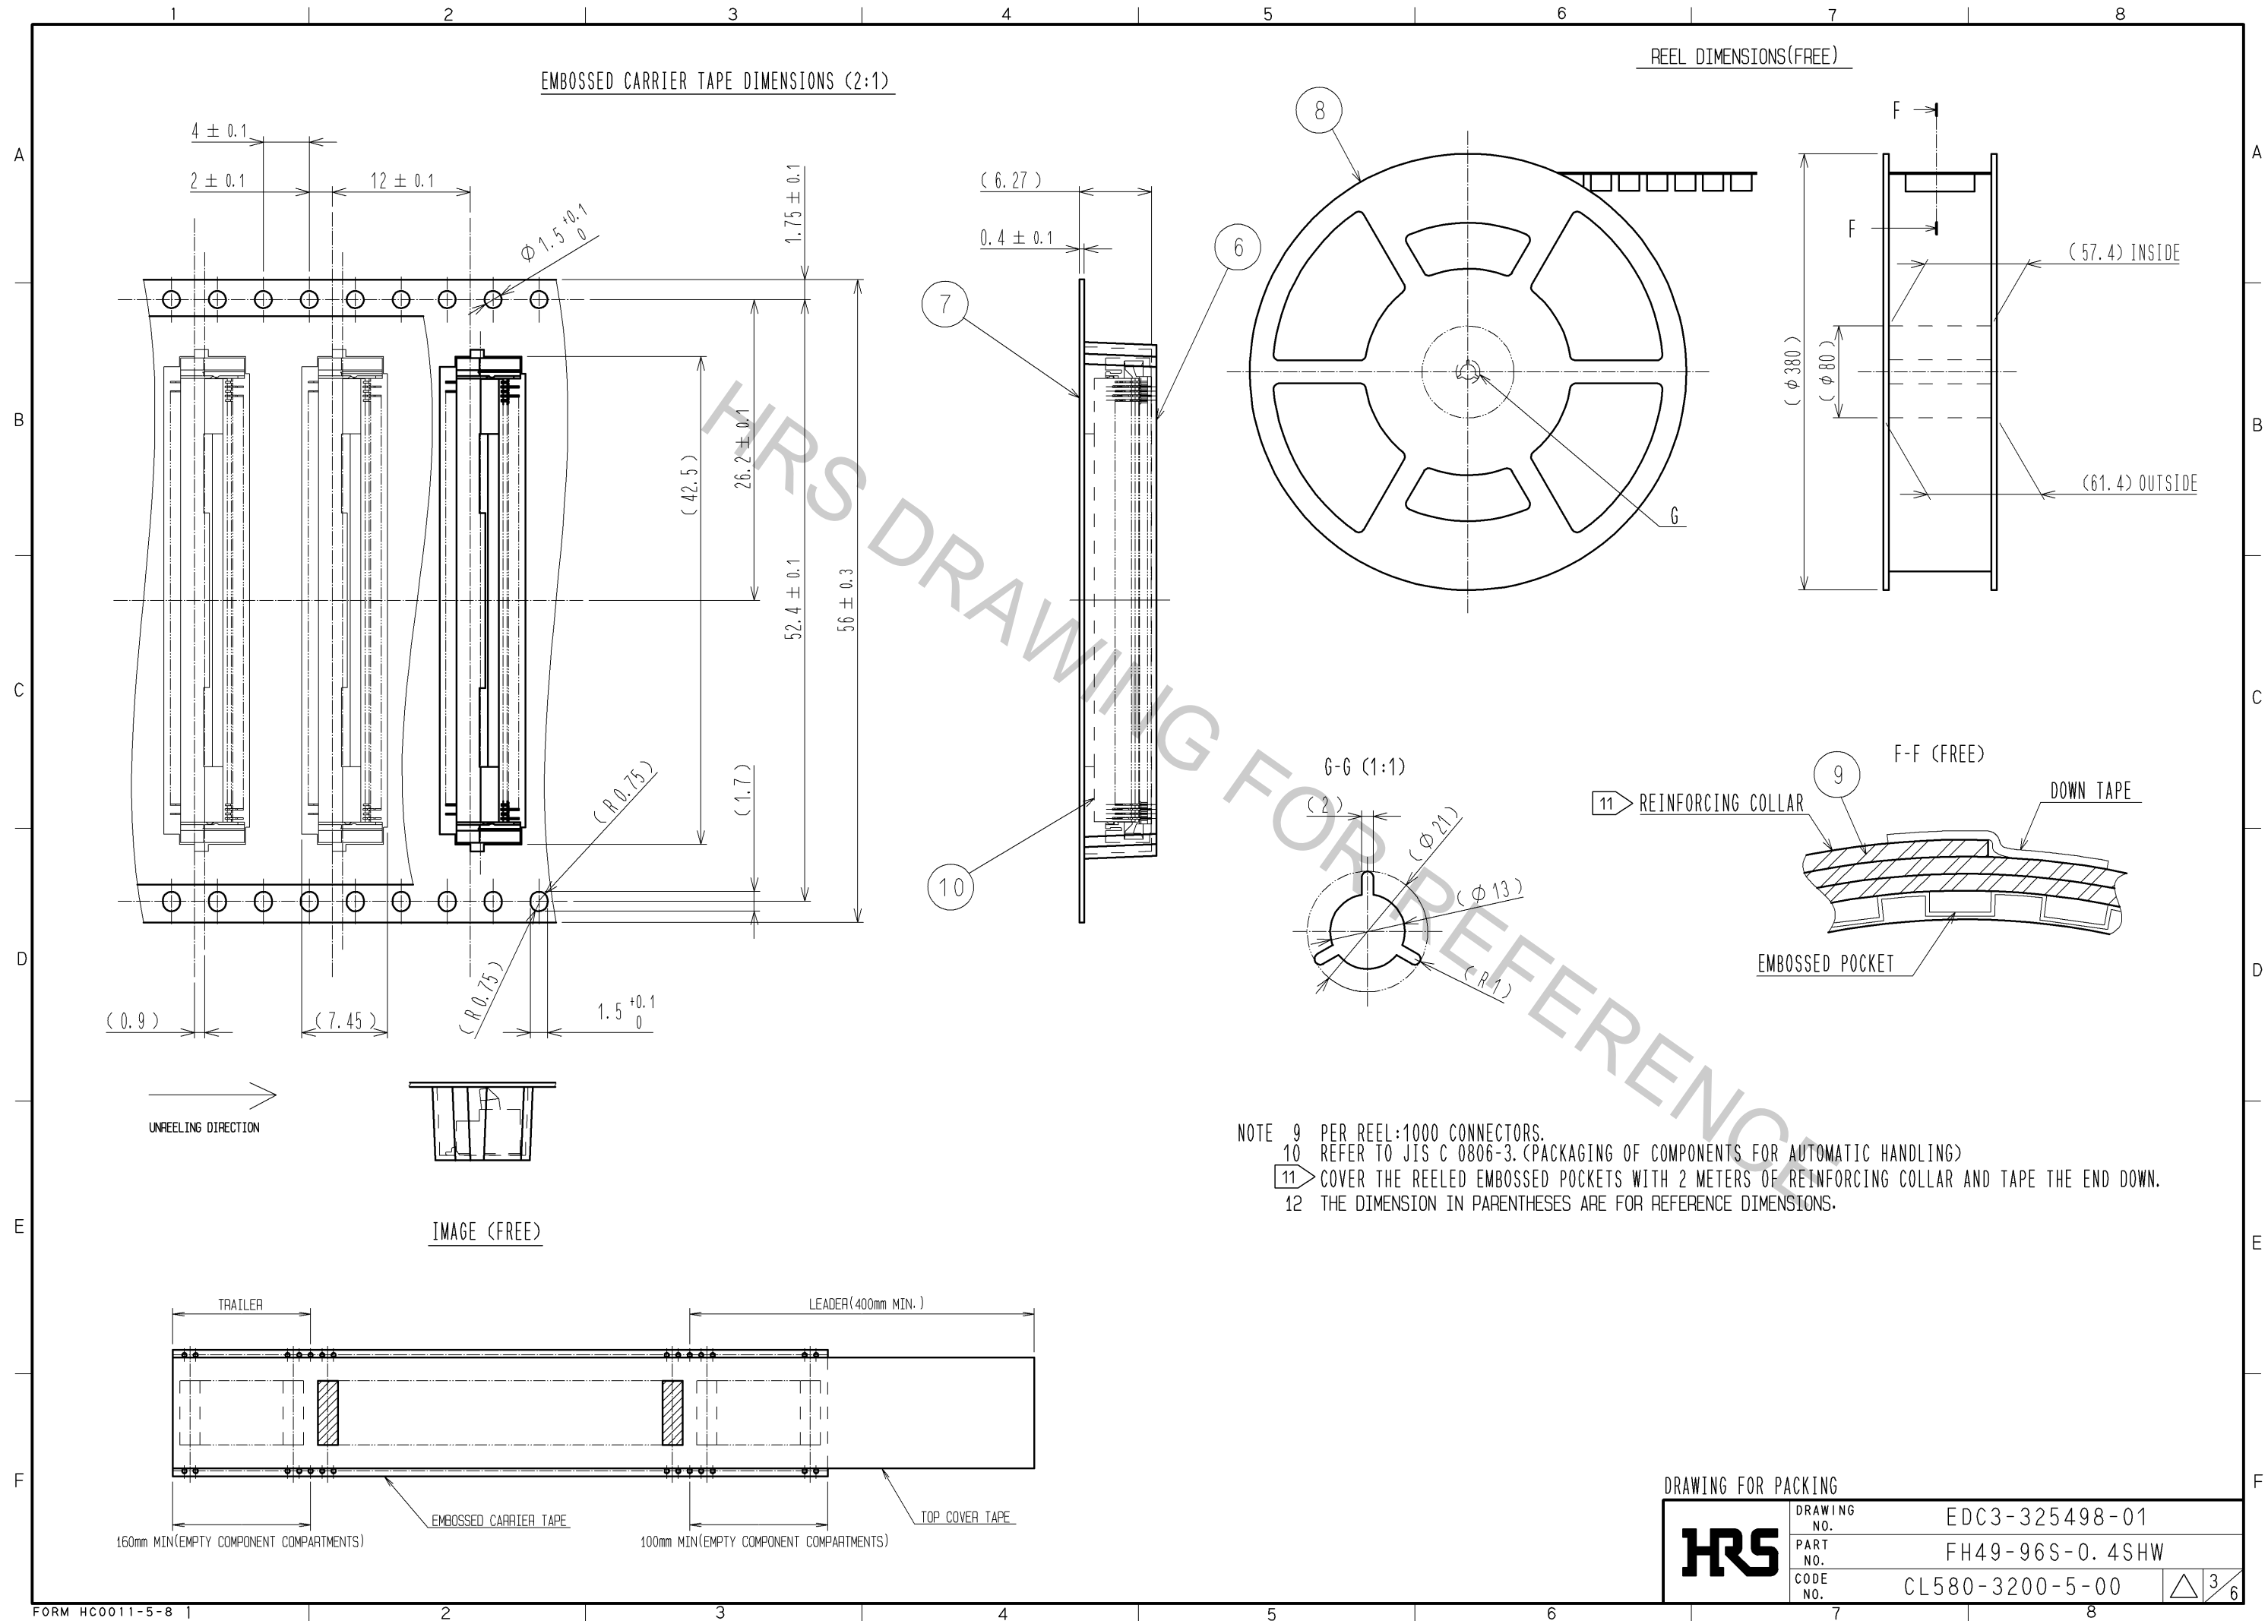


Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

This connector requires careful handling.
Follow recommendations given below.
The numerical values shown are not part of the connector specification.


[MOUNTING ON THE PCB]

- ◆Warp of Board
Minimize warp of the board as much as possible.
Lead co-planarity is 0.1 mm max.
Excessive warp of the board may result in solder joint failures.
- ◆Forces on the connector
Do not apply a force of 1 N or more to the connector before mounting it on the board.
Do not insert the FPC or operate the connector before mounting it on the board.
- ◆Forces on the board
When breaking-up large board into smaller one exercise caution a NOT to apply forces to the mounted connectors.
When mounting the boards in the device with the screws exercise caution as NOT to apply forces to the mounted connectors.
- ◆Bending of the board
The bend of the 100 mm wide board should be 1 mm or less(as shown below).
Excessive bending of the board may cause malfunction or damage of the connector.

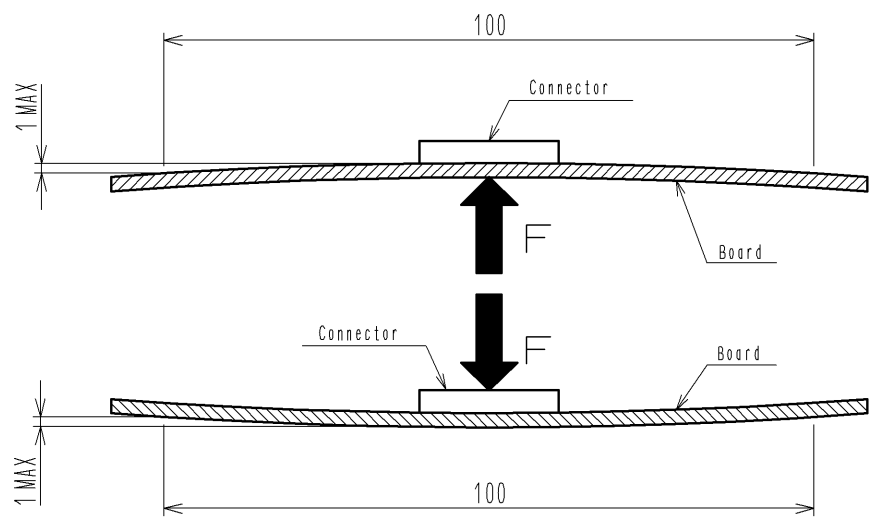

[INSERTION OF THE FPC AND ROCK]


- ◆Use of the actuator
When using fingernails to use the actuator exercise caution NOT to damage or deform the contacts.

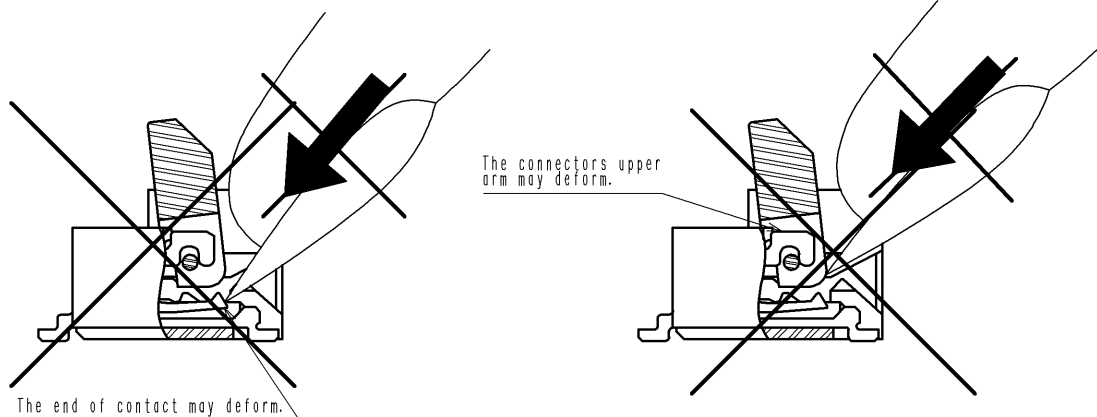

The actuator is designed to rotate on its axis as shown in the figure below.
Make sure to use rotating motion when operating it.
The actuator is designed to open 96 degrees max.
Do not push it back further than this.
This may deform contacts, break-off the actuator or damage the connector.



Operate the actuator only as instructed.
Do not attempt to dislodge the open actuator as shown below.

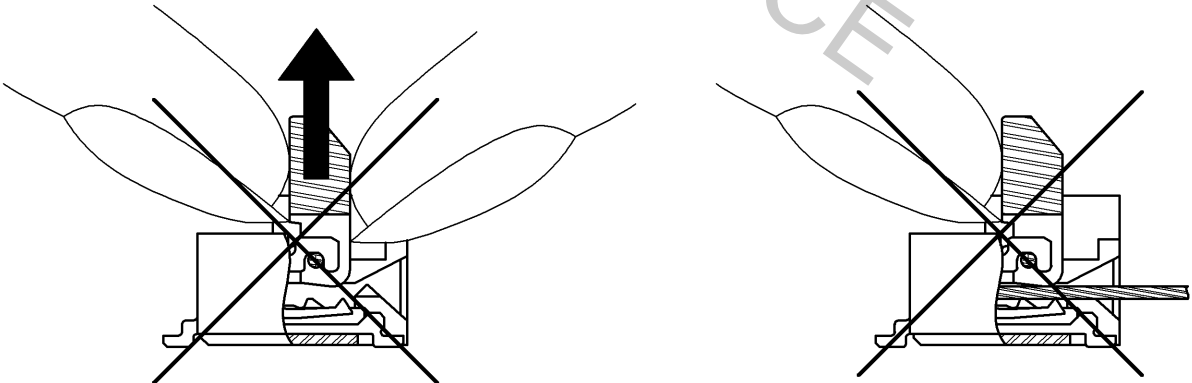

<ADDITIONAL RECOMMENDATIONS 1>






HRS	DRAWING NO.	EDC3-325498-01
	PART NO.	FH49-96S-0.4SHW
	CODE NO.	CL580-3200-5-00
		4/6

Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.


◆Contact point orientation
This is a bottom contact point connector.
FPC must be inserted with the exposed contact surfaces facing down.

◆Insertion of FPC
① Pre-insertion
Position the FPC with the actuator fully open, aligning the both FPC ends to connector taper until the FPC end is inserted to the FPC insertion opening.
※ If operation or routing condition does not allow straight insertion, optional FPC guide could prevent angled FPC insertion.
(Refer to the FPC dimensions on page 2 for the details.)

②Full insertion
After FPC tops are inserted to FPC opening, insert the FPC in the connector opening, targeting between the lower line of the taper and the bottom of the insertion opening, parallel to the PCB and vertical to FPC insertion opening,until the FPC end reaches to the opening end. Make sure not to bend the FPC during insertion.

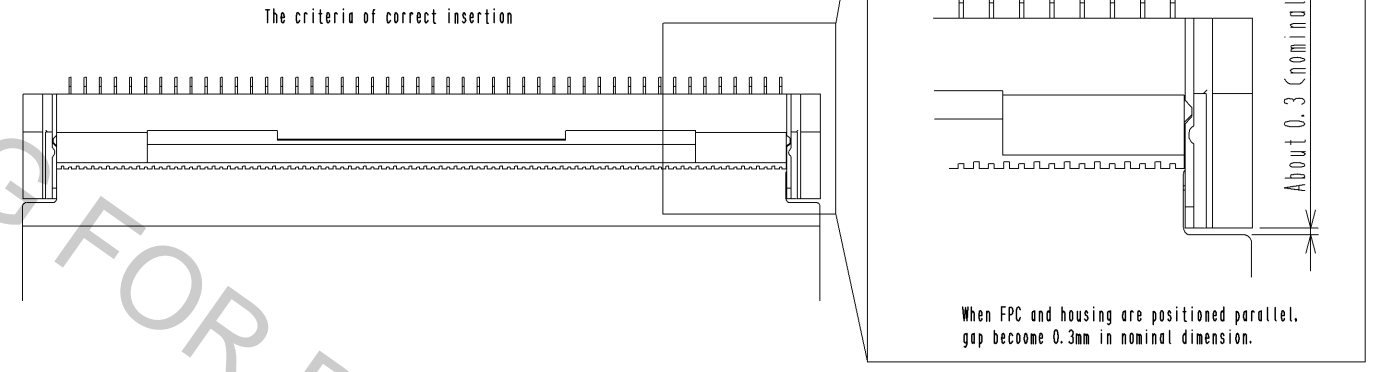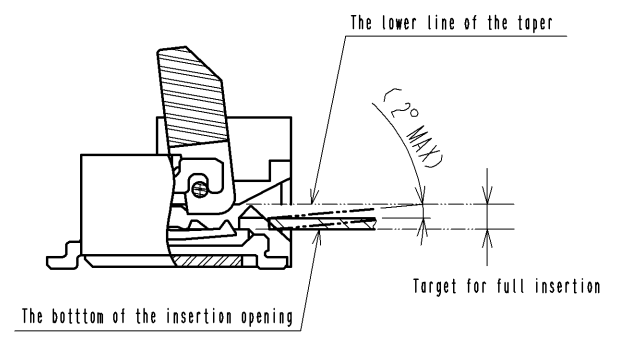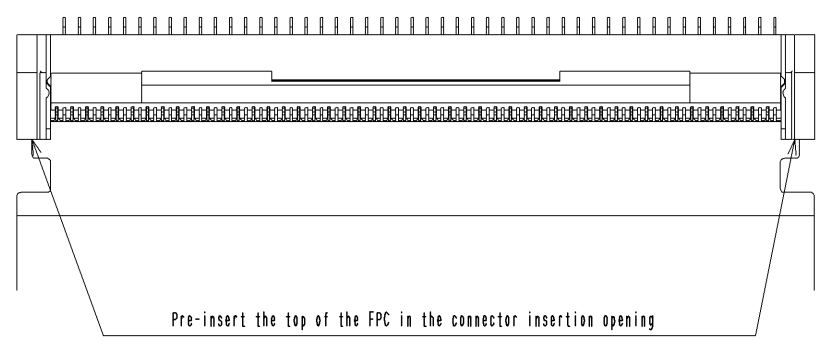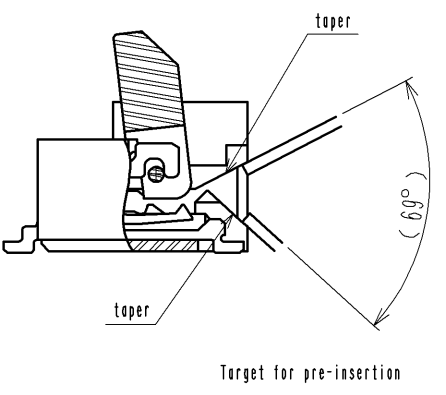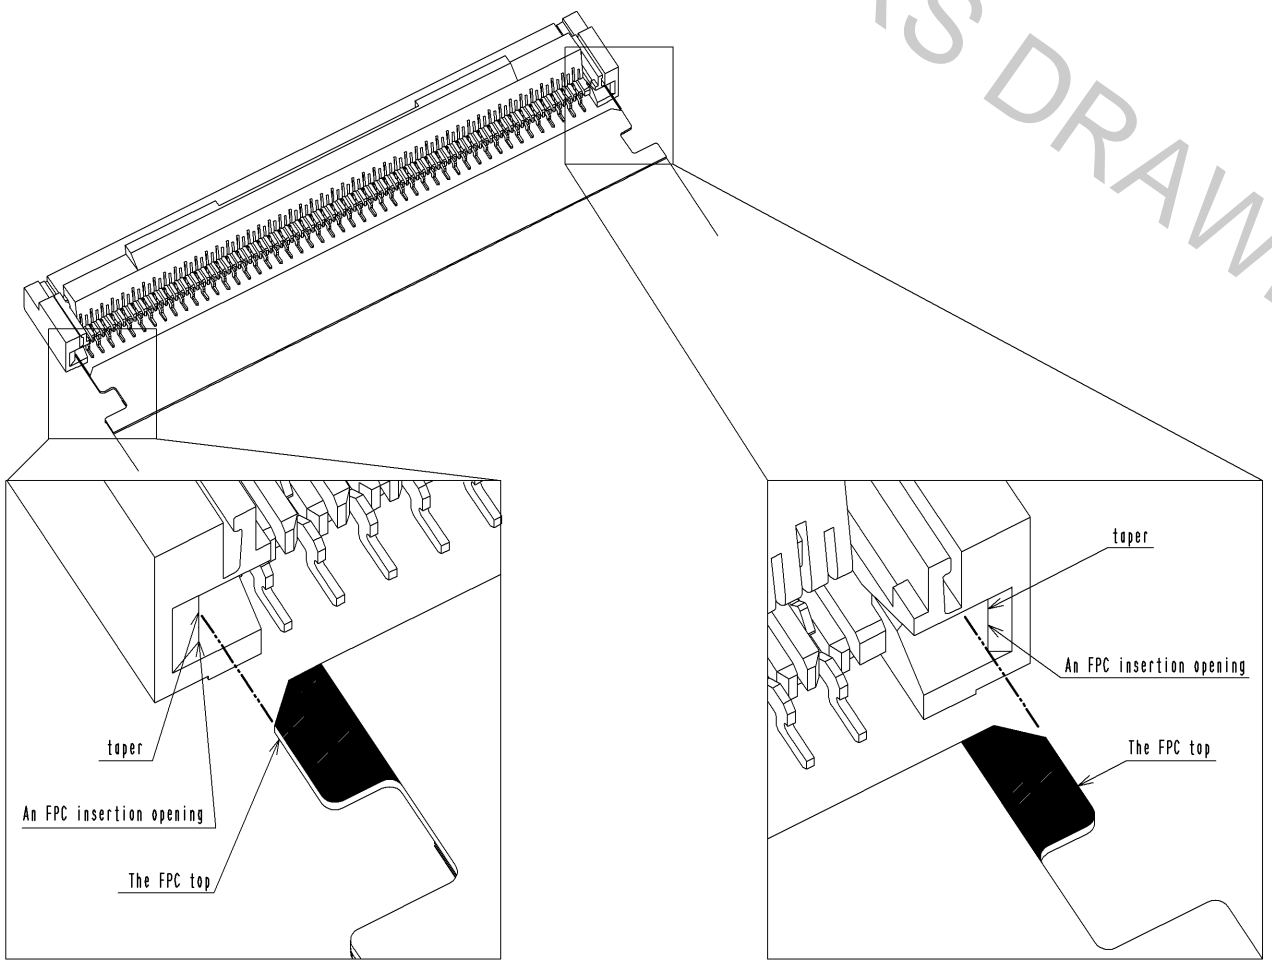

Do not move the FPC to the side direction when above operation is not achieved.
Remove the FPC at first, confirm there is no damage on the FPC and connector, and then start the insertion operation from the beginning.

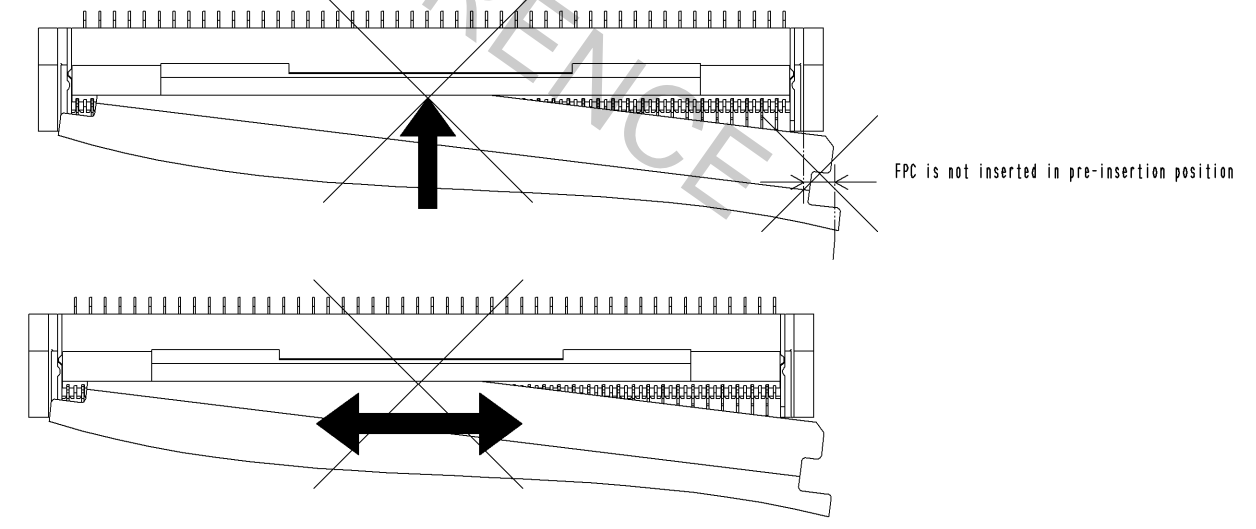


<ADDITIONAL RECOMMENDATIONS 2>

HRS	DRAWING NO.	EDC3-325498-01
	PART NO.	FH49-96S-0.4SHW
	CODE NO.	CL580-3200-5-00
		5/6


Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

Do not insert the FPC off the specified angle for full FPC insertion, as this may cause contact deformation and/or FPC damage by FPC end nocking the contacts.
Also, this may cause pattern breakage by FPC bent and/or conduction failure by insufficient insertion.

- ※Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion.
Besides, it is not difficult to insert FPC correctly all the way to the end.
Design the proper layout of parts.
- ※Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.

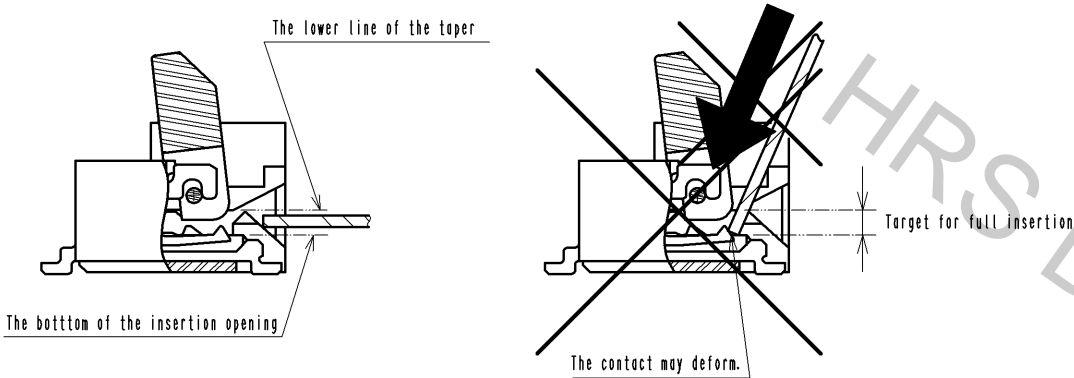


Do not apply force to the actuator during FPC full insertion procedure.
FPC insertion could become stiff and/or difficult for wiping.

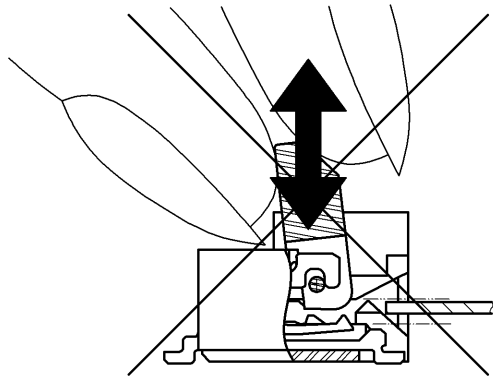


[INSTRUCTIONS ON FPC LAYOUT AFTER CONNECTION]

- ◆ Load to FPC
Be very careful not to apply any force to the FPC after inserting it.
Otherwise, the connector may become unlocked or the FPC may break.
Fix the FPC, in particular, when loads are applied to it continuously.
Design the FPC layout with care not to bend it sharply near the insertion opening.
Please take 5mm MIN from the reinforcement taping.

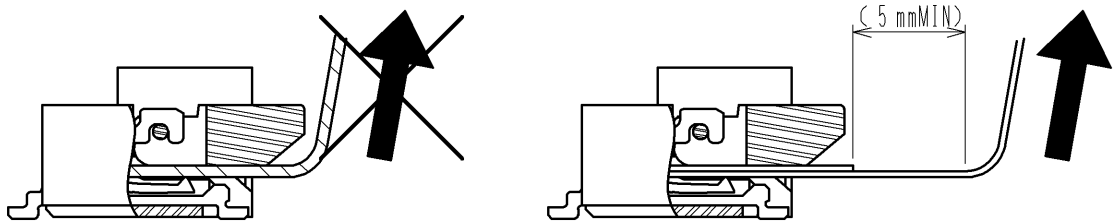


[Instructions on removing FPC]

- ◆ Do not apply forces only at one end(right figure below) as this may cause damage to the actuator.

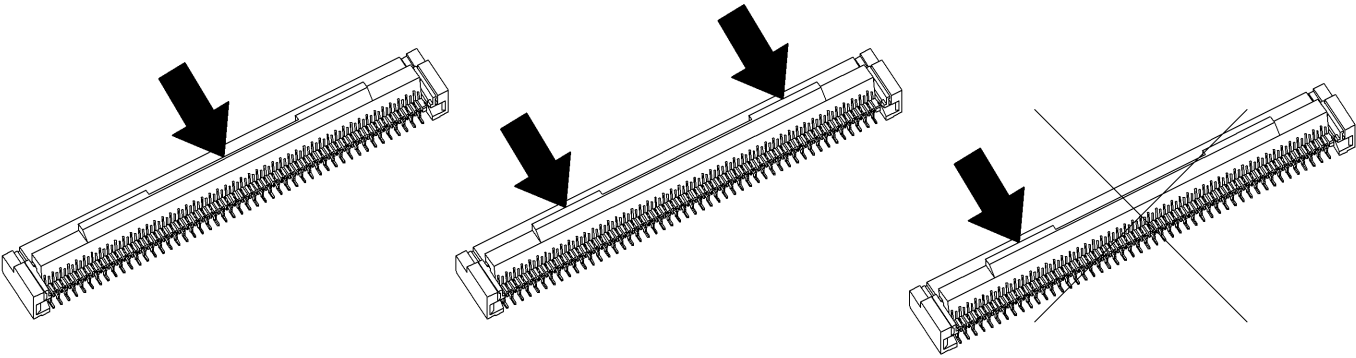

- ◆ Release the actuator to remove the FPC.

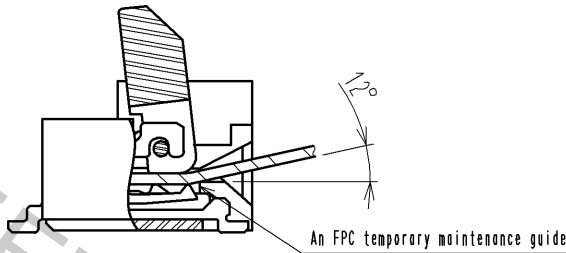

[Other recommendations]

- ◆ Manual soldering
 1. Do not perform soldering operations with the FPC inserted in the connector.
 2. The soldering iron must contact only the terminals.
Do not touch any other part of the connector with the soldering iron.
 3. Do not apply excessive solder (or flux).
If excessive solder (or flux) is applied on the terminals, solder (or flux) may adhere to the contacts or rotating parts of the actuator resulting in the poor contact or rotation failure of the actuator.

<ADDITIONAL RECOMMENDATIONS 3>

HRS	DRAWING NO.	EDC3-325498-01
	PART NO.	FH49-96S-0.4SHW
	CODE NO.	CL580-3200-5-00

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru