


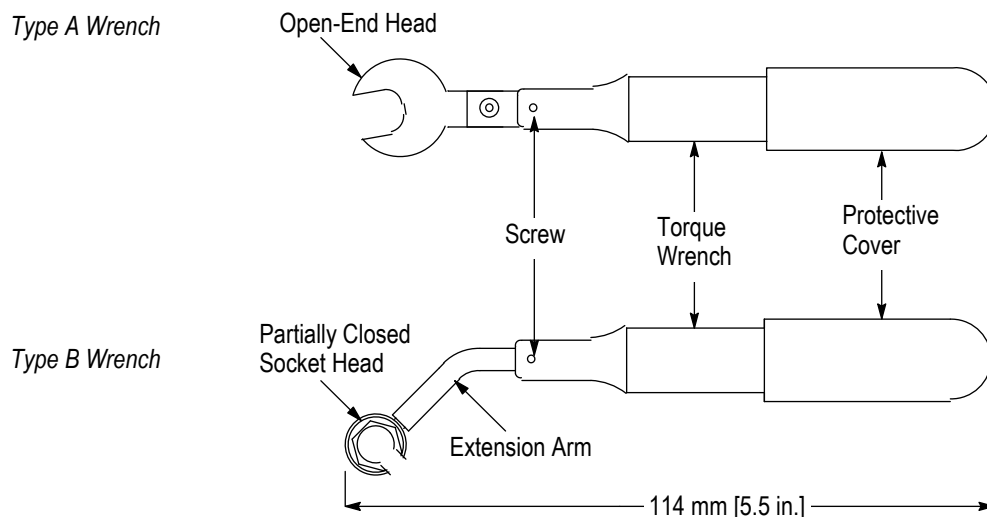

CURRENT PART NUMBER	PREVIOUS PART NUMBER	DESCRIPTION	HEAD SIZE (mm [in.])	PESET TORQUE
1055258-1	2098-0275-54	Type A for SMA Connectors	7.9 [5/16]	8 in.-lbs
1055516-1	2098-5642-54	Type B for SMA Connectors	7.9 [5/16]	8 in.-lbs
1055850-1	2598-5235-54	Type A for SMC Connectors	5.9 [15/64]	2.6 in.-lbs
1055787-1	2598-5014-54	Type A for SSMA/OSSM* Connectors	6.4 [1/4]	5 in.-lbs
1055789-1	2598-5024-54	Type A for SSMA/OSSM Connectors	4.7 [3/16]	3 in.-lbs
1055853-1	2098-5243-54	Type A for SMB/SMC Connectors	5.6 [7/32]	8 in.-lbs
1055267-1	2098-0299-54	Type A Kit (Includes 2 Heads)	6.4 [1/4] and 7.9 [5/16]	8 in.-lbs
2119704-1	N/A	Type B for OSMM Connectors	4.8 [3/16]	3 in.-lbs +1.0/-0.5

Figure 1

1. INTRODUCTION

The mini torque wrenches listed in Figure 1 are used to properly install or disassemble the described connectors.

Figure 1 also lists the previous part numbers of the wrenches, description and size, and preset torque for each wrench.



NOTE

All numerical values in this instruction sheet are in U.S. customary units. Dimensions are in metric units [with U.S. customary units in brackets]. Figures and illustrations are for reference only and are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 5, REVISION SUMMARY.

2. DESCRIPTION

Each mini torque wrench consists of a protective cover, torque wrench, and a “fillister head” screw (which permits replacement or change of various wrench heads).

Type A wrench is equipped with an open-end head, and Type B wrench is equipped with a partially- closed socket head and extension arm. Refer to Figure 2 for head and extension arm replacement part numbers.

The wrenches are designed to be used in the clockwise or counterclockwise direction.

REPLACEMENT	DESCRIPTION (mm [in.])
1055265-1	7.9 [5/16] Type A Open-End Head
1055264-1	6.4 [1/4] Type A Open-End Head
1403926-1	5.9 [15/64] Type A Open-End Head
1406702-1	4.7 [3/16] Type A Open-End Head
1055784-1	7.9 [5/16] Type B Socket Head
1055786-1	Type B Extension Arm
2119705-1	4.8 [3/16] Type B Socket Head

Figure 2

3. OPERATION



NOTE

If a wrench has not been used recently, move the head back and forth several times, listening for audible “clicks”. Moving the head back and forth spreads lubricant throughout the internal mechanism to improve wrench performance.

Using the appropriate-sized head (refer to Figure 1), and turn the wrench clockwise or counterclockwise until there is an audible “click”. This “click” indicates that the torque has been achieved.



CAUTION

DO NOT over-tighten the connector with the wrench. Over-tightening could result in inaccurate torque settings.

4. REPLACEMENT (Refer To Figure 3)

Type “A” heads are interchangeable. Remove the screw securing the head to the wrench. Remove the head. Then install the appropriate head listed in Figure 2.

Type “B” heads are replaceable. Remove the screw securing the head and extension arm to the wrench. Remove the head and extension arm. Break the press fit between the head and extension arm. Replace the components in the reverse order of removal. See Figure 2 for replacement parts.

Order replacement parts through your TE Representative, or call 1-800-522-6752, or send a facsimile of your purchase order to 717-986-7605, or write to:

CUSTOMER SERVICE (38-35)
TYCO ELECTRONICS CORPORATION
PO BOX 3608
HARRISBURG, PA 17105-3608

5. REVISION SUMMARY

- Added new part number and related information to tables in Figures 1 and 2

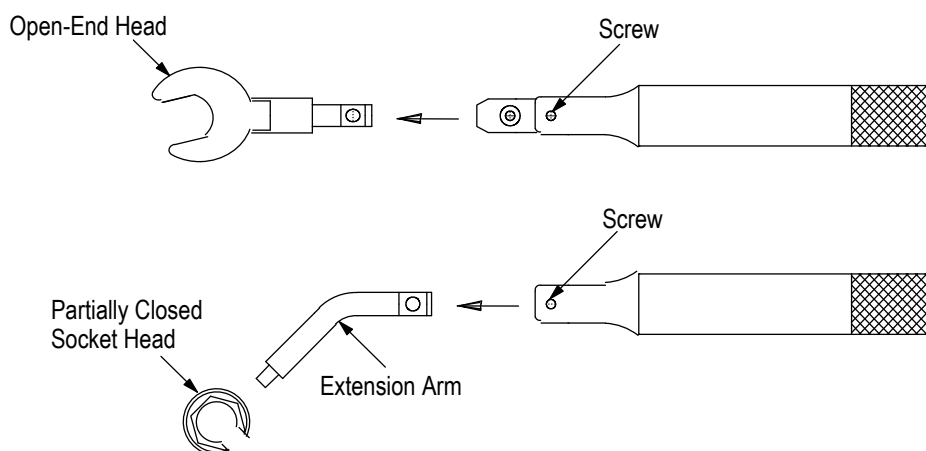


Figure 3

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru