## **PC Vision System FJ Series**


# Camera & Software Vision Package

- Built-in high-quality image processing in a PC system
- · Resolving a variety of applications with highly robust and advanced measurement algorithm
- Gigabit Ethernet camera that can be readily connected to the FJ application software (the connectivity tested and verified)
- Building an ideal machine vision using a customized sample in no time





## **System Configuration**

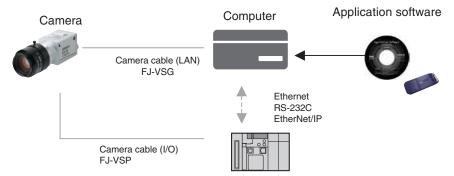

PLC / Sensor / External power supply, etc.

## **Ordering Information**

|   | Туре       |   |            | Model        | Operating environment   |
|---|------------|---|------------|--------------|---|
|   |            | 300,000 pixels  | Monochrome | FJ-SG-S      | CPU: Intel Pentium Processor (SSE2 or higher)   |
|   |            | 300,000 pixels  | Color      | FJ-SCG-S     | OS: Windows 7 Professional (32/64bit) or<br>Enterprise (32/64bit) or Ultimate (32/64bit),   |
| Camera & Software<br>Vision Package             |            | 2 million pixels  | Monochrome | FJ-S2MG-S    | Windows 8 Pro (32/64bit) or Enterprise (32/64bit), Windows 8.1 Pro (32/64bit) or Enterprise (32/64bit)  |
| Application software ×1                         |            | 2 million pixels  | Color      | FJ-SC2MG-S   | .NET Framework: .NET Framework 3.5 or higher  |
| license  Camera × 1 unit                        |            | 5 million pixels  | Monochrome | FJ-S5MG-S    | Memory: At least 2 GB RAM     Available disk space: At least 2 GB   |
| • Camera × 1 unit                               |            | 5 million pixels  | Color      | FJ-SC5MG-S   | Camera interface: Ethernet 1000BASE-T     Display: XGA (1024 × 768), True Color (32-bit) or highe     Optical drive: CD/DVD drive   |
|   |            | 300,000 pixels  | Monochrome | FJ-SG        |   |
|   |            | 300,000 pixels  | Color      | FJ-SCG       |   |
| Camera (Single unit)                            |            | 2 million pixels  | Monochrome | FJ-S2MG      |   |
| Carnera (Single unit)                           | <b>(1)</b> | 2 million pixels  | Color      | FJ-SC2MG     |   |
|   | 100        | 5 million pixels  | Monochrome | FJ-S5MG      | _   |
|   |            | 5 million pixels  | Color      | FJ-SC5MG     |   |
| Camera cable (LAN)                              | -0         | Cable length: 3 m, 5 m, 10 m, 20 m, 40 m  Cable length: 3 m, 5 m, 10 m *1 |            | FJ-VSG □M *2 |   |
| Camera cable<br>(Power, I/O)                    | 9          |   |            | FJ-VSP □M *2 |   |
| Development environment<br>Application Producer | Media only | CD-ROM  |            | FH-AP1       | CPU: Intel Pentium Processor (SSE2 or higher) CS: Windows 7 Professional (32/64bit) or Enterprise (32/64bit) or Ultimate (32/64bit), Windows 8 Pro (32/64bit) or Enterprise (32/64bit), Windows 8.1 Pro (32/64bit) or Enterprise (32/64bit), Windows 8.1 Pro (32/64bit) or Enterprise (32/64bit)  NET Framework: .NET Framework 3.5 or higher Memory: At least 2 GB RAM Available disk space: At least 2 GB Browser: Microsoft® Internet Explorer 6.0 or later Display: XGA (1024 × 768), True Color (32-bit) or higher |
|   | 1 license  | -   |            | FH-AP1L      | Optical drive: CD/DVD drive Optical drive: CD/DVD drive The following operating environment is required to use the camera FJ-S□□□G. Camera interface: Ethernet 1000BASE-T The following software is required to customize the software: Microsoft® Visual Studio® 2010 Professional, or Microsoft® Visual Studio® 2008 Professional, or Microsoft® Visual Studio® 2012 Professional   |

<sup>\*1.10-</sup>m cable can be used with 300,000-pixel cameras FJ-SCG/SG and 2-million pixel cameras FJ-SC2MG/S2MG.

<sup>\*2.</sup> The boxes in the model numbers are replaced by the cable length: 3 m = 3, 5 m = 5, 10 m = 10, 20 m = 20 and 40 m = 40

#### Lenses

## **High-resolution, Low-distortion Lenses**

| Model                             | 3Z4S-LE<br>SV-0614H | 3Z4S-LE<br>SV-0814H | 3Z4S-LE<br>SV-1214H | 3Z4S-LE<br>SV-1614H | 3Z4S-LE<br>SV-2514H | 3Z4S-LE<br>SV-3514H | 3Z4S-LE<br>SV-5014H | 3Z4S-LE<br>SV-7525H                 | 3Z4S-LE<br>SV-10028H                |
|-----------------------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|-------------------------------------|-------------------------------------|
| Appearance/<br>Dimensions<br>(mm) | 42 dia. 57.5        | 39 dia. 52.5        | 30 dia. 51.0        | 30 dia. 47.5        | 30 dia. 36.0        | 44 dia. 45.5        | 44 dia. 57.5        | 36 dia. 42.0[WD;∞] to 54.6[WD:1200] | 39 dia. 66.5[WD:∞] to 71.6[WD:2000] |
| Focal length                      | 6mm                 | 8mm                 | 12mm                | 16mm                | 25mm                | 35mm                | 50mm                | 75mm                                | 100mm                               |
| Brightness                        | F1.4                | F2.5                                | F2.8                                |
| Filter size                       | M40.5<br>P0.5       | M35.5<br>P0.5       | M27<br>P0.5         | M27<br>P0.5         | M27<br>P0.5         | M35.5<br>P0.5       | M40.5<br>P0.5       | M34.0<br>P0.5                       | M37.5<br>P0.5                       |

### **CCTV Lenses**

| Model                             | 3Z4S-LE<br>SV-03514V | 3Z4S-LE<br>SV-04514V | 3Z4S-LE<br>SV-0614V | 3Z4S-LE<br>SV-0813V | 3Z4S-LE<br>SV-1214V | 3Z4S-LE<br>SV-1614V | 3Z4S-LE<br>SV-2514V | 3Z4S-LE<br>SV-3518V                  | 3Z4S-LE<br>SV-5018V               | 3Z4S-LE<br>SV-7527V                 | 3Z4S-LE<br>SV-10035V                |
|-----------------------------------|----------------------|----------------------|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------------------|-----------------------------------|-------------------------------------|-------------------------------------|
| Appearance/<br>Dimensions<br>(mm) | 29.5 dia. 30.4       | 29.5 dia. 29.5       | 29 dia. 30          | 28 dia. 34.0        | 29 dia. 29.5        | 29 dia. 24.0        | 29 dia. 24.5        | 29 dia.<br>33.5[WD:∞]<br>37.5[WD:300 | 32 dia. 37.0[WD:∞]<br>39.4[WD:100 | 32 dia. 42.0[WD;∞] to 44.4[WD:1000] | 32 dia. 43.9[WD;∞] to 46.3[WD:1000] |
| Focal length                      | 3.5mm                | 4.5mm                | 6mm                 | 8mm                 | 12mm                | 16mm                | 25mm                | 35mm                                 | 50mm                              | 75mm                                | 100mm                               |
| Brightness                        | F1.4                 | F1.4                 | F1.4                | F1.3                | F1.4                | F1.4                | F1.4                | F1.8                                 | F1.8                              | F2.7                                | F3.5                                |
| Filter size                       | -                    | _                    | M27<br>P0.5         | M25.5<br>P0.5       | M27<br>P0.5         | M27<br>P0.5         | M27<br>P0.5         | M27<br>P0.5                          | M30.5<br>P0.5                     | M30.5<br>P0.5                       | M30.5<br>P0.5                       |

## **Extension Tubes**

| Model    | 3Z4S-LE SV-EXR  |
|----------|---|
| Contents | Set of 7 tubes(40 mm, 20 mm, 10 mm, 5 mm, 2.0 mm, 1.0 mm, and 0.5 mm)  Maximum outer diameter: 30 mm dia. |

- Do not use the 0.5-mm, 1.0-mm, and 2.0-mm Extension Tubes attached to each other. Since these Extension Tubes are placed over the threaded section of the Lens or other Extension Tube, the connection may loosen when more than one 0.5-mm, 1.0-mm or 2.0-mm Extension Tube are used together.
- Reinforcement is required to protect against vibration when Extension Tubes exceeding 30 mm are used.

## **Ratings and Performance**

|                        |      | FJ-SCG/SG  | FJ-SC2MG/S2MG  | FJ-SC5MG/S5MG                         |  |  |  |  |
|------------------------|------|--|--|---------------------------------------|--|--|--|--|
| Imaging element        |      | Progressive scan 1/3-inch CCD  | Progressive scan 1/1.8-inch CCD  | Progressive scan 2/3-inch CCD         |  |  |  |  |
| Effective pixels       |      | 656 (H) × 492 (V): Color   | 1616 (H) × 1234 (V): Color   | 2448 (H) × 2056 (V): Color            |  |  |  |  |
|                        |      | 656 (H) × 494 (V): Monochrome  | 1616 (H) × 1236 (V): Monochrome  | 2448 (H) × 2058 (V): Monochrome       |  |  |  |  |
| Pixel size             |      | 7.4 (μm) × 7.4 (μm)  | 7.4 ( $\mu$ m) × 7.4 ( $\mu$ m) 4.4 ( $\mu$ m) × 4.4 ( $\mu$ m)  |                                       |  |  |  |  |
| Synchronous system     |      | Internal synchronous   |  |                                       |  |  |  |  |
| Frame rate             |      | 90fps 20fps  |  | 17fps                                 |  |  |  |  |
| Number of uptake lines | S    | Min 2 line to Effective pixels (V) (2 lines  | interval)  |                                       |  |  |  |  |
| Gain                   |      | 0dB to +25dB   | 0dB to +18dB   | 0dB to +14dB                          |  |  |  |  |
| Shutter speed          |      | 17 μs to 1 s   | 25 μs to 1 s   | 29 μs to 10 s                         |  |  |  |  |
| Video output           |      | Digital 8 bit  |  |                                       |  |  |  |  |
| Trigger input          |      | External trigger / Software trigger (Ethernet)   |  |                                       |  |  |  |  |
| External output        |      | Strobe trigger / Trigger READY   |  |                                       |  |  |  |  |
| l/F                    |      | Gigabit Ethernet (1 Gbit/s)  |  |                                       |  |  |  |  |
| Lens mount             |      | C mount  |  |                                       |  |  |  |  |
| Power voltage          |      | PoE/12VDC±10%  | 11.3 to 13.2VDC  |                                       |  |  |  |  |
| Pick-up voltage when   | 3 m  |  |  |                                       |  |  |  |  |
| camera cable FJ-VSP    | 5 m  | 11.3 to 13.2VDC  | 11.3 to 13.2VDC  |                                       |  |  |  |  |
| is used                | 10 m |  |  | Cannot be used.                       |  |  |  |  |
| Power consumption      |      | PoE supply: 3.6 W  | PoE supply: 3.8 W  | Power and I/O connector supply: 6.4 W |  |  |  |  |
| 1 Ower consumption     |      |  | ower and I/O connector supply: 3.1 W   Power and I/O connector supply: 3.2 W   Power and I/O connector supply: 3.2 W |                                       |  |  |  |  |
| Vibration resistance   |      | 10 to 150 Hz, Half amplitude 0.35 mm (Acceleration: Max. 50 m/s²), 3 directions (X/Y/Z) 8 minutes each, 10 times |  |                                       |  |  |  |  |
| Impact resistance      |      | 150 m/s², 6 directions (Up and Down, Right and Left, Back and Forth) 3 times each                                |  |                                       |  |  |  |  |
| Ambient temperature    |      | In operation: 0 to 40°C (Chassis surface temperature should be 55°C or lower.)                                   |  |                                       |  |  |  |  |
|                        |      | In storage: -25 to +65°C (no freezing or condensation)   |  |                                       |  |  |  |  |
| Ambient humidity       |      | In operation and storage: 35 to 85% RH each (no condensation)  |  |                                       |  |  |  |  |
| Ambient environment    |      | No corrosive gas   |  |                                       |  |  |  |  |
| Protective structure   |      | IEC60529 standard IP30   | IEC60529 standard IP30   |                                       |  |  |  |  |
| Weight                 |      | Approx. 90 g   | Approx. 90 g Approx. 220 g   |                                       |  |  |  |  |

## **Processing Items**


| Group       | Icon            | Processing Item                |   |  |
|-------------|-----------------|--------------------------------|---|--|
|             | 9               | Search                         | Used to identify the shapes and calculate the position of measurement objects.  |  |
|             | 400             | Flexible Search                | Recognizing the shapes of workpieces with variation and detecting their positions.  |  |
|             | -0-             | Sensitive Search               | Search a small difference by dividing the search model in detail, and calculating the correlation.  |  |
|             | 4               | ECM Search                     | Used to search the similar part of model form inpuimage. Detect the evaluation value and position.  |  |
|             | 8               | EC Circle Search               | Extract circles using "round" shape information and get position, radius and quantity in high preciseness.  |  |
|             | **              | Shape Search II                | Used to search the similar part of model from inpuimage regardless of environmental changes.  Detect the evaluation value and position.   |  |
|             |                 | Shape Search III               | Robust detection of positions is possible at high-<br>speed and with high precision incorporating envi-<br>ronmental fluctuations, such as differences in ind<br>vidual shapes of the workpieces, pose fluctuations<br>noise superimposition and shielding. |  |
|             |                 | EC Corner                      | This processing item measures a corner position (corner) of a workpiece.  |  |
|             | **              | EC Cross                       | The center position of a crosshair shape is measured using the lines created by the edge information on each side of the crosshair.   |  |
|             | 3               | Classification                 | Used when various kinds of products on the assembly line need to be sorted and identified.  |  |
|             | +               | Edge Position                  | Measure position of measurement objects according to the color change in measurement area.  |  |
|             | HUU             | Edge Pitch                     | Detect edges by color change in measurement area. Used for calculating number of pins of IC an connectors.  |  |
|             | #               | Scan Edge<br>Position          | Measure peak/bottom edge position of workpiece according to the color change in separated measurement area.   |  |
|             | 1               | Scan Edge Width                | Measure max/min/average width of workpieces according to the color change in separated measurement area.  |  |
|             | 0               | Circular Scan<br>Edge Position | Measure center axis, diameter and radius of circular workpieces.  |  |
| Measurement | 0               | Circular Scan<br>Edge Width    | Measure center axis, width and thickness of ring workpieces.  |  |
|             |                 | Intersection                   | Calculate approximate lines from the edge infor-<br>mation on two sides of a square workpiece to mes<br>sure the angle formed at the intersection of the twi<br>lines.  |  |
|             | *               | Color Data                     | Used for detecting presence and mixed varieties of products by using color average and deviation.   |  |
|             |                 | Gravity and Area               | Used to measure area, center of gravity of workpices by extracting the color to be measured   |  |
|             |                 | Labeling                       | Used to measure number, area and gravity of workpieces by extracting registered color.  |  |
|             | -               | Label Data                     | Selecting one region of extracted Labeling, and ge that measurement. Area and Gravity position car be got and judged.   |  |
|             | N               | Defect                         | Used for appearance measurement of plain-colo measurement objects such as defects, stains and burrs.  |  |
|             | M               | Precise Defect                 | Check the defect on the object. Parameters for extraction defect can be set precisely.  |  |
|             |                 | Fine Matching                  | Difference can be detected by overlapping and comparing (matching) registered fine images with input images.  |  |
|             | ABC             | Character Inspect              | Recognize character according correlation searc with model image registered in [Model Dictionary  |  |
|             | Date<br>08-02-1 | Date Verification              | Reading character string is verified with internal date.  |  |
|             | A               | Model Dictionary               | Register character pattern as dictionary. The pattern is used in [Character Inspection].  |  |
|             | <b>EXE</b>      | 2DCode *2                      | Recognize 2D code and display where the code quality is poor.   |  |
|             | Ш               | Barcode *1                     | Recognize barcode, verify and output decoded characters.  |  |
|             | OCB             | OCR                            | Recognize and read characters in images as cha acter information.   |  |
|             | OCR             | OCR User<br>Dictionary         | Register dictionary data to use for OCR.  |  |
|             |                 | Circle Angle                   | Used for calculating angle of inclination of circula measurement objects.   |  |
|             | -               | Glue Bead<br>Inspection        | You can inspect coating of a specified color for gaps or runoffs along the coating path.  |  |
|             | No.             | Camera image in-<br>put GigE   | Capture images from a GigE camera.  |  |
| Input Image | - 要             | Camera Image<br>Input HDR      | Create high-dynamic range images by acquiring several images with different conditions.   |  |
| mput imaye  | 甲栗              | Camera Switch                  | To switch the cameras used for measurement.<br>Not input images from cameras again.   |  |
|             |                 | Measurement                    | To switch the images used for measurement.  |  |

| Group               | Icon            |                              | Processing Item   |
|---------------------|-----------------|------------------------------|---|
|                     | 5               | Position<br>Compensation     | Used when positions are differed. Correct measurement is performed by correcting position of input images.  |
|                     | M               | Filtering                    | Used for processing images input from cameras in order to make them easier to be measured.  |
|                     |                 | Backgrond<br>Suppression     | To enhance contrast of images by extracting color in specified brightness.  |
|                     | 1               | Brightness Correct<br>Filter | Track brightness change of entire screen and remove gradual brightness change such as uneven brightness.  |
|                     |                 | Color Gray Filter            | Color image is converted into monochrome images to emphasize specific color.  |
|                     |                 | Extract Color Filter         | Convert color image to color extracted image or binary image.   |
|                     |                 | Anti Color Shading           | To remove the irregular color/pattern by uniformizing max.2 specified colors.   |
| Compensate          | 野               | Stripes Removal<br>Filter II | Remove the background pattern of vertical, horizontal and diagonal stripes.   |
| image               | ASC             | Polar<br>Transformation      | Rectify the image by polar transformation. Useful for OCR or pattern inspection printed on circle.  |
|                     |                 | Trapezoidal<br>Correction    | Rectify the trapezoidal deformed image.   |
|                     | offer /         | Machine Simulator            | How the alignment marks would move on the image when each stage or robot axis is controlled   |
|                     | -               | Image Subtraction            | can be checked.  The registered model image and measurement image are compared and only the different pixels are  |
|                     | 1               | Advanced filter              | extracted and converted to an image.  Process the images acquired from cameras in order to make them easier to measure. This processing item consolidates existing image conversion filtering into one processing item and adds extra functions.              |
|                     |                 | Panorama                     | Combine multiple image to create one big image.   |
|                     | 00              | Unit Macro                   | Advanced arithmetic processing can be easily incorporated into workflow as Unit Macro   |
|                     | 00              | Unit Calculation<br>Macro    | processing items.  This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item.  |
|                     | MBC             | Calculation                  | Used when using the judge results and measured values of Procltem which are registered in processing units.   |
|                     | 1               | Line Regression              | Used for calculating regression line from plural measurement coodinate.   |
|                     | O               | Circle Regression            | Used for calculating regression circle from plural measurement coordinate.  |
|                     |                 | Precise<br>Calibration       | Used for calibration corresponding to trapezoidal distortion and lens distortion.   |
|                     | User            | User Data                    | Used for setting of the data that can be used as common constants and variables in scene group data.  |
|                     |                 | Set Unit Data                | Used to change the ProcItem data (setting parameters,etc.) that has been set up in a scene.   |
|                     |                 | Get Unit Data                | Used to get one data (measured results, setting parameters,etc.) of Procltem that has been set up in a scene.   |
|                     |                 | Set Unit Figure              | Used for re-setting the figure data (model, measurement area ) registered in an unit.   |
|                     | ( <del>1)</del> | Get Unit Figure              | Used for get the figure data (model, measurement area ) registered in an unit.  |
| Support measurement |                 | Trend Monitor                | Used for displaying the information about results on the monitor, facilitating to avoid NG and analyze causes.  |
|                     |                 | Image Logging                | Used for saving the measurement images to the memory and USB memory.  |
|                     | -               | Image Conversion<br>Logging  | Used for saving the measurement images in JPEG and BMP format.  |
|                     | 114             | Data Logging                 | Used for saving the measurement data to the memory and USB memory.  |
|                     | 0               | Elapsed Time                 | Used for calculating the elapsed time since the measurement trigger input.  |
|                     | X               | Wait                         | Processing is stopped only at the set time. The standby time is set by the unit of [ms].  |
|                     | 4               | Focus                        | Focus setting is supported.   |
|                     | <b>*</b>        | Iris                         | Focus and aperture setting is supported.  |
|                     | 0000            | Parallelize                  | A part of the measurement flow is divided into two or more tasks and processed in parallel to shorten the measurement time. This processing item is placed at the top of processing to be performed in parallel.  |
|                     | D-000           | Parallelize Task             | A part of the measurement flow is divided into two or more tasks and processed in parallel to shorten the measurement time. This processing item is placed immediately before processing to be performed in parallel between Parallelize and Parallelize End. |
|                     |                 | Statistics                   | Used when you need to calculate an average of multiple measurement results.   |


|                     | ı          |                              |   |
|---------------------|------------|------------------------------|---|
| Group               | Icon       |                              | Processing Item   |
|                     | •          | Referrence Calib<br>Data     | Calibration data and distortion compensation data held under other processing items can be referenced.                                    |
|                     | N          | Position Data<br>Calculation | The specified position angle is calculated from the measured positions.   |
|                     | #          | Stage Data                   | Sets and stores data related to stages.   |
|                     | 户          | Robot Data                   | Sets and stores data related to robots.   |
|                     |            | Vision Master<br>Calibration | This processing item automatically calculates the entire axis movement amount of the control equipment necessary for calibration.         |
|                     | <b>P</b>   | PLC Mastoer<br>Calibration   | Calibration data is created using a communication command from PLC.   |
| Support measurement | زأ         | Convert Position<br>Data     | The position angle after the specified axis movement is calculated.   |
|                     | +/         | Movement Single<br>Position  | The axis movement that is required to match the measured position angle to the reference position angle is calculated.                    |
|                     | ##/        | Movement Multi<br>Points     | The axis movements that are required to match the measured position angles to the corresponding reference position angles are calculated. |
|                     | +          | Detection Point              | Obtains position/angle information by referring to the coordinate values measured with the Measurement Processing Unit.                   |
|                     |            | Camera<br>Calibration        | By setting the camera calibration, the measure-<br>ment result can be converted and output as actual<br>dimensions.                       |
|                     | 40         | Data Save                    | The set data can be saved in the controller main unit or as scene data. The data is held even after the FH/FZ power is turned off.        |
|                     | -          | Conditional<br>Branch        | Used where more than two kinds of products on the production line need to detected separately.  |
|                     | NO.        | End                          | This ProcItem must be set up as the last processing unit of a branch.   |
|                     | 2          | DI Branch                    | Same as Procltem "Branch". But you can change the targets of conditional branching via external inputs.                                   |
|                     | 3          | Control Flow<br>Normal       | Set the measurement flow processing into the wait state in which the specific no-protocol command can be executed.                        |
| Branch              | - I        | Control Flow PLC<br>Link     | Set the measurement flow processing into the wait state in which the specific PLC Link command can be executed.                           |
|                     | <b>800</b> | Control Flow<br>Parallel     | Set the measurement flow processing into the wait state in which the specific parallel command can be executed.                           |
|                     | 000        | Control Flow<br>Fieldbus     | Set the measurement flow processing into the wait state in which the specific Fieldbus command can be executed.                           |
|                     | SHITCH     | Selective Branch             | Easily branch to multiple destinations.   |
|                     | 11         | Data Output                  | Used when you need to output data to the external devices such as PLC or PC via serial ports.   |
|                     | 1          | Parallel Data<br>Output      | Used when you need to output data to the external devices such as PLC or PC via parallel ports.   |
| Output results      |            | Parallel<br>Judgement Output | parallel ports.   |
|                     |            | Fieldbus Data<br>Output      | Outputs data to an external device, such as a<br>Programmable Controller, through a fieldbus<br>interface.                                |
|                     | ОК         | Result Display               | Used for displaying the texts or the figures in the camera image.   |
| Output result       |            | Display Image File           | Display selected image file.  |
|                     |            | Display Last NG<br>Image     | Display the last NG images.   |
| *1 Dor Code         | - 414      |                              | I/EAN/LIDC (including odd on oodoo)   |

<sup>\*1</sup> Bar Codes that can be read : JAN/EAN/UPC (including add-on codes), Code 39, Codabar (NW-7), ITF (Interleaved 2 of 5), Code 93, Code 128, GS1-128, GS1 DataBar (RSS-14 / RSS Limited / RSS Expanded), Pharmacode \*2 2D Codes that can be read : Data Matrix (ECC200), QR Code

## FJ-SCG/SG/SC2MG/S2MG

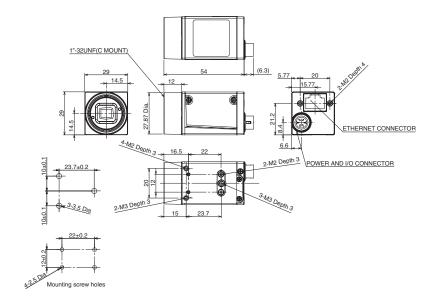


## FJ-SC5MG/S5MG

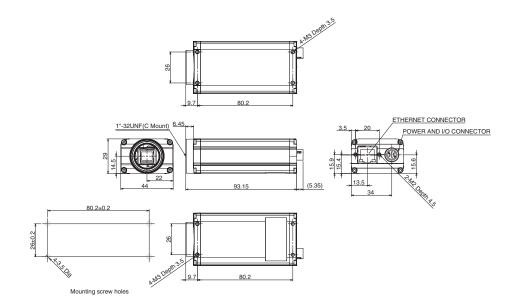


## **Optical Chart**

## 5 million-pixel digital camera FJ-SC5MG/S5MG

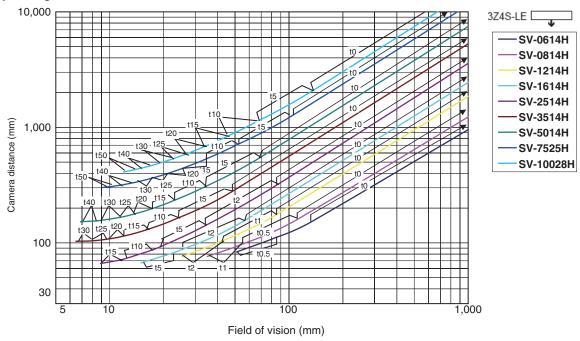


## 2 million-pixel digital camera FJ-SC2MG/S2MG

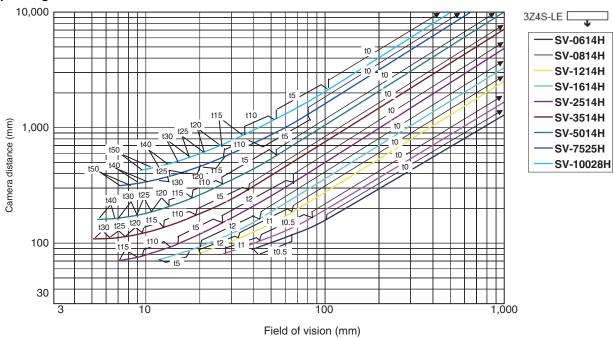

6


## 300,000-pixel digital camera FJ-SCG/SG

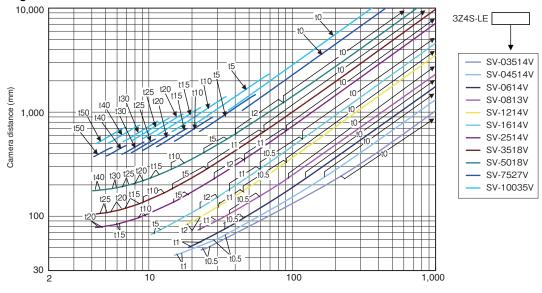

Field of vision (mm)

## ■ Meaning of Optical Chart

The X axis of the optical chart shows the field of vision (mm)(Note1), and the Y axis of the optical chart shows the camera installation distance (mm)(Note2).

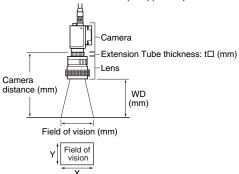

Note: 1. The lengths of the fields of vision given in the optical charts are the lengths of the Y axis.2. The vertical axis represents WD for small cameras.

#### READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments.

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### **LIMITATIONS OF LIABILITY**

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- · Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## PERFORMANCE DATA

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

Note: Do not use this document to operate the Unit.

### OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters
OMRON EUROPE B.V.
Sensor Business Unit

Carl-Benz-Str. 4, D-71154 Nufringen, Germany Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

### OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A.

Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

### OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

## Authorized Distributor:

© OMRON Corporation 2011 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM 3 3 1215

Cat. No. Q188-E1-01

0811(0811)

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Omron:

FJ-VSG 5M FJ-VSP 3M FJ-VSP 10M FJ-VSG 20M FJ-VSG 10M FJ-VSG 40M FJ-VSG 3M FJ-VSP 5M



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

### Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru