


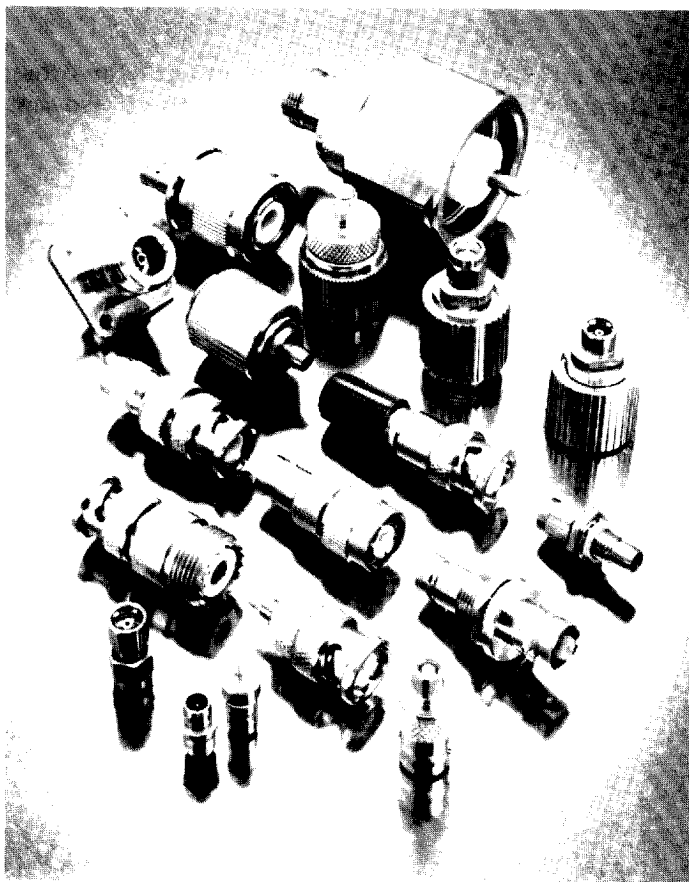

BETWEEN-SERIES COAXIAL ADAPTERS

RADIALL'S between-series adapters are used to make efficient low loss transitions between different series of coaxial connectors.

They are widely used in laboratory test applications and in system equipment applications where different connector types must be mated.

All RADIALL adapters are designed to offer the lowest VSWR attainable across the frequency range of the connectors involved.

The following selection guide is provided to help the user find the corresponding page in this catalog for the proper between-series adapter required.

CONTENTS

	Page
General	3
SELECTION GUIDE	4 - 5
BETWEEN SERIES ADAPTERS	6 - 34
Chronological table of Radiall part numbers	35
UG part numbers	35

All dimensions are given in inches (millimeters)

APC 7[®] TRADE MARK AMPHENOL

ADAPTERS

SELECTION GUIDE

Select one of the connector interface in the left hand column and line up with the other connector interface as shown in the row across the top. The intersection of these two will give the appropriate page number.

		APC7 7mm	SMA		SMA3,5		SMB		SMC		SSMA		SSMB		BNC50Ω		BNC75Ω	
			P	J	P	J	J	P	J	P	P	J	J	P	P	J	P	J
SMA	P	32	○	○							7	7	7		12			
	J	32	○	○							7				13			
BMA	P	9	8	8/9														
	J	9	8	8														
SMB	J	33					○	○							13	13		
	P	33					○	○							14	14		
BNC	P	31		13			13	14	14						○	○	○	○
	J	31	12				13	14	14	15					○	○	○	○
N	P	31 34	21	21	22	23	23 24		24						17	17	17	17
	J	32 34	21 22	22	23	23	24	24	24 25	25					17	17	17	18
C	P	32													12			
	J	32					26											
MQ	P						29									27		
	J						29 30								27	27		
APC7 [®] 7mm			32	32	33	33	33	33	33	34	34	34			31	31		

- Please note that when « plug » or « jack » (P - J) terminology is used, it refers to the connector's style of each adapter's end.
- All adapters interfaces meet or exceed the requirements of MIL-STD-348.
- For all in-series adapters, please refer to the Radiall connector catalog for specific series.



ADAPTERS

SELECTION GUIDE

18	N 50Ω		N 75Ω		C		1,6/5,6		HN		LC		UHF		microclic		sockets		ban- ana
J	P	J	P	J	P	J	P	J	P	J	P	J	P	J	P	J	Ø2	Ø4	Ø4
		21	21 22																
7		21	22																
		23 24	24			26													
			24														10	10	
		17	17	17	17			11	11					12				15	15
		17	17	17	18	12		11		12				12					16
		○	○	○	○			18	19	20									21
		○	○	○	○	19	19	19	19	20			20	20	21				
			19			○	○					26							
		18	19			○	○					26						26	
			27	28	28														29
		27	28	28	28			29						29					
		31	31 34	32 34				31	32										



SMA to TNC

SMA PLUG to TNC PLUG

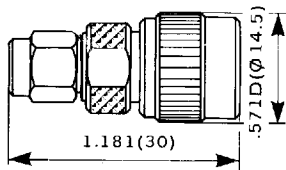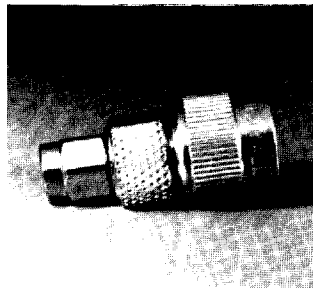



PART NUMBER	R 191 309
VSWR	0 - 11 GHz 1.22 Max.

SMA PLUG to TNC JACK

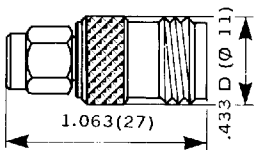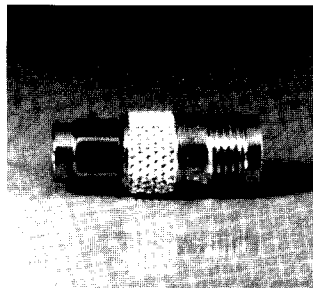



PART NUMBER	R 191 311
VSWR	0 - 11 GHz 1.22 Max.

SMA JACK to TNC PLUG

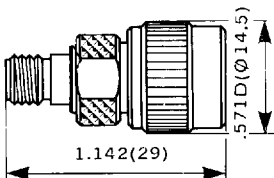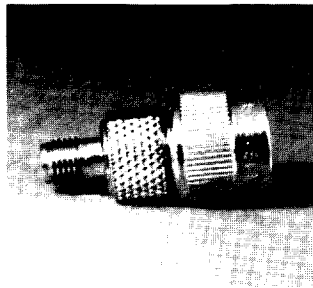



PART NUMBER	R 191 313
VSWR	0 - 11 GHz 1.22 Max.

SMA JACK to TNC JACK

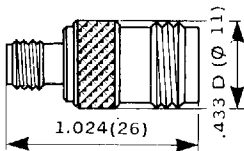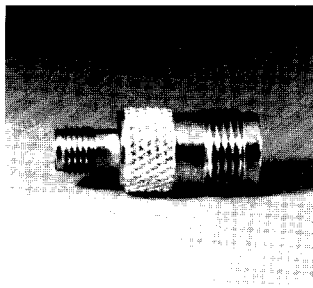

PART NUMBER	R 191 315
VSWR	0 - 11 GHz 1.22 Max.

SMA JACK to TNC JACK Square flange

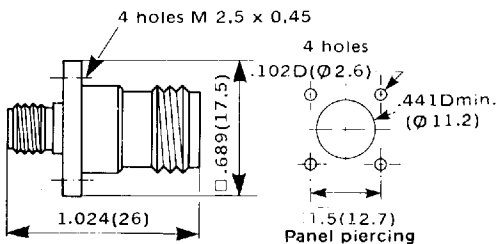
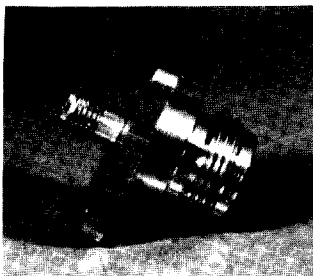


PART NUMBER	R 191 365
VSWR	0 - 11 GHz 1.22 Max.

SMA to TNC/SSMA/SSMB



SMA / SMA 3,5 JACK to TNC 18 GHz JACK Panel sealed, bulkhead feedthrough

PART NUMBER	R 191 314 700	R 191 316 700
VSWR	0 - 18 GHz 1.50 Max.	0 - 18 GHz 1.06 +0.01 F (GHz)
Inner seal	YES	NO
Connector	SMA	SMA 3,5

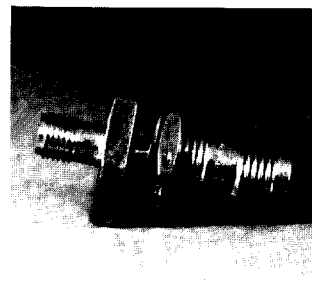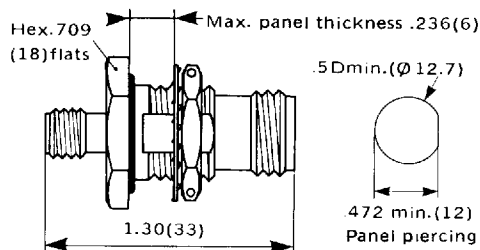



SMA PLUG to SSMA JACK

PART NUMBER	R 191 347
-------------	-----------

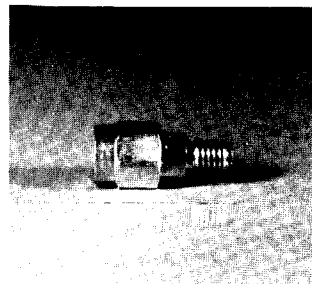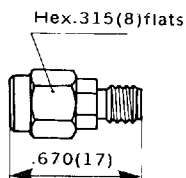



SMA JACK to SSMA JACK

PART NUMBER	R 191 349
-------------	-----------

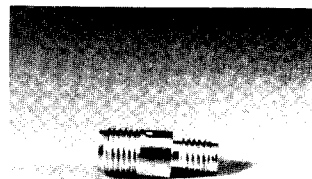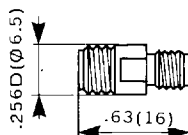



SMA PLUG to SSMB PLUG

PART NUMBER	R 191 374
-------------	-----------

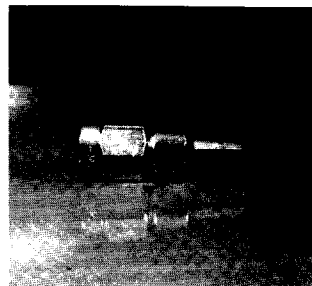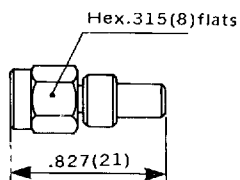



SMA PLUG to SSMB JACK

PART NUMBER	R 191 376
-------------	-----------

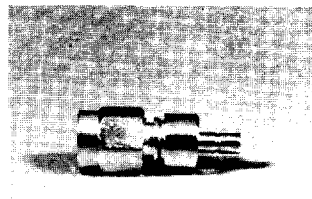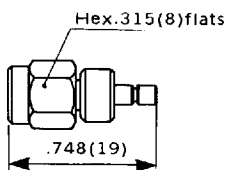



BMA to SMA

BMA PLUG to SMA PLUG

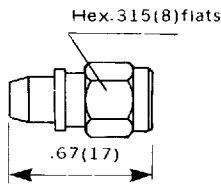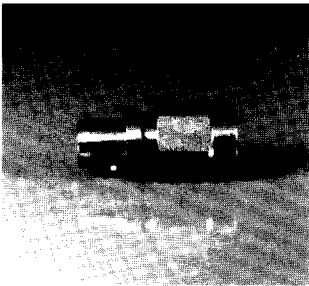



PART NUMBER	R 191 350 001
VSWR	0 - 18 GHz 1.05 + 0.005 F (GHz)

BMA JACK to SMA PLUG

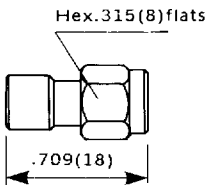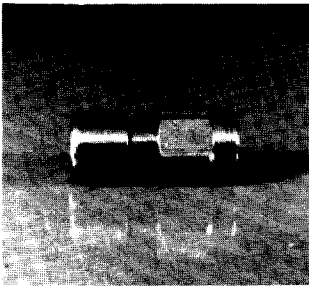



PART NUMBER	R 191 351 001
VSWR	0 - 18 GHz 1.05 + 0.007 F (GHz)

BMA PLUG to SMA JACK

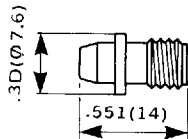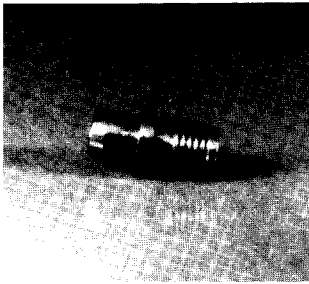



PART NUMBER	R 191 352 001
VSWR	0 - 18 GHz 1.05 + 0.005 F (GHz)

BMA JACK to SMA JACK

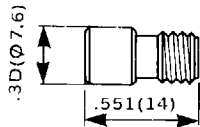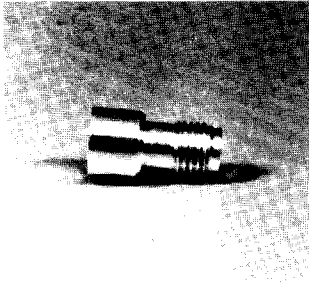

PART NUMBER	R 191 353 001
VSWR	0 - 18 GHz 1.05 + 0.007 F (GHz)



BMA PLUG to SMA PLUG Bulkhead feedthrough

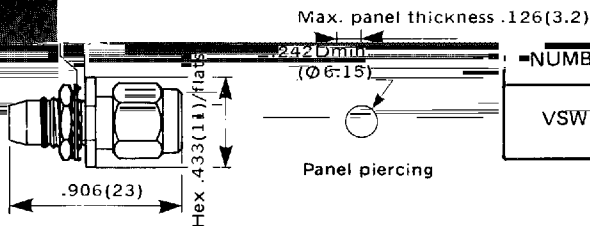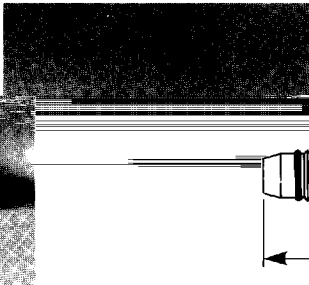



PART NUMBER	R 191 354 001
VSWR	0 - 18 GHz 1.05 + 0.005 F (GHz)

BMA to SMA/APC 7



BMA PLUG to SMA JACK Bulkhead feedthrough

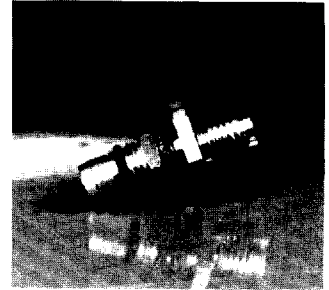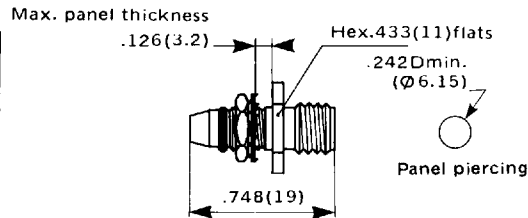


BMA PLUG to APC 7®

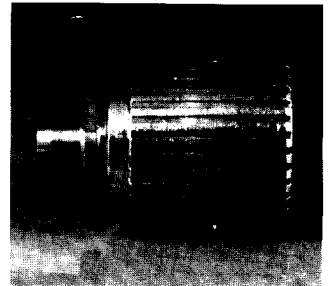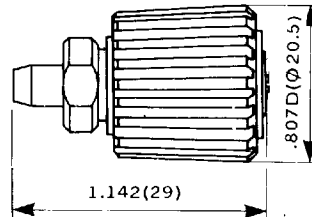

BMA JACK to APC 7®

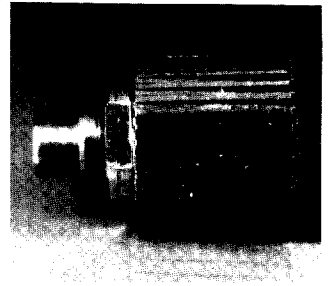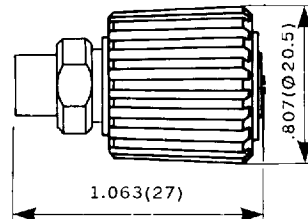


For our rack and bulkhead applications or your between modules assemblies, use BMA slide-in connectors.
(catalogs upon request)

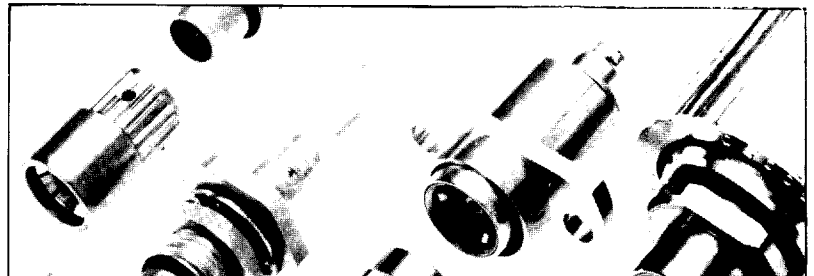

SMB to MICROCLIC



SMB PLUG to MICROCLIC PLUG

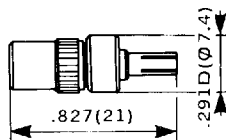

PART
NUMBER


R 191 265

SMB PLUG to MICROCLIC JACK

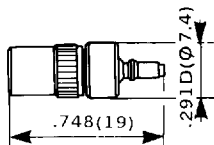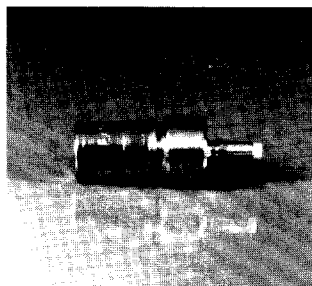

PART
NUMBER

R 191 267


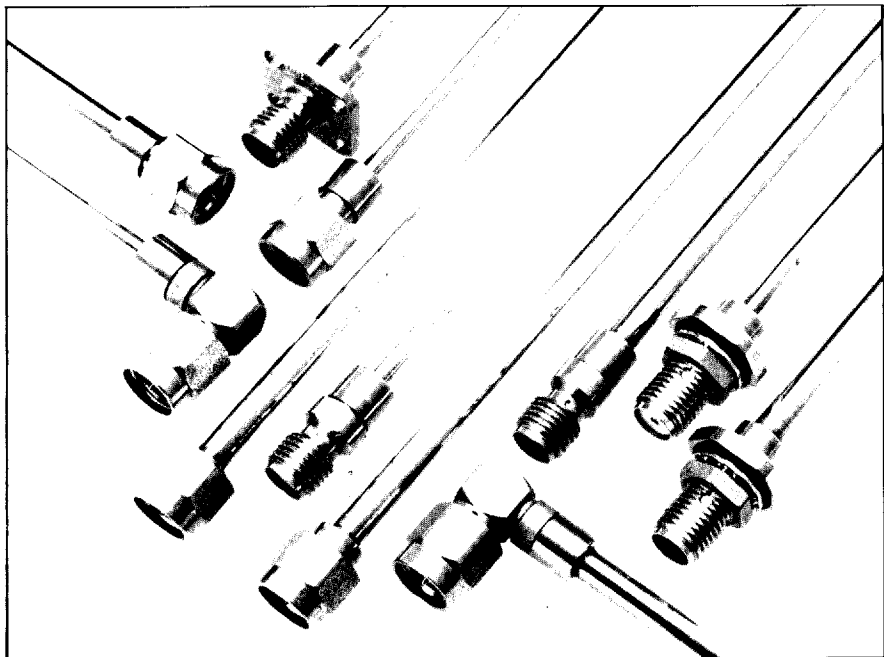


Save time during cabling and avoid soldering by using our SMA crimp on .085 and .141 semi-rigid cable connectors. *(catalogs upon request)*

BNC to TNC/1,6/5,6



BNC PLUG to TNC JACK

PART NUMBER	R 191 403
----------------	-----------

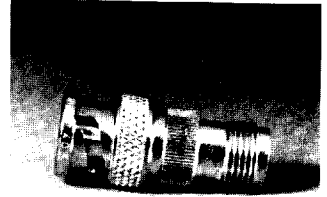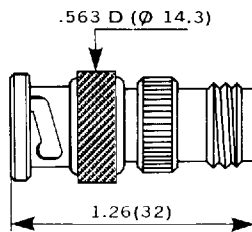



BNC JACK to TNC PLUG

PART NUMBER	R 191 405
----------------	-----------

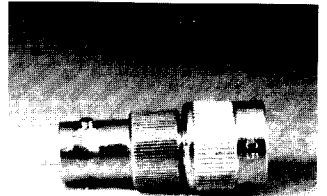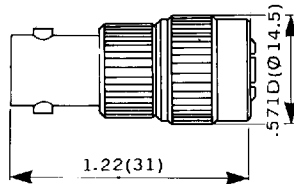


BNC PLUG to 1,6 / 5,6 JACK Screw - on , snap - on


PART NUMBER	R 192 430
Impedance	75 Ω

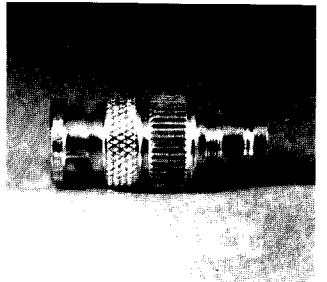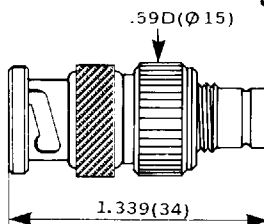

BNC PLUG to 1,6 / 5,6 PLUG

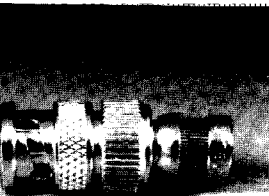

PART NUMBER	R 192 431
Impedance	75 Ω

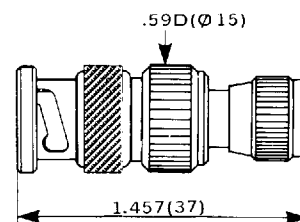


Screw - on

BNC JACK to 1,6 / 5,6 PLUG Screw - on





PART NUMBER	R 192 432
Impedance	75 Ω

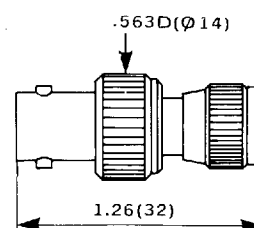

BNC to C/HN/UHF/SMA



BNC JACK to C PLUG

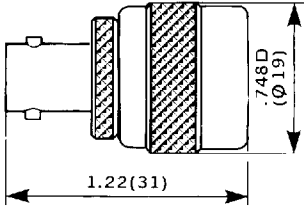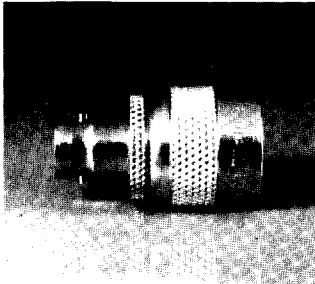

PART
NUMBER

R 191 429



BNC JACK to HN PLUG

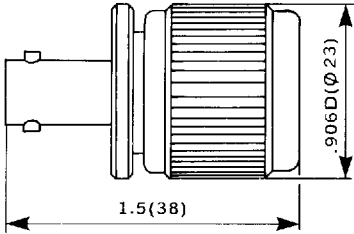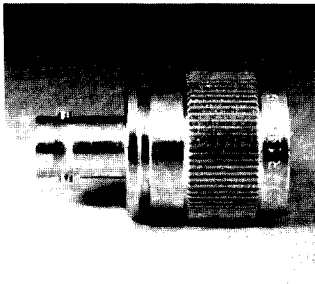

PART
NUMBER

R 191 449

 BNC PLUG to UHF JACK

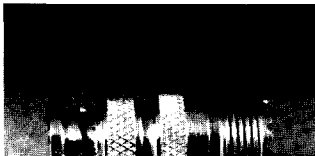


PART
NUMBER



R 191 445

BNC to SMA/SMB



BNC PLUG to SMA JACK

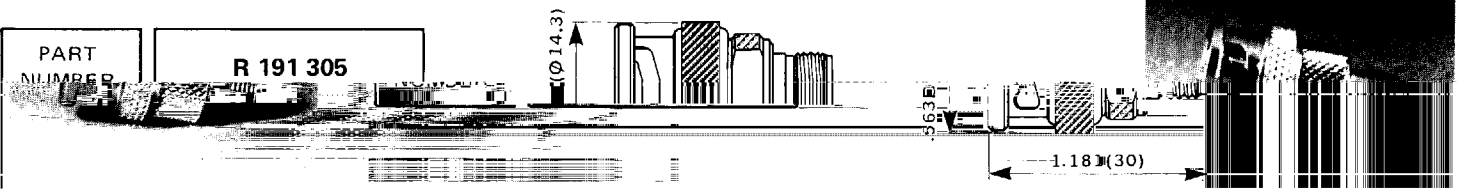





BNC PLUG to SMB JACK

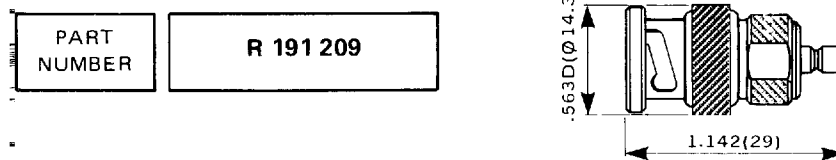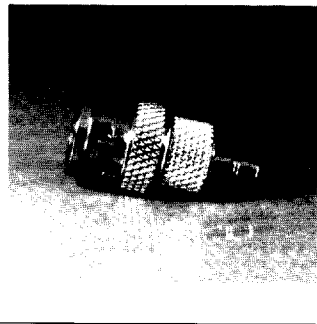





BNC JACK to SMB JACK Bulkhead feedthrough

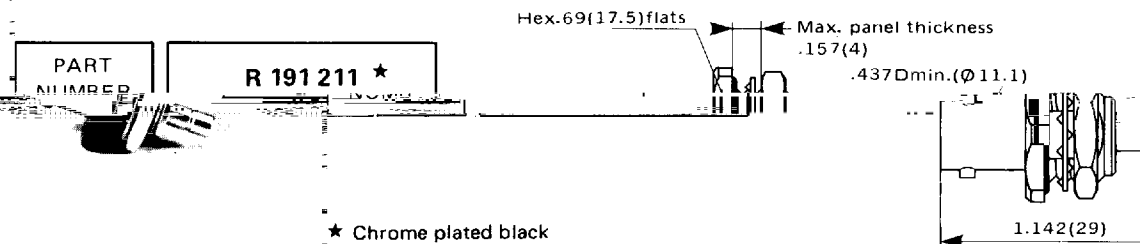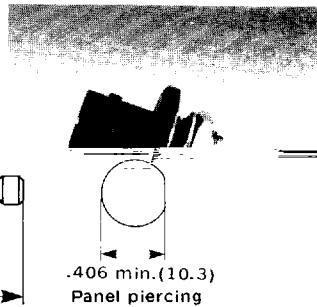

BNC JACK to SMB JACK Square flange

 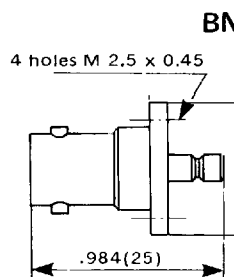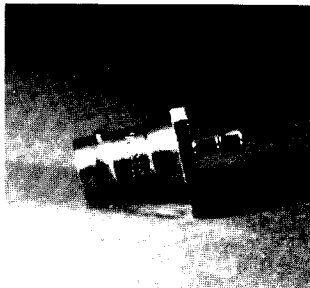
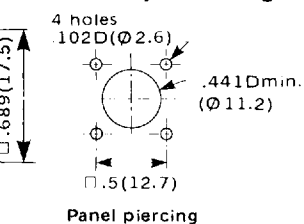


 BNC JACK to SMB JACK bulkhead feedthrough

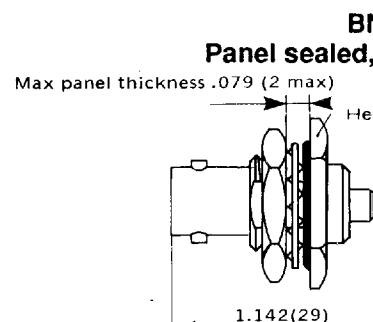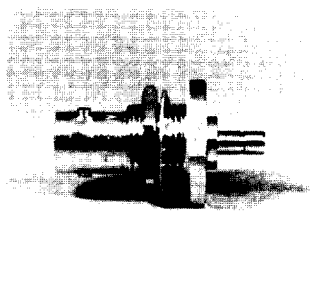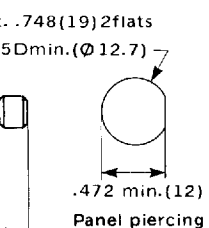

BNC to SMB/SMC



BNC PLUG to SMB PLUG

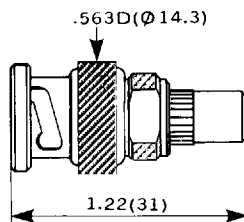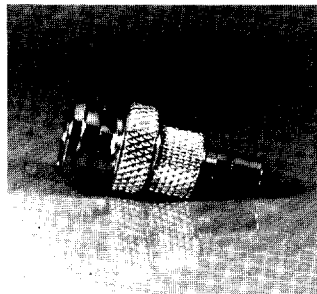

PART
NUMBER

R 191 214



BNC JACK to SMB PLUG

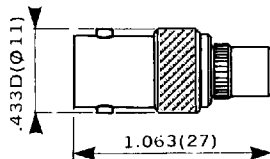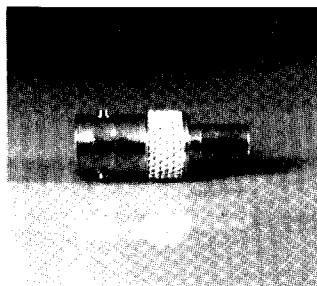

PART
NUMBER

R 191 215

BNC JACK to SMB PLUG Panel sealed, bulkhead feedthrough

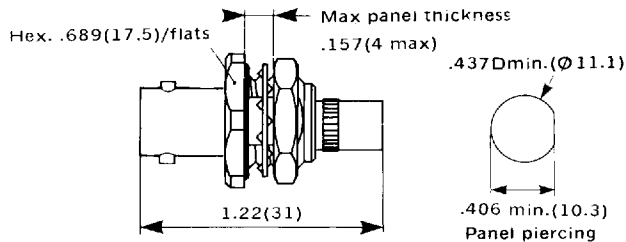
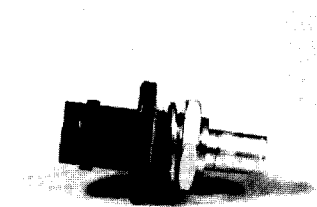


PART
NUMBER

R 191 216 ★

★ Chrome plated black



BNC PLUG to SMC JACK

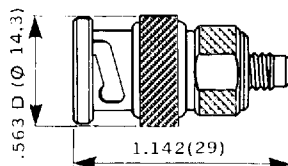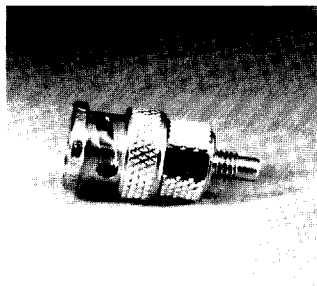

PART
NUMBER

R 191 117

BNC JACK to SMC JACK Square flange

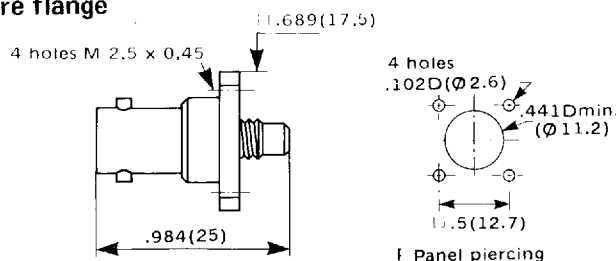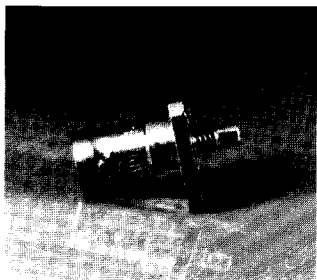


PART
NUMBER

R 191 120

BNC to SMC/Contacts



BNC JACK to SMC PLUG

PART NUMBER	R 191 123
----------------	-----------

 

BNC to Banana

BNC JACK to 2 BANANA .157D (Ø4)

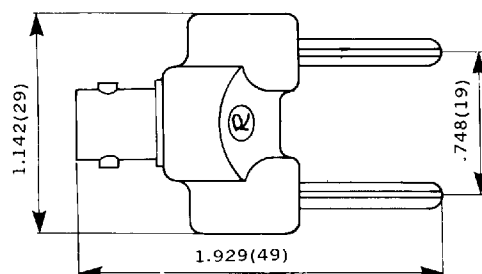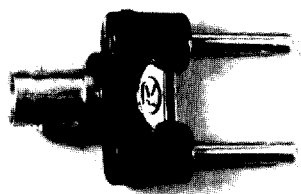

PART
NUMBER


R 191 455

OTHER RADIALL PRODUCTS

- Miniature
SMA - SMB - SMC
- Standard
50 and 75 Ω BNC
50, 75 Ω - 18 GHz TNC

50 and 75 Ω N
UHF - Twinax



- High voltage
- RF hermetic seal
- RF cable assembly
- Accessories and assembly tools

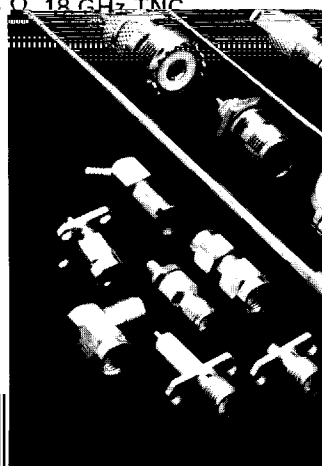

N to BNC



N PLUG to BNC PLUG

PART NUMBER	R 191 417	R 192 417
Impedance	50 Ω	75 Ω
L	1.535(39)	1.457(37)

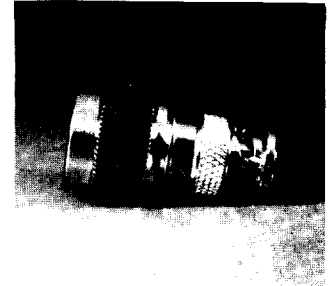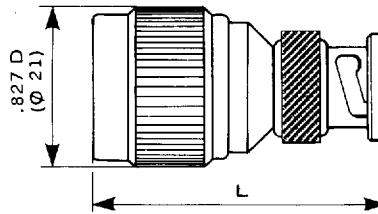



N JACK to BNC PLUG

PART NUMBER	R 191 419	R 192 419
Impedance	50 Ω	75 Ω
L	1.654(42)	1.496(38)

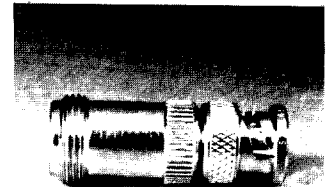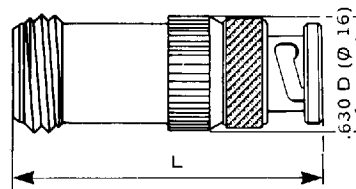


N PLUG to BNC JACK

PART NUMBER	R 191 421	R 192 421
Impedance	50 Ω	75 Ω

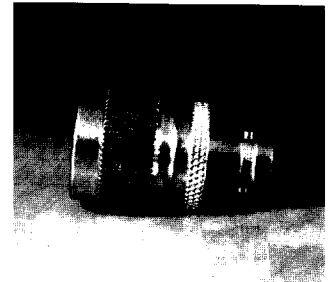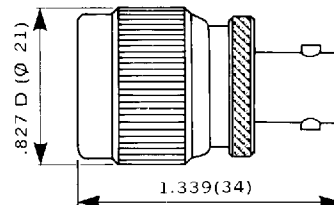



N JACK to BNC JACK Panel sealed, bulkhead feedthrough

PART NUMBER	R 191 422
-------------	-----------

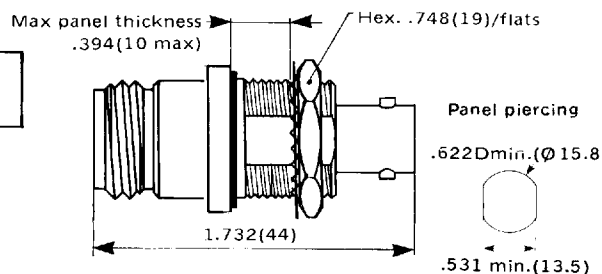

N JACK to BNC JACK Square flange



PART NUMBER	R 191 424	R 191 426
Panel sealed	NO	YES
L	1.378(35)	1.575(40)

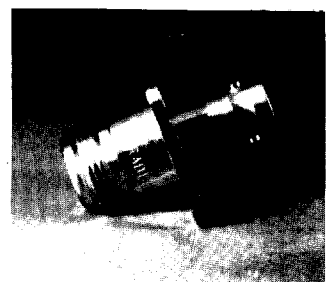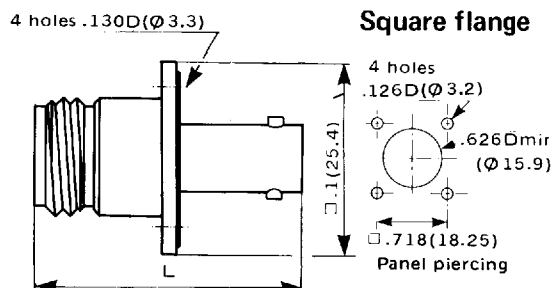

Gasket only for R 191 426



N to BNC/TNC/C

N JACK to BNC JACK

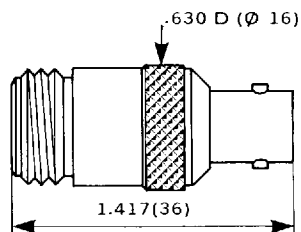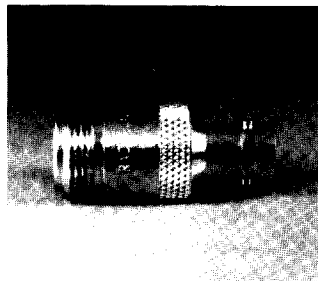



PART NUMBER	R 192 418
Impedance	75 Ω

N JACK to TNC PLUG

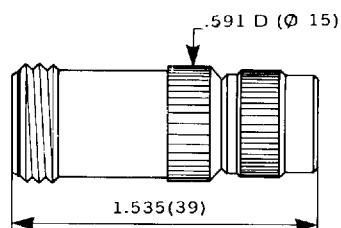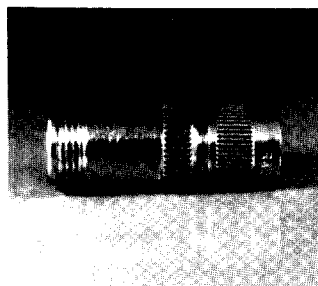


PART NUMBER	R 191 511
VSWR	0 - 11 GHz 1.22 Max.

N PLUG to TNC JACK

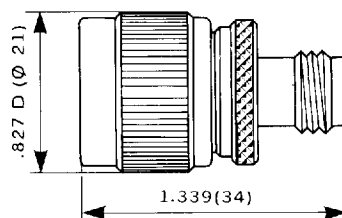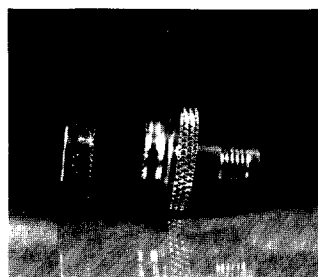



PART NUMBER	R 191 513
VSWR	0 - 11 GHz 1.22 Max.

N JACK to TNC JACK Square flange

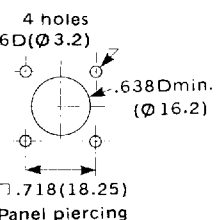



PART NUMBER	R 191 514
-------------	-----------

1 (25.4)

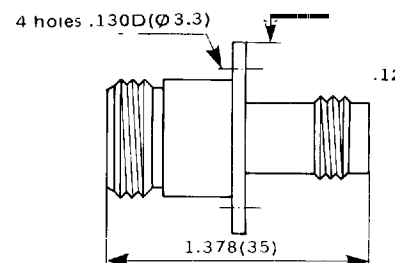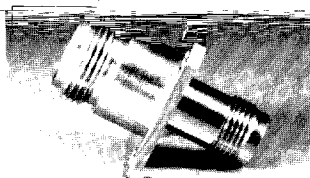

N PLUG to C JACK



PART NUMBER	R 191 703
-------------	-----------

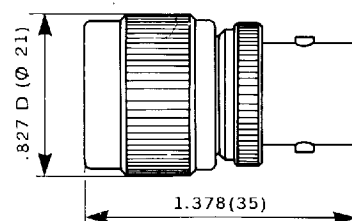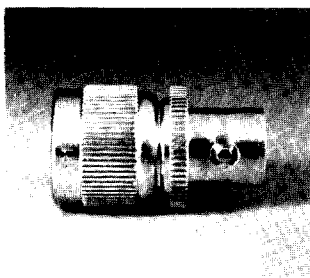

N to C/1,6/5,6



N JACK to C PLUG

PART NUMBER	R 191 705
----------------	-----------

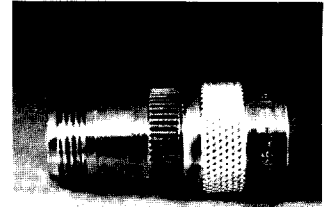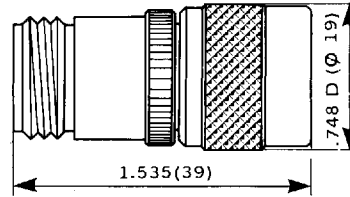



N JACK to C JACK Square flange

PART NUMBER	R 191 708
----------------	-----------

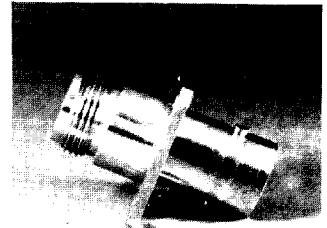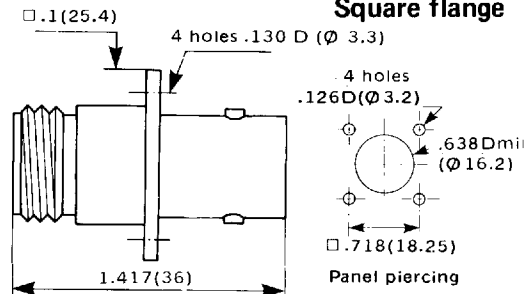


N JACK to 1,6 / 5,6 PLUG Screw-on

PART NUMBER	R 192 770
Impedance	75 Ω

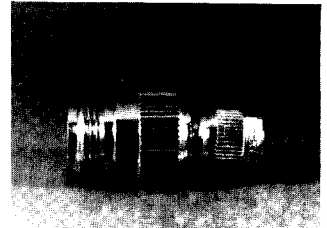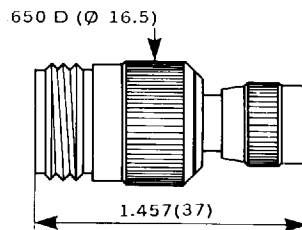



N JACK to 1,6 / 5,6 JACK Screw-on, snap-on

PART NUMBER	R 192 771
Impedance	75 Ω

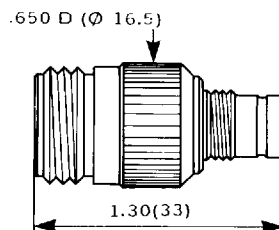


N PLUG to 1,6 / 5,6 PLUG Screw-on


PART NUMBER	R 192 775
Impedance	75 Ω

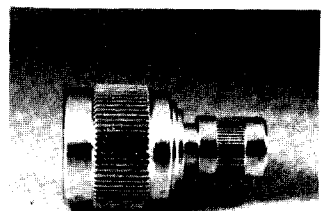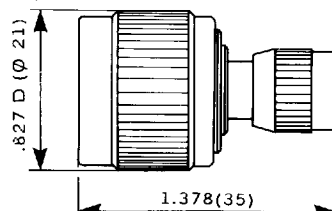


N to 1,6/5,6/LC/HN

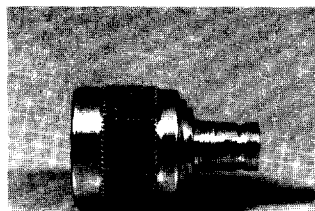


N PLUG to 1,6/5,6 JACK
Screw-on, snap-on

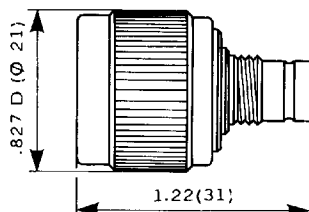


PART NUMBER	R 192 777
Impedance	75 Ω

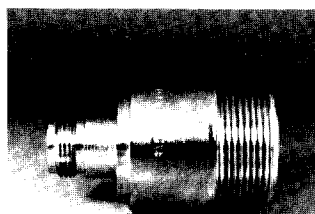


N JACK to LC JACK

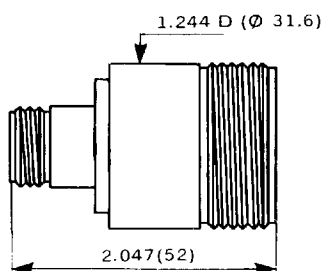

PART NUMBER	R 191 741
-------------	-----------

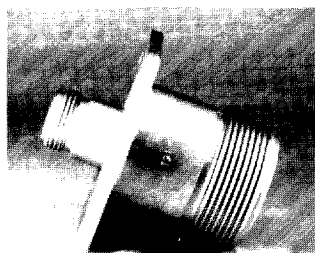


N JACK to LC JACK
Square flange

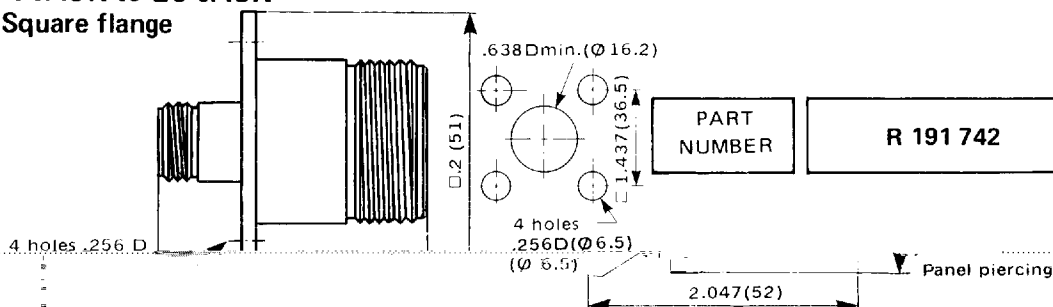


PART NUMBER	R 191 742
-------------	-----------


PART NUMBER	R 191 745
-------------	-----------

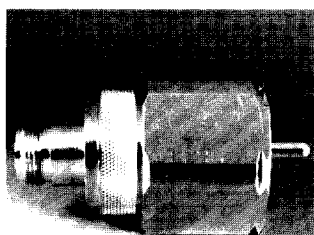


N JACK to LC PLUG

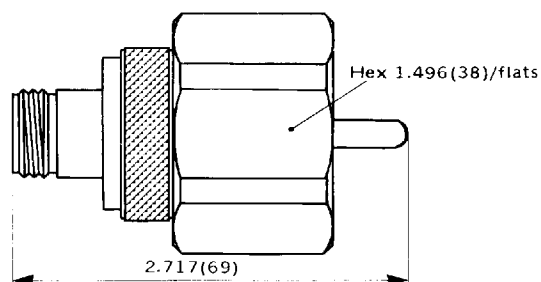

PART NUMBER	R 191 737
-------------	-----------

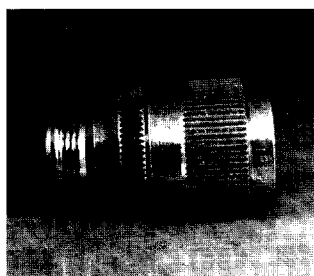



N JACK to HN PLUG

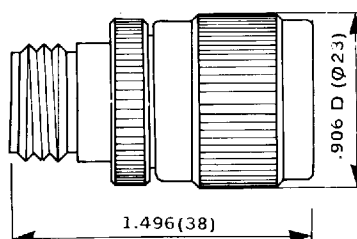

N to UHF/SMA


N PLUG to UHF JACK

PART NUMBER	R 191 731
-------------	------------------

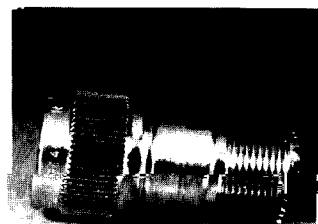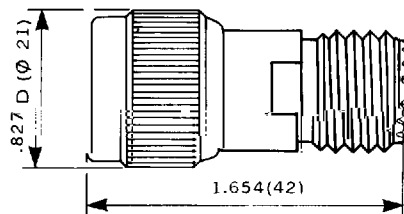



N JACK to UHF PLUG

PART NUMBER	R 191 733
-------------	------------------

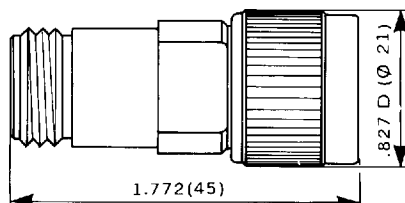



N PLUG to SMA PLUG

PART NUMBER	R 191 325
VSWR	0 - 11 GHz 1.06 + 0.005 F (GHz)

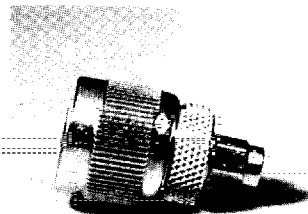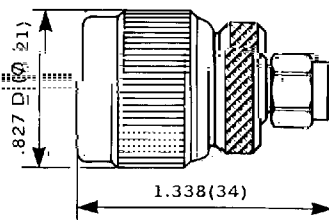



N JACK to SMA PLUG

PART NUMBER	R 191 327
VSWR	0 - 11 GHz 1.06 + 0.01 F (GHz)

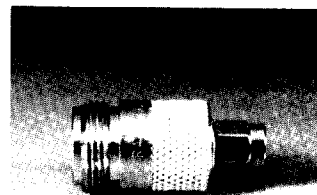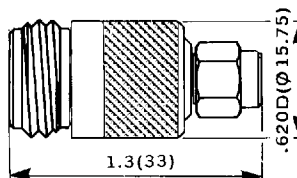



N PLUG to SMA JACK

PART NUMBER	R 191 329
VSWR	0 - 11 GHz 1.06 + 0.005 F (GHz)

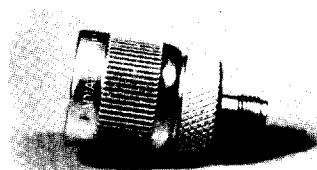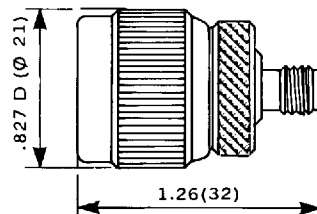



N to SMA/SMA 3,5

N JACK to SMA JACK

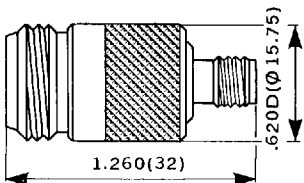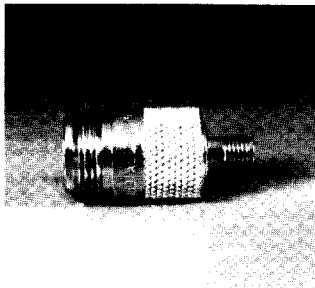


PART NUMBER	R 191 331
VSWR	0 - 11 GHz 1.06 + 0.01 F (GHz)

N JACK to SMA JACK Panel sealed, bulkhead feedthrough

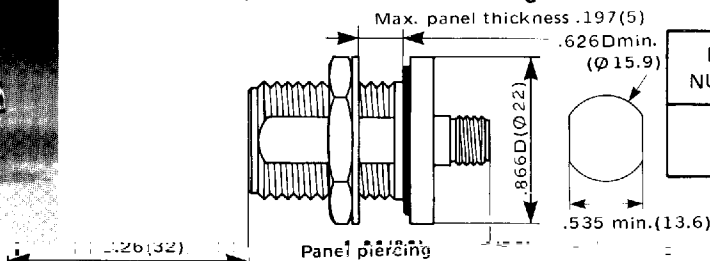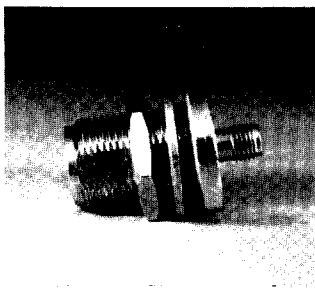


PART NUMBER	R 191 332	R 191 334
Inner seal	NO	YES


N JACK to SMA PLUG Square flange

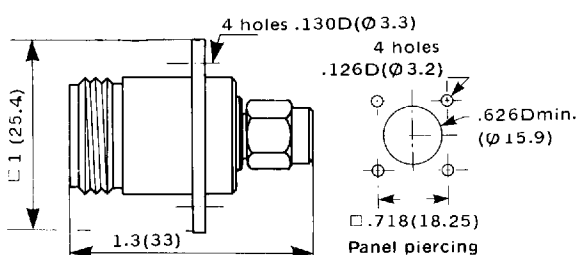

PART NUMBER	R 191 377
-------------	-----------

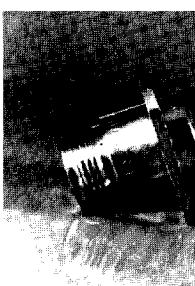


N JACK to SMA JACK Square flange

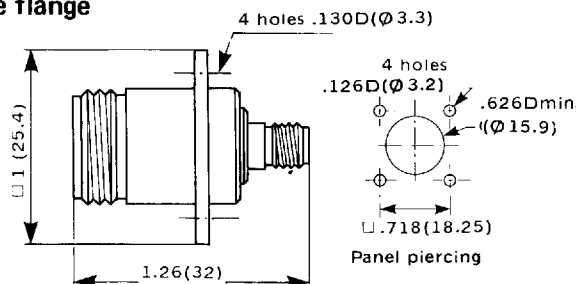


PART NUMBER	R 191 381
-------------	-----------



N PLUG to SMA 3.5 PLUG

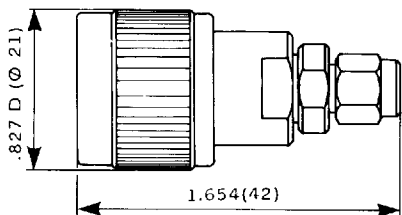



PART NUMBER	R 191 324
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

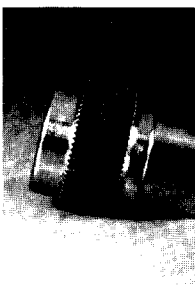

N to SMA 3,5/SMB



N JACK to SMA 3.5 PLUG

PART NUMBER	R 191 326
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

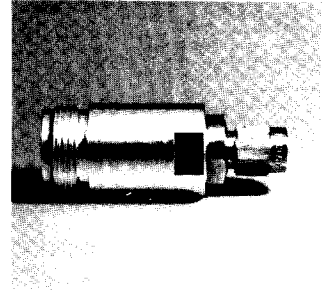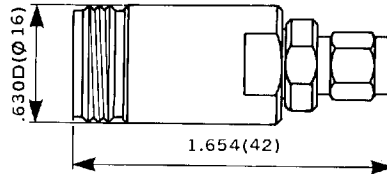



N PLUG to SMA 3.5 JACK

PART NUMBER	R 191 328
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

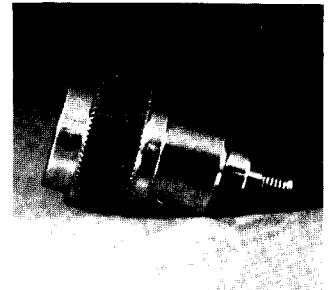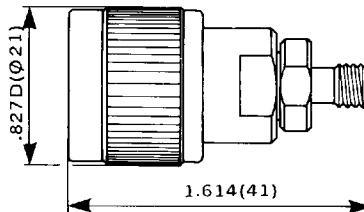



N JACK to SMA 3.5 JACK

PART NUMBER	R 191 330
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

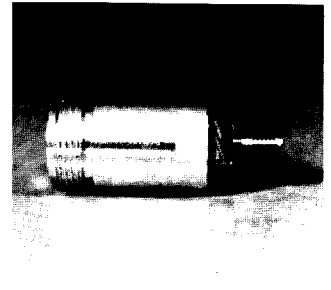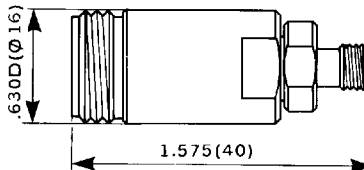


N JACK to SMA 3.5 JACK

PART NUMBER	R 191 333
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

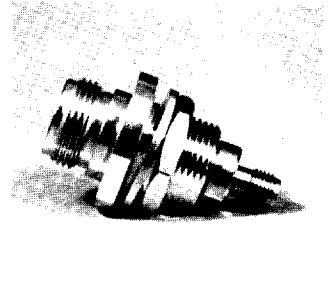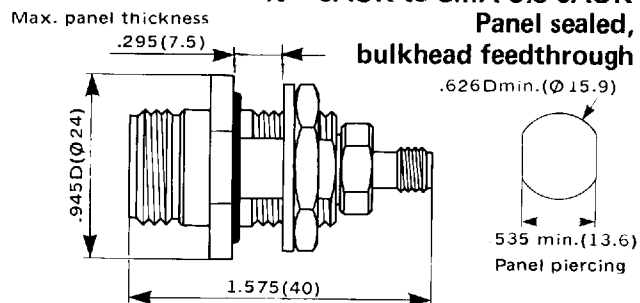

N PLUG to SMB JACK



PART NUMBER	R 191 233
VSWR	0 - 4 GHz 1.03 + 0.01 F (GHz)

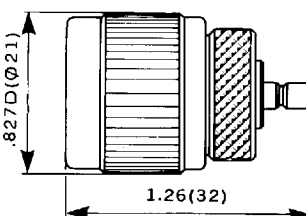

N to SMA 3,5/SMB



N JACK to SMA 3.5 PLUG

PART NUMBER	R 191 326
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

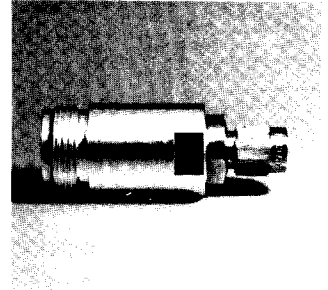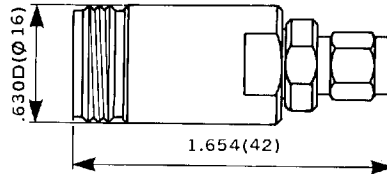



N PLUG to SMA 3.5 JACK

PART NUMBER	R 191 328
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

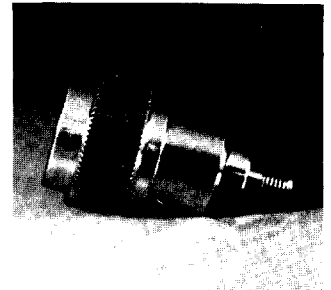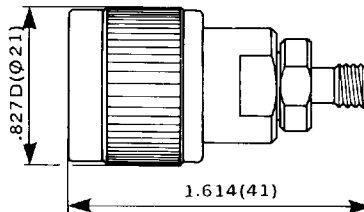



N JACK to SMA 3.5 JACK

PART NUMBER	R 191 330
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

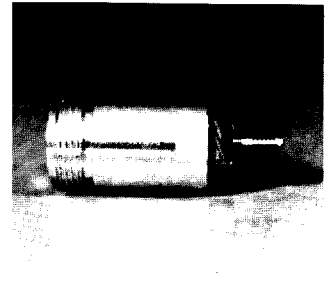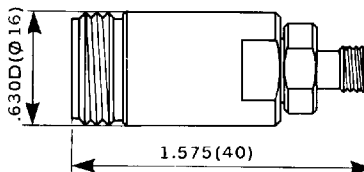


N JACK to SMA 3.5 JACK

PART NUMBER	R 191 333
VSWR	0 - 18 GHz 1.03 + 0.005 F (GHz)

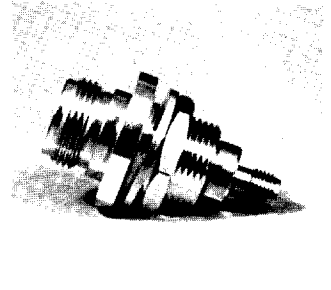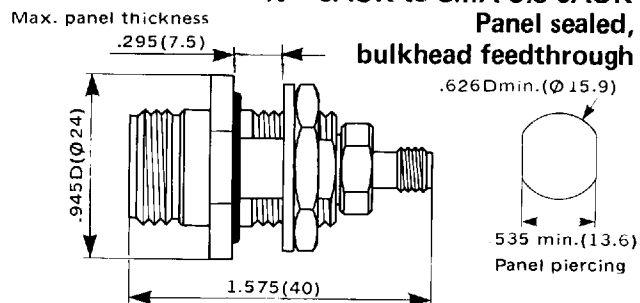


N PLUG to SMB JACK


PART NUMBER	R 191 233
VSWR	0 - 4 GHz 1.03 + 0.01 F (GHz)

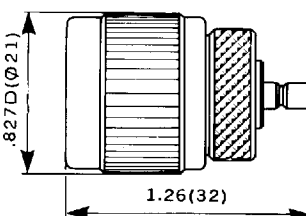

N to SMB/SMC

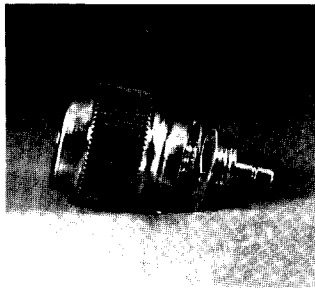


N PLUG to SMB JACK
Bulkhead feedthrough

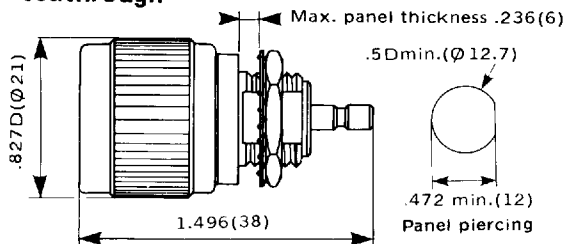


PART NUMBER

R 191 234

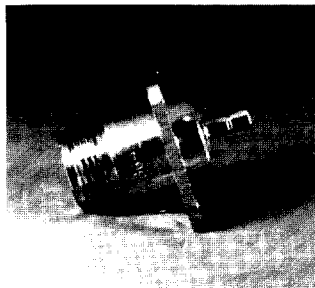


N JACK to SMB JACK
Square flange

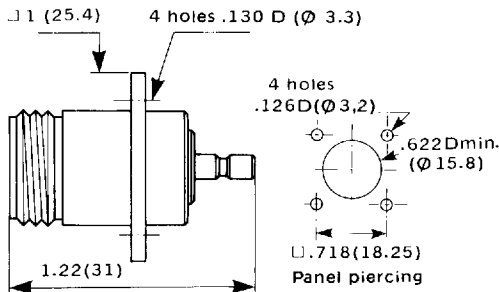


PART NUMBER

R 191 236

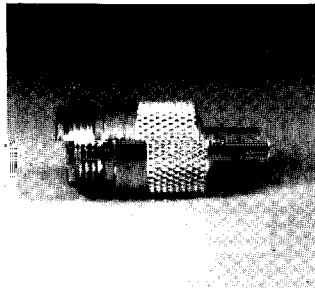


N JACK to SMB PLUG

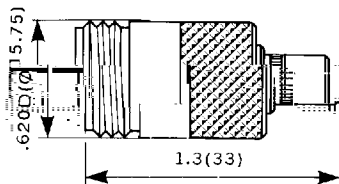


PART NUMBER
VSWR

R 191 239
0 - 4 GHz 1.03 + 0.03 F (GHz)

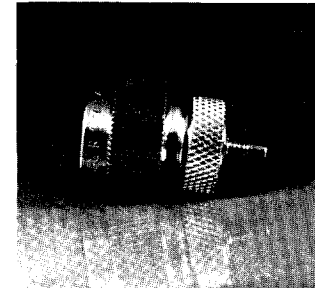


N PLUG to SMC JACK

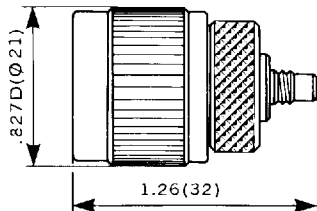


PART NUMBER
VSWR

R 191 141
0 - 11 GHz 1.35 Max.

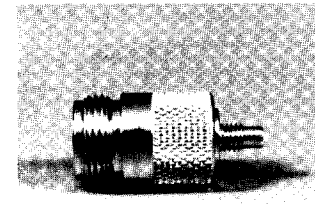

N JACK to SMC JACK



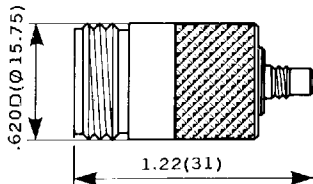


PART NUMBER
VSWR

R 191 143
0 - 11 GHz 1.35 Max.



N JACK to SMC JACK Panel sealed, square flange

PART NUMBER	R 191 144
VSWR	0 - 11 GHz 1.35 Max.

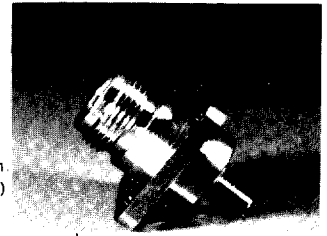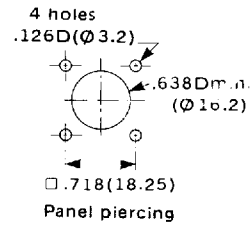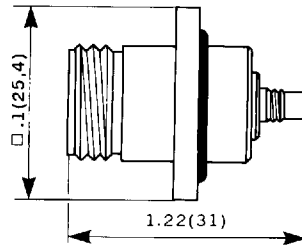



N JACK to SMC PLUG

PART NUMBER	R 191 147
VSWR	0 - 11 GHz 1.35 Max.

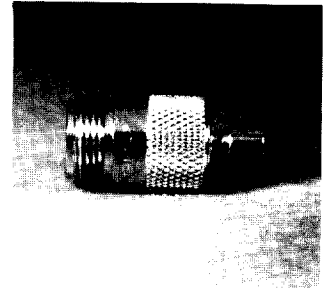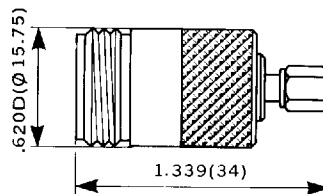

C to HN/UHF/SMB



C JACK to HN PLUG

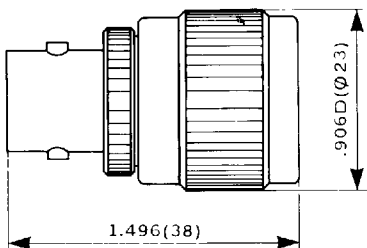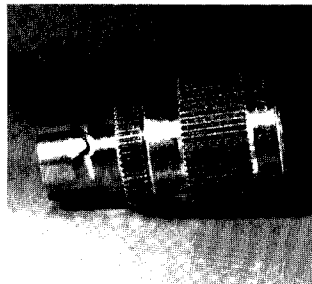

PART
NUMBER

R 191 931


C PLUG to HN JACK

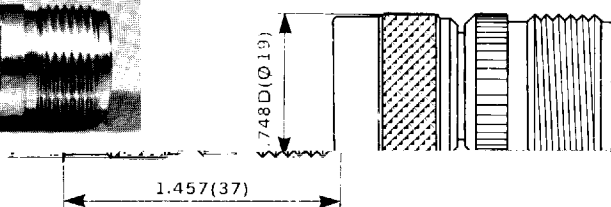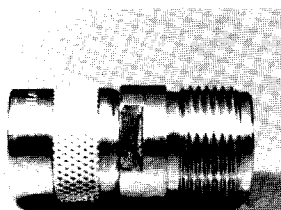

PART
NUMBER


R 191 933

C JACK to UHF PLUG

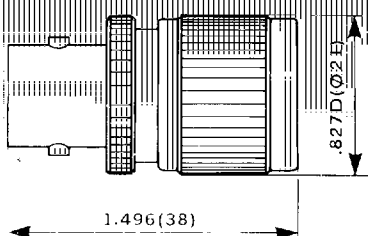


PART
NUMBER

R 191 921

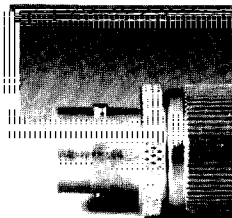

C JACK to SMB JACK
Panel sealed, bulkhead feedthrough

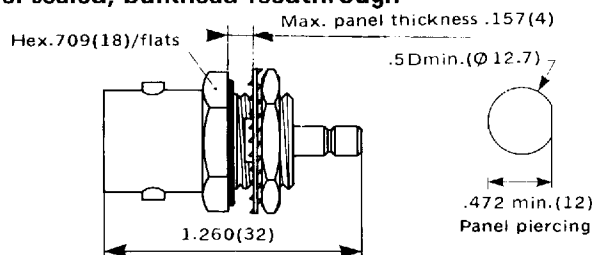

PART
NUMBER



R 191 244



mQ to BNC/N


mQ JACK to BNC PLUG

PART NUMBER	R 191 411
----------------	-----------

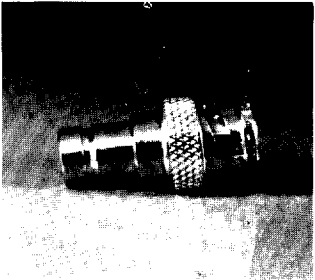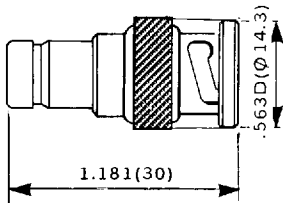

mQ PLUG to BNC JACK


PART NUMBER	R 191 413
----------------	-----------

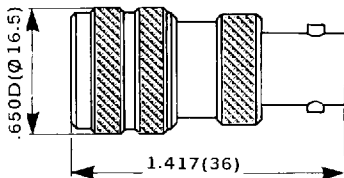

mQ JACK TO BNC JACK


Panel sealed, bulkhead feedthrough

PART NUMBER	R 191 416
----------------	-----------

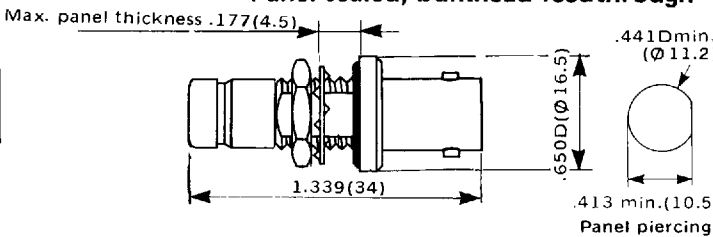


mQ PLUG to N JACK


PART NUMBER	R 191 603
----------------	-----------

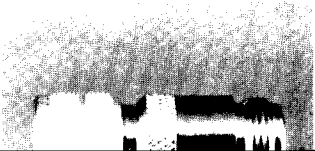

mQ to N

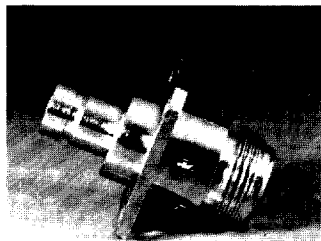


mQ JACK to N JACK
Square flange

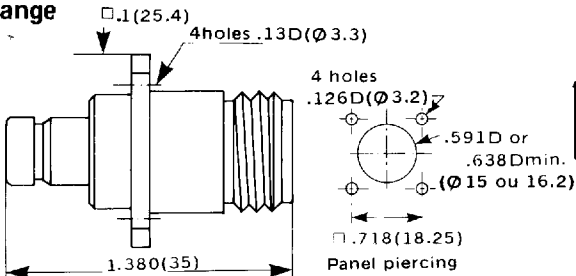


PART NUMBER

R 191 609

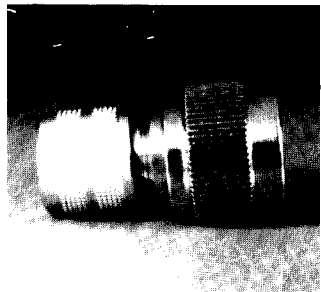


mQ PLUG to N PLUG

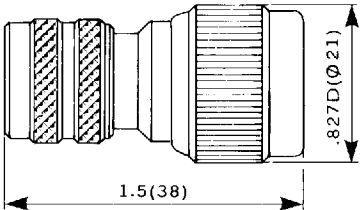


PART NUMBER
Impedance

R 192 601
75 Ω

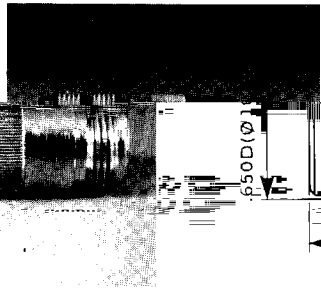


mQ PLUG to N JACK

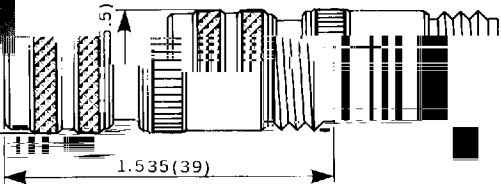


PART NUMBER
Impedance

R 192 603
75 Ω

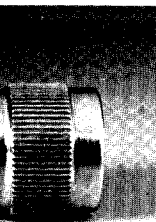


mQ JACK to N PLUG

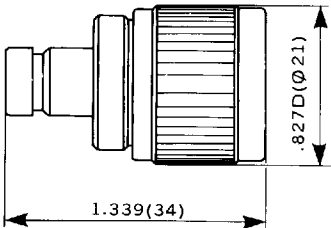

PART NUMBER
Impedance


R 192 606
75 Ω

mQ JACK to N JACK

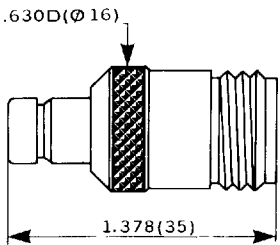



PART NUMBER
Impedance

R 192 608
75 Ω

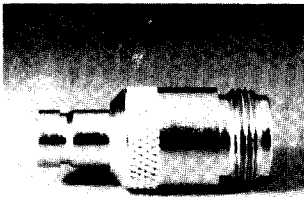



mQ to 1,6 / 5,6 / UHF / SMB

PART NUMBER	R 192 630
Impedance	75 Ω

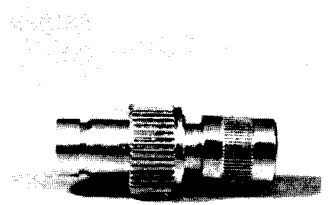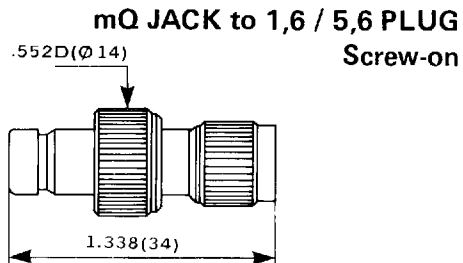


PART NUMBER	R 191 630
----------------	------------------


mQ PLUG to UHF JACK

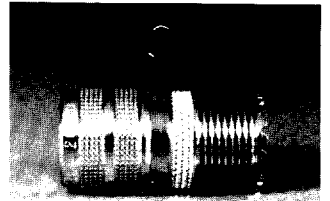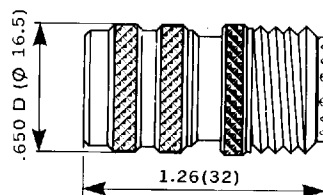


mQ JACK to UHF PLUG

 

mQ to SMB

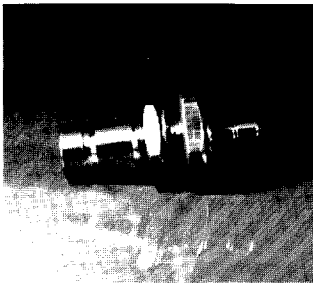

mQ JACK to SMB JACK
Panel sealed, bulkhead feedthrough


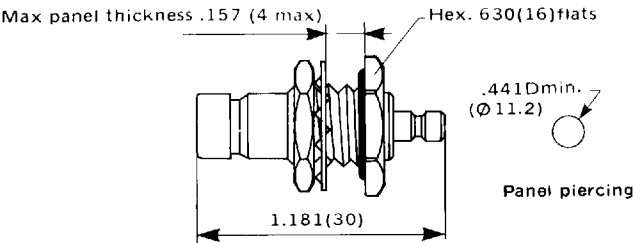


PART
NUMBER

R 191 228


APC 7® to BNC PLUG

PART NUMBER	R 191 013
VSWR	0 - 4 GHz 1.03 + 0.005 F (GHz)

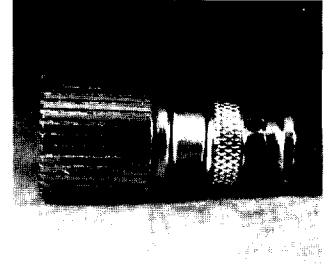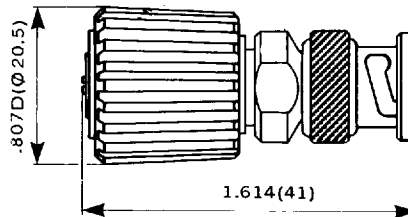



APC 7® to BNC JACK

PART NUMBER	R 191 015
VSWR	0 - 4 GHz 1.03 + 0.005 F (GHz)

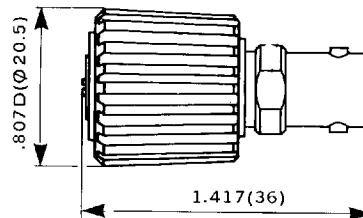

APC 7® to TNC / TNC 18 GHz PLUG



PART NUMBER	R 191 017	R 191 017 700
VSWR	0 - 11 GHz 1.04 + 0.003 F (GHz)	0 - 18 GHz 1.03 + 0.002 F (GHz)
Connector	TNC	TNC 18 GHz

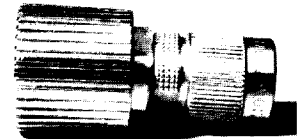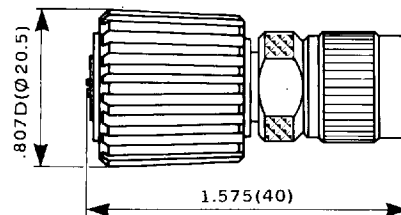

Hexagonal cap for R 191 017 700



APC 7® to TNC / TNC 18 GHz JACK

PART NUMBER	R 191 019	R 191 019 700
VSWR	0 - 11 GHz 1.04 + 0.003 F (GHz)	0 - 18 GHz 1.03 + 0.002 F (GHz)
Connector	TNC	TNC 18 GHz

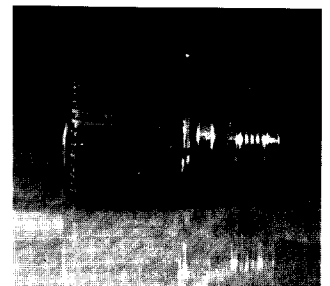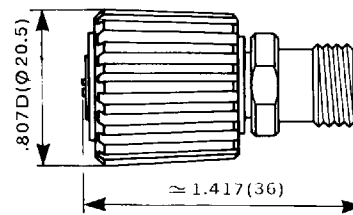


APC 7® to NP PLUG

PART NUMBER	R 191 025
VSWR	0 - 18 GHz 1.03 + 0.002 F (GHz)

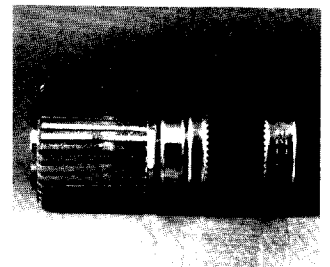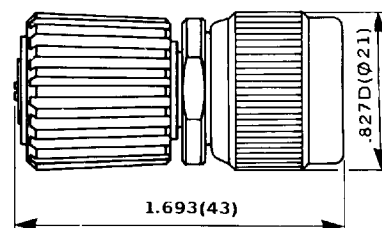


APC 7



JACK

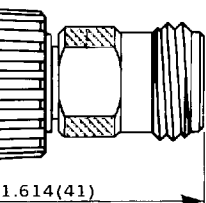


PART NUMBER	R 191 027
VSWR	0 - 18 GHz 1.03 + 0.0015 F (GHz)

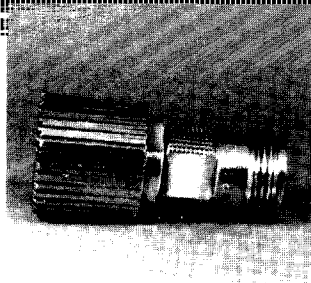



APC 7® to N 18 GHz

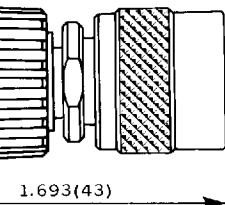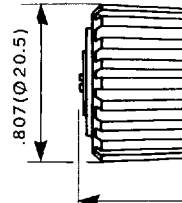


PART NUMBER	R 191 029
VSWR	0 - 11 GHz 1.04 + 0.01 F (GHz)

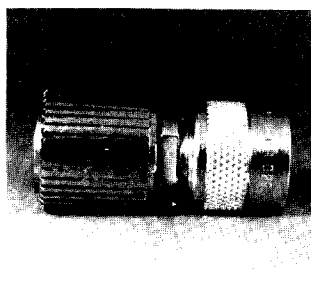


APC 7® to C PLUG

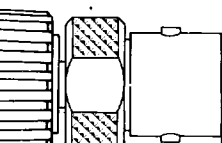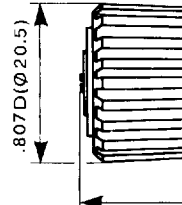

PART NUMBER	R 191 031
VSWR	0 - 11 GHz 1.04 + 0.01 F (GHz)

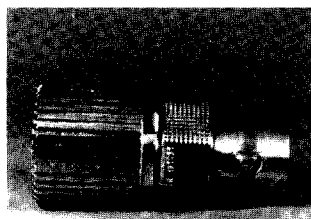


APC 7® to C JACK

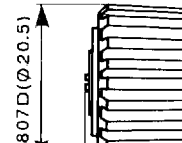


PART NUMBER	R 191 009
VSWR	0 - 18 GHz 1.05 + 0.002 F (GHz)




APC 7® - to SMA PLUG

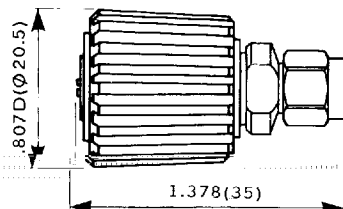

PART NUMBER	R 191 011
VSWR	0 - 18 GHz 1.05 + 0.002 F (GHz)

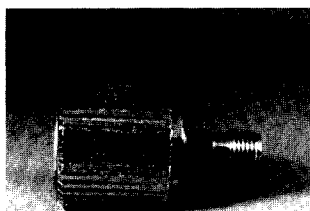



APC 7® to SMA JACK

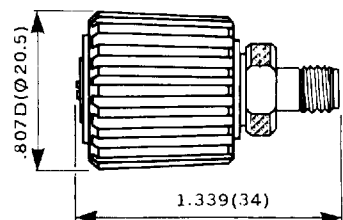

RADIALL
The Quality Connection



APC 7® to SMA 3.5 PLUG

PART NUMBER	R 191 010
VSWR	0 - 18 GHz 1.03 + 0.003 F (GHz)

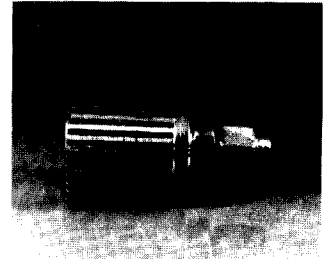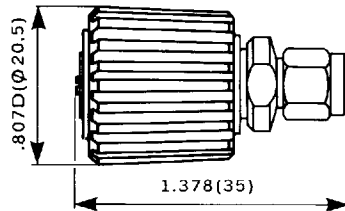



APC 7® to SMA 3.5 JACK

PART NUMBER	R 191 012
VSWR	0 - 18 GHz 1.03 + 0.003 F (GHz)

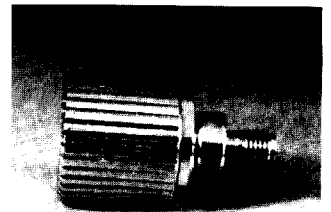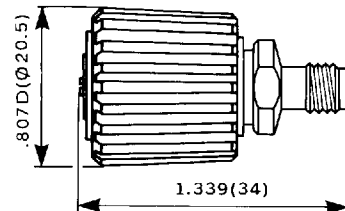



APC 7® to SMB JACK

PART NUMBER	R 191 005
VSWR	0 - 4 GHz 1.03 + 0.01 F (GHz)

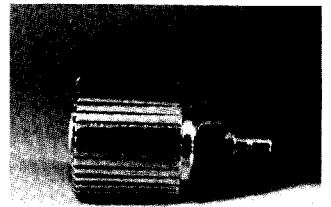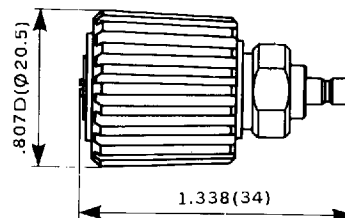


APC 7® to SMB PLUG

PART NUMBER	R 191 007
VSWR	0 - 4 GHz 1.03 + 0.01 F (GHz)

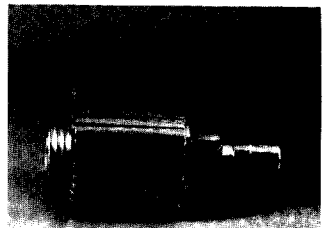
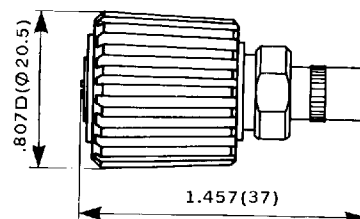


APC 7® to SMC JACK

PART NUMBER	R 191 001
VSWR	0 - 11 GHz 1.07 + 0.01 F (GHz)


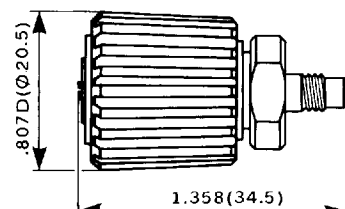


APC 7® to SMC PLUG

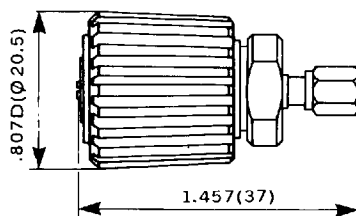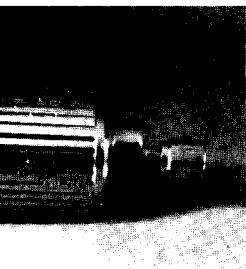



PART NUMBER	R 191 003
VSWR	0 - 11 GHz 1.07 + 0.01 F (GHz)

APC 7® to SSMA PLUG

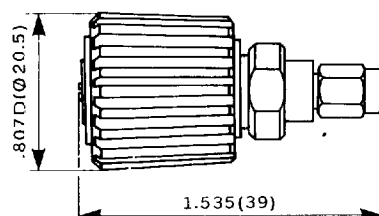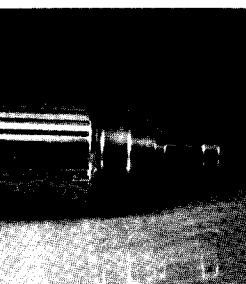

PART NUMBER	R 191 033
VSWR	0 - 18 GHz 1.03 + 0.006 F (GHz)

APC 7® to SSMA JACK

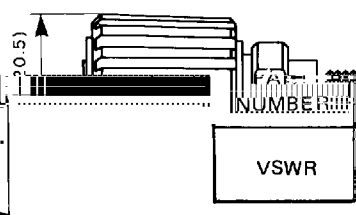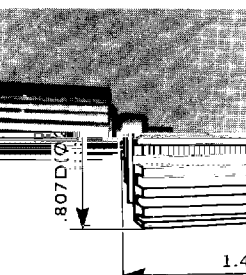

R 191 035

PART NUMBER	R 191 035
VSWR	0 - 18 GHz 1.03 + 0.006 F (GHz)



N 18 GHz PLUG N 18 GHz JACK

The kit includes 4 sockets and 4 pins



PART NUMBER	R 191 094
VSWR	0 - 18 GHz 1.05 Max.

7 mm
7 mm

— Th

CHRONOLOGICAL INDEX BY RADIAL PART NUMBER

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
ADAPTERS 50 Ω				ADAPTERS 75 Ω	
R 191 001	33	R 191 327	21	R 192 417	17
R 191 003	34	R 191 328	23	R 192 418	18
R 191 005	33	R 191 329	21	R 192 419	17
R 191 007	33	R 191 330	23	R 192 421	17
R 191 009	32	R 191 331	22	R 192 430	11
R 191 010	33	R 191 332	22	R 192 431	11
R 191 011	32	R 191 333	23	R 192 432	11
R 191 012	33	R 191 334	22	R 192 601	28
R 191 013	31	R 191 347	7	R 192 603	28
R 191 015	31	R 191 349	7	R 192 606	28
R 191 017	31	R 191 350 001	8	R 192 608	28
R 191 017 700	31	R 191 351 001	8	R 192 630	29
R 191 019	31	R 191 352 001	8	R 192 770	19
R 191 019 700	31	R 191 353 001	8	R 192 771	19
R 191 025	31	R 191 354 001	8	R 192 775	19
R 191 027	32	R 191 355 001	9	R 192 777	20
R 191 029	32	R 191 365	6		
R 191 031	32	R 191 374	7		
R 191 033	34	R 191 376	7		
R 191 035	34	R 191 377	22		
R 191 037	9	R 191 381	22	MIL Part no	
R 191 039	9	R 191 403	11		
R 191 094	34	R 191 405	11		
R 191 117	14	R 191 411	27	R 191 419	UG 349 A/U
R 191 120	14	R 191 413	27	R 191 421	UG 201 A/U
R 191 123	15	R 191 416	27	R 191 422	UG 606 /U
R 191 124	15	R 191 417	17	R 191 429	UG 636 A/U
		R 191 419	17		
24	R 191 421	17	R 191 445	UG 255 /U	R 191 141
-24-	R 191 422	-17-	R 191 449	UG 309 /U	R 191 143
25	R 191 424	17	R 191 703	UG 564 /U	R 191 144
25	R 191 426	17	R 191 705	UG 565 A/U	R 191 147
13	R 191 429	12	R 191 731	UG 146 /U	R 191 209
13	R 191 445	12	R 191 733	UG 83 A/U	R 191 211
13	R 191 447	12	R 191 921	UG 637 /U	R 191 212
13	R 191 449	12	R 191 931	UG 702 /U	R 191 213
14	R 191 450	15	R 191 933	UG 703 A/U	R 191 214
14	R 191 453	15			R 191 215
14	R 191 454	15			R 191 216
29	R 191 455	16			R 191 225
29	R 191 511	18			R 191 227
30	R 191 513	18			R 191 228
23	R 191 514	18			R 191 233
24	R 191 603	27			R 191 234
24	R 191 606	27			R 191 236
24	R 191 609	28			R 191 239
26	R 191 630	29			R 191 244
10	R 191 632	29			R 191 265
10	R 191 703	18			R 191 267
12	R 191 705	19			R 191 303
13	R 191 708	19			R 191 305
6	R 191 731	21			R 191 309
6	R 191 733	21			R 191 311
6	R 191 737	20			R 191 313
6	R 191 741	20			R 191 315
7	R 191 742	20			R 191 314
7	R 191 745	20			R 191 316
22	R 191 921	26			R 191 324
21	R 191 931	26			R 191 325
23	R 191 933	26			R 191 326

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru