

## DESCRIPTION

Demonstration circuit 542 is a dual output, dual phase step down converter, which is controlled by the LTC3728EG. Output #1 can be configured for either 5.0V or 3.3V and output #2 can be configured for either 3.3V or 2.5V. The maximum load for both rails is 12A. The input voltage range of the DC542 is 8V to 24V.

The DC542 also contains a footprint for a 5.5V boost converter bias supply whose output is connected to EXTVCC. See the “Optional Bias Supply” section for more details.

**Design files for this circuit board are available. Call the LTC factory.**

**Table 1. Performance Summary**

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		8V
Maximum Input Voltage		24V
V <sub>OUT1</sub>	V <sub>IN</sub> = 8V to 24V, I <sub>OUT</sub> = 0A to 12A	5.0V ± 3% / 3.3V ± 3%
V <sub>OUT2</sub>	V <sub>IN</sub> = 8V to 24V, I <sub>OUT</sub> = 0A to 12A	3.3V ± 3% / 2.5V ± 3%

## QUICK START PROCEDURE

Demonstration circuit 542 is easy to set up. Refer to Figure 1 for the proper setup of the measurement equipment and follow the procedure below:

1. With power off, connect the input voltage source and the load. The load cables should be sized for 12 Amps and the input cables should be sized for 15 Amps.
2. The jumpers should be placed in their default positions as shown in Figure 1.
3. If a constant current electronic load is used, preset the load current to about 1A or less before applying power to the input. Otherwise, the foldback current limit function of the LTC3728 may be triggered during startup.
4. Apply power to the input and set the input voltage to 12V. The voltage for output #1 should be 5.0V ± 3% and the voltage for output #2 should be 3.3V ± 3%. Increase the load on both rails to 12.0A. The two outputs should still be within regulation.
5. Keep the input voltage at 12.0V and the load at 12.0A for both rails. Measure the DC input current. It should be less than 9.4A.
6. Remove input power from the converter. Set the voltage for output #1 to 3.3V using jumper JP5 and the voltage for output #2 to 2.5V using JP4. Repeat step #4. The voltage for output #1 should be 3.3V ± 3% and the voltage for output #2 should be 2.5V ± 3%.
7. Adjust the input voltage and load current to the desired levels within their limits and observe the regulation, output ripple, load step response, efficiency and other parameters.

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

## DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

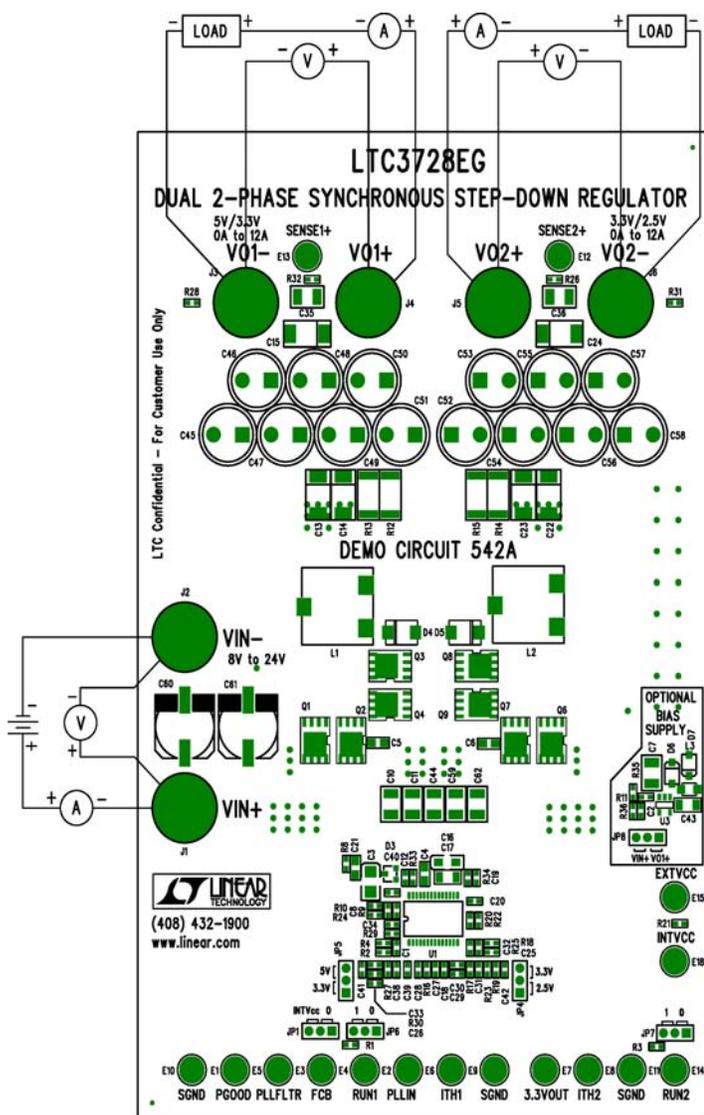


Figure 1. Setup for measurement equipment.

Note: When measuring the output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Connect the probe tip to VOUT and the probe's ground ring to GND. Make the connections as short as possible. For output #1, measure the ripple directly across C35 and for output #2, measure across C36. See Figure 2.

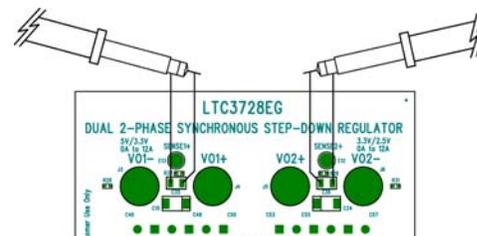


Figure 2. Output ripple measurement.

## OPTIONAL BIAS SUPPLY

The DC542 also contains a footprint for a 5.5V boost converter bias supply whose output is connected to EXTVCC. The input of this bias supply can be connected to one of the following:

- 1) VIN, if  $V_{IN} < 5V$
- 2) VOUT1 for  $V_{OUT1} < 5V$  and  $V_{IN} > 5V$ .

The latter connection will provide higher efficiency. If this bias supply is stuffed, please keep the following points in mind:

- 1) If the input voltage of the optional bias supply is connected to VIN, then the board will need to be slightly modified to ensure that the voltage on the EXTVCC pin of the LTC3728EG does not exceed the voltage on the VIN pin. These are the modifications:
  - a) Remove resistor R8.
  - b) Tie the (+) end of C3 to the (+) end of C21.
- 2) If the input voltage of the optional bias supply is connected to output #1, precautions need


to be taken to make sure that the voltage on the EXTVCC pin of the LTC3728EG does not exceed the voltage on the VIN pin during turn-on of the main converter. Follow the steps below:

- a) Put jumper JP6 in the “0” position to tie the RUN1 signal to ground.
  - b) Turn-on the main input voltage and set to desired level.
  - c) Put jumper JP6 in the “1” position to turn-on output #1.
- 3) If a different power MOSFET configuration is used or the switching frequency is increased, then be sure to measure the current flowing into the EXTVCC pin and make sure the current will not exceed the maximum output current of the bias supply. At 3.3V input, the maximum output current of the bias supply is 200mA.

For further assistance, contact the factory.

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

## DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

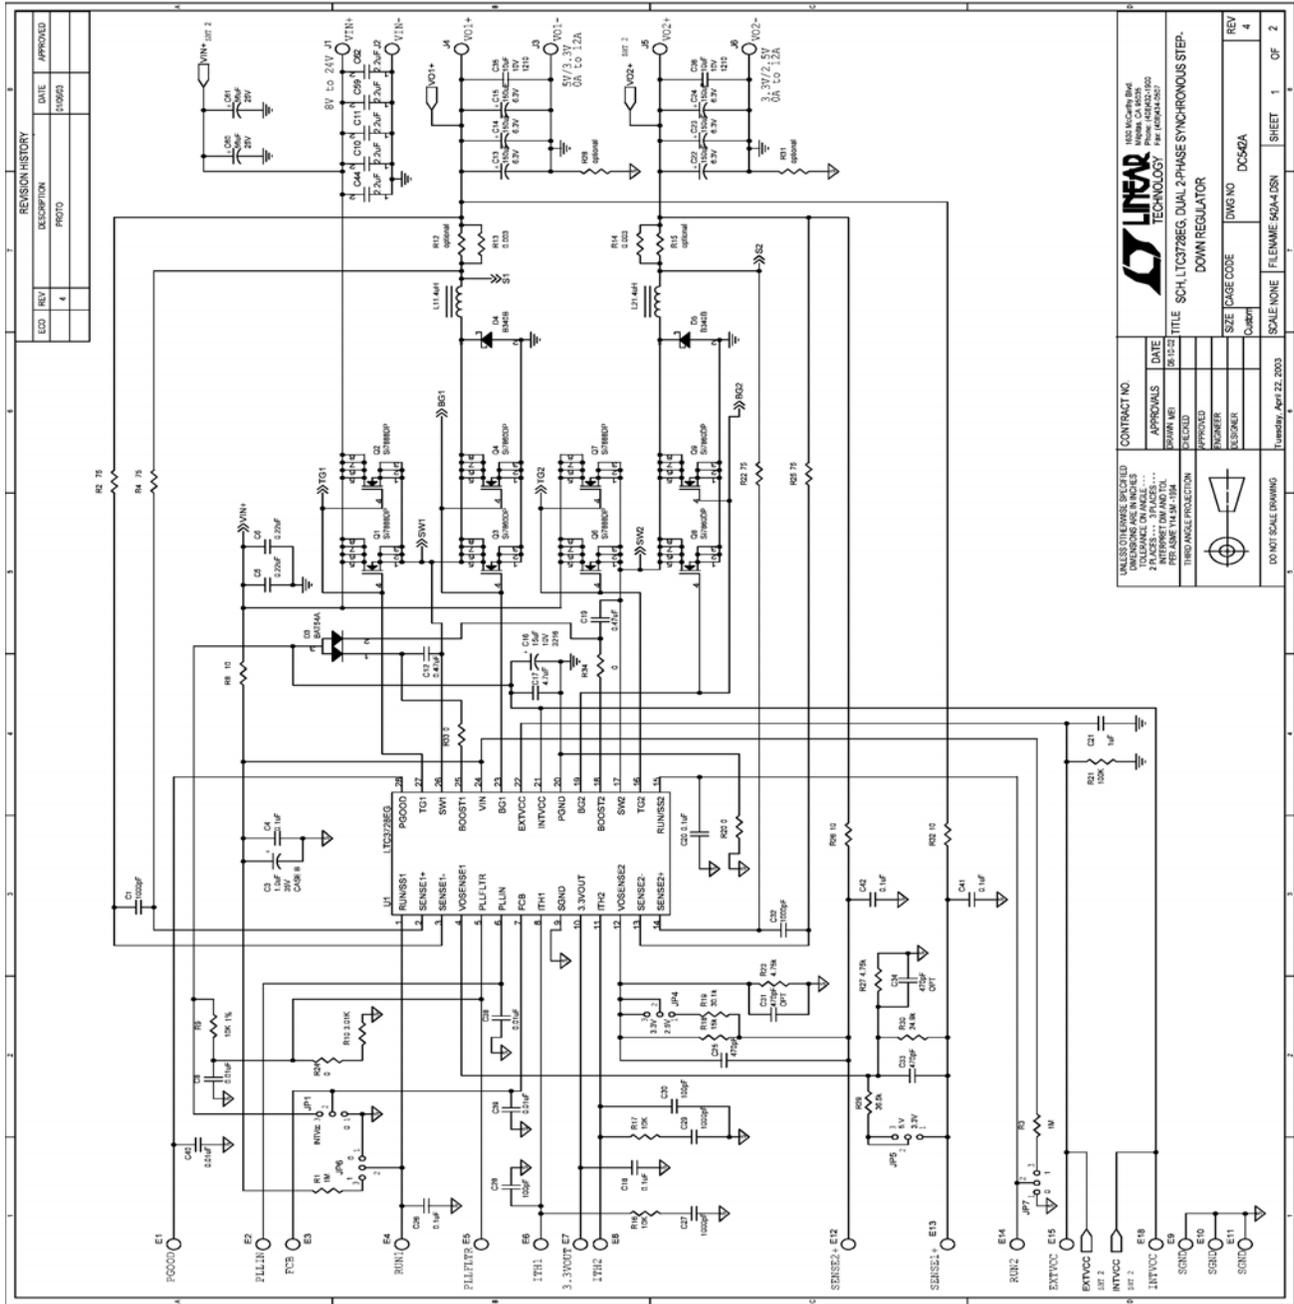

REVISION HISTORY		
ECO	REV	DATE
	4	11/06/03
		APPROVED

**CONTRACT NO.** 1003400078  
**DATE** 06/12/02  
**APPROVALS**  
 DRAWN BY: [Signature]  
 CHECKED: [Signature]  
 APPROVED: [Signature]  
 INK/ENGINEER: [Signature]  
 DES/PM: [Signature]

**TITLE** SCH LTC3786C DUAL 2-PHASE SYNCHRONOUS STEP-DOWN REGULATOR

**SIZE** PAGE CODE DWG NO DC542A  
 Comb

**SCALE** NONE FILENAME 90M445N SHEET 1 OF 2



**DO NOT SCALE DRAWING** January, April 22, 2003

**UNLESS OTHERWISE SPECIFIED**  
 1. TOLERANCES ON ANGLES: 30° MINIMUM  
 2. DIMENSIONS IN PARENTHESES INDICATE PREFERRED DIMENSIONS  
 3. DIMENSIONS IN INCHES  
 4. DIMENSIONS IN MILLIMETERS  
 5. DIMENSIONS IN MILLIMETERS  
 6. DIMENSIONS IN MILLIMETERS  
 7. DIMENSIONS IN MILLIMETERS  
 8. DIMENSIONS IN MILLIMETERS  
 9. DIMENSIONS IN MILLIMETERS  
 10. DIMENSIONS IN MILLIMETERS

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 542

## DUAL PHASE, DUAL OUTPUT SYNCHRONOUS BUCK CONVERTER

REVISION HISTORY			
ECO	REV	DESCRIPTION	DATE
	4	PROTO	01/06/03

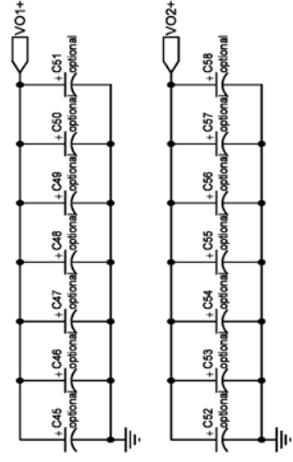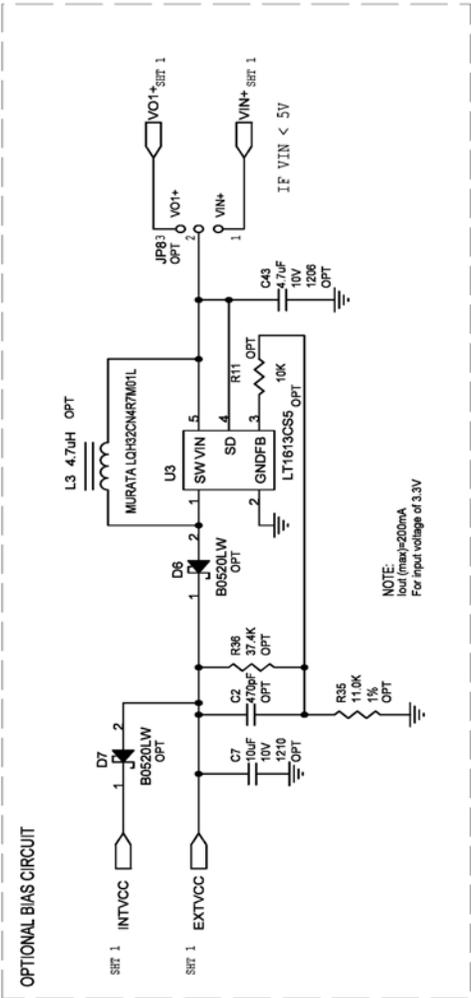

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCE ON ANGLE ... 2 PLACES ... 3 PLACES ... INTERPRET DIM AND TOL PER ASME Y14.5M-1994	CONTRACT NO.	DATE
	APPROVALS	06-07-02
THIRD ANGLE PROJECTION 	DRAWN MEI	CHECKED
	APPROVED	ENGINEER
	DESIGNER	
DO NOT SCALE DRAWING	Tuesday, April 22, 2003	
SCALE NONE		FILENAME: 542A-4.DSN
SHEET	2	OF 2

	1630 McCarthy Blvd. Milpitas, CA 95035 Phone: (408)432-1600 Fax: (408)434-0507	
	TECHNOLOGY	
<b>SCH, LTC3728EG, DUAL 2-PHASE SYNCHRONOUS STEP-DOWN REGULATOR</b>		
SIZE	CAGE CODE	DWG NO
A		DC542A
REV		4

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкуренспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: [org@lifeelectronics.ru](mailto:org@lifeelectronics.ru)