

The World Leader in High-Performance Signal Processing Solutions



iSensor[®]

ADIS16240 Evaluation Tool Overview




Mark Looney
iSensor[®] Application Engineer
September 7, 2009



iSensor[®] *The Simple Solution for Sensor Integration*


Evaluation Tool Overview

1. **Evaluation/Interface Board (ADIS16240/PCBZ) for simpler connection to an existing processor/system PCB.**
 - ◆ These boards provide a simple connector translation that enables user to bypass BGA soldering. The 2mm pitch connectors are easy to interface with 1mm ribbon cable or solder to.
 - ◆ Part number for ordering: **ADIS16240/PCBZ**
2. **Evaluation System (ADISUSBZ) for those that prefer a simple PC interface**
 - ◆ This system provides a simple USB interface, along with a simple Graphical User Interface (GUI) package, for evaluating most of the ADIS16240 functions and performance.
 - ◆ Supports approximately 150-200SPS sample rate.
 - ◆ This system is not a development kit that comes with PC development tools, source code and software support.
 - ◆ Part number for ordering: **ADISUSBZ**

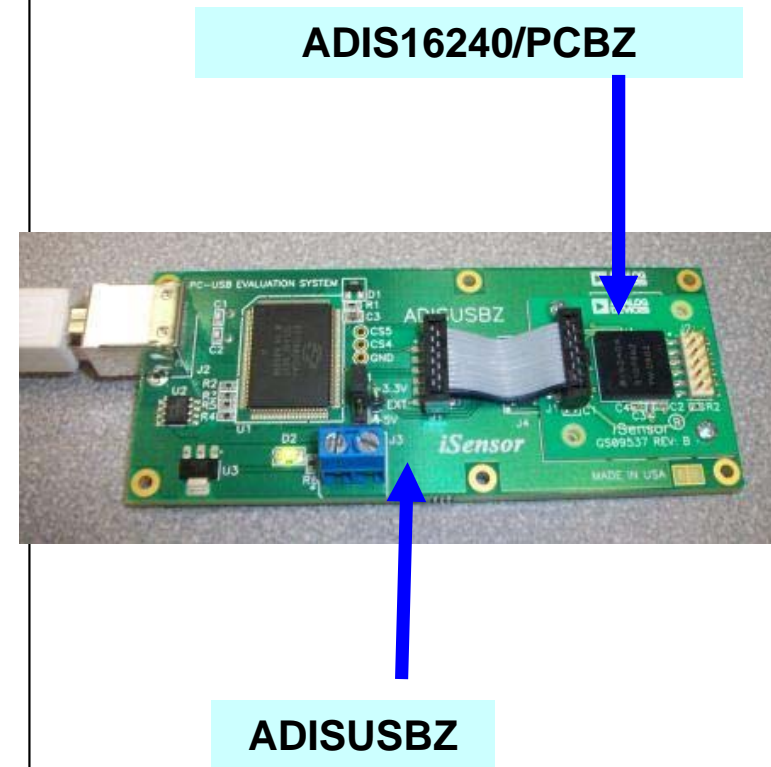


iSensor[®] The Simple Solution for Sensor Integration


Hooking up to the ADIS16240/PCBZ

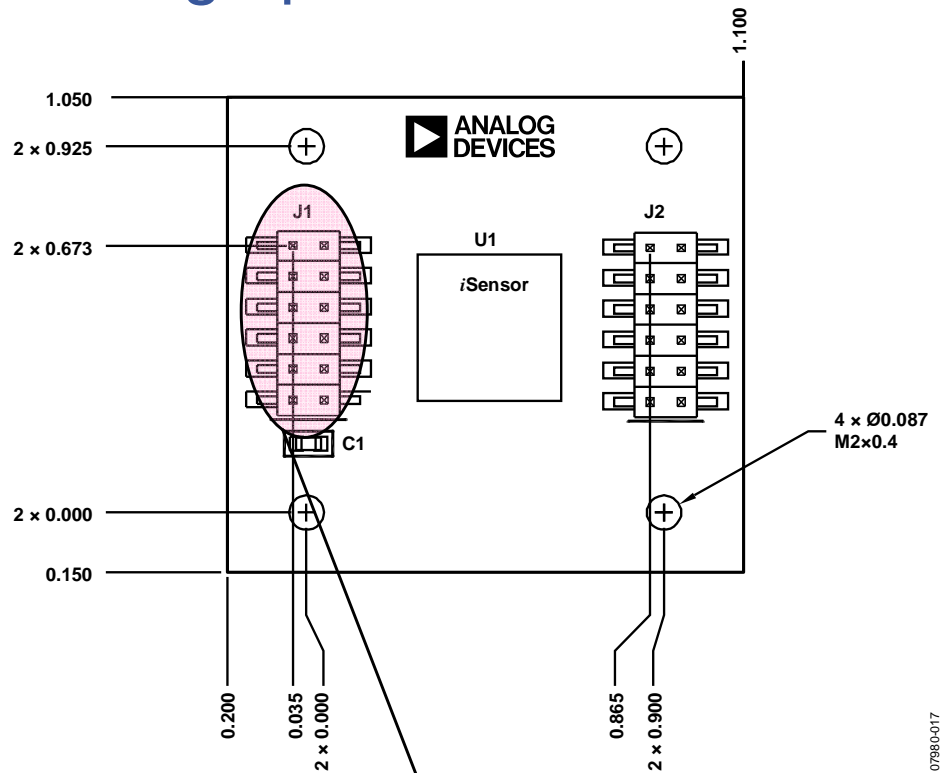

Master Processor Connection

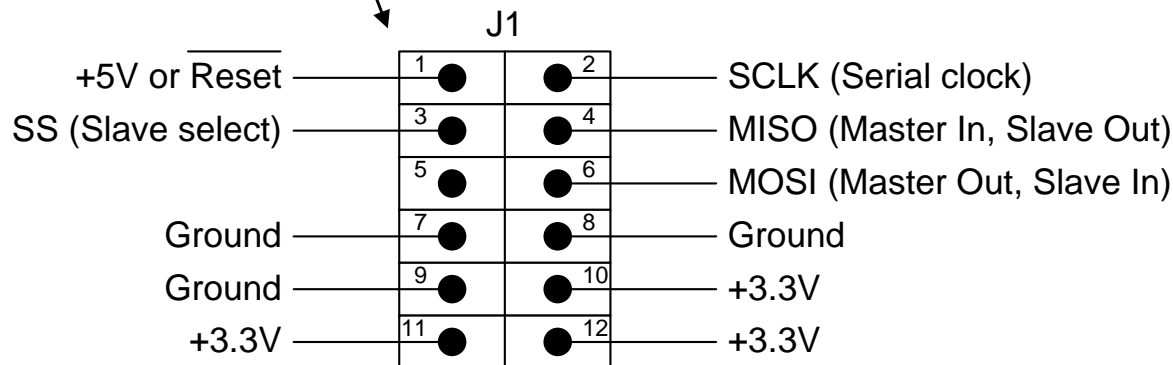

J1 Ribbon Cable Interface Parts

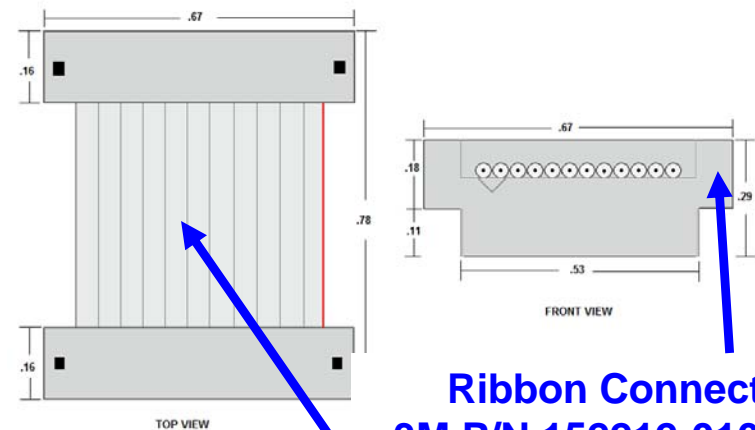

Ribbon Connector
3M P/N 152212-0100-GB

Ribbon Cable
3M P/N 3625/12 (100m)

ADISUSBZ uses the following cable assembly from Samtec:

ASP-140062-01


iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

The ADIS16240 demonstration software can be found at

www.analog.com/isensor-evaluation

1. Click on “Evaluation Software Downloads”
2. Click on 240ES.zip and save it to a temporary directory
3. Open it and double click on setup.exe.


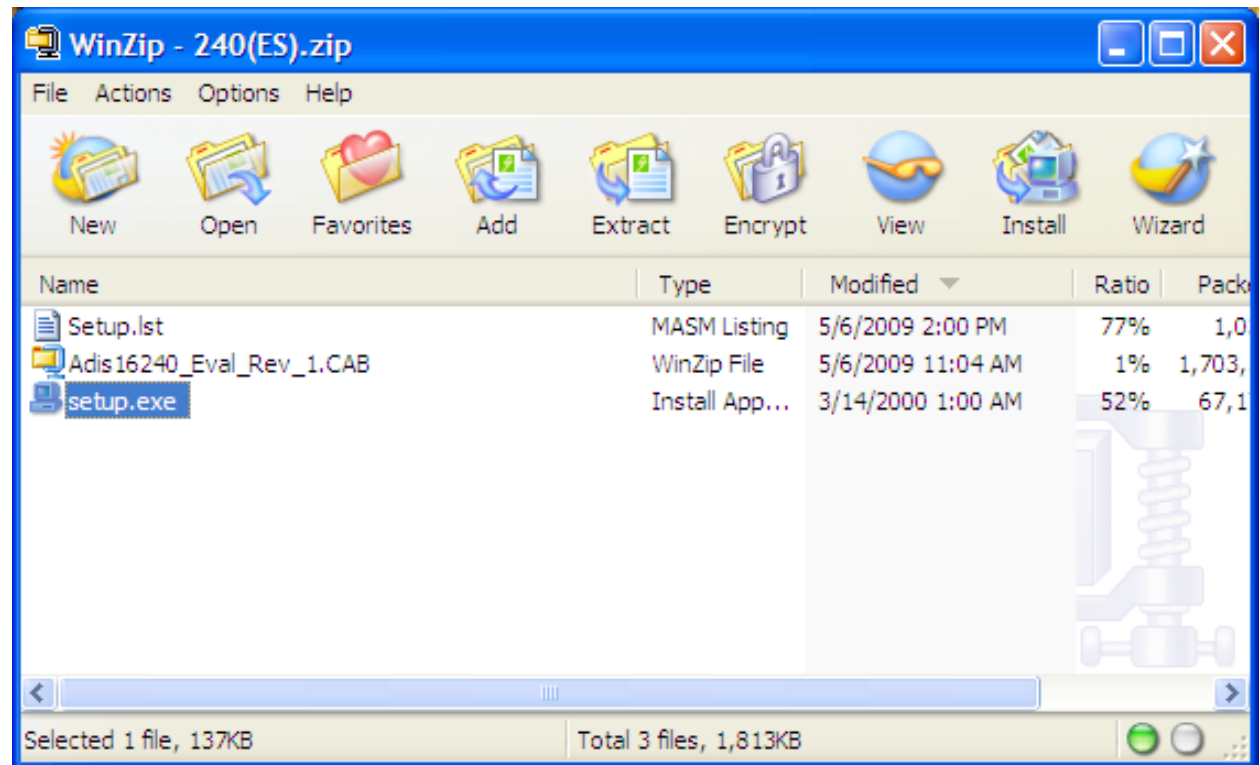


iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

4. Click OK on next screen
5. Click here to start installation

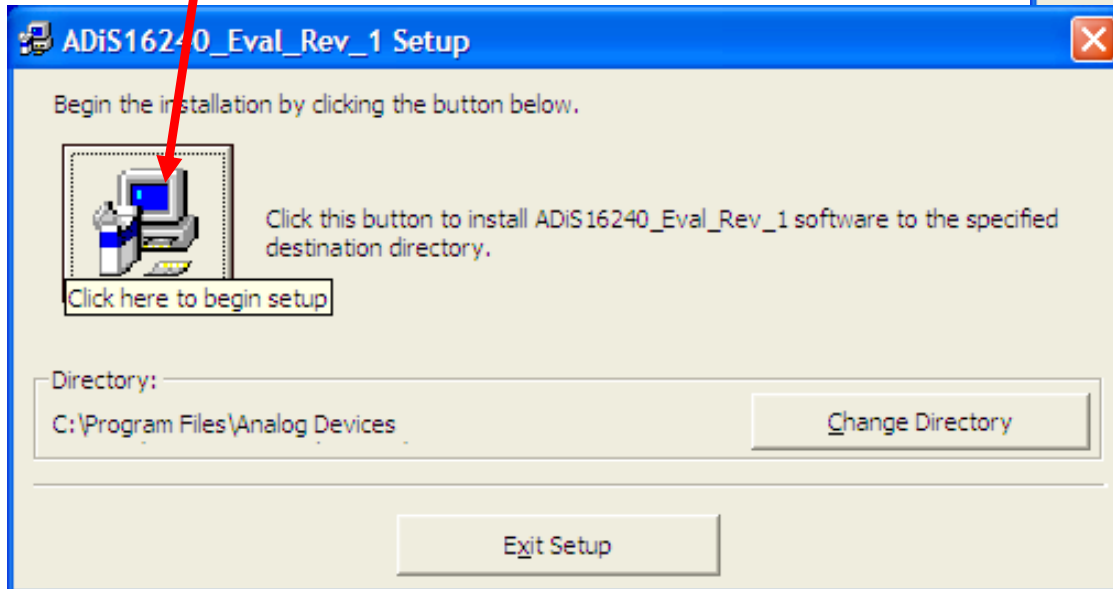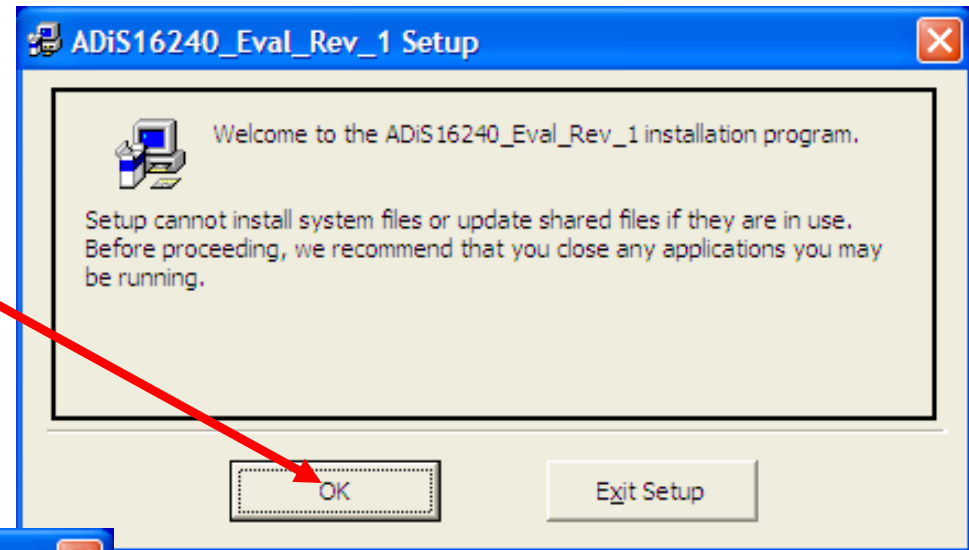

iSensor® The Simple Solution for Sensor Integration




ADIS16240 Demonstration Software Installation

Installation Steps (continued)

6. Click Continue

7. If this message comes up, click on "No"

8. Click OK

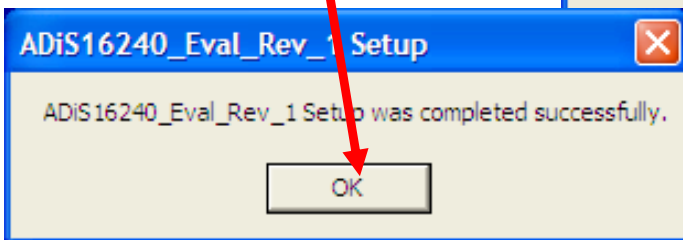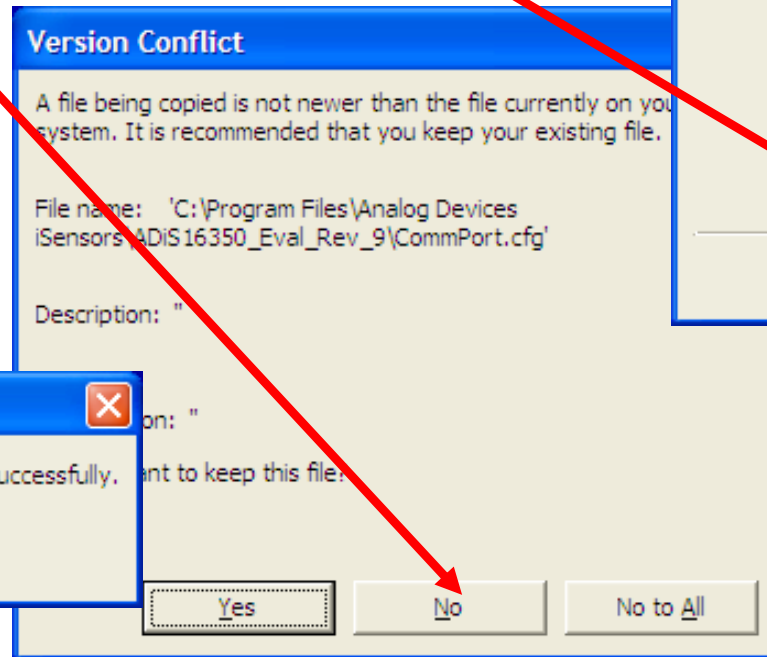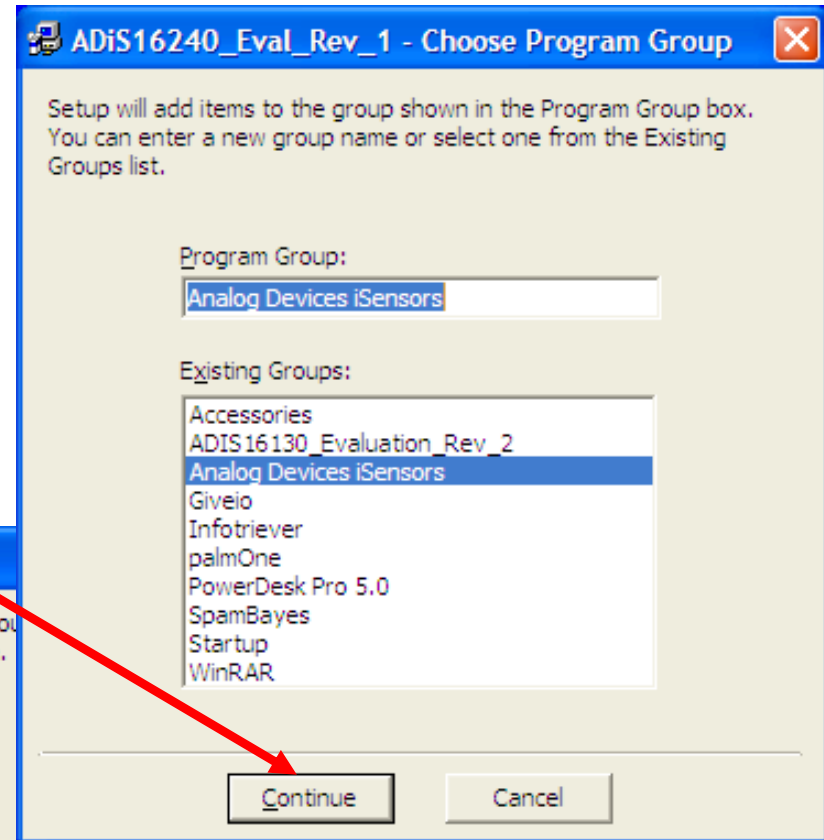

iSensor® The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

9. Open the newly created directory and double-click onto “giveio.exe”

10. Click “Install,” then “I Agree”

The screenshot displays three overlapping windows from a Windows XP environment:

- Visual basic runtimes (SP2) installation:** A dialog box with a blue title bar. The main text reads: "Welcome to the INF-Tool Setup demo program which will install 2 files in the <Windows>\INF-Test directory on your computer." Below this, it says: "Please close any programs you have running, then click 'Install' to continue with the Setup program." At the bottom, there are "Install" and "Close" buttons. A red arrow points from the "Install" button to the "I agree" button in the license agreement window below.
- License agreement:** A dialog box with a blue title bar. It contains a form with fields for: "[Name of your application]", "Author : [YOUR NAME]", "Version #.# from mm/dd/yyyy", "Web : Your Website", "email : Your email", and "Note : for each package, you may select an individual Licence template via the 'Options' window of Step #8." Below the form is the text: "END-USER LICENSE AGREEMENT FOR THIS SOFTWARE Important - read carefully:" and "To continue with this installation, you must agree to all terms of this license agreement". At the bottom are "I agree" and "Cancel" buttons. A red arrow points from the "I agree" button to the "GIVEIO.EXE" file in the Explorer window to the right.
- Windows Explorer:** A window showing the directory "C:\Program Files\Analog Devices iSensors\ADIS16240_Eval_Rev_1". The file list includes: "Adis16240_Eval_Rev_1.exe" (316 KB Application), "Comport.cfg" (1 KB Microsoft Office Ou...), "GIVEIO.EXE" (82 KB Application), "ST6UNST.000" (4 KB 000 File), "ST6UNST.001" (4 KB 001 File), and "ST6UNST.LOG" (4 KB Text Document). The "GIVEIO.EXE" file is selected. A red arrow points from the "GIVEIO.EXE" file to the "I agree" button in the license agreement window.



iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

11. Click “yes”

12. Giveio Driver complete

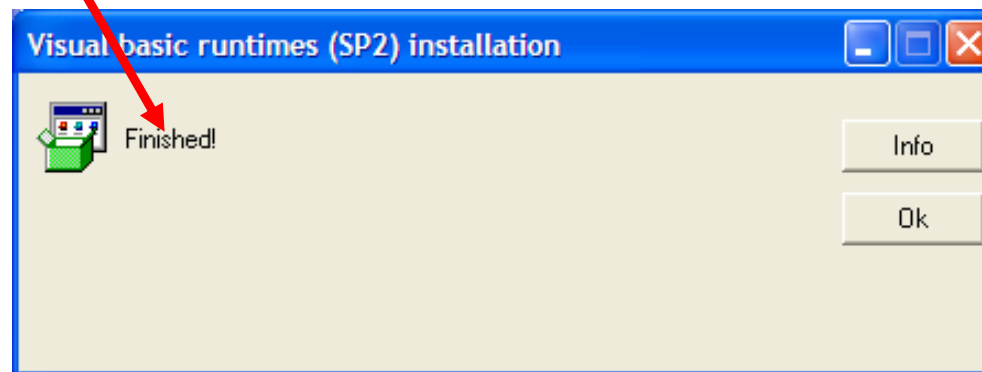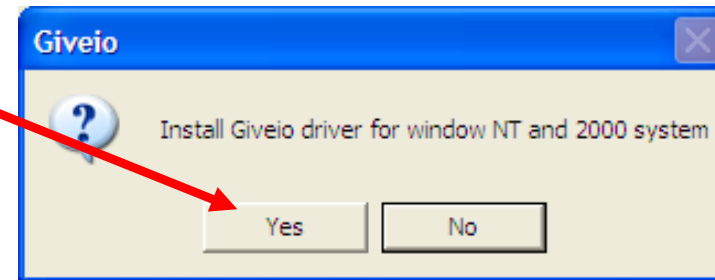

iSensor[®] The Simple Solution for Sensor Integration


ADIS16240 Installation on ADISUSBZ

Installation Steps (continued)


13. Install 240/PCBZ on ADISUSBZ

14. Plug in USB cable


1. Secure 240/PCBZ w/ 2mm screws

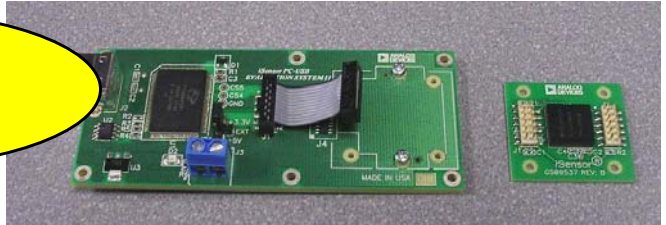



2. Connect ribbon cable

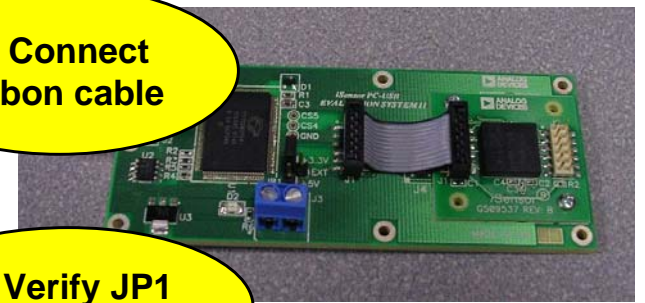

3. Verify JP1 set to +3.3V

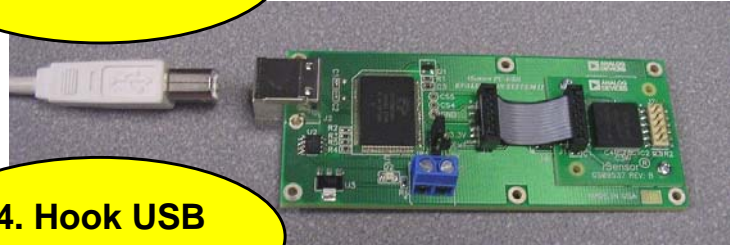

4. Hook USB cable up

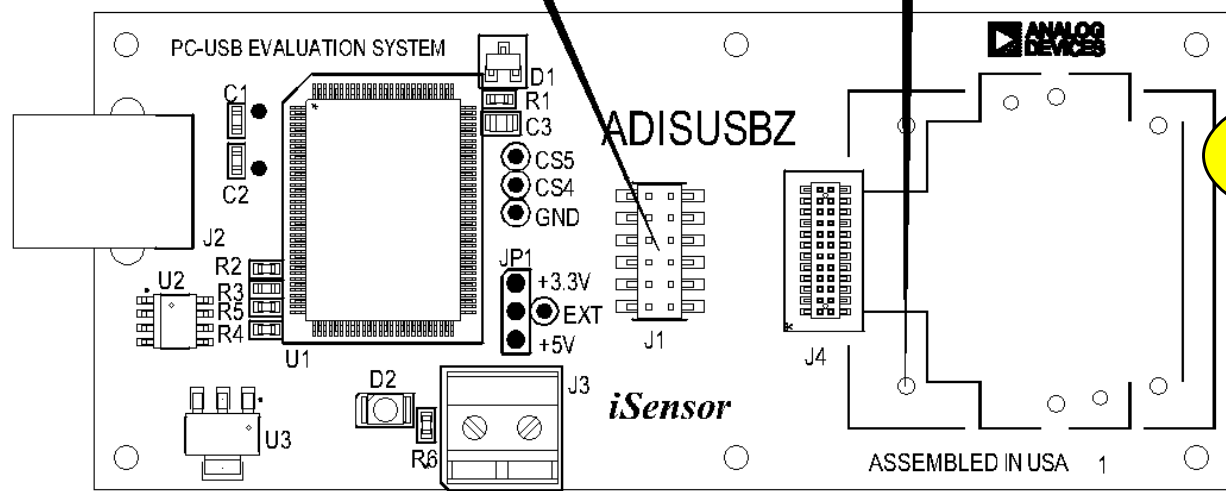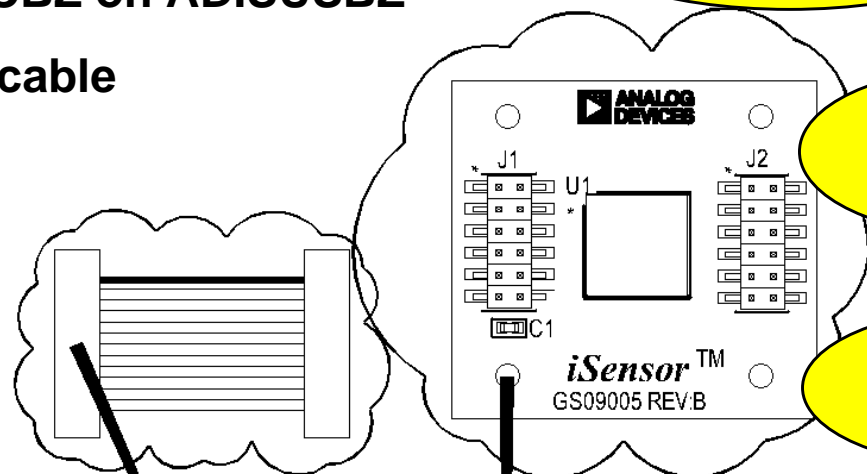



iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Installation Steps (continued)

15. USB Driver screen will pop-up
Click “Next” to start this process

16. Then click on
“Continue Anyway”

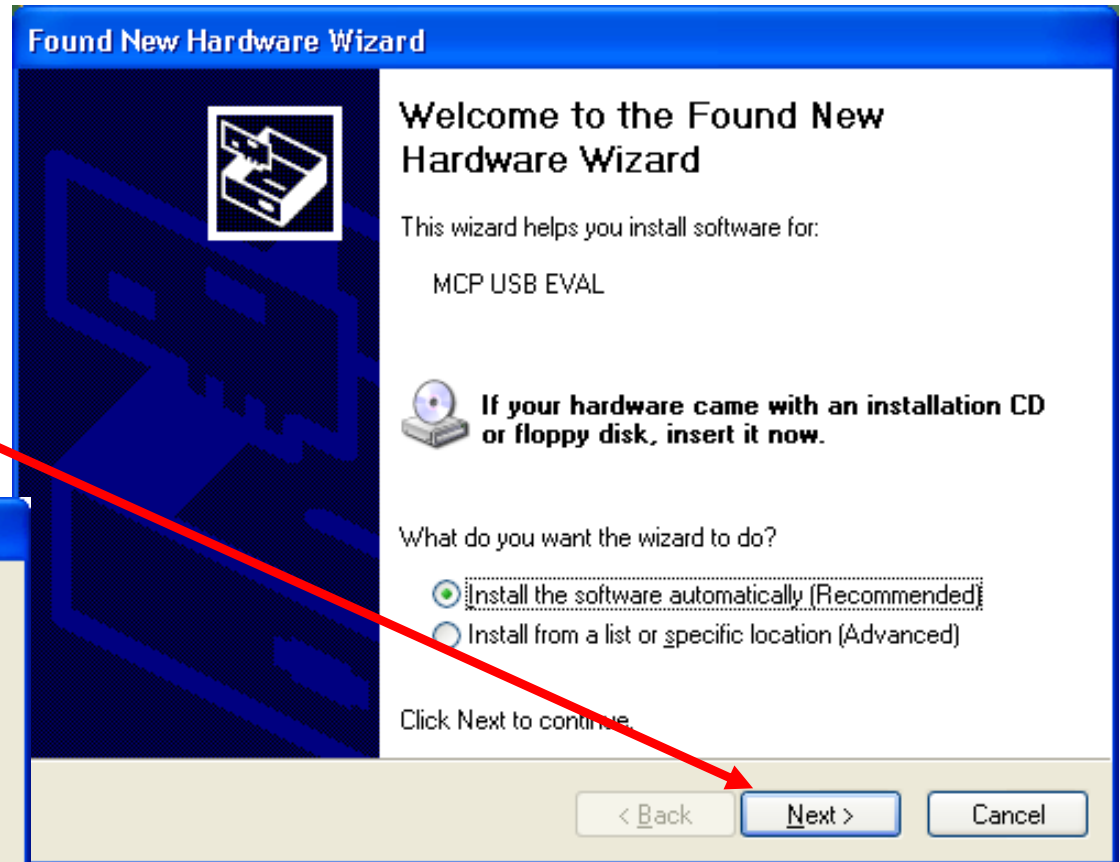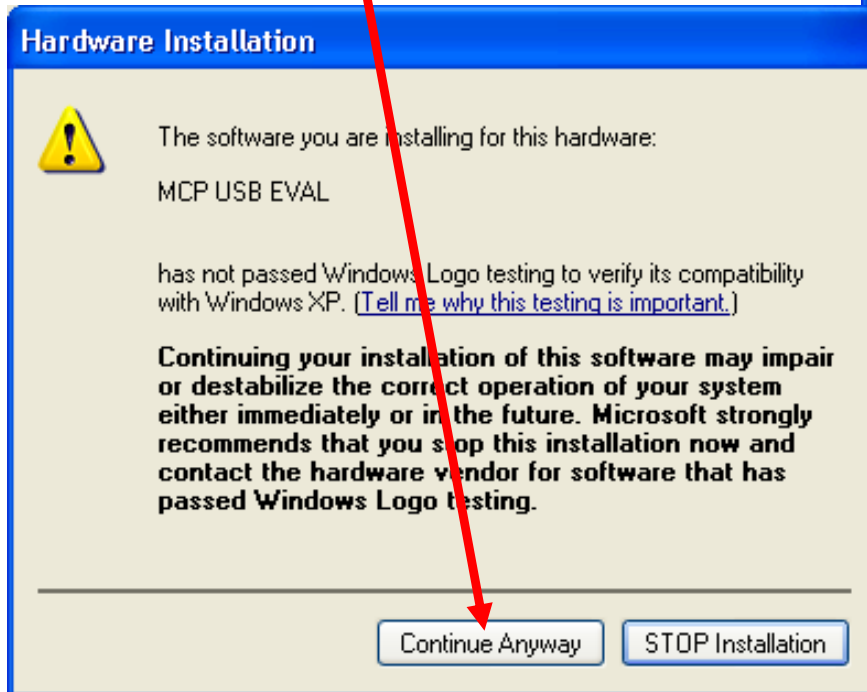

This process will repeat for a second driver file. Just follow the instructions and allow it to go through one more time. After completing this, then the devices is ready for test.

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Screen

The screenshot shows the ADIS16240 Evaluation Software interface. The window title is "Analog Devices ADIS16240 Evaluation Software Rev 3". The menu bar includes "Interface", "Device Configuration", "Datalog", "Registers", and "Exit".

1 (Interface button) and **3** (Device Configuration button) are highlighted in red circles. The "Interface" button is selected, and the "Device Configuration" button is also highlighted.

2 (Graph button) is highlighted in a red circle. The "Graph" button is located next to the "Output Registers" section.

4 (Read button) is highlighted in a red circle. The "Read" button is located below the "Output Registers" section.

5 (Sync to PC time button) is highlighted in a red circle. The "Sync to PC time" button is located in the "Date/Time" section.

6 (Show Buffer button) is highlighted in a red circle. The "Show Buffer" button is located in the "Event Capture" section.

The "Output Registers" section displays the following values:

Register	Value
SUPPLY_OUT (V)	3.294
XACCL_OUT (g)	-0.103
YACCL_OUT (g)	-0.308
ZACCL_OUT (g)	0.925
AUX_ADC (V)	-0.740
TEMP_OUT (C)	24.707
X_PEAK_OUT (g)	0.000
Y_PEAK_OUT (g)	0.000
Z_PEAK_OUT (g)	0.000
XYZ_PEAK_OUT (g)	0.000

The "Data Plot" section shows a graph with the following parameters:

Parameter	Value
Sample	555
Value (g)	5595
Scale(g)	7

The "Status Register" section displays the following status:

Status	Value
Power Supply Low	OK
Power Supply High	OK
Buffer Write Error	OK
SPI Error	OK
Alarm1 Set	OK
Alarm2 Set	OK
Buffer Full	OK
Self Test Fail	OK
Checksum Error	OK

The "Event Capture" section displays the following parameters:

Parameter	Value
Events Capt.	0

The "Date/Time" section displays the following parameters:

Parameter	Value
Read Date	2/12/09
Read Time	16:11

1. Click on "Interface" and select USB, then OK when the pop-up window shows the USB device is connected.
2. Click to enable different accelerometer axes (x,y,z)
3. Device configuration options. Turn on peak tracking (MSC_CTRL option), adjust sample rate, etc.
4. Start on-screen log
5. Sync ADIS16240's time to the current PC time.
6. Capture, Click on Config button and see next page

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

ADIS Capture Configuration

ADIS16240 Event Trigger Configuration

Step #1 - Configure Capture Parameters (CAPT_CFG) 0023

Pre-Trigger Length Equals This Value Times 1/16 of Capt. Buff. Length: 2

Capt_Buff Length: 128

Update CAPT_CFG Register

Step #2 - Set Trigger Source (ALM_CTRL) 3230

Data Source - Buffer #1: X_Acc

Data Source - Buffer #2: Y_Acc

Alarm I/O Line: OutPut Disabled, Active LOW, DIO0

Trigger #1 (TRIG_MAG1) Trigger #2 (TRIG_MAG2)

Both Triggers Enabled Trigger Disabled

Update ALM_CTRL Register

Step #3 - Set Trigger Levels and Polarity (TRIG_MAG) 804E 804E

ALM_MAG1 Polarity: Greater Than, ALM_MAG1 Trigger Level: 4.0092

ALM_MAG2 Polarity: Greater Than, ALM_MAG2 Trigger Level: 4.0092

Update TRIG_MAG1/2 Registers

Trigger Configuration Example:

Step 1 - Set Pre-trigger to zero then set Capt_Buff Length to 1024 and press the update Capt_CFG Register button

Step 2 - Set Data Source # 1 to Xacc and select Trigger #1 button, Press the Update ALM_CTRL Register button

Step 3 - Set Trigger Level to 12 then set Polarity to greater than. Press the Update TRIG_MAG 1/2 Registers button

Update Flash

1. Set number of captures vs. capture length and pre-capture length. Remember to click on the update button!
2. Set trigger source. Suggest both triggers. Remember to click on the Update button!
3. Set trigger levels and polarity, then hit the Update button.
4. Updating the flash makes the changes non-volatile.
5. Click on the red X to close and return to the main menu

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation

Output Registers

SUPPLY_OUT (V)	3.314	Graph
XACCL_OUT (g)	-0.154	<input checked="" type="checkbox"/>
YACCL_OUT (g)	-1.285	<input checked="" type="checkbox"/>
ZACCL_OUT (g)	0.000	<input checked="" type="checkbox"/>
AUX_ADC (V)	-0.751	
TEMP_OUT (C)	24.951	
X_PEAK_OUT (g)	0.000	
Y_PEAK_OUT (g)	0.000	
Z_PEAK_OUT (g)	0.000	
XYZ_PEAK_OUT (g)	0.000	

Reset Pk

Loop STOP

Loop Delay msec 5

Status Register

Read Status	Clear
Power Supply Low	OK
Power Supply High	OK
Buffer Write Error	OK
SPI Error	Alarm
Alarm1 Set	Alarm
Alarm2 Set	Alarm
Buffer Full	OK
Self Test Fail	OK
Checksum Error	OK

Data Plot

Sample 0

Value (g) 3225

Scale(g) 7

Sample Number 0 85 175 260

Event Capture

Config Events Capt. 7

Show Buffer Clear Capt.

Self Test

OFF ON

Date/Time

Click on Run and start tapping ADISUSBZ on the desk, then click stop, then "Show Buffer"

Note that the event counter is increasing with each time the ADISUSBZ tap exceeds the pre-set shock level

iSensor[®] The Simple Solution for Sensor Integration

ADIS16240 Demonstration Software Installation



1. Place the mouse pointer over different spikes to see the Event header in the upper right hand corner change.
2. Slider bar in lower left hand corner will move event log as desired.



◆ CONTACTS:

- **MARKETING:** Bob Scannell, 1-336-605-4031
- **APPLICATIONS ENGINEER:** Mark Looney, 1-336-605-4139

MORE INFORMATION:

- www.analog.com/isensor
- **New Brochure:** *i*Sensor Motion Sensor Products
 - ◆ BR067755-2.5-4/08(A)
- **CD's with Product Info and Eval SW**

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru