

Web Site: www.parallax.com Forums: forums.parallax.com Sales: sales@parallax.com Technical: support@parallax.com Office: (916) 624-8333 Fax: (916) 624-8003 Sales: (888) 512-1024 Tech Support: (888) 997-8267

Single Relay Board (#27115)

The Single Relay Board can be used to turn lights, fans and other devices on/off while keeping them isolated from your microcontroller. The Single Relay Board allows you to control high-power devices (up to 10 A) via the on-board relay. Control of the relay is provided via a 1x3 header – friendly to servo cables and convenient connection to many development boards, such as the Board of Education, Propeller Board of Education, Professional Development Board and Propeller Professional Development Board.



Features

- Control high-power devices up to 10 A
- Provides isolation between microcontroller and device being controlled
- Screw terminals for relay connections
- 3-pin servo-style header for power/signal interface
- LED indicator

Specifications

- Power Requirements: 5 VDC @ ~85 mA (Relay Power), 3.3-5 VDC (input signal)
- Communication Interface: Logic High/Low (3.3-5 VDC)
- Operating temperature: -13 to +158 °F (-25 to +70 °C)
- Dimensions: 1.57 x 1.06 x 0.71 in (4.0 x 2.7 x 1.8 cm)

Application Ideas

- 120 VAC brushless fan/lighting control
- 12 VDC automotive applications

Precautions

As with any device capable of switching high voltage, precautions should always be taken to avoid damage and/or injury. The following precautions are recommended in addition to any precautions by the manufacturer of any equipment connected to this device.

- Always disconnect main power when connecting circuits to the Single Relay Board.
- When using high-power circuits, mount the Single Relay Board inside a suitable enclosure or electrical panel using standoffs. The board should not be able to move.
- Secure all electrical connections to the board so they cannot move; provide strain relief for any wires extending outside the enclosure.
- Fuse any incoming voltage rails that are to be switched by the relay, prior to entering the Single Relay Board terminal block.
- Always be sure any incoming voltage rails are powered off prior to connecting them to the Single Relay Board.
- Observe Max Switching Current! 10 A @ 250 VAC / 30 VDC.
- While mechanical relays provide electrical isolation from control circuits, it is possible for EMF generated by high-power devices to affect the control circuits. This is especially true if the control wires and/or power leads are longer than 6 inches (~15 cm). Always try to keep wires as short as possible and avoid running high-power leads near or across control lines.

Quick-Start Circuit

The Single Relay Board has an on-board transistor that switches the relay coil on/off. Diode protection of back-EMF is provided via an on-board diode. Essentially you're providing a common ground, relay supply voltage of 5 VDC and a signal input to activate the relay via the transistor.

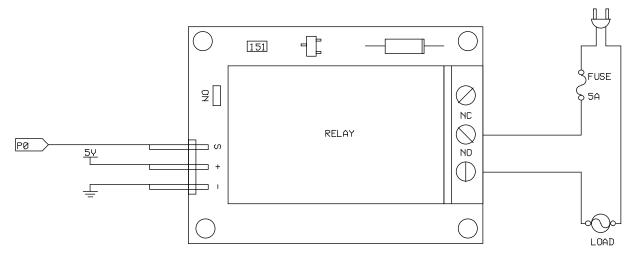


Figure 1: Connection Example

In the example in Figure 1 the relay is switching a 120 VAC load, such as a lamp or brushless fan. Notice the fuse in the example is 5 A, not 10 A. The fuse should be chosen according to the load, not the max current of the relay. You want the fuse to blow when the device draws more current than it is supposed to. Notice on the input that the "S" input connects to P0 of a BASIC Stamp Module, Propeller chip or any I/O pin from any 3.3 V or 5 V microcontroller.

The order of the 3-pin header makes it compatible with the servo header connections on many Parallax development boards. You could also use pluggable wires to makes these connections.

Resources and Downloads

Check for the latest version of this document from the Single Relay Board product page. Go to www.parallax.com and search 27115.

Pin Definitions and Ratings

Pin	Name	Туре	Function
-	Ground	G	Signal/Coil Ground
+	Supply	Р	Relay Coil Supply
S	Signal	I	Signal Input

Pin Type: P = Power, G = Ground, I = Input, O = Output

Specifications

Symbol	Quantity	Minimum	Typical	Maximum	Units
S	Signal Input Voltage	3.3	5	_	V
+	Relay Supply Voltage	_	5	_	V
_	Relay Supply Current	0	85	_	mA
_	Max Switching Current	_		10	Α

BASIC Stamp® Example Code

This program uses the BASIC Stamp Editor software. The software is a free download from www.parallax.com/basicstampsoftware.

```
' 27115-BS2SourceCode.bs2
' Toggles relay on/off every second
' {$STAMP BS2}
' {$PBASIC 2.5}

RLY1 PIN 15

DO
HIGH RLY1
PAUSE 1000
LOW RLY1
PAUSE 1000
LOOP
```

Propeller[™] P8X32A Example Code

Note: This application uses the 27115-P8X32ASourceCode.spin object. It toggles the relay on/off every second. The Propeller Tool is available from the Downloads link at www.parallax.com/Propeller.

```
{{27115-P8X32ASourceCode.spin
Toggles relay on/off every second
}}

CON
   _clkmode = xtal1 + pll16x
   _xinfreq = 5_000_000

RLY = 14

PUB Toggle
   dira[RLY]~~
   repeat
       !outa[RLY]
       waitcnt(clkfreq + cnt)
```



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru