

LTC4099EPDC: High Efficiency I²C Controlled USB

Power Manager/Charger with Overvoltage Protection

DESCRIPTION

Demonstration Circuit 1396A is a high efficiency USB Power/Li-Ion battery manager plus a HV regulator battery tracking controller. The LTC4099EPDC is available in a 20-pin (3mm × 4mm × 0.55mm) UTQFN surface mount package.

 , LTC, LTM, LT, Burst Mode, OPTI-LOOP, Over-The-Top and PolyPhase are registered trademarks of Linear Technology Corporation. Adaptive Power, C-Load, DirectSense, Easy Drive, FilterCAD, Hot Swap, LinearView, µModule, Micropower SwitcherCAD, Multimode Dimming, No Latency ΔΣ, No Latency Delta-Sigma, No R_{SENSE}, Operational Filter, PanelProtect, PowerPath, PowerSOT, SmartStart, SoftSpan, Stage Shedding, SwitcherCAD, ThinSOT, UltraFast and VLDO are trademarks of Linear Technology Corporation. Other product names may be trademarks of the companies that manufacture the products.

PERFORMANCE SUMMARY Specifications are at T_A = 25°C

| SYMBOL | PARAMETER | CONDITIONS | MIN | TYP | MAX | UNITS |
|------------------|---------------------------------------|----------------------------------|------|-----|-----|-------|
| V _{USB} | VUSB Input Voltage Range | Input disabled from 6V–30V | 4.35 | | 5.5 | V |
| V _{OUT} | V _{OUT} Output Voltage Range | Range is mode and load dependant | 3.5 | | 5.5 | V |
| V _{BAT} | Output Float Voltage | Constant voltage mode | | 4.2 | | V |
| I _{BAT} | Output Charge Current | Constant current mode | | 0.5 | 1 | A |

SOFTWARE GUI

The DC1396A Demo Circuit can be controlled from a software GUI. This software GUI is necessary to control many functions of the LTC4099. In addition, a DC590 board is necessary to connect the DC1396A to the PC. For proper testing of the Production Dem O Circuits, the Beta version or the released version of the QuickEval installation program should be used to load the DC1396 GUI. This is a screen shot of the GUI:

The GUI, along with R8 and R9, allows complete configuration of the functionality of the LTC4099. The input current limit, charge current, float voltage, C/x threshold, thermal regulation temperature, and safety timer period can be programmed. The battery charger and battery conditioner can be turned on and off.

The internal status word can be read back, and the conditions which cause an interrupt can be set.

The GUI will remember most functions from session to session, and can be set to defaults with a single button push.

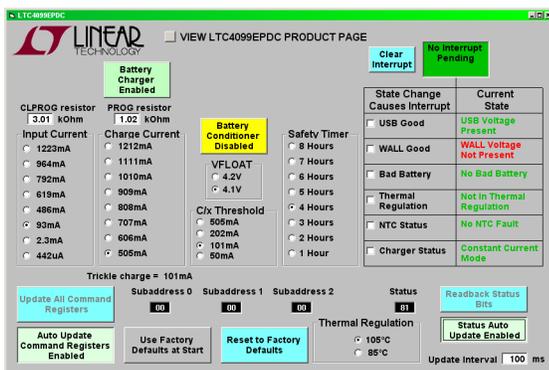


Figure 1: LTC4099 GUI screenshot

Input Current Limit

The input current limit can be set to one of eight levels, determined by the CLPROG (R9) resistor. The value of the eight levels is computed dynamically if the resistor value is edited. The resistor value is remembered, if the save values button is active. The value of the CLPROG resistor is in kΩ.

Charge current

The battery charge current can be set to one of eight levels determined by the PROG (R8) resistor. The of

LTC4099EPDC

the eight levels is computed dynamically if the resistor value is edited. The resistor value is remembered, if the save values button is active. The value of the PROG resistor is in k Ω .

Interrupt generation

The conditions that cause an interrupt can be controlled. Please note that interrupts are generated on any change in the enabled conditions.

For example, if “USB Good” is enabled, then an interrupt will be generated for both USB voltage becoming valid and for USB voltage becoming invalid.

Status readback

The status readback can be set to readback automatically at the interval in the “Update Interval” input box. This defaults to 100ms.

Register display

The command registers values sent over the I2C are displayed, as well as the currently readback status values. This is a programming aid.

QUICK START PROCEDURE

Using short twisted pair leads for any power connections, with all loads and power supplies off, refer to Figures 2 & 3 for the proper measurement and equipment setup.

A companion HV Buck demo board is required for this check out procedure. The DC1394 (LT3480) board is recommended, and will be used for the following procedure. Please refer to the DC1394 Quick Start Guide for further information.


Please note that the following procedure assumes that the default values of the GUI, R8, and R9.

Follow the procedure below:

1. Set PS1 to 5V, and PS4 to 3.6V. Start LTC4099 GUI. Observe VOUT (VM5), I (VUSB) (AM1), V(CLPROG) (VM4) and V(PROG) (VM7). The LTC4099 defaults to 100mA input current limit and 500mA battery charger current. Since the battery current exceeds the current available from the USB port, VOUT collapses to nearly the battery voltage of 3.6V.
2. Use the GUI to set the input current limit to 1000mA. Observe VOUT (VM5), I (VUSB) (AM1), V(CLPROG) (VM4) and V(PROG) (VM7). The input current limit is now greater than the battery charge current, so VOUT rises to V(BAT) + 0.3V, or 3.9V.
3. Use the GUI to set the input current limit to 1260mA. Set Ld1 to 1A. Observe VOUT (VM5), I (VUSB) (AM1), V(CLPROG) (VM4) and V(PROG) (VM7). The input current limit is sufficient to supply 1.5 amps, Ld1 current plus battery charger current of 0.5A, and VOUT is 3.9V. 1260mA input current limit is sufficient due to the transformer action of the VOUT regulator, which exchanges output voltage for output current.
4. Set Ld1 to 0, and use the GUI to set charge current to 900mA. Observe VOUT (VM5), I (VUSB) (AM1), V(CLPROG) (VM4) and V(PROG) (VM7).
5. Set DC1395 “WALL” jumper (JP3) to “HVBUCK”, “COMP” jumper (JP2) to “EXT”, and “SYNC” jumper (JP1) to “PWM/SYNC”. Turn on PS2 and set to 8V. Observe VOUT (VM5), I (VUSB) (AM1) and V(PROG) (VM7). The HV Buck regulator on the LT3480 board is now powering VOUT. Availability of this voltage is detected on the WALL pin, and this shuts down the VOUT buck regulator on the LTC4099, while enabling the VC pin to control the output voltage on VOUT. This preserves the Bat-Track feature, even when using an external HV Buck regulator.
6. Turn on PS2 and set to 32V. Observe VOUT (VM5), I (VUSB) (AM1) and V(PROG) (VM7).
7. Use to automatic readback of status, and to assert an interrupt on change of “WALL” input status. Turn off PS2. Did /IRQ LED light? Does GUI show interrupt? Clear interrupt in GUI. The interrupt generator has been set to generate an interrupt on any change on the validity of the voltage present on the WALL pin.
8. Move “NTC” jumper (JP1) to EXT. Did GUI show “Battery too cold”? Did /IRQ LED light? The status byte is reporting that the NTC temperature measurement indicated that battery was too cold. However, no interrupt was generated because the NTC interrupt wasn't enabled.
9. Set PS1 to 0V, and Ld1 to 0A. Observe VOUT (VM5) and V (VOUT, BAT) (VM5 – VM6). The Ideal Diode is on and powers VOUT from V (BAT).
10. Set Ld1 to 1A. Observe VOUT (VM5) and V (VOUT, BAT) (VM5-VM6). Set Ld1 to 0A.
11. Increase PS4, until GUI status indicates charger is in constant voltage mode. Observe V (BAT) (VM6).

LTC4099EPDC

12. Decrease PS4, until GUI indicates charger is in constant current mode. Observe V (BAT) (VM6).
13. Use GUI to set float voltage to 4.2V. Increase PS4, until GUI status indicates charger in constant voltage mode. Observe V (BAT) (VM6).
14. Decrease PS4, until GUI indicates charger is in constant current mode. Observe V (BAT) (VM6).
15. Set PS3 to 5V, set WALL (DC1394, JP3) to “5V ADAPTOR” and PS3 to 5V. Observe VOUT (VM6) and V (PROG) (VM5).

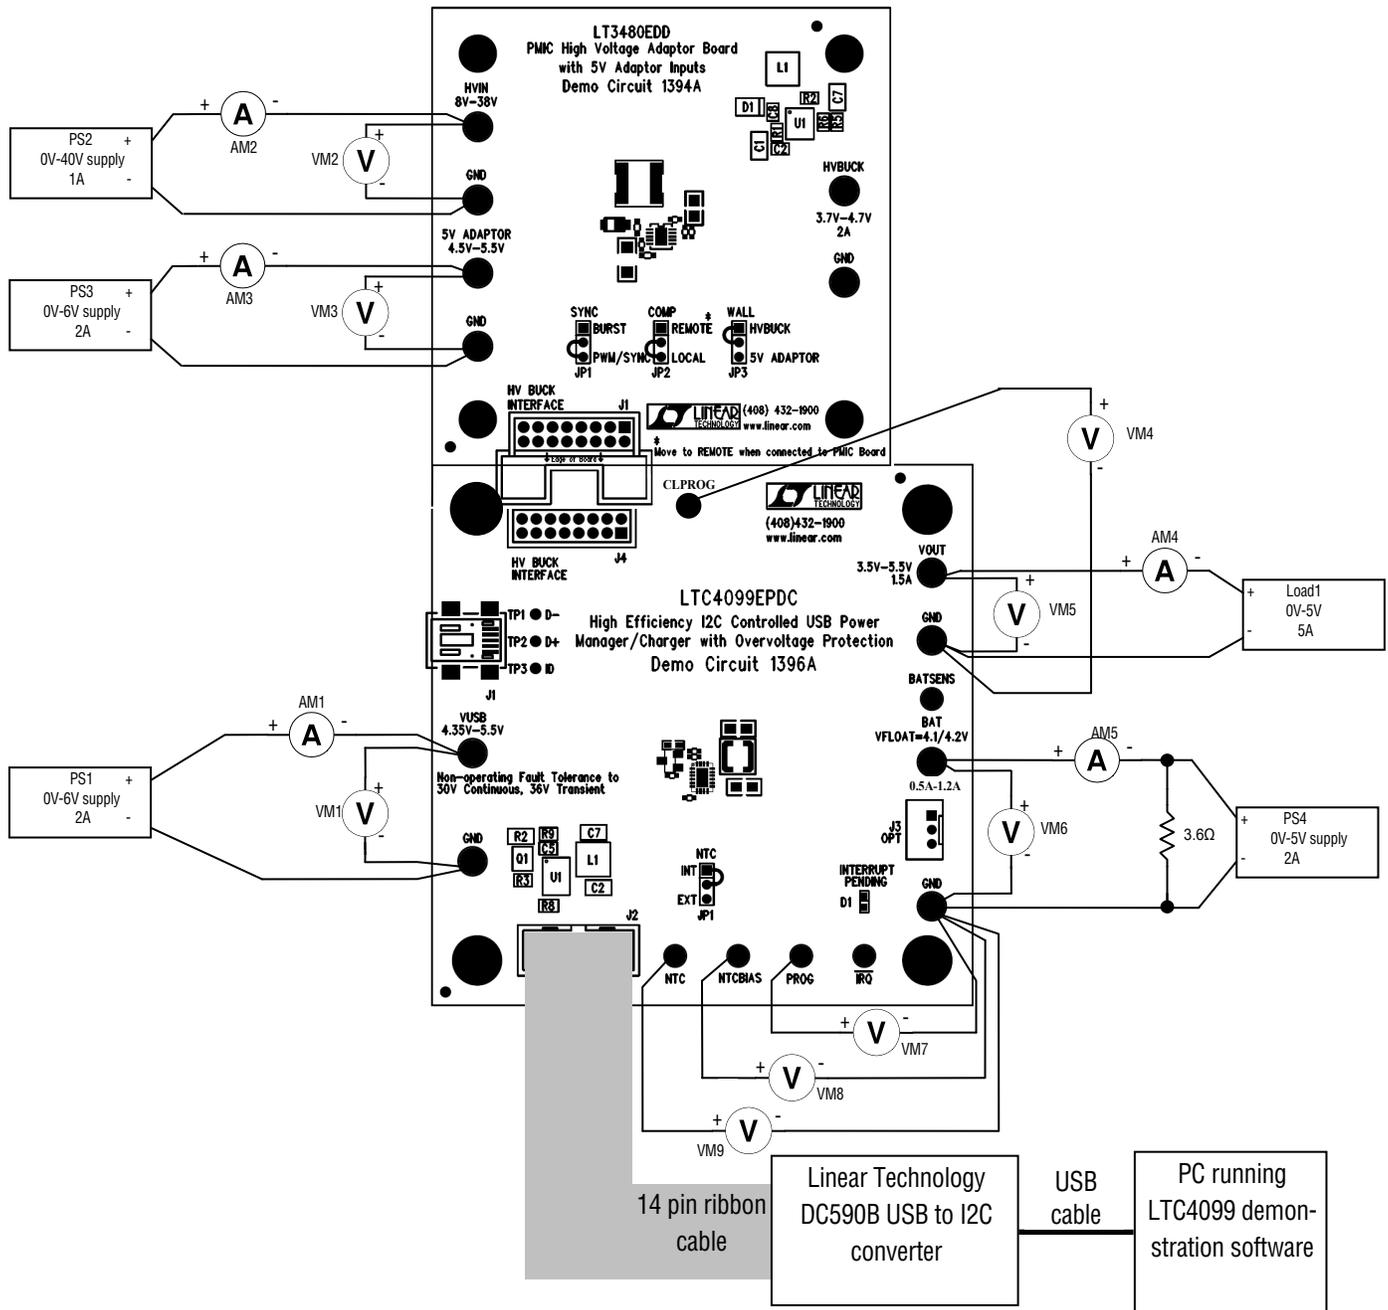

Note: All connections from equipment should be Kelvin connected directly to the Board PINS which they are connected to on this diagram and any input, or output, leads should be twisted pair

Figure 2. Proper Measurement Equipment Setup for DC1396A

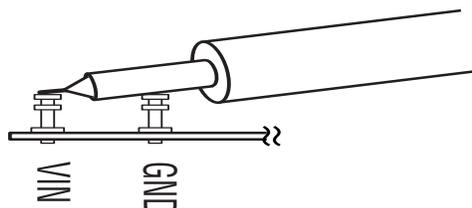


Figure 3. Measuring Input or Output Ripple

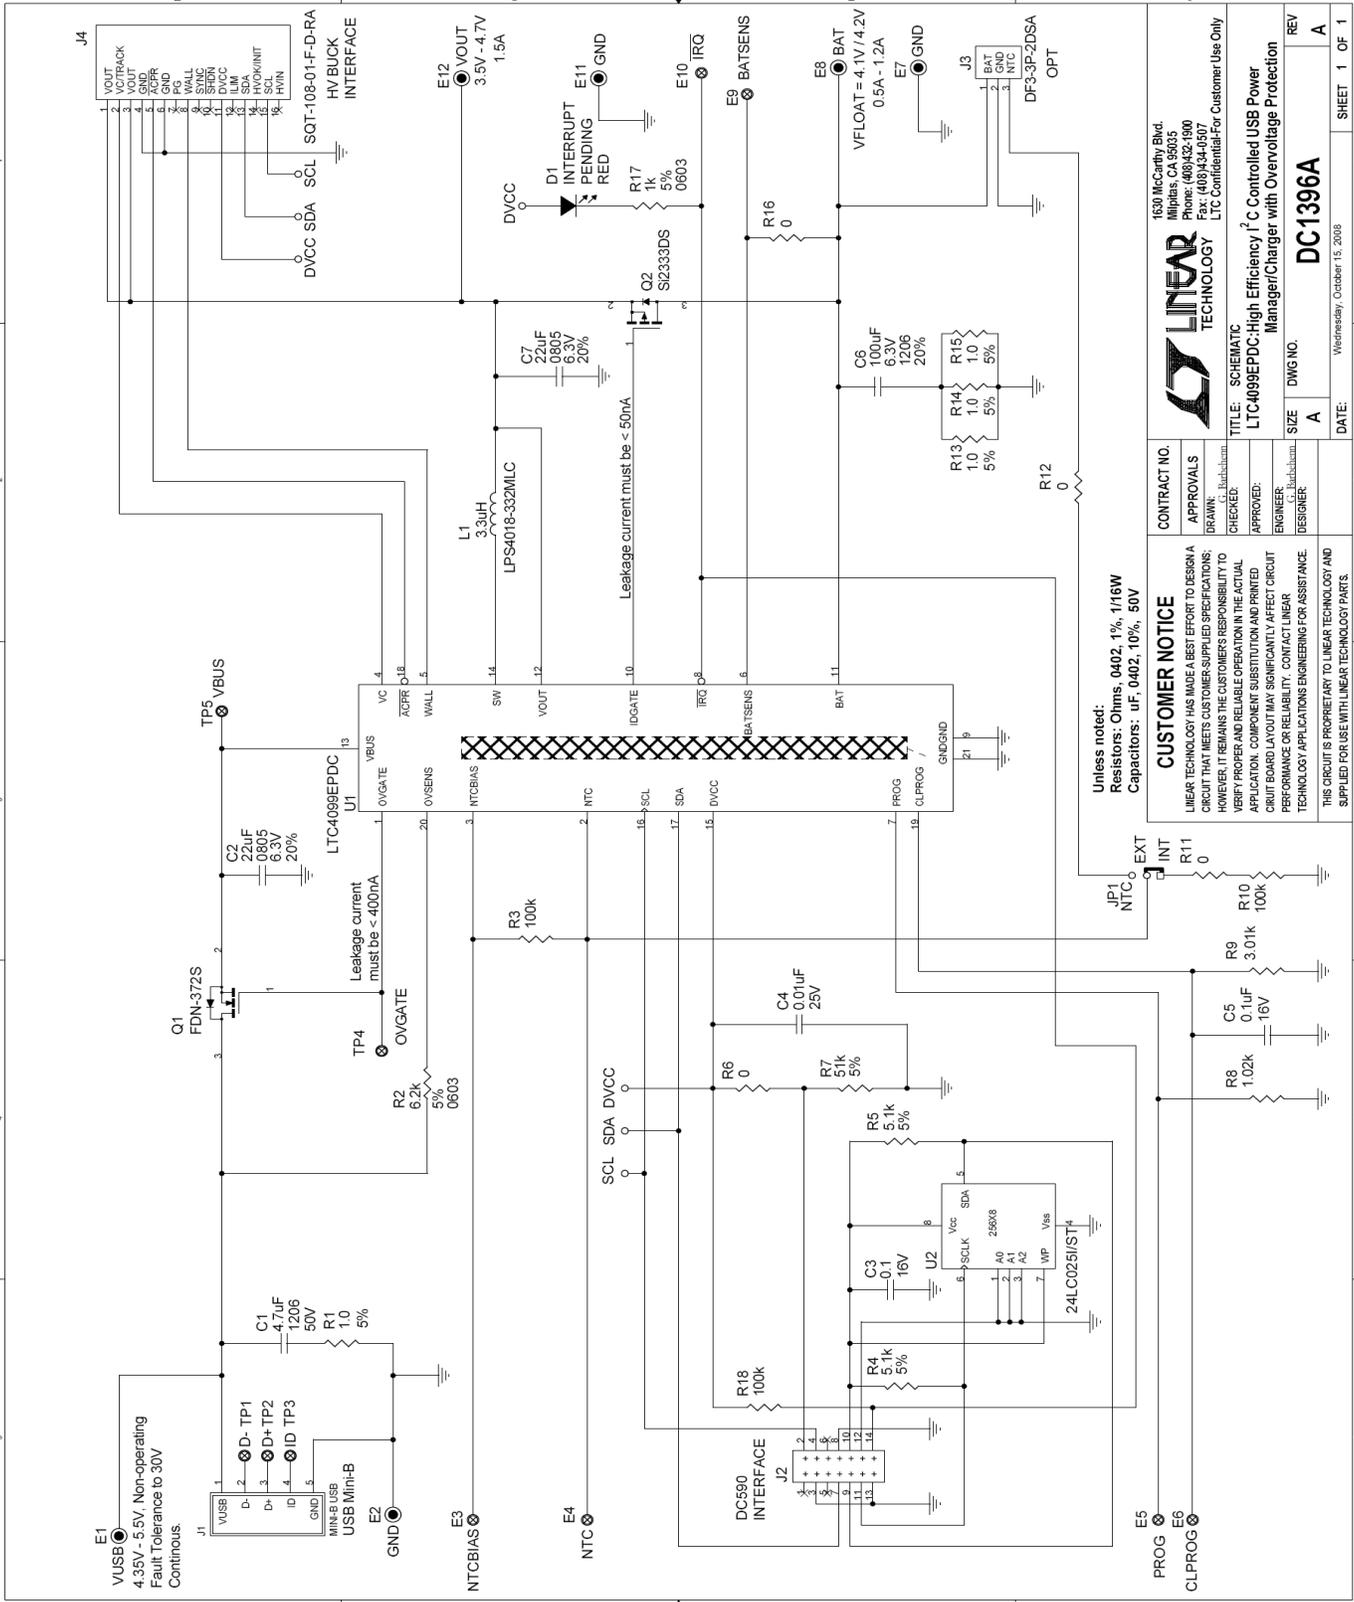


Figure 4. DC1396A Schematic

| | Qty | Reference | Part Description | Manufacture / Part # |
|--|-----|---------------------|--|----------------------------|
| REQUIRED CIRCUIT COMPONENTS: | | | | |
| 1 | 2 | C2,C7 | CAP, CHIP, X5R, 22 μ F, \pm 20%, 6.3V, 0805 | TAIYO-YUDEN, JMK212BJ226MG |
| 2 | 1 | C5 | CAP, CHIP, X7R, 0.1 μ F, \pm 10%, 16V, 0402 | MURATA, GRM155R71C104KA88 |
| 3 | 1 | L1 | IND, SMT, 3.3 μ H, 2.2A, \pm 20% | COILCRAFT, LPS4018-332MLC |
| 4 | 1 | Q1 | MOSFET, 30V, 50m Ω , 2.6A, SuperSOT-3 | FAIRCHILD, FDN-372S |
| 5 | 1 | R2 | RES, CHIP, 6.2k Ω , \pm 5%, 1/10W, 0603 | VISHAY, CRCW06036K20JNED |
| 6 | 1 | R8 | RES, CHIP, 1.02k Ω , \pm 1%, 1/16W, 0402 | VISHAY, CRCW04021K02FKED |
| 7 | 1 | R9 | RES, CHIP, 3.01k Ω , \pm 1%, 1/16W, 0402 | VISHAY, CRCW04023K01FKED |
| 8 | 1 | U1 | IC, SMT, High Efficiency I2C Controlled USB Power Manager/Charger with Over Voltage Protection | LINEAR TECH., LTC4099EPDC |
| ADDITIONAL DEMO BOARD CIRCUIT COMPONENTS: | | | | |
| 1 | 1 | C1 | CAP, CHIP, X5R, 4.7 μ F, \pm 10%, 50V, 1206 | MURATA, GRM31CR71H475KA12L |
| 2 | 1 | C3 | CAP, CHIP, X7R, 0.1 μ F, \pm 10%, 16V, 0402 | MURATA, GRM155R71C104KA88 |
| 3 | 1 | C4 | CAP, CHIP, X7R, 0.01 μ F, \pm 10%, 25V, 0402 | VISHAY, VJ0402Y103KXXA |
| 4 | 1 | C6 | CAP, CHIP, X5R, 100 μ F, \pm 20%, 6.3V, 1206 | MURATA, GRM31CR60J107ME39L |
| 5 | 1 | D1 | DIODE, LED, RED, 0603 | PANASONIC, LNJ236W82RA |
| 6 | 1 | Q2 | MOSFET, -12V, 35m Ω , -5.3A, SOT-23 | VISHAY, Si2333DS |
| 7 | 4 | R1,R13,R14,R15 | RES, CHIP, 1.0 Ω , \pm 5%, 1/16W, 0402 | VISHAY, CRCW04021R00JNED |
| 8 | 3 | R3,R10,R18 | RES, CHIP, 100k Ω , \pm 1%, 1/16W, 0402 | VISHAY, CRCW0402100KFKED |
| 9 | 2 | R4,R5 | RES, CHIP, 5.1k Ω , \pm 5%, 1/16W, 0402 | VISHAY, CRCW04025K10JNED |
| 10 | 4 | R6,R11,R12,R16 | RES, CHIP, 0 Ω jumper, 1/16W, 0402 | VISHAY, CRCW04020000Z0ED |
| 11 | 1 | R7 | RES, CHIP, 51k Ω , \pm 5%, 1/16W, 0402 | VISHAY, CRCW040251K0JNED |
| 12 | 1 | R17 | RES, CHIP, 1k Ω , \pm 5%, 1/10W, 0603 | VISHAY, CRCW06031K00JNED |
| 13 | 1 | U2 | I2C EEPROM | MICROCHIP, 24LC025-I/ST |
| HARDWARE FOR DEMO BOARD ONLY: | | | | |
| 1 | 6 | E1,E2,E7,E8,E11,E12 | Turret, 0.09" | MILL-MAX, 2501-2 |
| 2 | 6 | E3,E4,E5,E6,E9,E10 | Turret, 0.061" | MILL-MAX, 2308-2 |
| 3 | 1 | J1 | CONN, USB MINI-B | TYCO, 1734035-2 |
| 4 | 1 | J2 | CONN, I2C header | MOLEX, 87831-1420 |
| 5 | 0 | J3-OPT | CONN, Battery | HIROSE, DF3-3P-2DSA |
| 6 | 1 | J4 | CONN, HV interface | SAMTEC, SQT-108-01-F-D-RA |
| 7 | 1 | JP1 | 3 Pin Jumper, 2mm | SAMTEC, TMM-103-02-L-S |
| 8 | 1 | JP1 | SHUNT 2mm | SAMTEC, 2SN-BK-G |
| 9 | 4 | | STAND-OFF, NYLON 0.375" tall (SNAP ON) | KEYSTONE, 8832 (SNAP ON) |

Figure 5. DC1396A BOM

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкуренспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru