

# Multi-channel Power Controller G3ZA

CSM\_G3ZA\_DS\_E\_3\_1



## Optimum Cycle Control for High-precision Control with Low Noise

- Smaller than a Normal Power Controller.
- Enables low-noise power control in combination with zero-cross SSRs. (See note.)
- One Controller can control up to 8 SSRs.
- RS-485 communications to set manipulated variables and heater burnout detection. The Smart FB Library for the G3ZA can also be used.
- CE Marking

### Main Upgraded Functions

- Soft-start function added for lamp heaters.
- Three-phase optimum cycle control added for three-phase heaters.
- Combining with special CT for 150-A current detection.

**Note:** The G3ZA must be used in combination with an SSR without the zero cross function when the soft-start function is used.









Version Upgrade for Improved Functionality (V2)

⚠ Refer to *Safety Precautions* on page 9.

## Features

### Comparison between the G3ZA and Normal Power Controllers
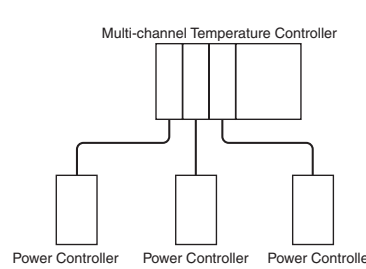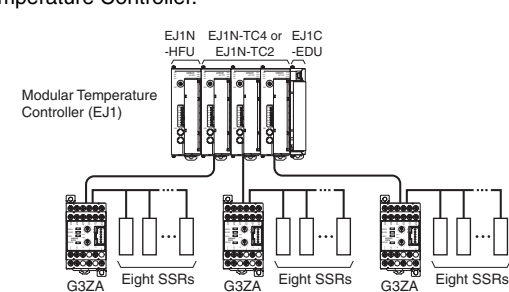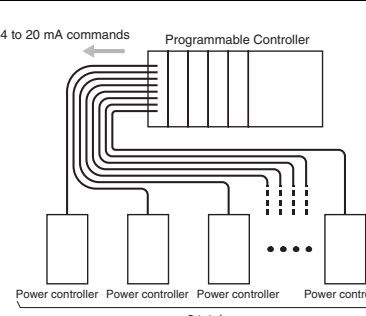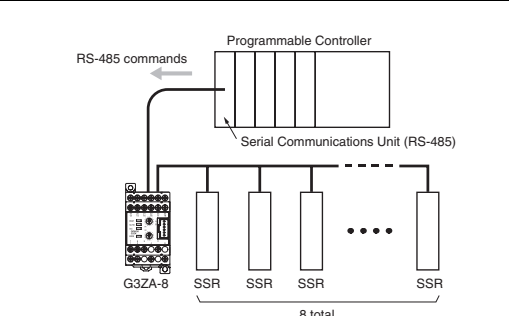
| Item           | Normal Power Controllers                                                                                                                                                                                                                                                       | G3ZA                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connections    | <b>Power Controllers Controlled Using Current Output of 4 to 20 mA</b>                                                                                                                      | <b>Control Using Communications from a Host Device</b> <ul style="list-style-type: none"> <li>• Direct connection is possible using an EJ1 Modular Temperature Controller.</li> </ul>                                                                                                                                        |
|                |                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                              |
| Control method | <b>Phase Control</b> <ul style="list-style-type: none"> <li>• Response is fast and high-precision temperature control is possible.</li> <li>• Harmonics and noise are problems.</li> </ul>  | <b>Optimum Cycle Control (High-precision Zero Cross Control)</b> <ul style="list-style-type: none"> <li>• Outputs are turned ON and OFF each half cycle.</li> <li>• Zero-cross control is performed.</li> <li>• Noise is suppressed while achieving high-speed response with high-precision temperature control.</li> </ul>  |

# Model Number Structure

## ■ Model Number Legend

G3ZA-           -   -  

1   2   3   4   5   6   7

| No. | Meaning                  | Code | Specifications        |
|-----|--------------------------|------|-----------------------|
| 1   | No. of control points    | 4    | 4 channels            |
|     |                          | 8    | 8 channels            |
| 2   | Control method           | None | Optimum cycle control |
| 3   | Heater burnout detection | H    | Yes                   |
|     |                          | A    | None                  |

| No. | Meaning                       | Code | Specifications                |
|-----|-------------------------------|------|-------------------------------|
| 4   | Load power supply voltage     | 2    | 100 to 240 VAC                |
|     |                               | 4    | 400 to 480 VAC                |
| 5   | Communications specifications | 03   | RS-485                        |
| 6   | Communications protocol       | FLK  | CompoWay/F                    |
| 7   | International standards       | UTU  | Approved by TÜV, UL, and CSA. |

## Ordering Information

### ■ List of Models

| Name                           | Number of control channels | Heater burnout detection | Load power supply voltage | Model              |
|--------------------------------|----------------------------|--------------------------|---------------------------|--------------------|
| Multi-channel Power Controller | 4                          | Supported                | 100 to 240 VAC            | G3ZA-4H203-FLK-UTU |
|                                |                            |                          | 400 to 480 VAC            | G3ZA-4H403-FLK-UTU |
|                                | 8                          | Not supported            | 100 to 240 VAC            | G3ZA-8A203-FLK-UTU |
|                                |                            |                          | 400 to 480 VAC            | G3ZA-8A403-FLK-UTU |

**Note:** When using the heater burnout detection function, CTs must be ordered separately.

### Upgraded Functions

Refer to page 7 for details. Upgraded functions are marked with "V2".

### ■ Accessories (Order Separately)

| Name                     | Hole diameter | Detection current | Model        |
|--------------------------|---------------|-------------------|--------------|
| Current Transformer (CT) | 5.8 dia.      | 0 to 50 A         | E54-CT1      |
|                          | 12.0 dia.     | 0 to 50 A         | E54-CT3      |
|                          | 30.0 dia.     | 0 to 150 A        | G3ZA-CT-150L |

| Name                  | Model    |
|-----------------------|----------|
| DIN Track             | PFP-100N |
|                       | PFP-50N  |
| End Plates (stoppers) | PFP-M    |

Be sure to read the precautions for correct use and other precautions in the following user's manual before using the Power Controller.  
G3ZA Multi-channel Power Controller User's Manual (Cat. No. Z200)

# Specifications

## ■ Ratings

| Item                                    | Load power supply voltage range                                                                                                                           | 100 to 240 VAC | 400 to 480 VAC |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|----------------|
| Power supply voltage                    | 100 to 240 VAC (50/60 Hz)                                                                                                                                 |                |                |
| Operating voltage range                 | 85 to 264 VAC                                                                                                                                             |                |                |
| Power consumption                       | 16 VA max.                                                                                                                                                |                |                |
| Load power supply voltage               | 100 to 240 VAC                                                                                                                                            | 400 to 480 VAC |                |
| Load power supply voltage range         | 75 to 264 VAC                                                                                                                                             | 340 to 528 VAC |                |
| Manipulated variable input              | 0.0% to 100.0% (via RS-485 communications)                                                                                                                |                |                |
| Current transformer input (See note 1.) | Single-phase AC, 0 to 50 A (primary current of CT)<br>Single-phase AC, 0 to 150 A (primary current of CT) <b>V2</b>                                       |                |                |
| Trigger output                          | One voltage output for each channel, 12 VDC ±15%, Max. load current: 21 mA (with built-in short-circuit protection circuit)                               |                |                |
| Alarm output                            | NPN open collector, one output<br>Max. applicable voltage: 30 VDC, Max. load current: 50 mA<br>Residual voltage: 1.5 V max., Leakage current: 0.4 mA max. |                |                |
| Indications                             | LED indicators                                                                                                                                            |                |                |
| Control method                          | Optimum cycle control<br>Soft-start optimum cycle control (See note 2.) <b>V2</b><br>Three-phase optimum cycle control <b>V2</b>                          |                |                |
| Ambient operating temperature           | −10 to 55°C (with no icing or condensation)                                                                                                               |                |                |
| Ambient operating humidity              | 25% to 85%                                                                                                                                                |                |                |
| Storage temperature                     | −25 to 65°C (with no icing or condensation)                                                                                                               |                |                |
| Elevation                               | 2,000 m max.                                                                                                                                              |                |                |
| Accessories                             | Instruction Sheet                                                                                                                                         |                |                |

**Note:** 1. CT inputs are provided only on Models with heater burnout detection.

2. Use an SSR without the zero-cross function (G3PA-□BL-VD) for soft-start optimum cycle control. (Refer to G3PA for details.)

## ■ Performance

|                             |                                                                                                                                                 |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Current indication accuracy | Current Range<br>0 to 50 A, $\pm$ 3 A<br>0 to 150 A, $\pm$ 9 A<br>0 to 100%, $\pm$ 6% (See note.)<br>(for models with heater burnout detection) |
| Insulation resistance       | 100 M $\Omega$ min. (at 500 VDC) between primary and secondary                                                                                  |
| Dielectric strength         | 2,000 VAC, 50/60 Hz for 1 min between primary and secondary                                                                                     |
| Vibration resistance        | Vibration frequency: 10 to 55 Hz, acceleration: 50 m/s <sup>2</sup> in X, Y, and Z directions                                                   |
| Shock resistance            | 300 m/s <sup>2</sup> three times each in six directions along three axes                                                                        |
| Weight                      | Approx. 200 g (including terminal cover)                                                                                                        |
| Degree of protection        | IP20                                                                                                                                            |
| Memory protection           | EEPROM (non-volatile memory) (number of writes: 100,000)                                                                                        |
| Installation environment    | Overvoltage category III, pollution degree 2 (according to IEC 60664-1)                                                                         |
| Approved standards          | UL508 (Listing), CSA22.2 No. 14<br>EN50178<br>EN61000-6-4 (EN55011: 1998, A1: 1999 Class A, Group 1)<br>EN61000-6-2: 2001                       |

**Note:** When measured with percentage selected for the current monitor parameter and the maximum current measurable with the CT at 100%.

## ■ Communications Specifications

|                               |                                                    |
|-------------------------------|----------------------------------------------------|
| Transmission line connections | Multipoint                                         |
| Communications method         | RS-485                                             |
| Max. transmission distance    | 500 m                                              |
| No. of nodes                  | 31 (via multidrop connections)                     |
| Synchronization method        | Stop-start synchronization                         |
| Communications baud rate      | 9.6, 19.2, 38.4 or 57.6 kbps, Default: 9.6 kbps    |
| Transmission code             | ASCII                                              |
| Communications data length    | 7 or 8 bits, Default: 7                            |
| Communications stop bits      | 1 or 2 bits, Default: 2                            |
| Communications parity         | Vertical parity: None, even, or odd, Default: Even |
| Flow control                  | None                                               |

## ■ Current Transformer Specifications (Order Separately)

| Item                                  | Specification               |                                       |                     |
|---------------------------------------|-----------------------------|---------------------------------------|---------------------|
| Model number                          | E54-CT1                     | E54-CT3                               | G3ZA-CT150L         |
| Max. continuous heater current        | 50 A                        | 120 A<br>(See note.)                  | 150 A               |
| Detection current with G3ZA connected | 50 A                        |                                       | 150 A               |
| Dielectric strength                   | 1,000 VAC for 1 min         |                                       | 2,000 VAC for 1 min |
| Vibration resistance                  | 98 m/s <sup>2</sup> , 50 Hz |                                       |                     |
| Weight                                | Approx. 11.5 g              | Approx. 50 g                          | Approx. 130 g       |
| Accessories                           | None                        | Connection terminals (2)<br>Plugs (2) | None                |

**Note:** The maximum continuous current is 50 A for the G3ZA in combination with the E54-CT3.

## Applicable SSR and Control

### Methods V2

The G3ZA can be used for a variety of applications by selecting the SSR drive. For example, inrush current can be reduced at startup by selecting soft-start optimum cycle control if a single-phase halogen heater is used.


| SSR                                                 | Control method                    | CT (4-channel models only)             | Example of supported heater |
|-----------------------------------------------------|-----------------------------------|----------------------------------------|-----------------------------|
| Single-phase heater SSR with zero-cross function    | Optimum cycle control             | 0 to 50 A or 0 to 150 A: 4 Units       | Single-phase heater         |
| Single-phase heater SSR without zero-cross function | Soft-start optimum cycle control  | 0 to 50 A or 0 to 150 A: 4 Units       | Single-phase halogen heater |
| Three-phase heater SSR with zero-cross function     | Three-phase optimum cycle control | 0 to 50 A or 0 to 150 A: up to 2 Units | Three-phase heater          |

V2

V2

## Optimum Cycle Control

- Optimum cycle control is performed by driving SSRs according to load power detection and trigger signals. (Zero-cross SSRs are used.)
- Noise is suppressed while ensure high-speed response by turning outputs ON and OFF each half cycle to achieve high-precision temperature control.

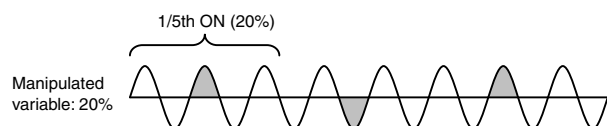

**Note:** Refer to *Connection Configuration* on page 6 for connecting to an SSR.

## Soft-start Optimum Cycle Control V2

- Soft-start optimum cycle control is a control method that combines phase control and optimum cycle control.
- Smooth switching for phase control and optimum cycle control enables control of outputs with limited inrush current even for loads with characteristics like halogen heaters.
- Use a single-phase heater SSR (without the zero-cross function) for soft-start optimum cycle control. Refer to G3PA for details on SSRs without the zero-cross function.
- Control is switched according to the Control Switching MV Threshold.
- Set the Soft-start Up/Down Time to control output.
- Current is not detected during phase control. The current value (heater ON current value, heater OFF current value, and effective current value) will be 0 A, and the current error alarm (heater burn-out detection, SSR short-circuit detection, and heater overcurrent detection) will always turn OFF.


## Setting the Control Switching MV Threshold

The Control Switching MV Threshold function is enabled when soft-start optimum cycle control is used. Setting the Control Switching MV Threshold enables switching to phase control when the current value is below the set value, and switching to optimum cycle control when the current value is above the set value. The default setting is 20.0%.

| Variable type | Parameter                                 | Setting range  | Default |
|---------------|-------------------------------------------|----------------|---------|
| 85/C5         | Ch1 to Ch8 Control Switching MV Threshold | 0.0% to 100.0% | 20.0    |

Example: For channel 1, soft-start optimum cycle control is performed under the following conditions: control switching MV: 40.0%, MV: 100.0%, soft startup time: 20 s.

- Ch 1 Control Switching MV Threshold is set to 40.0% and Ch1 MV is set to 100.0% by writing to the variable area.
- Ch1 Soft Startup Time remains at the default. Setting is not required.
- Once the Control Switching MV Threshold is written, the changes are saved and become enabled the next time the power is turned ON.

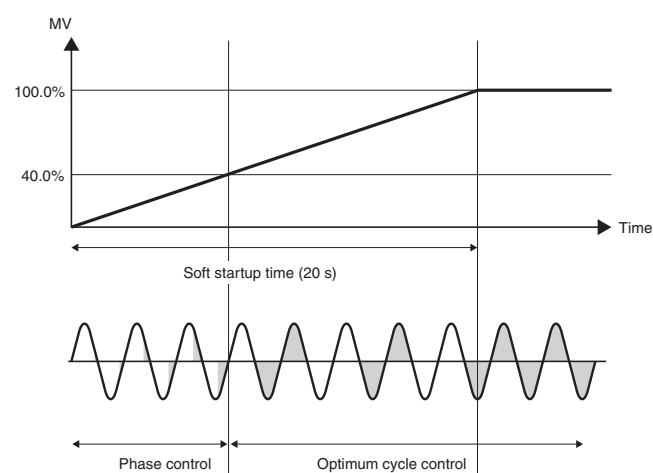


## Three-phase Optimum Cycle Control

V2

- Three-phase optimum cycle control is a control method that turns the output ON and OFF every two cycles.
- Turning the output ON and OFF every two cycles enables optimum cycle control for three-phase heaters.
- Use a three-phase heater SSR with a zero-cross function for three-phase optimum cycle control.

**Note:** Refer to page 6 for details on connecting to three-phase heaters.


The following figure shows the current waveform of each phase for a MV of 50% when a three-phase heater SSR is connected.

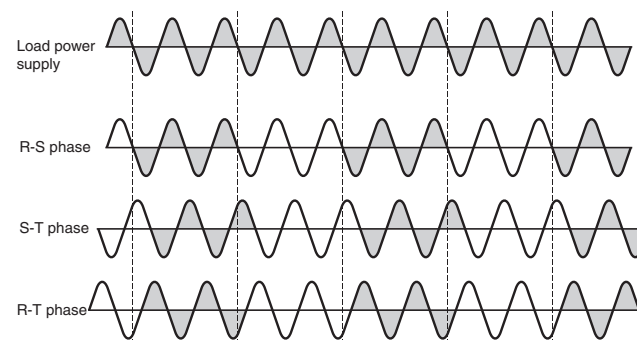


# Connections

## Terminal Arrangement


**Models with 8 Channels (Control Points),  
No CT Inputs, and No Heater Burnout Detection**

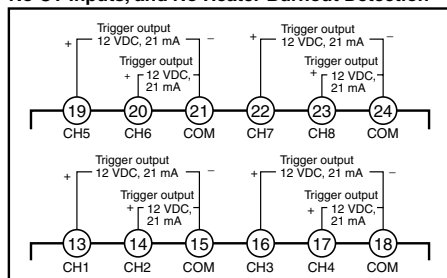

**Models with 4 Channels (Control Points),  
CT Inputs, and Heater Burnout Detection**

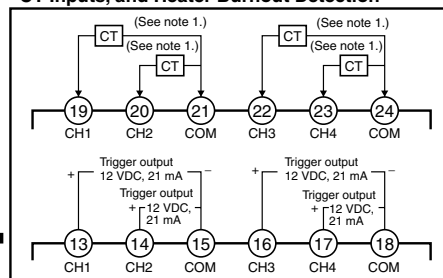


**Models with Load Power Supply Voltage  
of 100 to 240 V**

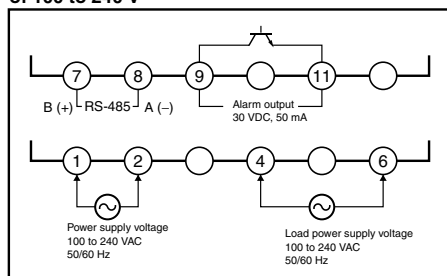

Note: Connect the power supply (100 to 240 VAC) for the G3ZA across terminals 1 and 2 and the load power supply for the SSR loads across terminals 4 and 6.


**Models with Load Power  
Supply Voltage of 400 to 480 V**

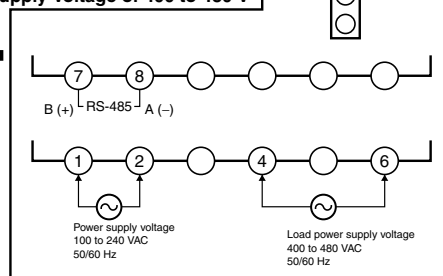

Note: Connect the power supply (100 to 240 VAC) for the G3ZA across terminals 1 and 2 and the load power supply for the SSR loads across terminals 4 and 6.

**Note: 1.** The following CTs can be used (sold separately):  
0 to 50 A: E54-CT1 and E54-CT3  
0 to 150 A: G3ZA-CT150L

**2.** Use C-Grid SL connectors from Molex Inc.



C-Grid SL Housing  
Model: 51030-0630

## Operation Indicators

| Operation indicator   | Meaning                                                                     |
|-----------------------|-----------------------------------------------------------------------------|
| <b>READY (Green)</b>  | Lit while power is being supplied.                                          |
| <b>SD/RD (Orange)</b> | Lit while communicating with the host.                                      |
| <b>OCC (Orange)</b>   | Corresponds to the RUN and STOP operating commands. (Lit during operation.) |
| <b>ERROR (Red)</b>    | Lights or flashes when an error is detected.                                |

## Setting Switches

- Always turn OFF the power supply before setting the switches. The switch settings are read only when the power supply is turned ON.
- Use a flat-blade screwdriver to set the switches and be sure not to leave a switch set between two settings.



## Communications Unit Number

Set a communications unit number on SW1 so that the host system can identify the Controller.

| SW1      | 0  | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | A  | B  | C  | D  | E  | F  |
|----------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Unit No. | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 10 | 11 | 12 | 13 | 14 | 15 |

▲  
Default

**Note:** A unique unit number must be set for each node (Controller) on the same communications line. Do not set the same unit number for more than one node.

If 17 or more Units must be connected, refer to the G3ZA Multi-channel Power Controller User's Manual (Cat. No. Z200).

## Communications Baud Rate


Set the baud rate for communicating with the host system on SW2.

| SW2       | 0   | 1    | 2    | 3    | 4 to F      |
|-----------|-----|------|------|------|-------------|
| Baud rate | 9.6 | 19.2 | 38.4 | 57.6 | Do not set. |

▲  
Default


## ■ Connection Configuration

### Single-phase SSR

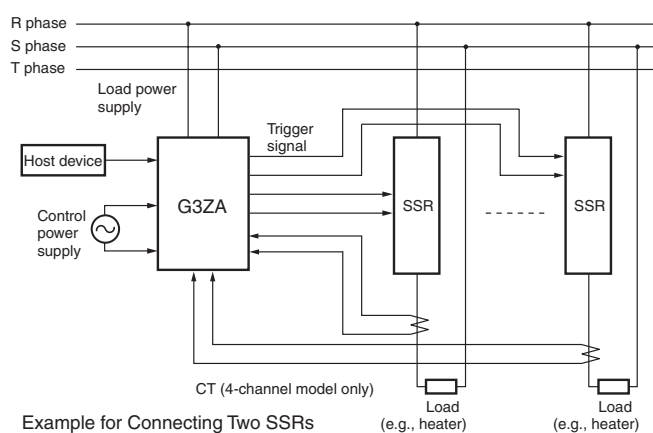

**Note:** Connect a power supply with the same phase as the SSRs to the load power supply terminals on the G3ZA.


## Three-phase SSR V2

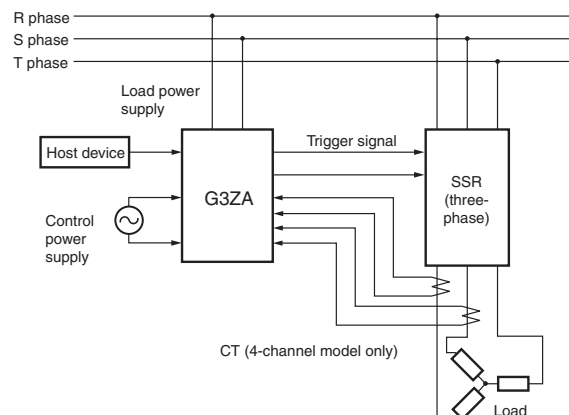


**Note:** Connect to one of the three phases on the load power supply input terminals of the G3ZA.

## ■ Host Device Connection Example

### Example of Connection to EJ1 Modular Temperature Controller

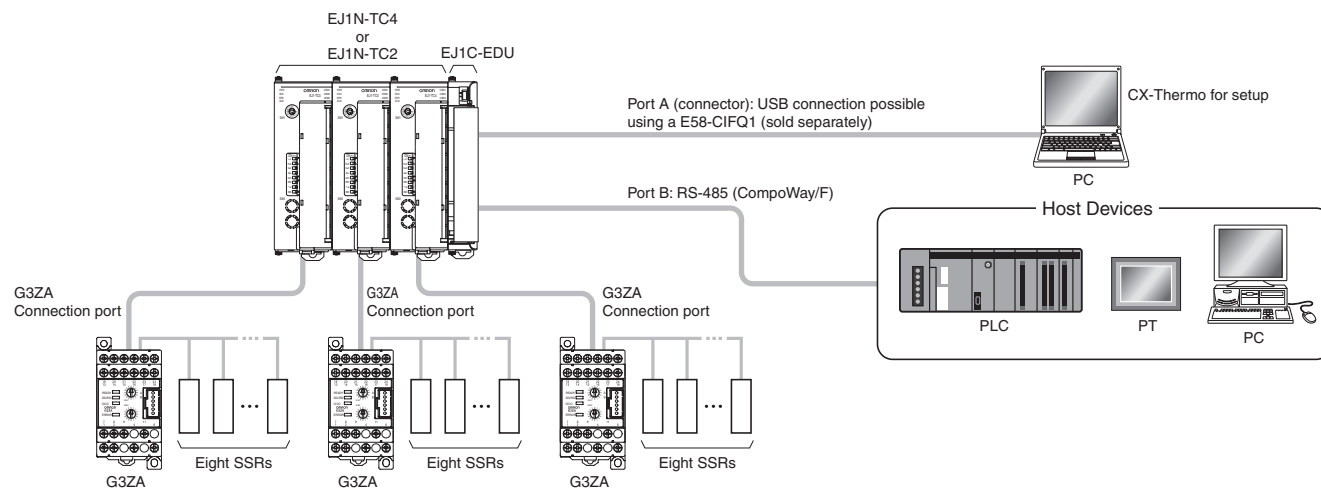

## Example of Connection to PLC

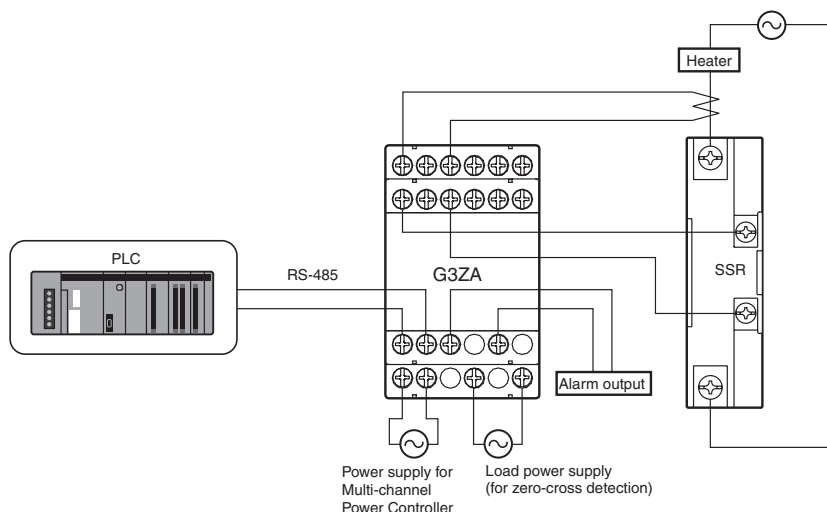

# Upgraded Functions **V2**

## Upgraded Functions


1. Added soft-start optimum cycle control.
2. Added three-phase optimum cycle control.
3. Increased heater burnout detection to 150 A.
4. Achieved effective current value monitoring.
5. Changed current error detection from a fixed value to a variable value.
6. Changed detection time unit to seconds for communications errors.

Upgraded functions are marked with "V2". **V2**


## Identifying Upgraded Models

Check the label on the Power Controller or the box to determine the version. Models not marked "Ver. 2.0" are version 1.0.

### Box Label

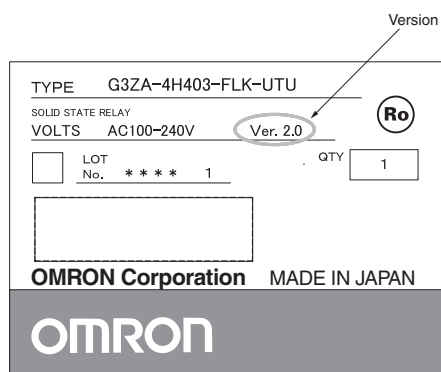

### Power Controller Label


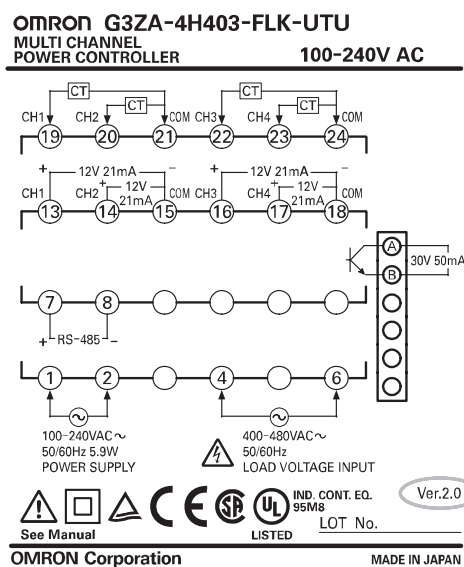


## Dimensions


**Note:** All units are in millimeters unless otherwise indicated.

### Multi-channel Power Controllers

G3ZA-4H203-FLK-UTU  
G3ZA-4H403-FLK-UTU  
G3ZA-8A203-FLK-UTU  
G3ZA-8A403-FLK-UTU

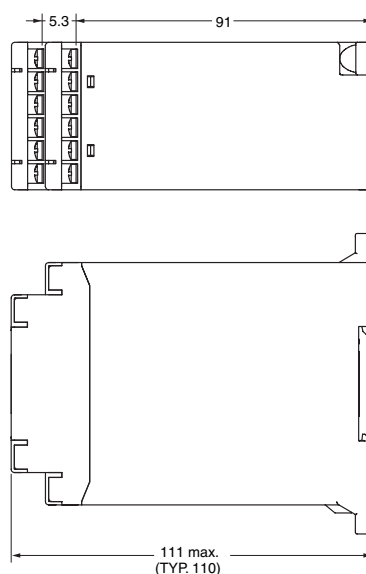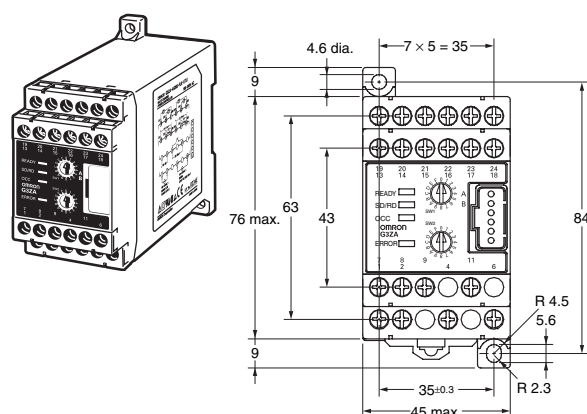


### Mounting Hole Dimensions (For Direct Mounting)

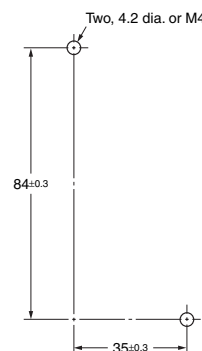

## ■ Accessories (Order Separately)


### Current Transformer (CT)

#### E54-CT1

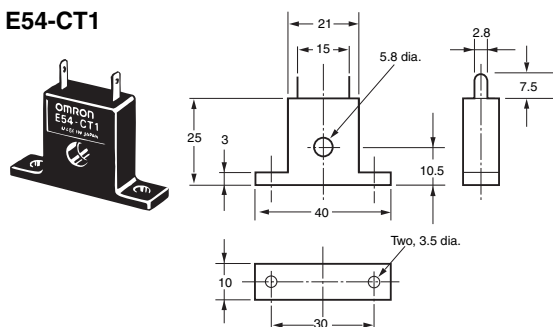


### Current Transformer (CT)

#### E54-CT3


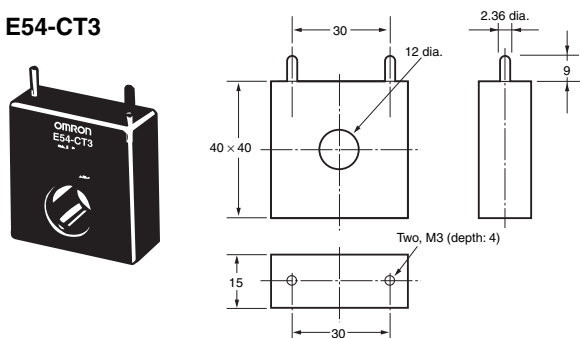


#### E54-CT3 Accessories

##### • Contactors


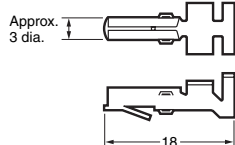


##### • Plugs

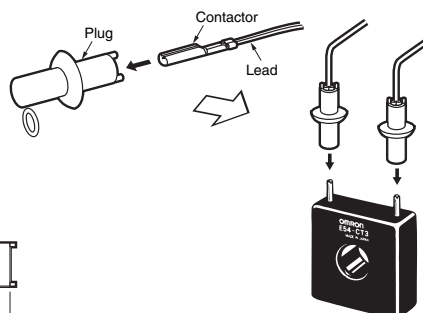


### Current Transformer (CT)

#### G3ZA-CT150L

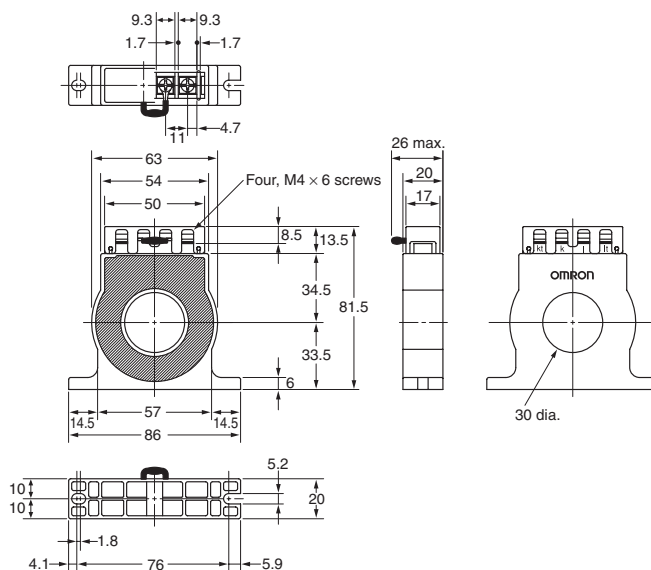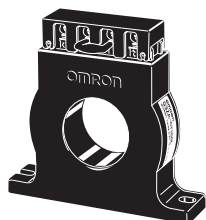


#### Mounting Hole Dimensions



**Note:** The G3ZA-CT150L is for use only in combination with the G3ZA.  
Wire terminal k and terminal l. (Do not use terminal kt and terminal lt.)

### DIN Track


#### PFP-100N PFP-50N

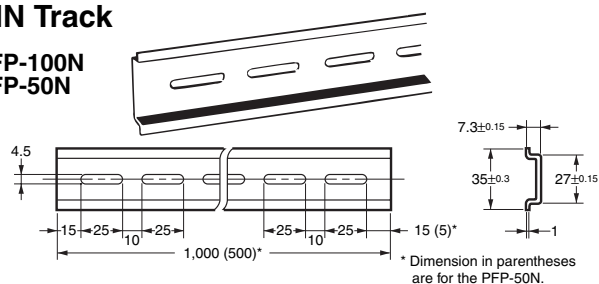

\* Dimension in parentheses are for the PFP-50N.

### End Plate (Stopper)

#### PFP-M

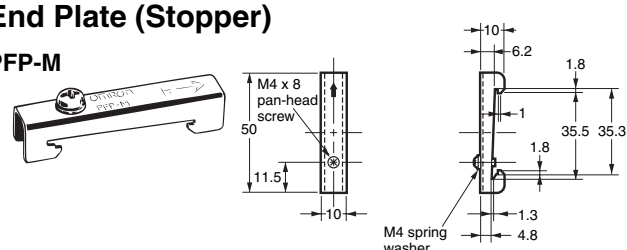

# Safety Precautions

Refer to *Safety Precautions for All Power Controllers*.

## ⚠ WARNING

Do not touch the terminals and the wires while power is being supplied. Doing so may possibly result in electric shock. Make sure that the terminal cover is installed before using the product.



## ⚠ CAUTION

Do not allow pieces of metal, wire clippings, or fine metallic chips or filings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.



Do not use the product in locations of flammable or explosive gases. Doing so may occasionally result in minor or moderate explosion, causing minor or moderate injury, or property damage.



Do not attempt to disassemble, repair, or modify the product. Doing so may occasionally result in minor or moderate injury due to electric shock.



Perform correct setting of the product according to the application. Failure to do so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment.



Ensure safety in the event of product failure by taking safety measures, such as installing a separate monitoring system to provide alarms for preventing excessive temperature rise. Product failure may occasionally prevent control operation, resulting in damage to the connected facilities and equipment.



Tighten the terminal screws securely using a tightening torque within the following ranges. Loose screws may occasionally cause fire, resulting in minor or moderate injury, or damage to the equipment.  
Terminal screws: 0.40 to 0.56 N·m



## ■ Precautions for Safe Use

- Do not use the product in the following locations.
  - Locations subject to direct radiant heat from heating equipment
  - Locations where the product may come into contact with water or oil
  - Locations subject to direct sunlight
  - Locations where dust or corrosive gases (in particular, sulfuric or ammonia gas) are present
  - Locations subject to extreme temperature changes
  - Locations where icing or condensation may occur
  - Locations subject to excessive shocks or vibration
- Use this product within the rated load and power supply.
- Ensure that the rated voltage is achieved no longer than 2 s after turning the power ON.
- Use/store within the rated temperature and humidity ranges.
- Minimum mounting distance of G3ZA is 10 mm.  
When mounting the G3ZA near the SSRs, mount the G3ZA so as to not interfere with the heat dissipation of the SSR.
- Use the specified size of insulated-type crimp terminals (M3, width: 5.8 mm max.) for wiring and attach insulative sleeves. To connect bare wires, use AWG22 (cross section: 0.326 mm<sup>2</sup>) to AWG14 (cross section: 2.081 mm<sup>2</sup>) to wire the power supply terminals and AWG22 (cross section: 0.326 mm<sup>2</sup>) to AWG16 (cross section: 1.039 mm<sup>2</sup>) for other terminals.
- Be sure to confirm the correct terminal and polarity when wiring the terminal block and connectors.
- Do not connect any conductors to unused terminals.
- In order to prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.

- Attach a surge suppressor or noise filter to peripheral devices that generate noise (in particular, motors, transformers, solenoids, magnetic coils, or other devices that have an inductance component).

Do not install the product near devices generating strong high-frequency fields or surges. When using a noise filter, check the voltage and current and install it as close to the product as possible.

- For a safety disconnection of the power-line in the application, the equipment must be provided with disconnecting devices suitable for isolation.  
(e.g., circuit breakers defined in IEC60947-2, power switches defined in IEC60947-3, power plugs, etc.)

## Version 1.0 Usage Precautions

Version 1.0 is for single-phase loads only. Connect a single-phase zero-cross SSR. Do not connect a three-phase SSR, or to an SSR that is not magnet relay or zero-cross.

## Version 2.0 Usage Precautions

- Check the G3ZA settings and select the correct SSR from the following when wiring an SSR.

- SSR with zero-cross function for single-phase heaters
- SSR without zero-cross function for single-phase heaters
- Three-phase SSR

Do not connect a magnet relay.


- Check the G3ZA settings and select the correct CT from the following when wiring a CT.

- E54-CT1
- E54-CT3
- G3ZA-CT150L

## ■ Precautions for Correct Use

### Wiring

Use M3 crimp terminals.

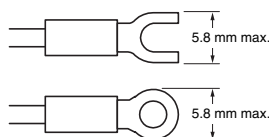


Use wires that withstand a minimum of 70°C.

### DIN Track


Secure the DIN Track with screws in at least three locations.

**DIN Track: PFP-50N (50 cm)/PFP-100N (100 cm)**

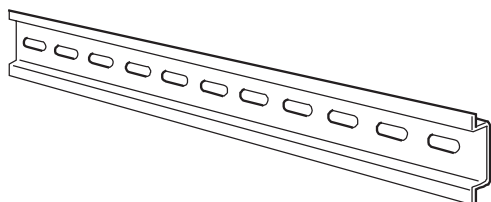


### Mounting the G3ZA

Mount the G3ZA as shown in the diagram. First, pull down the DIN Track mounting hook (1) and hook the top of the G3ZA on the DIN Track (2). Then press the G3ZA onto the DIN Track far enough so that it can be locked in place (3) and push the DIN Track mounting hook up to lock the G3ZA in place (4).

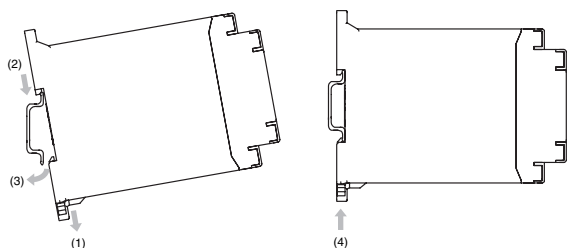

### Removing the G3ZA


Use a flat-blade screwdriver to pull down the DIN Track mounting hook (1) and then pull out on the bottom of the G3ZA (2).

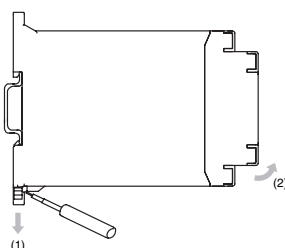

### Mounting End Plates

Be sure to mount an End Plate on each side of the G3ZA so that it does not slide on the DIN Track.

To mount an End Plate, hook the bottom of the End Plate on the bottom of the DIN Track (1), place the top of the End Plate on the DIN Track (2), and then pull down on the End Plate. Tighten the screw on the End Plate to secure it.

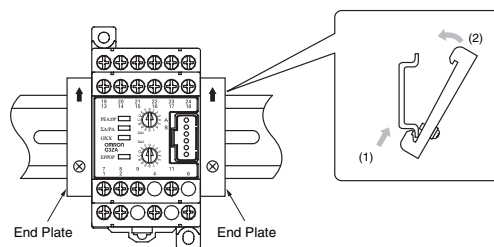

**Note:** Always mount one End Plate on each side of the G3ZA.


### Installation Example

When installing the SSRs next to the G3ZA, provide sufficient space between the G3ZA and SSRs, as shown in the following diagram.

Reference example:


When applying 25 A to the G3PB-225B-VD (a manipulated variable of 100%), **separate the SSRs from the G3ZA by at least 50 mm.**

Do not touch the G3ZA while power is being supplied.

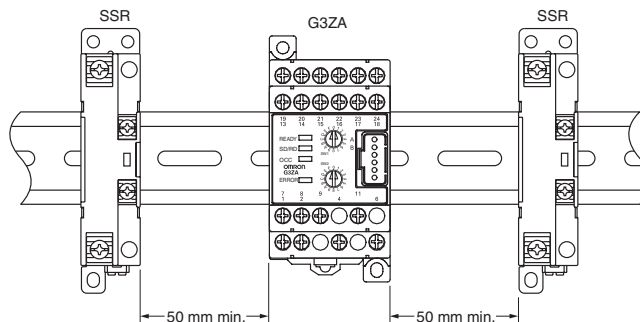

### Mounting with Screws

**Mounting Dimensions (Unit: mm)**

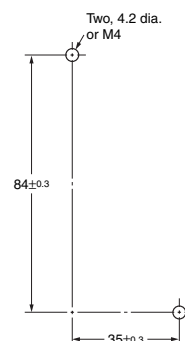

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

## Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranty and Limitations of Liability

### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## Application Considerations

### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

## Disclaimers

### CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

### DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

### ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2008.11

In the interest of product improvement, specifications are subject to change without notice.

**OMRON Corporation**  
Industrial Automation Company

<http://www.ia.omron.com/>

(c)Copyright OMRON Corporation 2008 All Right Reserved.

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: [org@lifeelectronics.ru](mailto:org@lifeelectronics.ru)

[www.lifeelectronics.ru](http://www.lifeelectronics.ru)