

MICROPHONE AMP™

Manual

All Mikroelektronika's development systems feature a large number of peripheral modules expanding microcontroller's range of application and making the process of program testing easier. In addition to these modules, it is also possible to use numerous additional modules linked to the development system through the I/O port connectors. Some of these additional modules can operate as stand-alone devices without being connected to the microcontroller.

Additional Board



SOFTWARE AND HARDWARE SOLUTIONS FOR EMBEDDED WORLD ...making it simple

MICROPHONE AMP

The MICROPHONE AMP additional board is used to amplify audio signals detected by the microphone provided on the additional board. Detected audio signals are amplified and sent to the connector used to connect a loudspeaker. The potentiometer is used to adjust the volume of sound emitted from the loudspeaker.

Key features:

- 3.3 to 5V power supply voltage;
- Loudspeaker impedance of 4, 8 or 16 ohm ;
- 300 to 725mW output power (depends on the power supply voltage and loudspeaker impedance); etc.



Figure 1: MICROPHONE AMP additional board

How to connect the board?

The MICROPHONE AMP board is connected to the power supply via a screw terminal CN1. The power supply voltage has to be stabilized and in a range between 3.3 and 5V DC. The positive voltage is supplied on the VCC pin of the CN1 connector, whereas the negative voltage (ground) is supplied on the GND pin. The additional board is connected to the loudspeaker via a screw terminal CN2. When establishing connection between them, the positive terminal of the loudspeaker is connected to the OUT+ pin, whereas the negative terminal is connected to the OUT- pin of the CN2 connector.

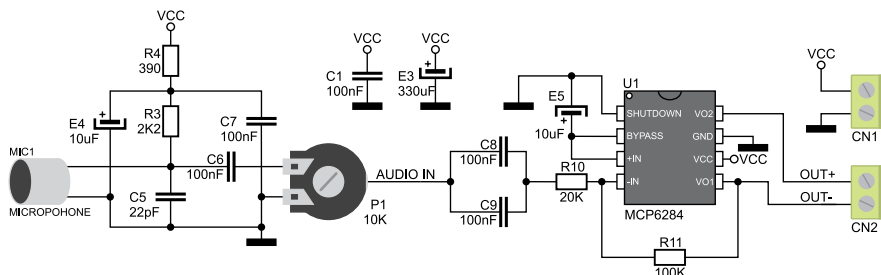


Figure 2: MICROPHONE AMP additional board connection schematic

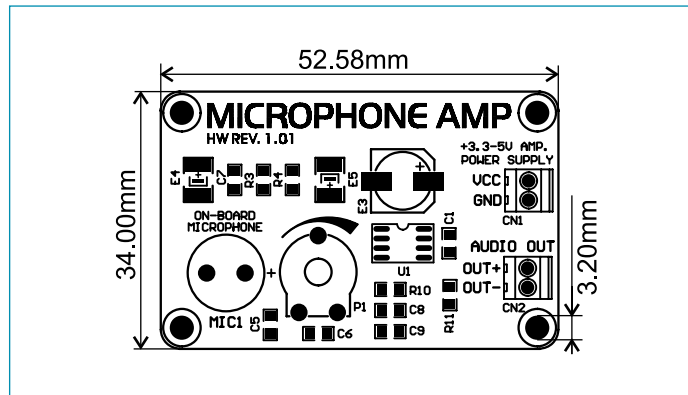


Figure 3: Dimensions of the MICROPHONE AMP additional board



SOFTWARE AND HARDWARE SOLUTIONS FOR EMBEDDED WORLD ...making it simple

If you want to learn more about our products, please visit our website at www.mikroe.com

If you are experiencing some problems with any of our products or just need additional information, please place your ticket at www.mikroe.com/en/support

If you have any questions, comments or business proposals, do not hesitate to contact us at office@mikroe.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Mikroe:

[MIKROE-333](#)

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru