# K3HB-R

CSM\_K3HB-R\_DS\_E\_9\_1


#### Digital Rotary Pulse Meter Capable of 50 kHz Measurements

- Visual confirmation of judgement results through display colors that switch between red and green. \*1
- Measures High-speed Pulses at 50 kHz. Provides high-speed pulse measurements up to 50 kHz of rotary encoder or ON/OFF pulse signals and can perform rotating measurement of high-speed rotating objects.

Note: No-voltage contacts of up to 30 Hz are supported.

• Six Measurement Operations Including Rotation (rpm)/Circumferential Speed, Ratio, and Cumulative

One Rotary Pulse Meter has 6 rotary pulse measurement functions to support a variety of pulse measurement applications. Select the best function for your application from the following: Rotation (rpm)/circumferential speed/instantaneous flowrate (value proportional to frequency), absolute ratio, error ratio, error, flow rate ratio, and passing speed (value inversely proportional to frequency).



\*1 Visual confirmation of judgement results is not supported on models that do not have an output

or models that do not support DeviceNet.
You can change the display color by setting it, but you cannot switch it based on the judgement results. \*2 DeviceNet models have a depth of 97 mm.



Refer to Safety Precautions for All Digital Panel Meters.



# 

# Model Number Structure

# ■ Model Number Legend

Base Units and Optional Boards can be ordered individually or as sets.

#### **Base Units**

K3HB-R □

1. Input Sensor Code

NB: NPN input/voltage pulse input PB: PNP input

5. Supply Voltage

100-240 VAC:100 to 240 VAC 24 VAC/VDC: 24 VAC/VDC

# Optional Boards

Sensor Power Supply/Output Boards

K33-□

Relay/Transistor Output Boards

**K34-**□ 3

**Event Input Boards** 

K35-

# **Base Units with Optional Boards**

K3HB-R -- [ 2 3 4

2. Sensor Power Supply/Output Type Code

Relay output (PASS: SPDT) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 1.)

L1A: Linear current output (0 to 20 or 4 to 20 mA DC) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

L2A: Linear voltage output (0 to 5, 1 to 5, or 0 to 10 VDC) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

A: Sensor power supply (12 VDC ±10%, 80 mA)
FLK1A: Communications (RS-232C) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.) FLK3A: Communications (RS-485) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

3. Relay/Transistor Output Type Code

None: None

Relay contact (H/L: SPDT each)

Relay contact (HH/H/LL/L: SPST-NO each) C2: Transistor (NPN open collector: HH/H/PASS/L/LL) T1:

Transistor (PNP open collector: HH/H/PASS/L/LL)

BCD \*:BCD output + transistor output (NPN open collector: HH/H/PASS/L/LL)

DRT: DeviceNet (See note 2.)

\* A Special BCD Output Cable (sold separately) is required.

4. Event Input Type Code

None: None

5 inputs (M3 terminal blocks), NPN open collector

8 inputs (10-pin MIL connector), NPN open collector 5 inputs (M3 terminal blocks), PNP open collector 2:

3:

8 inputs (10-pin MIL connector), PNP open collector

Note: 1. CPA can be combined with relay outputs only.

2. Only one of the following can be used by each Digital Indicator: RS-232C/RS-485 communications, BCD communications, or DeviceNet communications.

#### Accessories (Sold Separately)

K32-DICN: Special Cable (for event inputs with 8-pin connector)

K32-BCD: Special BCD Output Cable

#### Rubber Packing

	Model	
K32-P1		

Note: Rubber packing is provided with the Controller.

# **Specifications**

# **■** Ratings

Supply voltage		100 to 240 VAC, 24 VAC/VDC, DeviceNet power supply: 24 VDC		
Allowable power range	er supply voltage	85% to 110% of the rated power supply voltage, DeviceNet power supply: 11 to 25 VDC		
Power consumption (See note 1.)	otion	100 to 240 VAC: 18 VA max. (max. load) 24 VAC/DC: 11 VA/7 W max. (max. load)		
Current consum	nption	DeviceNet power supply: 50 mA max. (24 VDC)		
Input		No-voltage contact, voltage pulse, open collector		
External power	supply	12 VDC ±10%, 80 mA (models with external power supply only)		
Event inputs (See note 2.)	Startup compen- sation timer input	NPN open collector or no-voltage contact signal ON residual voltage: 2 V max.		
	Hold input	ON current at 0 Ω: 4 mA max.		
	Reset input	Max. applied voltage: 30 VDC max.  OFF leakage current: 0.1 mA max.		
	Bank input	JOHN TOURAGE CUITERIE. U. I TITA IIIAA.		
Output ratings (depends on	Relay output	250 VAC, 30 VDC, 5 A (resistive load) Mechanical life expectancy: 5,000,000 operations, Electrical life expectancy: 100,000 operations		
the model)	Transistor output	Maximum load voltage: 24 VDC, Maximum load current: 50 mA, Leakage current: 100 μA max.		
Linear output		Linear output 0 to 20 mA DC, 4 to 20 mA DC:  Load: 500 Ω max, Resolution: Approx. 10,000, Output error: ±0.5% FS  Linear output 0 to 5 VDC, 1 to 5 VDC, 0 to 10 VDC:  Load: 5 kΩ max, Resolution: Approx. 10,000, Output error: ±0.5% FS  (1 V or less: ±0.15 V; no output for 0 V or less)		
Display method		Negative LCD (backlit LED) display 7-segment digital display (Character height: PV: 14.2 mm (green/red); SV: 4.9 mm (green))		
Main functions		Scaling function, measurement operation selection, averaging, output hysteresis, output OFF delay, output test, teaching, display value selection, display color selection, key protection, bank selection, display refresh period, maximum/minimum hold, reset		
Ambient operating temperature		−10 to 55°C (with no icing or condensation)		
Ambient operating humidity		25% to 85%		
Storage temperature		-25 to 65°C (with no icing or condensation)		
Altitude		2,000 m max.		
Accessories		Watertight packing, 2 fixtures, terminal cover, unit stickers, instruction manual. DeviceNet models also include a DeviceNet connector (Hirose HR31-5.08P-5SC(01)) and crimp terminals (Hirose HR31-SC-121) (See note 3.)		

- Note: 1. DC power supply models require a control power supply capacity of approximately 1 A per Unit when power is turned ON. Particular attention is required when using two or more DC power supply models. The OMRON S8VS-series DC Power Supply Unit is recommended.
  - 2. PNP input types are also available.
  - 3. For K3HB-series DeviceNet models, use only the DeviceNet Connector included with the product. The crimp terminals provided are for Thin Cables.

2

# **■** Characteristics


Display range		-19,999 to 99,999		
Measurement accur	асу	Functions F1, F6: ±0.006% rgd ±1 digit (for voltage pulse/open collector sensors) Functions F2 to F5: ±0.02% rgd ±1 digit (for voltage pulse/open collector sensors)		
Measurement range		Functions F1 to F6: 0.5 mHz to 50 kHz (for voltage pulse/open collector sensors)		
Input signals		Contact input (dry contact input) (30-Hz max. with ON/OFF pulse width of 15 ms min.)  No contact voltage pulse (50-KHz max. with ON/OFF pulse width of 9 μs min.; ON voltage: 4.5 to 30 V;  OFF voltage: –30 to 2 V; input impedance: 10 kΩ)  Open collector (50-KHz max. with ON/OFF pulse width of 9 μs min.)		
Connectable sensor	rs	ON residual voltage: 3 V max.  OFF leakage current: 1.5 mA max.  Load current: Must have a switching capacity of 20 mA or higher.  Must be able to properly switch load currents of 5 mA or less.		
Comparative output time (transistor outp		Functions F1 to F6: 100 ms max. (time until the comparative output is made when there is a forced sudden change in the input signal from 15% to 95% or 95% to 15%.)		
Linear output respo	nse time	Functions F1 to F6: 110 ms max. (time until the final analog output value is reached when there is a forced sudden change in the input signal from 15% to 95% or 95% to 15%.)		
Insulation resistanc	е	20 M $\Omega$ min. (at 500 VDC)		
Dielectric strength		2,300 VAC for 1 min between external terminals and case		
Noise immunity		100 to 240 VAC models:  ±1,500 V at power supply terminals in normal or common mode (waveform with 1-ns rising edge and pulse width of 1 μs/100 ns)  24 VAC/VDC models:  ±1,500 V at power supply terminals in normal or common mode (waveform with 1-ns rising edge and pulse width of 1 μs/100 ns)		
Vibration resistance	•	Frequency: 10 to 55 Hz; Acceleration: 50 m/s², 10 sweeps of 5 min each in X, Y, and Z directions		
Shock resistance		150 m/s <sup>2</sup> (100 m/s <sup>2</sup> for relay outputs) 3 times each in 3 axes, 6 directions		
Weight		Approx. 300 g (Base Unit only)		
Degree of	Front panel	Conforms to NEMA 4X for indoor use (equivalent to IP66)		
protection	Rear case	IP20		
	Terminals	IP00 + finger protection (VDE0106/100)		
Memory protection		EEPROM (non-volatile memory) Number of rewrites: 100,000		
Applicable standard	ls	UL61010-1, CSA C22.2 No. 1010.1 (evaluated by UL) EN61010-1 (IEC61010-1): Pollution degree 2/Overvoltage category II EN61326: 1997, A1: 1998, A2: 2001		
EMC		EMI: EN61326 industrial applications		
		Electromagnetic radiation interference CISPR 11 Group 1, Class A		
		Terminal interference voltage CISPR 11 Group 1, Class A		
		EMS: EN61326 industrial applications Electrostatic Discharge Immunity EN61000-4-2: 4 kV (contact), 8 kV (in air)		
		Radiated Electromagnetic Field Immunity EN61000-4-2: 4 kV (contact), 8 kV (in air) Radiated Electromagnetic Field Immunity EN61000-4-3: 10 V/m 1 kHz sine wave amplitude modulation (80 MHz to 1 GHz, 1.4 to 2 GHz)		
		Electrical Fast Transient/Burst Noise Immunity EN61000-4-4: 2 kV (power line), 1 kV (I/O signal line)		
		Surge Immunity EN61000-4-5: 1 kV with line (power line), 2 kV with ground (power line)		
		Conducted Disturbance Immunity EN61000-4-6: 3 V (0.15 to 80 MHz)		
		Power Frequency Magnetic Immunity EN61000-4-8: 30 A/m (50 Hz) continuous time		
		Voltage Dips and Interruptions Immunity EN61000-4-11: 0.5 cycle, 0°/180°, 100% (rated voltage)		

# **Operation**

# **■** Functions (Operating Modes)

#### F1 to F6

Functions F1 to F6 provide rpm/circumferential speed and other calculation displays by measuring continuous pulses (frequencies). Example



Function name	Function No.
Rpm/circumferential speed	F!
Absolute ratio	F2
Error ratio	F3
Rotational difference	FY
Flow rate ratio	FS
Passing time	FB

F1: Displays rotation (rpm) or circumferential speed for one input.

F2 to F5: Displays the calculation result for two rotation (rpm) speeds.

F6: Displays the passing time calculated from the circumferential speed and the length of the processing stage for one input.

The basic principle used by the Digital Indicator to calculate the rotation speed (rpm) display is to count the ON/OFF time (T) for input sensor or other device inputs using the internal system clock, and then automatically calculate the frequency. This frequency (f) is multiplied by 60 and displayed as the rotation (rpm) speed.

Input sensor or other input pulse ON/OFF time (T) =  $\frac{1}{T}$  Frequency (f) =  $\frac{1}{T}$ 

- Rotation speed (rpm) =  $f \times 60$
- Circumferential speed = Roll circumference × Rotation speed (rpm)
- Passing time= Length of processing stage
   Circumferential speed


These calculations are automatically made internally and displayed whenever any input pulse is received.

Function	Operation		ation	Operation image (application)			
F1 Rpm/ circumfer- ential speed/	Measures frequency for input A and displays the rotation (rpm) or circumferential speed proportional to the input frequency. Display value D = $fa \times 60 \times \alpha$ fa: Input frequency (Hz)		ntial speed proportional to	Measuring roller winding speed Measuring motor speed (for product testing)			
Instanta-	Calculation	Display unit	Prescale value (α)	88988			
neous flowrate	Rotation	rpm	1/N				
	speed	rps	1/60 N	OK/NG judgment			
	Frequency	Hz	1/60	) July months			
	(of input pulse)	kHz	1/60000				
	Circumfer-	mm/s	1000 πd/60 N				
	ential	cm/s	100 πd/60 N				
	speed	m/s	πd/60 N				
		m/min	πd/N				
		km/h	0.06 πd/N				
	Instanta-	ℓ/min	Check the output				
	neous flowrate	<i>ll</i> ∕h	specifications of the input device and calculate the prescale value from the following equation:  Display value $D = fa \times 60 \times \alpha$				
	N = Pulses po πd = Circumfe		per rotation (m)				
F2	Multiples innu	ıt B divided by	input A (B) by 100 and	Measuring the speed ratio between two rollers			
Absolute ratio	Multiples input B divided by input A $(\frac{B}{A})$ by 100 and displays the ratio as a percentage (%). Display unit: %		$\overline{}$	BBBB PASS L LL Warning			

Function	Operation	Operation image (application)
F3 Error ratio	Multiplies the error between input A and input B $(\frac{B}{A}-1)$ by 100 and displays the ratio as a percentage (%).  Display unit: %	Measuring the line speed error ratio between two conveyors  Communications output (remote monitoring)  To computer
F4 Rotational difference	Displays the difference between input A and input B (B – A) as the rotation (rpm) speed error or circumferential speed error.  Display unit: rpm, rps, rph, Hz, kHz, mm/s, m/s m/min, km/h l/min, l/h, etc.	Measuring the rotation (rpm)/circumferential speed error (absolute error) between two conveyors  HH  H  PASS  L  Warning
F5 Flow rate ratio	Displays the flow rate ratio of B from inputs A and B $(\frac{B}{A+B})$ as a ratio (%).  Display unit: %	Monitoring liquid mixture flow rate ratio  Linear output  Recording meter
F6 Passing time	The passing time for the desired distance is displayed by measuring the frequency of input A. Passing time (s) = $1/fa \times \alpha$ fa: Input frequency (Hz) Set the prescale value for the desired display unit using the following table for reference.    Calculation   Display unit   Prescale value ( $\alpha$ )   Passing time   s   L/( $\pi$ d/N)     N = Pulses per rotation   $\pi$ d = Circumferential length per rotation (m)   L = Length of process (m)     Display unit:   Seconds (s), minutes (min), hours/minutes/seconds (h.min.s), minutes/seconds/tenths of seconds (min.s.1/10s), etc.	Displaying the passing time for a conveyor line  Distance  PASS  Warning output

# ■ What Is Prescaling?

To make calculations using the input pulse to display rotation (rpm) or circumferential speed, the number of pulses per rotation or the length of the circumference must be multiplied by a certain coefficient. This coefficient is called the prescale value.



Rotation speed (rpm) =  $f \times 60 \times a$ 

f: Input pulse frequency (No. of pulses per second)

a: Prescale value

If there are 5 pulses per rotation, then

 $a = 1/5 (= 0.2 = 2 \times 10^{-1})$ 

and an accurate rotation speed (rpm) can be calculated.

The actual setting is X = 2.0000 (mantissa) and  $Y = 10^{-1}$  (exponent).

# ■ What Is the Auto-zero Function?

(Set this function before using the Digital Indicator.)

If a function  ${\it F}$   ${\it I}$  to  ${\it F}$   ${\it B}$  is set, the frequency can be force-set to zero if there is no input pulse for a set period. This period is called the auto-zero time. Set the auto-zero time to slightly longer than the longest input pulse interval. (The display will not easily return to zero if the auto-zero time is too long or left at the default setting.)

#### **Time Unit Settings**

Setting	Meaning
SCAL	Prescale value menu setting
ŭŗu	Minute display
H.55.55	h.mm.ss display
ññ.55.d	mm.ss.d display (d = tenths of a second)

Note: Time unit can be set only when passing time (F6) is selected.

#### **Input Type Setting**

	NO: Voltage pulse high	NC: Voltage pulse low
No-contact or voltage pulse input	00	O 1
Contact	10	11

Note: Set to I☐ or II when there is a large variation in the display. The largest measurement range is 30 Hz.

# **Common Specifications**

# **■** Event Input Ratings

K3HB-R	S-TMR, HOLD, RESET, BANK1, BANK2, BANK4			
Contact	ON: 1 k $\Omega$ max., OFF: 100 k $\Omega$ min.			
	ON residual voltage: 2 V max.			
	OFF leakage current: 0.1 mA max.			
	Load current: 4 mA max.			
	Maximum applied voltage: 30 VDC max.			

# **■** Output Ratings

#### **Contact Output**

Item	Resistive loads (250 VAC, cosφ=1; 30 VDC, L/R=0 ms)	Inductive loads (250 VAC, closed circuit, cos∳=0.4; 30 VDC, L/R=7 ms)
Rated load	5 A at 250 VAC 5 A at 30 VDC	1 A at 250 VAC 1 A at 30 VDC
Mechanical life expectancy	5,000,000 operations	
Electrical life expectancy	100,000 operations	

# **Transistor Outputs**

Maximum load voltage	24 VDC
Maximum load current	50 mA
Leakage current	100 μA max.

# **Linear Output**

Item	Outputs	0 to 20 mA	4 to 20 mA	0 to 5 V	1 to 5 V	0 to 10 V
Allowable load impedance		$500 \Omega$ max. $5 kΩ$ min.				
Resolution		Approx. 10,000				
Output error         ±0.5% FS         ±0.5% FS           (±0.15 V for 1 V or less and no out		output for 0 V)				

# **Serial Communications Output**

Item Type	RS-232C, RS-485
Communications method	Half duplex
Synchronization method	Start-stop synchronization (asynchronous)
Baud rate	9600/19200/38400 bps
Transmission code	ASCII
Data length	7 bits or 8 bits
Stop bit length	2 bits or 1 bit
Error detection	Vertical parity and FCS
Parity check	Odd, even

# BCD Output I/O Ratings (Input Signal Logic: Negative)

I/O sig	nal name		Item	Rating
Inputs	REQUEST HOLD	Input signal		No-voltage contact input
	MAX	Input curren	t for no-voltage input	10 mA
	MIN RESET	Signal level	ON voltage	1.5 V max.
			OFF voltage	3 V min.
Outputs	DATA POLARITY	Maximum load voltage		24 VDC
	OVER DATA VALID	Maximum load current 10 mA	10 mA	
	RUN	Leakage cu	rrent	100 μA max.
	HH H	Maximum Ic	ad voltage	24 VDC
	L	Maximum load current		50 mA
		Leakage cu	rrent	100 μA max.

Refer to the *K3HB Communications User's Manual* (Cat. No. N129) for details on serial and DeviceNet communications.

# **DeviceNet Communications**

Commun	nications protocol	Conforms to DeviceNe	et				
Supported			Master-Slave connection (polling, bit-strobe, COS, cyclic)				
communications	communications	Conforms to DeviceNe	et communications sta	ndards.			
	I/O allocations	Allocate any I/O data	using the Configurator				
		Allocate any data, such as DeviceNet-specific parameters and variable area for Digital Indicators.					
		Input area: 2 blocks, 6	0 words max.				
		Output area: 1 block, 2 (The first word in the a		d for the Output Execu	ition Enabled Flags.)		
	Message	Explicit message com	munications				
	communications	CompoWay/F communications commands can be executed (using explicit message communications)					
Connection meth	ods	Combination of multi-dr	op and T-branch connec	ctions (for trunk and dro	p lines)		
Baud rate		DeviceNet: 500, 250, or	r 125 Kbps (automatic fo	ollow-up)			
Communications	media	Special 5-wire cable (2	signal lines, 2 power su	pply lines, 1 shield line)			
Communications	distance	Baud rate	Network length (max.)	Drop line length (max.)	Total drop line length (max.)		
		500 Kbps	100 m max. (100 m max.)	6 m max.	39 m max.		
		250 Kbps	100 m max. (250 m max.)	6 m max.	78 m max.		
		125 Kbps	100 m max. (500 m max.)	6 m max.	156 m max.		
		The values in parenthes	ses are for Thick Cable.				
Communications	power supply	24-VDC DeviceNet pow	er supply				
Allowable voltage	e fluctuation range	11 to 25-VDC DeviceNe	et power supply				
Current consump	otion	50 mA max. (24 VDC)					
Maximum numbe	r of nodes	64 (DeviceNet Configur	ator is counted as one r	node when connected.)			
Maximum numbe	r of slaves	63					
Error control che	cks	CRC errors					
DeviceNet power	supply	Supplied from DeviceNo	et communications conr	nector			


8

# K3HB-R


# **Connections**

# **■** External Connection Diagrams


#### **Terminal Arrangements**

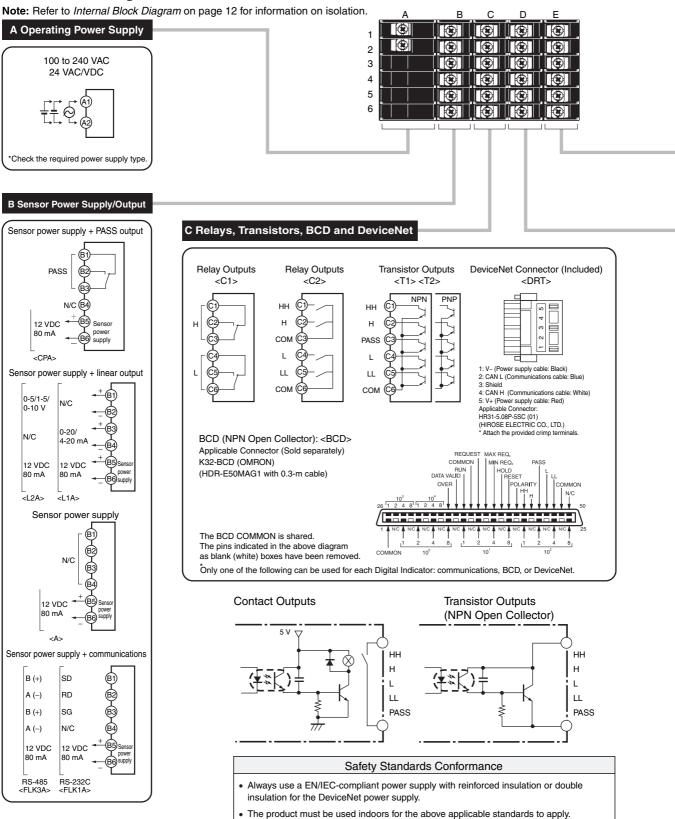


10

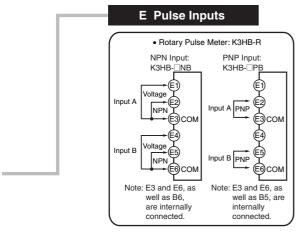

# NPN Input Model • NPN input section F2, E5 T12 V T10 Ω COM TM E3, E6

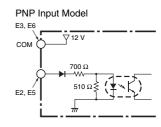


#### **D** Event Inputs

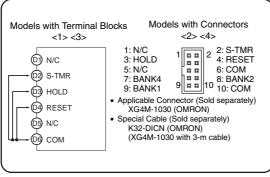


- Use terminal pin D6 as the common terminal.
- Use NPN open collector or no-voltage contacts for event input.

PNP types are also available.

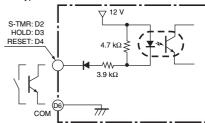

# **BCD Output Cable**

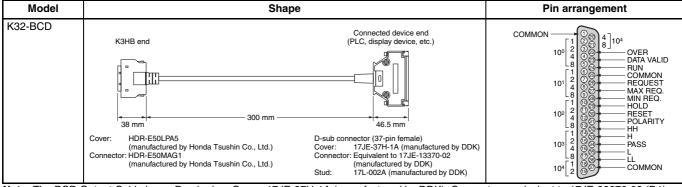


Note: The BCD Output Cable has a D-sub plug. Cover: 17JE-37H-1A (manufactured by DDK); Connector: equivalent to 17JE-23370-02 (D1) (manufactured by DDK)

## **Special Cable (for Event Inputs with 8-pin Connector)**

Model	Appearance	Wiring
K32-DICN	9 10 2 3,000 mm Cable marking (3 m)	Pin No. Signal name  1 N/C 2 S-TMR 3 HOLD 4 RESET 5 N/C 6 COM 7 BANK4 8 BANK2 9 BANK1 10 COM


# ■ Derating Curve for Sensor Power Supply (Reference Values)

#### For 12V

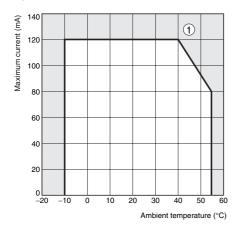

- **Note: 1.** The above values were obtained under test conditions with the standard mounting. The derating curve will vary with the mounting conditions, so be sure to adjust accordingly.
  - 2. Internal components may be deteriorated or damaged. Do not use the Digital Indicator outside of the derating range (i.e., do not use it in the area labeled ①, above).


# **■ Internal Block Diagram**

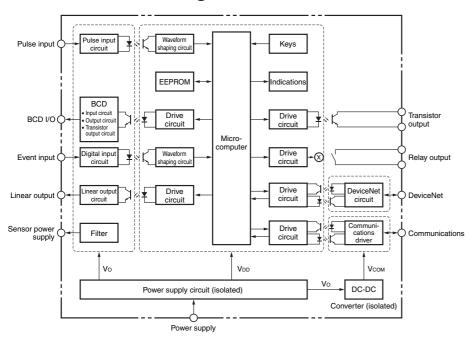

# **■ BCD Output Timing Chart**


A REQUEST signal from a Programmable Controller or other external device is required to read BCD data.

#### **Single Sampling Data Output**

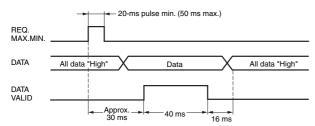

The data is set in approximately 30 ms from the rising edge of the REQUEST signal and the DATA VALID signal is output. When reading the data from a Programmable Controller, start reading the data when the DATA VALID signal turns ON. The DATA VALID signal will turn OFF 40 ms later, and the data will turn OFF 16 ms after that.


#### **Continuous Data Output**

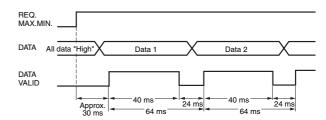


Measurement data is output every 64 ms while the REQUEST signal remains ON.

Note: If HOLD is executed when switching between data 1 and data 2, either data 1 or data 2 is output depending on the timing of the hold signal. The data will not go LOW.

• The K3HB BCD output model has an open collector output, so wired OR connection is possible

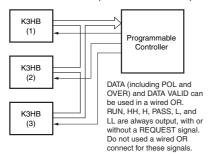

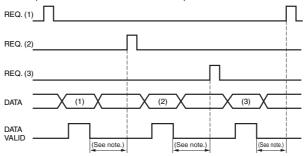


Note: Leave 20 ms min. between DATA VALID turning OFF and the REQUEST signal

#### **Programmable Controller Connection Example**

#### **Display Unit Connection Example**

the pin number for the Digital Indicator narrow pitch connector (manufactured by

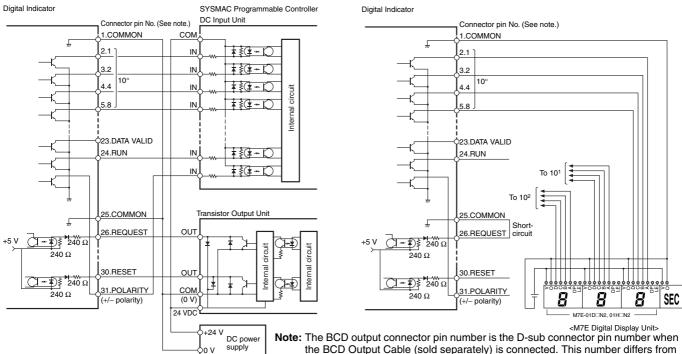


Refer to the following User's Manual for application precautions and other information required when using the Digital Indicator: K3HB-R/P/C Digital Indicator User's Manual (Cat. No. N136)


Honda Tsushin Kogyo Co., Ltd.).

The manual can be downloaded from the following site in PDF format: OMRON Industrial Web http://www.fa.omron.co.jp

# **■** Component Names and Functions

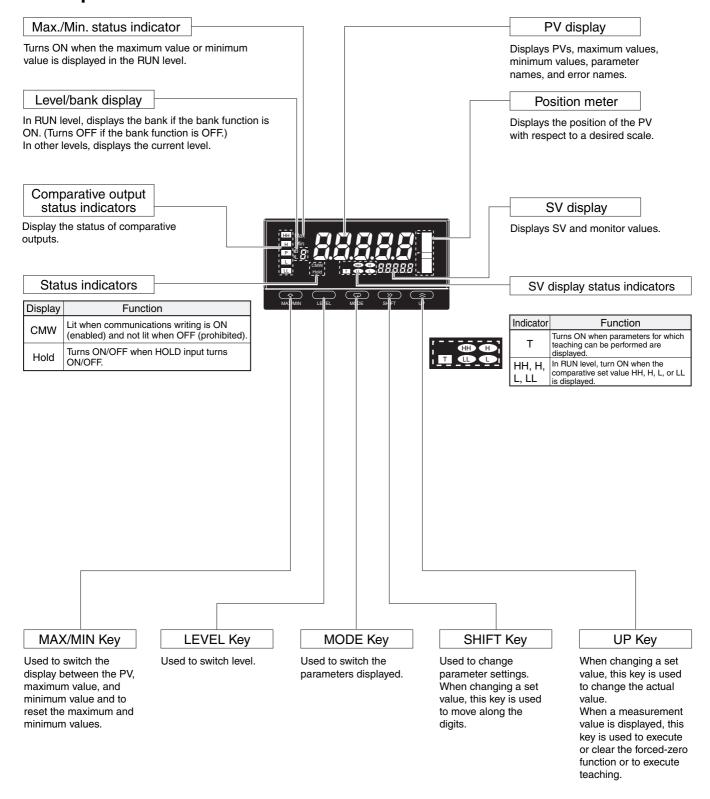

#### ■ Dimensions

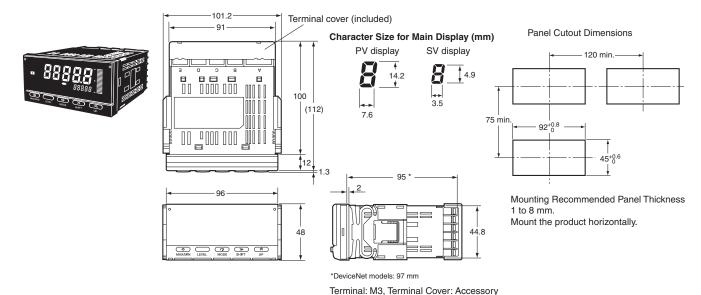


#### **Wiring Precautions**

- For terminal blocks, use the crimp terminals suitable for M3 screws.
- $\bullet$  Tighten the terminal screws to the recommended tightening torque of approx. 0.5 N·m.
- To prevent inductive noise, separate the wiring for signal lines from that for power lines.

#### **Wiring**

• Use the crimp terminals suitable for M3 screws shown below.



## **Unit Stickers (included)**


- No unit stickers are attached to the Digital Indicator.
- Select the appropriate units from the unit sticker sheets provided.




**Note:** For measurements for commercial purposes, be sure to use the unit required by any applicable laws or regulations.

#### **Mounting Method**

- 1. Insert the K3HB into the mounting cutout in the panel.
- Insert watertight packing around the Unit to make the mounting watertight.

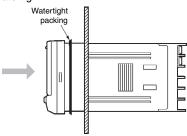


Insert the adapter into the grooves on the left and right sides of the rear case and push until it reaches the panel and is fixed in place.

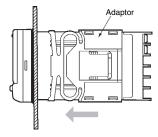


#### **LCD Field of Vision**

The K3HB is designed to have the best visibility at the angles shown in the following diagram.



# **Rubber Packing (Sold Separately)**

#### K32-P1



If the rubber packing is lost or damaged, it can be ordered using the following model number: K32-P1.

(Depending on the operating environment, deterioration, contraction, or hardening of the rubber packing may occur and so, in order to ensure the level of waterproofing specified in NEMA4, periodic replacement is recommended.)

**Note:** Rubber packing is provided with the Controller.

# **Main Functions**

# ■ Main Functions and Features

#### Measurement

#### **Function**

FUnE

The K3HB-R has the following six functions for receiving and displaying input pulses.

F1: Rotation (rpm)/circumferential speed

F2: Absolute ratio

F3: Error ratio

F4: Rotational difference

F5: Flow rate ratio

F6: Passing time

The K3HB-P has the following six functions for receiving and displaying input pulses.

F1: Passing speed

F2: Cycle

F3: Time difference

F4: Time band

F5: Measuring length

F6: Interval

The K3HB-C has the following three functions for receiving and displaying input pulses.

F1: Individual inputs

F2: Phase differential inputs

F3: Pulse counting input

#### **Filters**

#### **Average Processing**

RuG-E, RuG-n

Average processing of input signals with extreme changes or noise smooths out the display and makes control stable.

#### Input Types

in-tA, in-tb

Specify the types of sensor connected to input A and input B.

#### **Input Compensation**

#### **Auto-zero Times**

REIA, REIB

The frequency is forced to zero if there is no pulse input for a set period.

#### **Key Operations**

#### Teaching

The present measurement value can be used as a scaling value.

#### **Key Protection**

Key protection restricts level or parameter changes using the keys to prevent unintentional key operations and malfunctions.

#### **Outputs**

#### Comparative Output Pattern

Standard, zone, and level comparative output patterns can be selected for comparative outputs.

#### Hysteresis HY

Prevents comparative outputs from chattering when the measurement value fluctuates slightly near the set value.

#### Output Refresh Stop 6-5EP

Holds the output status when a comparative result output other than PASS turns ON.

#### PASS Output Change PR55

Comparative results other than PASS and error signals can be output from the PASS output terminal.

#### Output OFF Delay

Delays turning OFF comparatives for a set period. This can be used to provide sufficient time to read the comparative output ON status when the comparative result changes at short intervals.

#### Shot Output 5Hab

Turns ON the comparative output for a specific time.

#### Output Logic

Reverses the output logic of comparative results.

#### Startup Compensation Timer 5-600

Measurements can be stopped for a set time using an external input.

#### Output Test

Output operation can be checked without using actual input signals by using the keys to set a test measurement value.

#### Linear Outputs LSELE, LSELE, LSELE, LSELE

A current or voltage proportional to the change in the measurement value can be output.

#### Standby Sequence 54dby

The comparison outputs can be kept OFF until the measurement value enters the PASS range.

#### Display

#### Display Value Selection 4.5P

The display value can be set to the present value, the maximum value, or the minimum value.

#### Display Color Selection

The present value display color can be set to green or red. The color of the present value can also be switched according to the comparative output.

#### Display Refresh Period d. EF

When the input changes rapidly, the display refresh period can be lengthened to control flickering and make the display easier to read.

#### Position Meter Pos-t, Pos-t, Pos-L

The present measurement value can be displayed as a position in relation to the scaling width on a 20-gradation position meter.

#### Prescale P5.Rū, P5.R¥, P5.Ь¥, P5.Ь¥

The input signal can be converted and displayed as any value.

#### Comparative Set Value Display 5u.d5P

Select whether or not to display the comparative value during operation.

#### Display auto-return FE

Automatically returns the display to RUN level when there are no key operations (e.g., max./min. switching, bank settings using keys).

#### Other

#### Max./Min. Hold

Holds the maximum and minimum measurement values.

#### Bank Selection bのど-[

Switch between 8 comparative value banks using the keys on the front panel or external inputs. A set of set comparative values can be selected as a group.

#### Bank Copy [6P4

Any bank settings can be copied to all banks.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

#### Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments

#### Warranty and Limitations of Liability

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### **SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### Disclaimers

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2012.4

In the interest of product improvement, specifications are subject to change without notice.





OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

#### Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru