

DESCRIPTION

Demonstration circuit 561 is a high current step-down PolyPhase™ converter featuring the LTC®3731 three-phase synchronous buck controller. To minimize the supply footprint size and improve the thermal performance, the 5mm x 5mm QFN package LTC3731CUH controller is used. The switching frequency of the LTC3731 is in the 250kHz to 600kHz range. The input voltage is from 10V to 14V and output is 1.5V. An optional VID controller circuit is available on both DC561A-A and DC561A-B demo circuits for output voltage programming. DC561A-A can provide up to 180A output current with a 12-phase buck circuit, while DC561A-B is a 6-phase buck converter

with up to 90A output current. Optional 0.1% external voltage reference and external OP-AMP compensation circuits are also available on DC561A-A and DC561A-B for accurate voltage regulation and best transient response. Additional MOSFETs can be populated for higher output current.

Design files for this circuit board are available. Call the LTC factory.

LTC is a trademark of Linear Technology Corporation

Table 1. Performance Summary (T_A = 25°C)

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		10V
Maximum Input Voltage		14V
V _{OUT}	DC561A-A: I _{OUT} = 0A to 180A DC561A-B: I _{OUT} = 0A to 90A	1.5V±1%
Nominal Switching Frequency	Set by resistor divider on demo circuit	450kHz
Typical Efficiency	DC561A-A: V _{IN} = 12V, V _{OUT} = 1.5V, I _{OUT} = 180A DC561A-B: V _{IN} = 12V, V _{OUT} = 1.5V, I _{OUT} = 90A	83% 84%

QUICK START PROCEDURE

Demonstration circuit 561 is easy to set up to evaluate the performance of the LTC3731. Refer to Figure 2. For proper measurement equipment setup and follow the procedure below:

1. Preset the following jumpers on the demo circuit: JP1-Int Prog, JP2-Off, JP4-Off, JP9-Int. and JP10-On. With above jumper setup, the supply is running at about 450kHz phase frequency, and using the on board +5V bias supply.
2. Preset the voltage of the input power supply to be 12V. Preset the current limit of the input power supply to be greater than 30A for DC561A-A or 15A

for DC561A-B. With power off, connect the input power supply to Vin and GND.

3. Connect the electronic load to Vout+ and Vout-. Preset the load current to be 0A.
4. Turn on the power at the input.
5. Check for the proper output voltages at no load and full load (180A for DC561A-A and 90A for DC561A-B). Vout = 1.485V to 1.515V. A cooling fan is needed if the load current is higher than 50% of the full rated load current.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

6. Adjust the loads within the operating range and observe the output voltage regulation, efficiency and other parameters.
7. (Optional) To perform the load transient test, set jumpers JP4-On and JP2-On. Use coaxial cables to

connect LOAD STEP and Vout+ coaxial outputs to oscilloscope inputs. Adjust R81 and R75 for desired load current step and rising slope. Adjust R73 for desired load current falling slope.


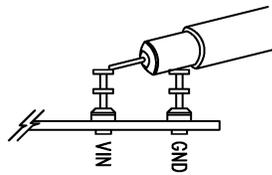


Figure 1. Scope Probe Placement for Measuring Input or Output Ripple


QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

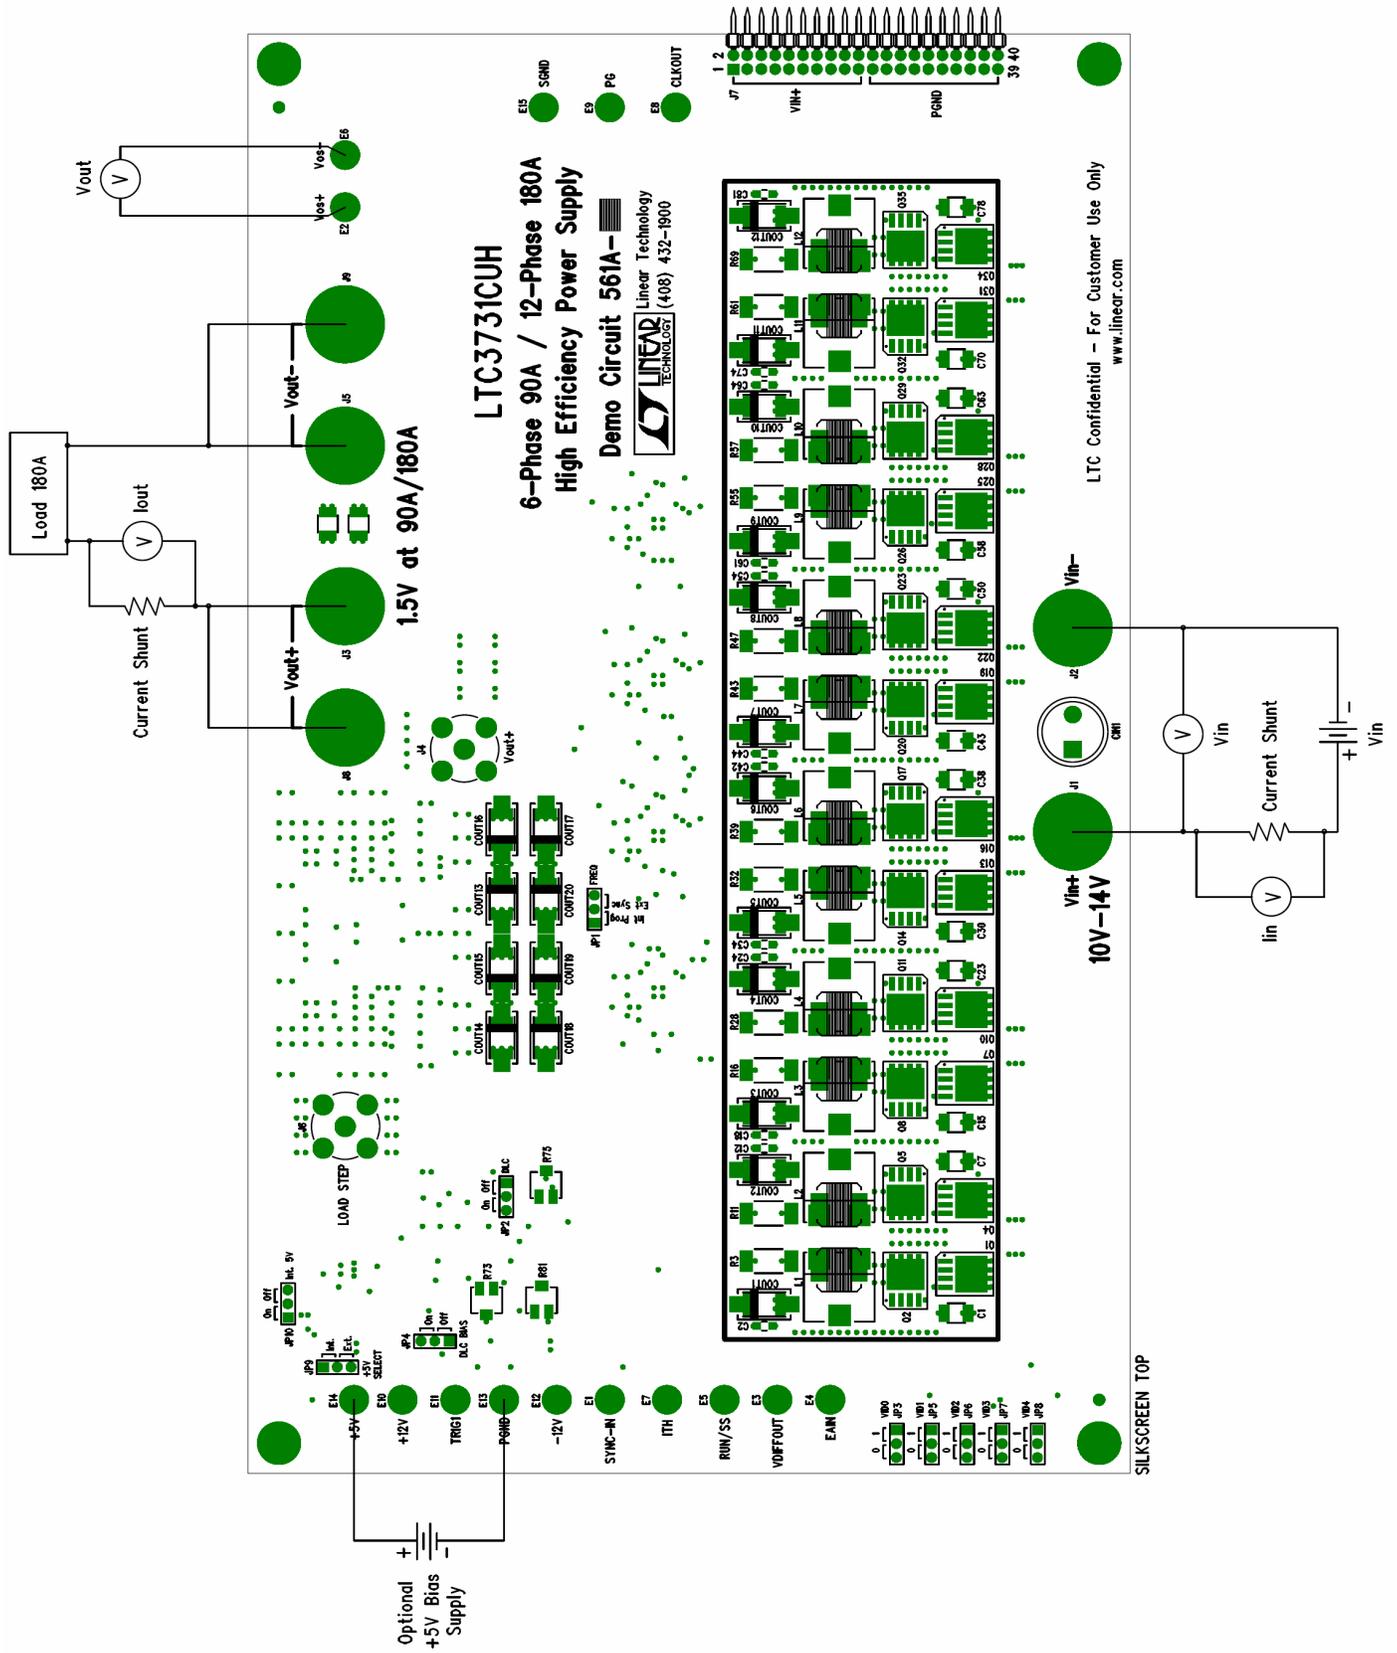

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

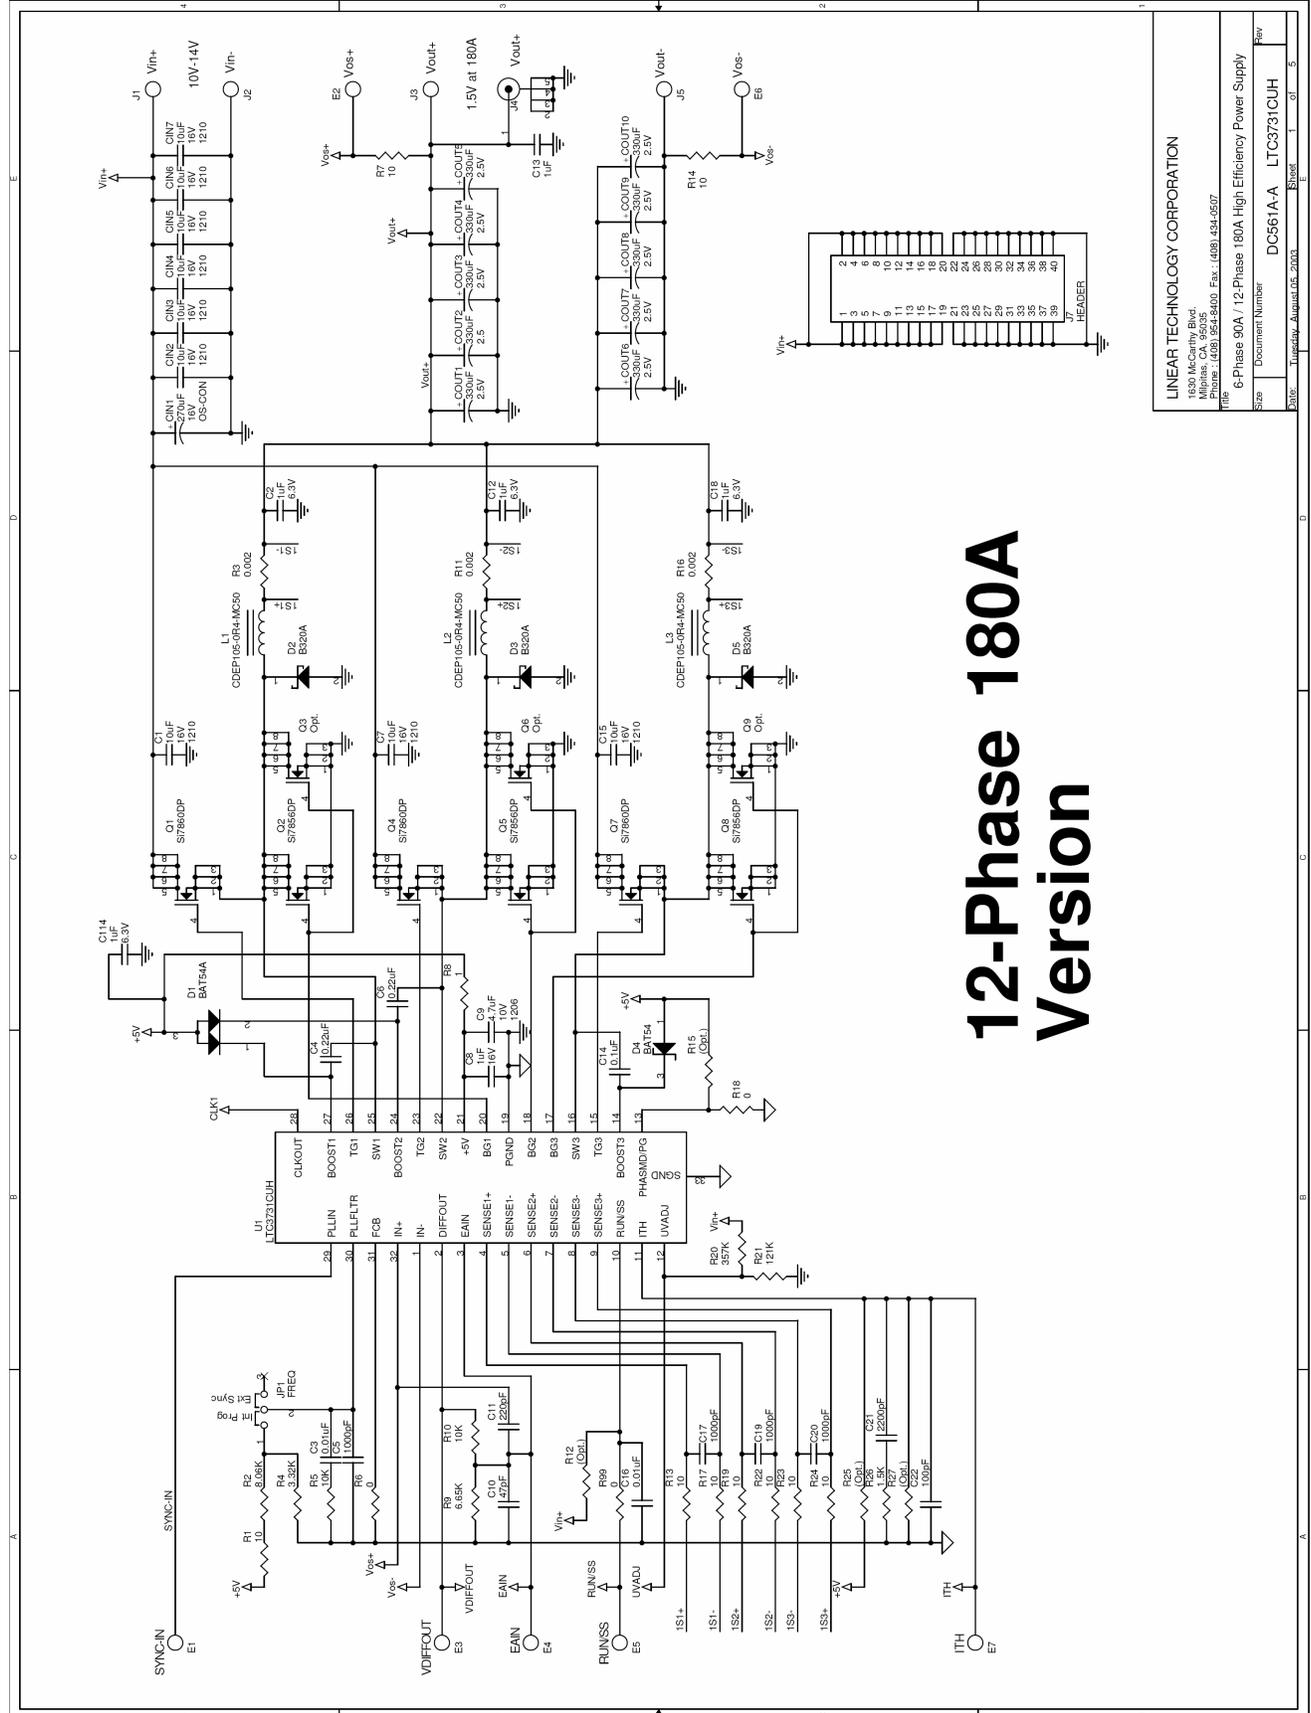

12-Phase 180A Version

LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Fremont, CA 94538
 Phone: (408) 554-8200 Fax: (408) 434-6507

Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply


Size: Document Number

Rev: DC561A-A LTC3731CUH

3300: Tuesday, August 05, 2003 Sheet 1 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

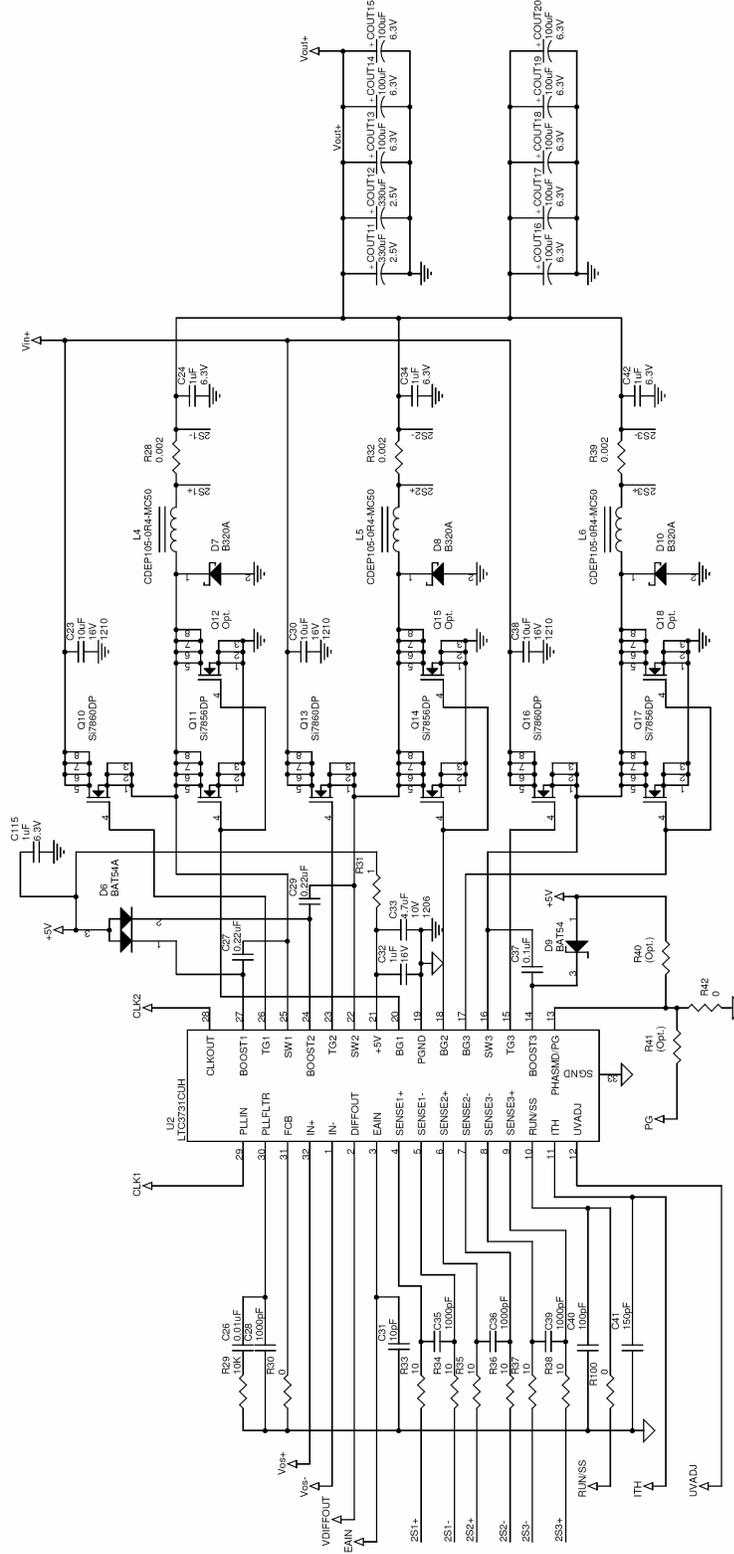


LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Milpitas, CA 95035
 Tel: (408) 292-2600 Fax: (408) 434-6677
 File: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Document Number: DC561A-A LTC3731CUH
 Size: _____ of _____
 Rev: _____ of _____

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A


6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

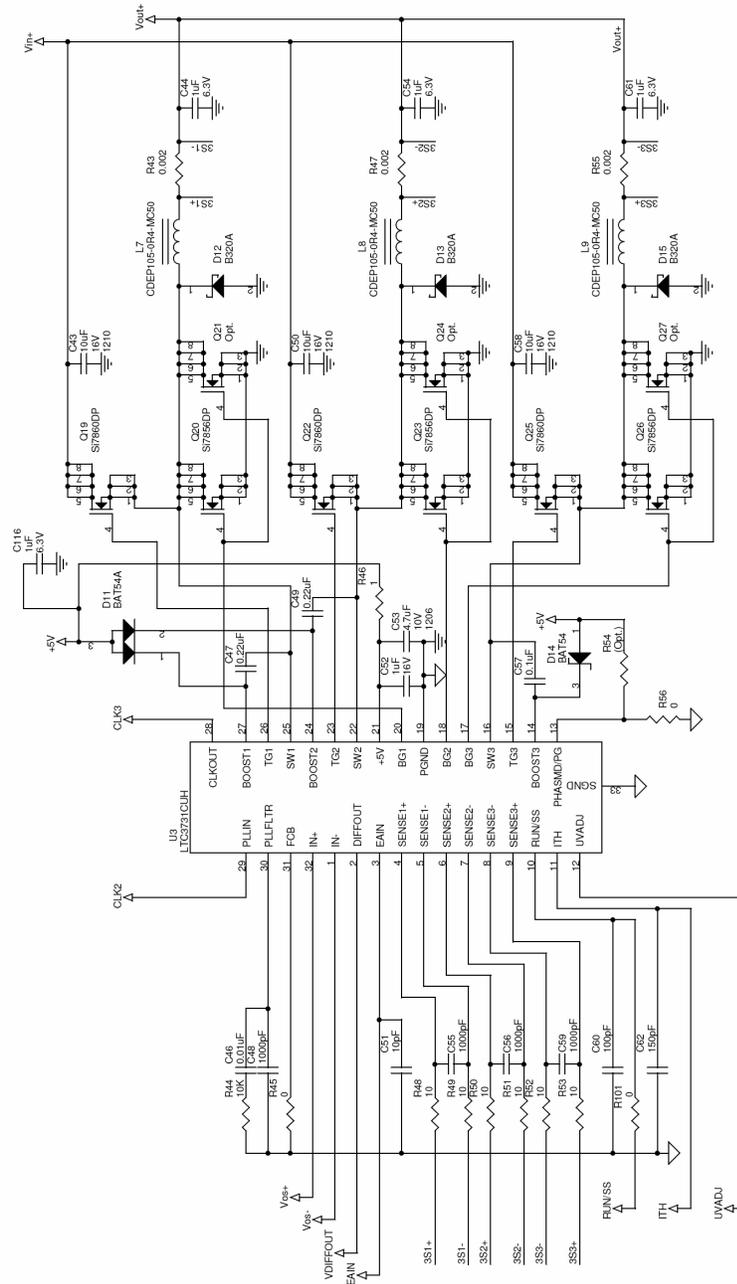

LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Milpitas, CA 95035
 Telephone: (408) 252-2900 Fax: (408) 424-6507
 Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply
 Size: Document Number DC561A-A LTC3731CQJ Rev
 Date: Tuesday, August 05, 2003 Sheet 3 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

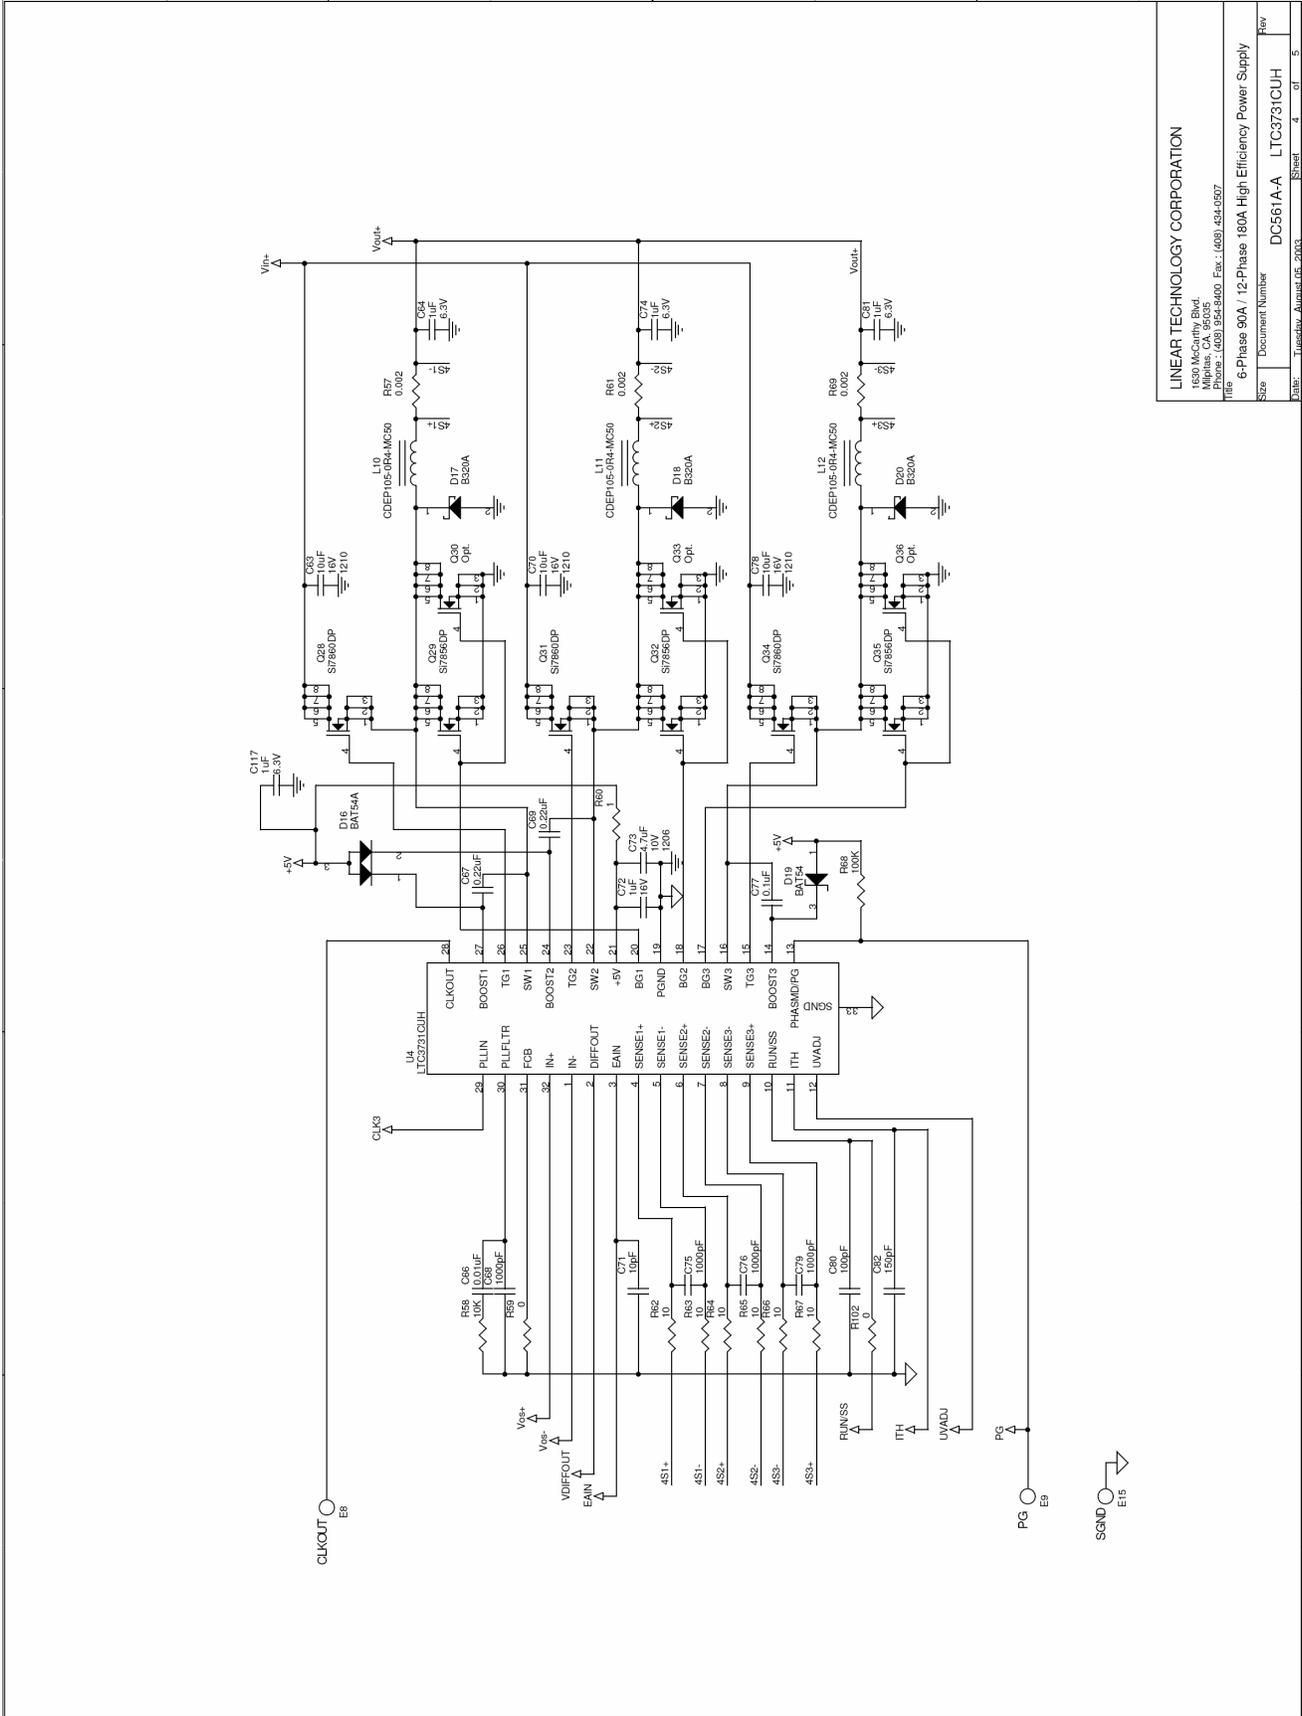




LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Milpitas, CA 95035
 Telephone: (408) 299-2000 Fax: (408) 424-6507
 Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Document Number: DC561A-A LTC3731CUH Rev
 Size: _____ of _____
 Date: Tuesday, August 16, 2005 Sheet: 4 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

Dynamic Load Circuit

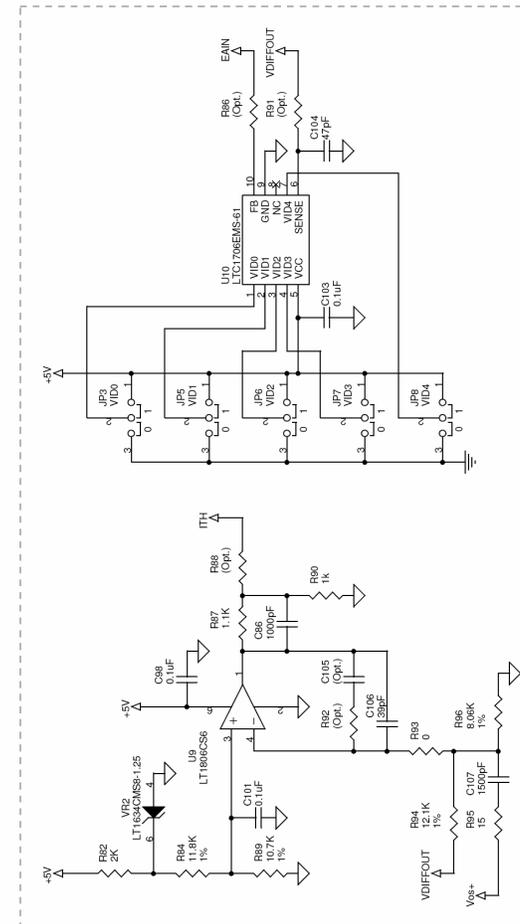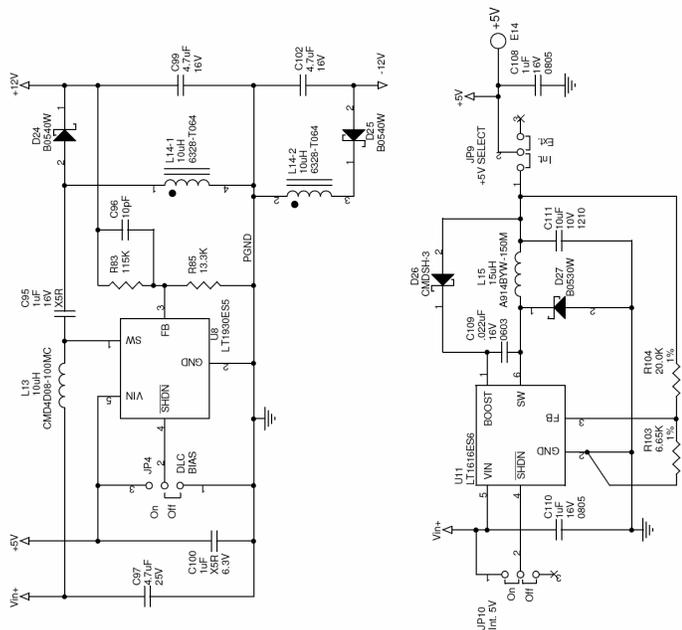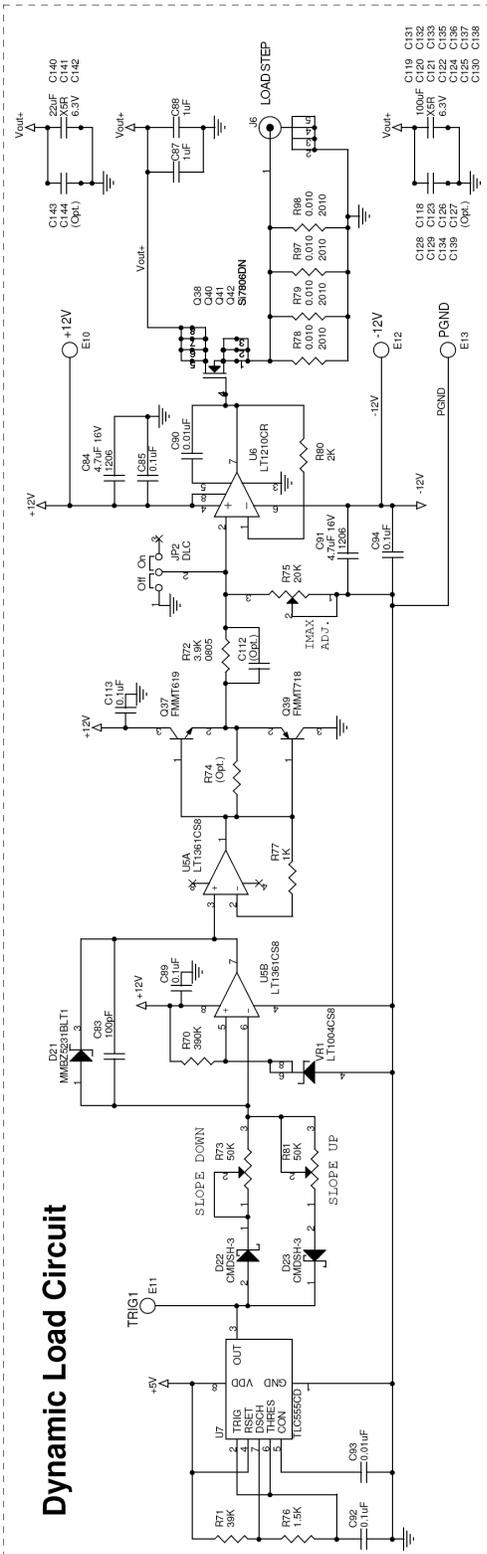


Optional External Compensation and Voltage Programming Circuit

LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Milpitas, CA 95035
 Mfg. Part: (408) 252-9600 Fax: (408) 434-6507
 Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Document Number: DC561A-A LTC3731QUH Rev. 5 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

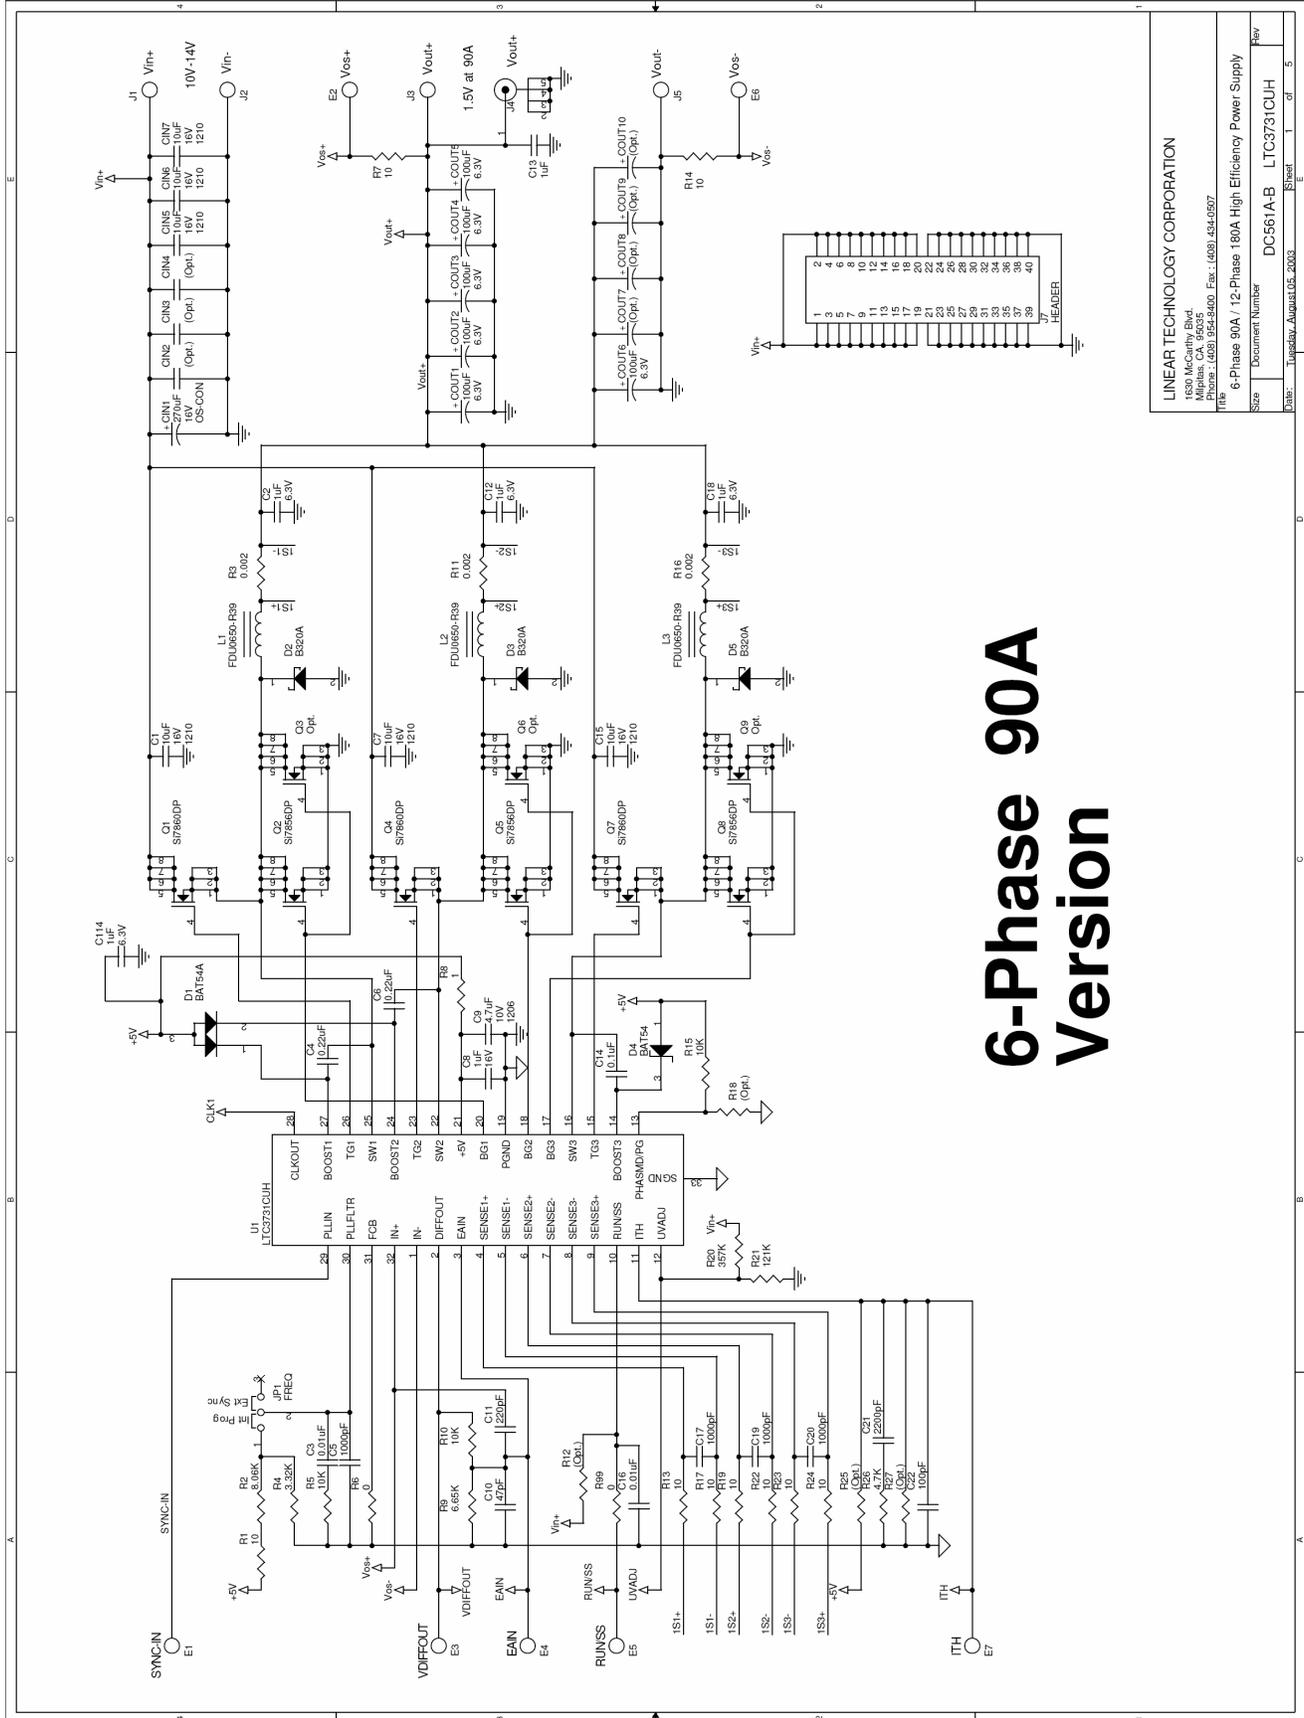

6-Phase 90A Version


LINEAR TECHNOLOGY CORPORATION
 1630 McCully Blvd.
 Milpitas, CA 95035
 Phone: (408) 954-6000 Fax: (408) 434-0907

Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Size: Document Number: DC-561A-B LTC3731CUH Rev
 Date: Updated August 05, 2003 Sheet 1 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

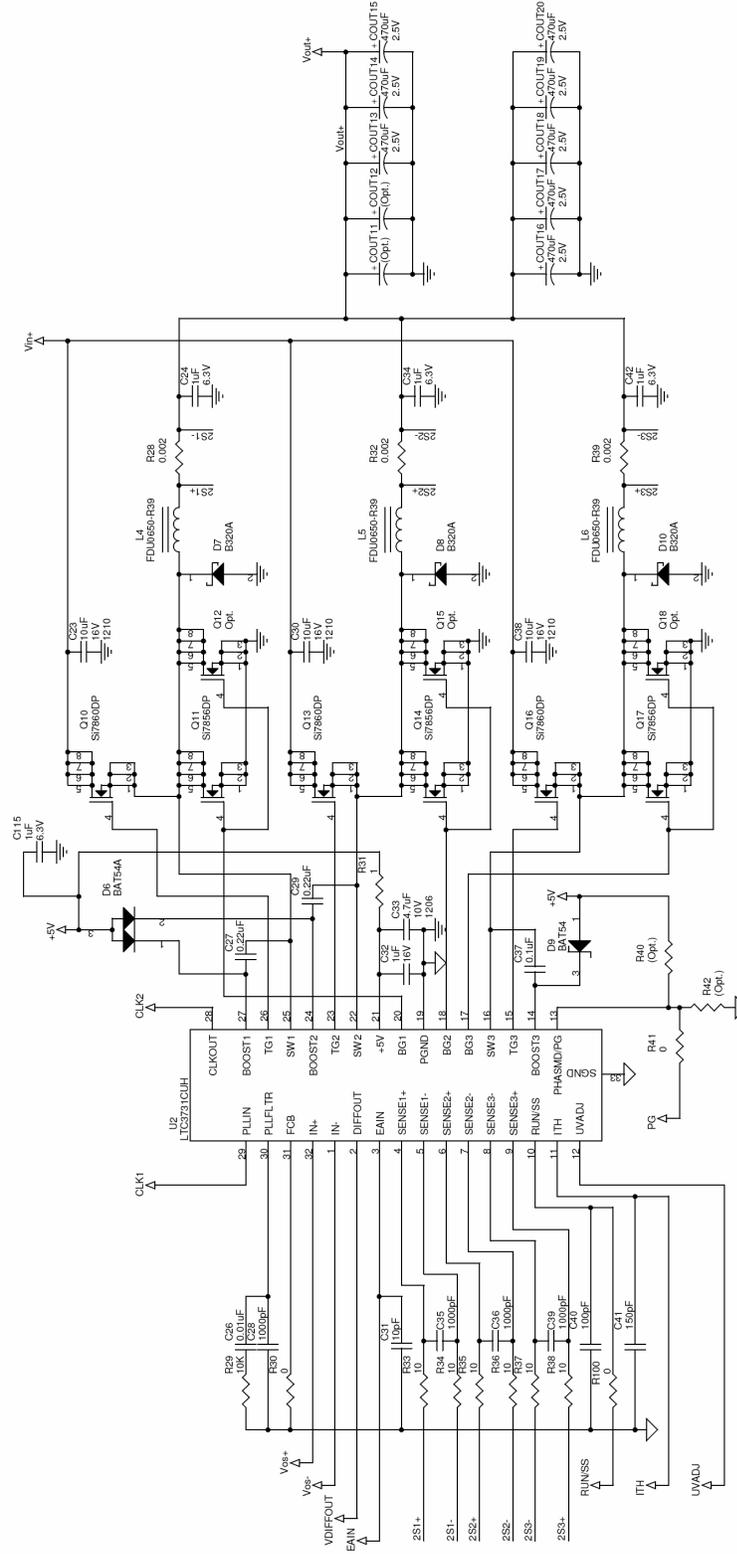

LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Milpitas, CA 95035
 Tel: (408) 299-2000 Fax: (408) 434-6507


Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Document Number: DC561A-B LTC3731CUH Rev

File: Tuesday, August 05, 2003 Sheet 2 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

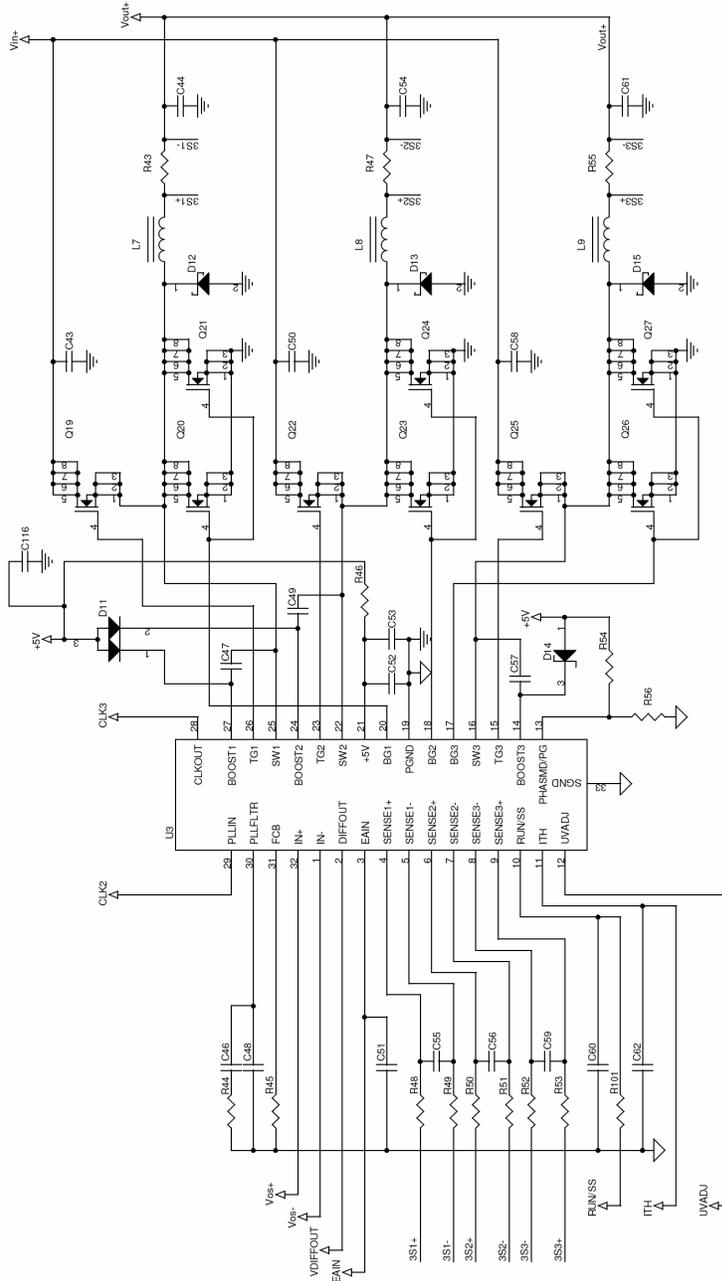


This Page Is Not Used For 6-Phase

LINEAR TECHNOLOGY CORPORATION	
1650 McCarthy Blvd. Milpitas, CA 95035 Tel: (408) 299-2000 Fax: (408) 424-6507	
Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply	
Size	Document Number
	DC561A-B LTC3731CUH Rev
File: Tjuesday_August16_2003	Sheet 3 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

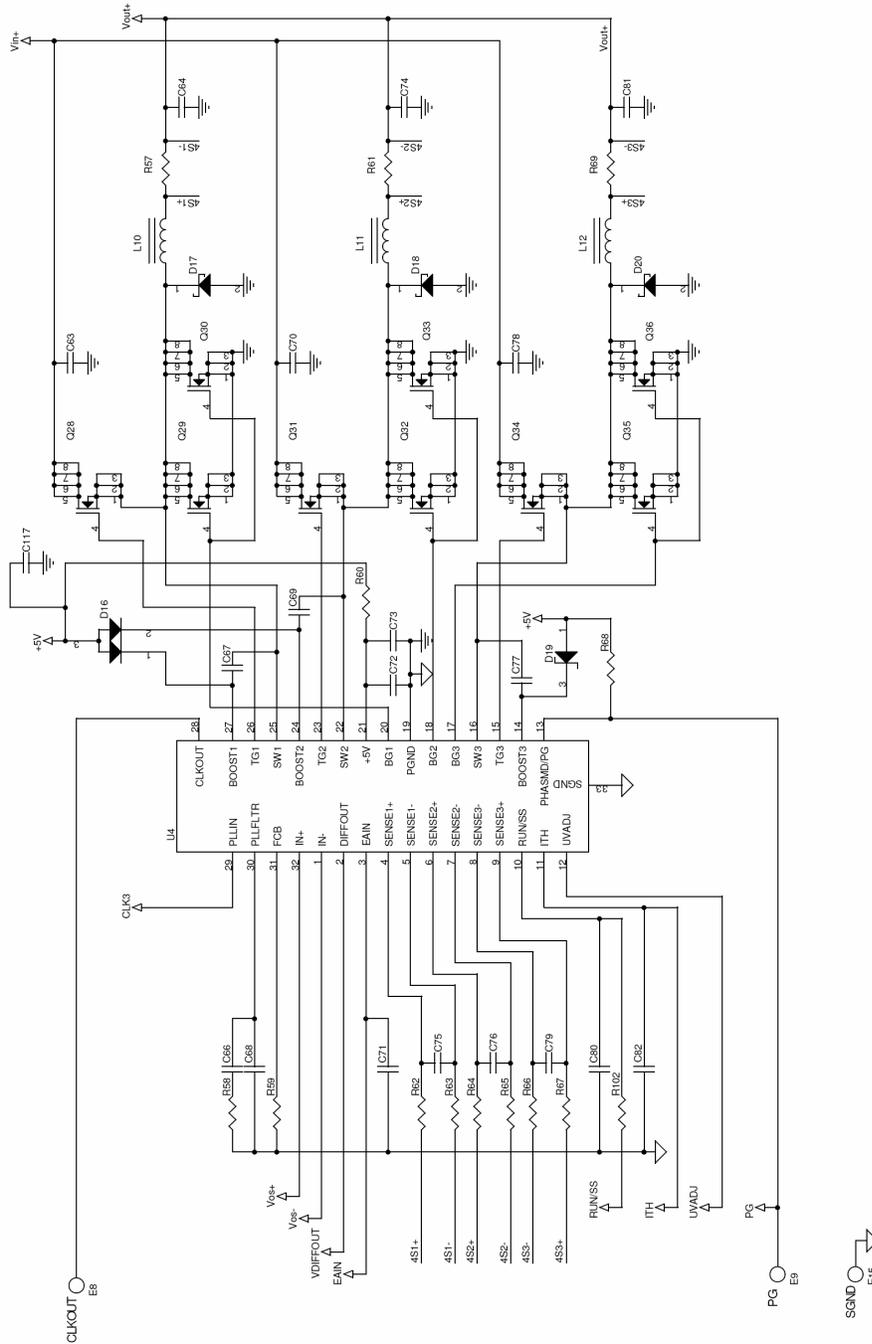

This Page Is Not Used For 6-Phase

LINEAR TECHNOLOGY CORPORATION

1630 McCarthy Blvd.
Folsom, CA 95605

Phone: (916) 952-2600 Fax: (916) 434-6507


Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Size: Document Number DC561A-B LTC5731CUH

Sheet 4 of 5

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 561A

6-PHASE 90A / 12-PHASE 180A HIGH EFFICIENCY POWER SUPPLY

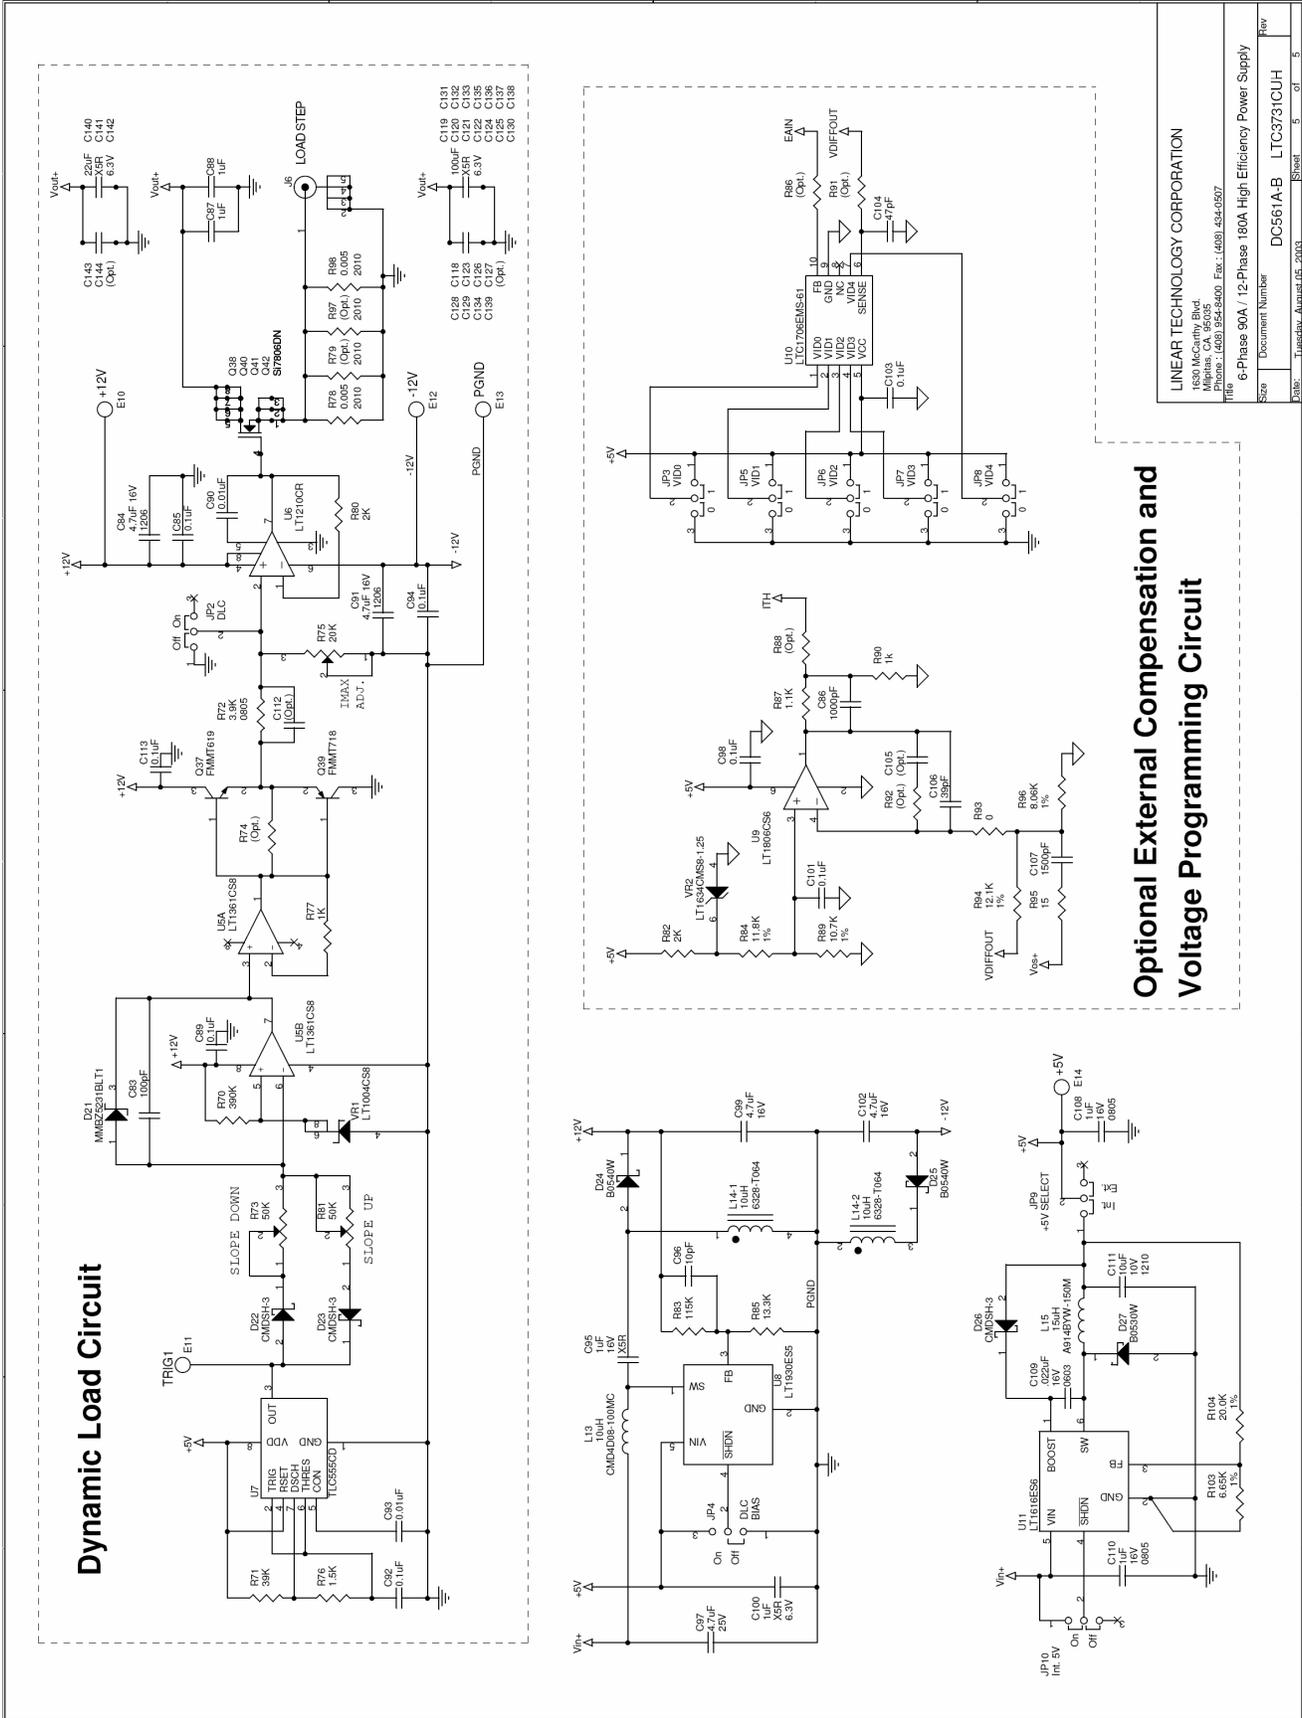

LINEAR TECHNOLOGY CORPORATION
 1630 McCarthy Blvd.
 Milpitas, CA 95035
 Tel: (408) 252-2600 Fax: (408) 454-6577
 Title: 6-Phase 90A / 12-Phase 180A High Efficiency Power Supply

Document Number: DC561A-B LTC3731CUH
 Size: _____ of _____
 Date: Tuesday, August 05, 2003 Sheet: 5 of 5

Optional External Compensation and Voltage Programming Circuit

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкуренспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru