

Foot Grounders - Grounding, Testing, and Maintenance

90P1




Made in the
United States of America

Description

Desco's complete line of foot grounders has been created to provide a continuous ground path between the operator and a properly grounded ESD protected flooring. Foot grounders are designed for use in applications where user mobility is required, such as wave solder, kitting, and quality control. Per ANSI/ESD S20.20 Paragraph 6.2.2.2, "ESD protective flooring used with approved footwear, may be used as an alternative to the wrist strap system for standing operations." Foot grounders quickly and effectively drain the static charges which collect on personnel during normal, everyday activities.

General Guidelines

1. It is recommended that foot grounders be worn on both feet, in order to assure that a continuous path to ground is maintained.
2. Grounding tabs should be tucked inside the shoe with as much contact area as possible to the bottom of the stockinged foot. Foot grounders rely upon the perspiration in the shoe to sustain electrical contact between the conductive grounding tab and the body.
3. Foot grounders should be used in conjunction with floor surfaces which have a surface resistance of less than 1×10^9 ohms.
4. A current limiting one or two megohm resistor in series with the grounding tab is recommended.

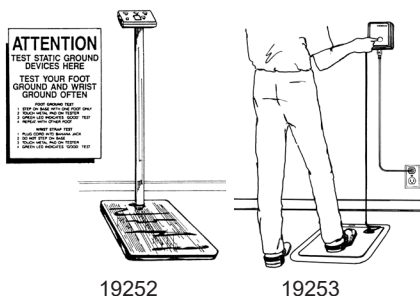

Testing Your Foot Grounders

The best test of your foot grounder is one that includes all three components: the individual foot grounder, the grounding tab and the interface between the grounding tab and the wearer's sweatlayer.

Desco has testers designed to properly test foot grounders. For more detailed information on these testers, ask for technical bulletins TB-2040 (19252, 19253).

If you obtain a fail reading from the tester you should stop working and clean the foot ground and grounding tab. Retest after cleaning. If the unit still fails, replace the foot grounder. Retest the system before beginning work.

Cleaning

Foot grounders are to ground static charges, while dirt generally provides an insulative layer adversely affecting reliability. For proper operation, the Foot Grounder and its conductive strip must be kept clean.


The rubber portion of the Foot Grounder should be cleaned using Desco's Reztore™ Antistatic Surface & Mat Cleaner or "Static-Wipes" wipers. An alternative would be to clean using isopropyl alcohol. The Desco cleaning products are specially formulated for cleaning ESD control components and are silicone free. This is critical as silicone is an insulator. Desco ESD cleaners should not be used to clean the nylon polyester grounding tab.

Foot Grounders can be safely hand or machine washed on gentle cycle. Mild detergents, such as Woolite® or a liquid dish washing product and warm water are recommended. However, care must be taken to ensure that these detergents are silicone free.

Installation

HOOK & LOOP AND MARR RESISTANT HEEL GROUNDERS

Desco model 07560, 17200, 17202, 17250, 17252, and 17260 heel grounders are designed for use on standard shoes. All Desco foot grounders can be easily adjusted to fit the individual wearer. Desco heel grounders have a dissipative lining that will not mar white or light colored shoes. Models 07560, 17200, 17202, and 17252 have a current limiting one or two megohm resistor in series with the grounding tab. Models 17250 and have no resistor.

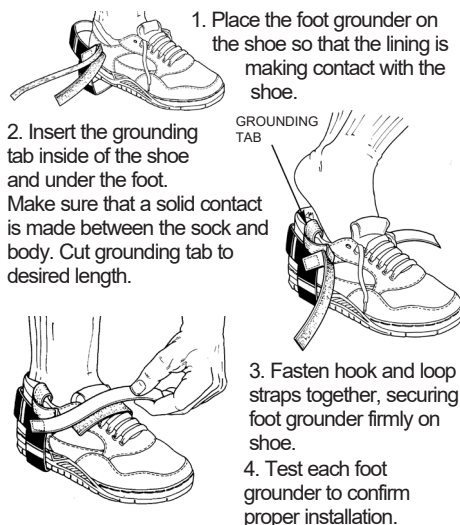

D-RING HEEL GROUNDERS


Desco model 07590 heel grounders are equipped with an elastic D-ring fastening system which provides snug cinching of the ankle strap and allows "flex" during walking. They are designed for use on most types of shoes and boots. The light blue lining prevents marring on white or light colored shoes.



These foot grounders include a molded external resistor and a permanently attached grounding tab.

1. Place foot grounder on the shoe so that the blue lining is making contact with the shoe.

2. Insert the grounding tab inside of the shoe and under the foot. Make sure that a solid contact is made between the sock and body. Cut grounding tab to desired length.

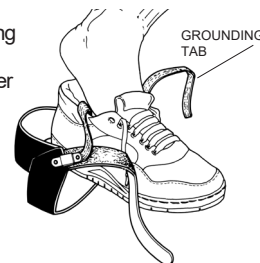


3. Pull the strap through the D-ring and clined down for a snug, comfortable fit.
4. Test each foot grounder to confirm proper installation.

HEEL GROUNDER WITH SNAP-LOC FASTENING SYSTEM

The Desco model 07515 heel grounders are equipped with a Snap-Loc quick release fastening system. The model 07515 has a cup and lining that will not mar shoes or floors. The 07515 has a molded exterior 2 megohm resistor.

1. Insert the grounding tab inside of the shoe and under the foot. Make sure that a solid contact is made between the sock and body. Cut grounding tab to desired length.

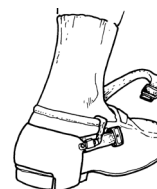


2. Fit the heel cup snugly to shoe and connect the Snap-Loc fastener together. Adjust elastic strap for comfortable fit. Tuck excess elastic strap behind itself.

3. Test each heel grounder to confirm proper installation.

HOOK & LOOP TOE GROUNDERS


Desco model 17222 toe grounders are designed for use on heeled shoes. Desco toe grounders have a lining that prevents marring on white or light colored shoes. Model 17222 has a current limiting one megohm resistor in series with the grounding tab.

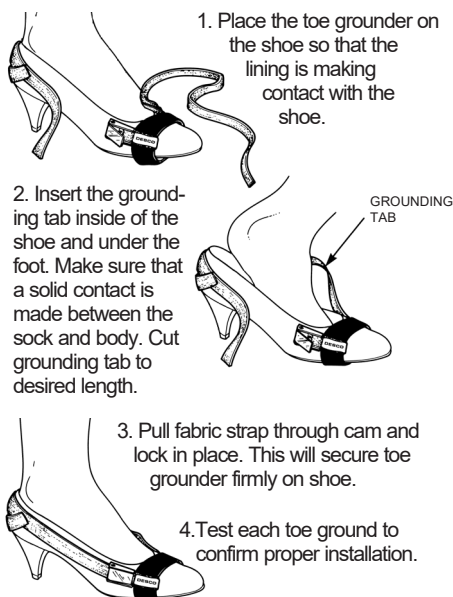

D-RING TOE GROUNDERS




Desco model 07595 toe grounders with the elastic D-ring fastening system are designed for use on heeled shoes. Desco toe grounders have a blue lining that will prevent marring on white or light colored shoes. These toe grounders include a molded external 2 megohm resistor and a permanently attached grounding tab.

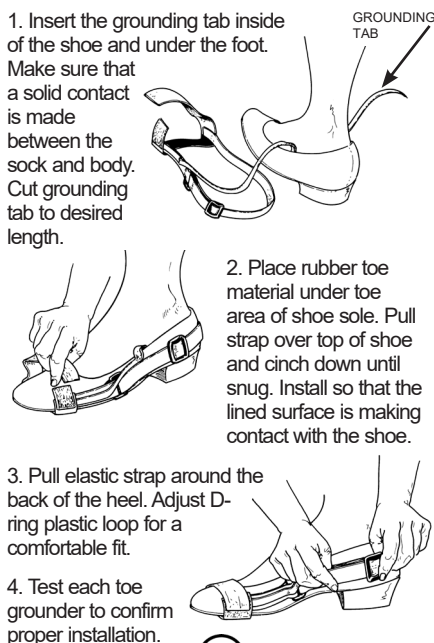

SOLE GROUNDERS




Desco model 07501, 07502, and 07503 sole grounders are designed for use on standard shoes. Desco sole grounders are available in three sizes and can be easily adjusted to fit the individual wearer. Sole grounders have a lining that prevents marring on white or light colored shoes. Models 07507, 07508, and 07509 also have a non-marring exterior to prevent marks on floors. Sole grounders have a molded exterior 2 megohm resistor.

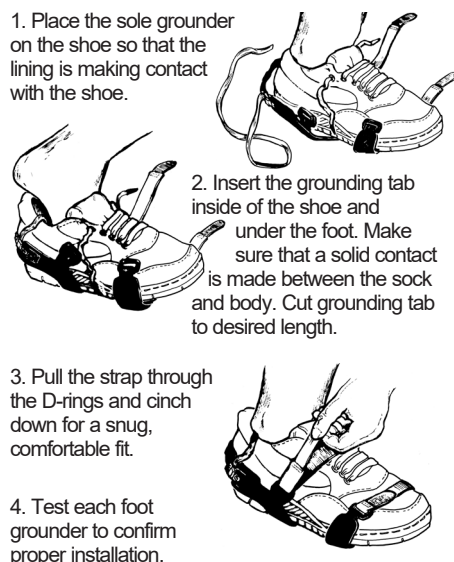

FULL COVERAGE GROUNDERS




Desco model 17290, 17291, and 17292 full coverage grounders are designed for use on standard shoes. They can be easily adjusted to fit the individual wearer. They have a lining that will not mar most footwear. These foot grounders have a discrete one megohm resistor built into the grounding tab.

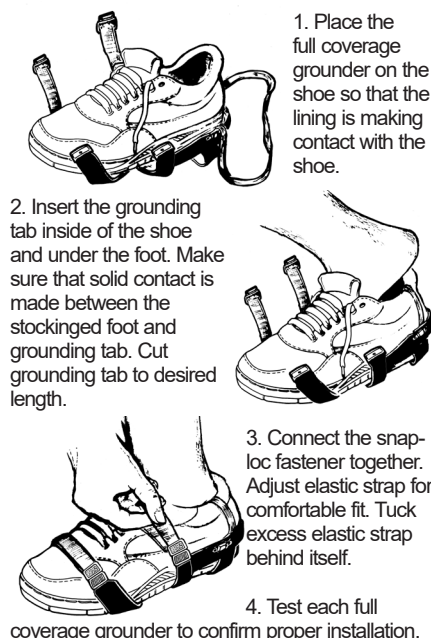

SOLE GROUNDER WITH SNAP-LOC FASTENING SYSTEM



The Desco model 17239 sole grounders are equipped with a Snap-Loc quick release fastening system. The model 17239 has a cup and lining that will not mar shoes or floors. The 17239 has a molded exterior 2 megohm resistor.

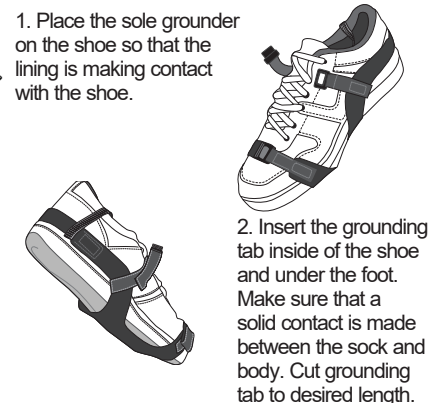

Snap-Loc Fastening System

3. Connect the Snap-Loc fastener together. Adjust elastic strap for comfortable fit. Tuck excess elastic strap behind itself.
4. Test each heel grounder to confirm proper installation.

DISPOSABLE FOOT GROUNDERS



1. Insert the conductive grounding tab inside the shoe and under the foot.
2. Pull front and side extension tabs securing Full Coverage Foot Grounder around the periphery of shoe positioning straps near heel and ball of foot.
3. Then, tuck excess conductive grounding tab into the shoe.
4. Test each foot grounder on an ESD footwear tester to confirm proper installation.

ATTENTION: This product is not recommended for use on equipment with operating voltage exceeding 250 VAC.

CAUTION: The ESD Series is for electrostatic control. It will not reduce or increase your risk of receiving electric shock when using or working on electrical equipment. Follow the same precautions you would use without wrist straps, including:

- Make certain that equipment having a grounding type plug is properly grounded.
- Make certain that you are not in contact with grounded objects other than through the ESD Series.

Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See Desco's Terms and Conditions -
<http://desco.descoindustries.com/Terms-And-Conditions.aspx>

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru