

Revision History

Revision	Details	Date
Rev 1.0	Preliminary datasheet	February 2014
Rev 2.0	Correct some typing mistakes.	March 2014
Rev 3.0	1. Add AS4C16M16SA-6TCN part.	March 2015
	2. Modify ordering information.	
	3. Add part number system on the last page.	

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070

TEL: (650) 610-6800 FAX: (650) 620-9211

Alliance Memory Inc. reserves the right to change products or specification without notice.

Confidential 0 Rev. 3.0 Mar./2015



256M - (16Mx16bit) Synchronous DRAM (SDRAM)

Confidential

Advanced(Rev. 3.0, Mar. /2015)

Features

• Fast access time from clock: 5/5.4 ns

• Fast clock rate: 166/143 MHz

- Fully synchronous operation
- Internal pipelined architecture
- 4M word x 16-bit x 4-bank
- Programmable Mode registers
 - CAS Latency: 2 or 3
 - Burst Length: 1, 2, 4, 8, or full page
 - Burst Type: Sequential or Interleaved
 - Burst stop function
- Operating temperature range
 - Commercial (0 ~ 70°C)
 - Industrial (-40 ~ 85°C)
- · Auto Refresh and Self Refresh
- 8192 refresh cycles/64ms
- CKE power down mode
- Single +3.3V ±0.3V power supply
- Interface: LVTTL
- 54-pin 400 mil plastic TSOP II package
- 54-ball 8.0 x 8.0 x 1.2mm (max) FBGA package
 - All parts ROHS are compliant

Overview

The 256Mb SDRAM is a high-speed CMOS synchronous DRAM containing 256 Mbits. It is internally configured as 4 Banks of 4M word x 16 DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of a BankActivate command which is then followed by a Read or Write command.

The SDRAM provides for programmable Read or Write burst lengths of 1, 2, 4, 8, or full page, with a burst termination option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence. The refresh functions, either Auto or Self Refresh are easy to use.

By having a programmable mode register, the system can choose the most suitable modes to maximize its performance. These devices are well suited for applications requiring high memory bandwidth and particularly well suited to high performance PC applications.

Table 1. Key Specifications

	AS 4C16M16SA	-6/7
tCK3	Clock Cycle time (min.)	6/7 ns
tAC3	Access time from CLK (max.)	5/5.4 ns
tRAS	Row Active time (min.)	42/42 ns
tRC	Row Cycle time (min.)	60/63 ns

Table 2. Ordering Information

Part Number	Frequency	Package	Temperature	Temp Range
AS4C16M16SA-7TCN	143 MHz	54 pin TSOP II	Commercial	0~70℃
AS4C16M16SA-6TCN	166 MHz	54 pin TSOP II	Commercial	0~70℃
AS4C16M16SA-6TIN	166 MHz	54 pin TSOP II	Industrial	-40~85°C
AS4C16M16SA-7BCN	143 MHz	54 ball TFBGA	Commercial	0~70℃
AS4C16M16SA-6BIN	166 MHz	54 ball TFBGA	Industrial	-40~85℃

T: indicates TSOP II package B: indicates TFBGA package

C: Commercial I: Industrial

N: indicates Pb free and Halogen free



Figure 1. Pin Assignment (Top View)

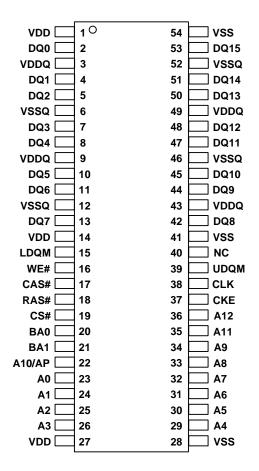



Figure 1.1 Ball Assignment (Top View)

	1	2	3	•••	7	8	9
Α	vss	DQ15	VSSQ		VDDQ	DQ0	VDD
В	DQ14	DQ13	VDDQ		VSSQ	DQ2	DQ1
С	DQ12	DQ11	VSSQ		VDDQ	DQ4	DQ3
D	DQ10	DQ9	VDDQ		VSSQ	DQ6	DQ5
Ε	DQ8	NC	VSS		VDD	LDQM	DQ7
F	UDQM	CLK	CKE		CAS#	RAS#	WE#
G	A12	A11	(A9)		BA0	BA1	CS#
Н	(A8)	(A7)	(A6)		AO	(A1)	A10
J	VSS	A5	A4		(A3)	A2	VDD

Confidential 2 Rev. 3.0 Mar. /2015



Figure 2. Block Diagram

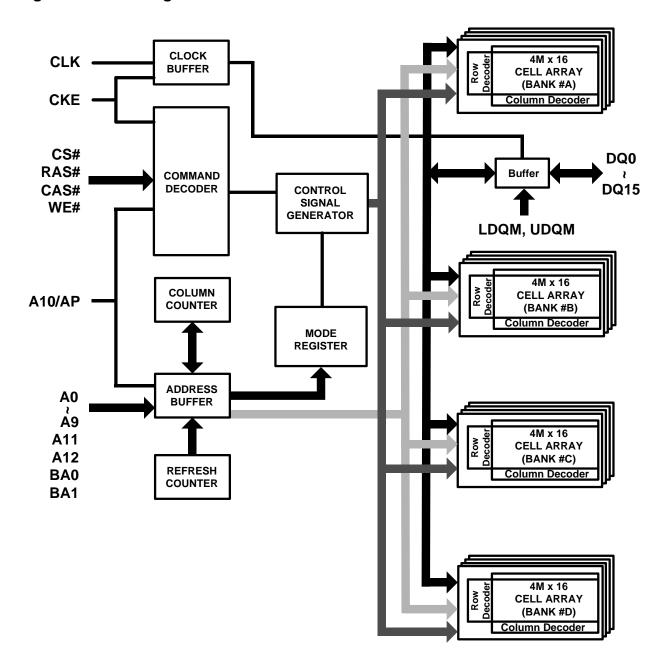

Pin Descriptions



Table 3. Pin Details

Symbol	Туре		Description					
CLK	Input		Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.					
CKE	Input	goes low synchronously w internal clock is suspended address is frozen as long as deactivating the clock contr CKE is synchronous exce modes, where CKE becom	Clock Enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. If CKE goes low synchronously with clock (set-up and hold time same as other inputs), the internal clock is suspended from the next clock cycle and the state of output and burs address is frozen as long as the CKE remains low. When all banks are in the idle state deactivating the clock controls the entry to the Power Down and Self Refresh modes CKE is synchronous except after the device enters Power Down and Self Refresh modes, where CKE becomes asynchronous until exiting the same mode. The input buffers, including CLK, are disabled during Power Down and Self Refresh modes providing low standby power.					
BA0,BA1	Input	Bank Activate: BA0, BA1 i	nput select the bank for op	peration.				
		BA1	BA0	Select Bank				
		0	0	BANK #A				
		0	1	BANK #B				
		1	0	BANK #C				
		1	1	BANK #D				
A0-A12	Input	A0-A12) and Read/Write of Precharge) to select one local Precharge command, A10 (A10 = HIGH). The address command.	command (column address cation out of the 4M availa 0 is sampled to determine inputs also provide the op	nkActivate command (row address as A0-A8 with A10 defining Auto able in the respective bank. During a if all banks are to be precharged o-code during a Mode Register Set				
CS#	Input	decoder. All commands ar	e masked when CS# is	les (sampled HIGH) the command sampled HIGH. CS# provides for anks. It is considered part of the				
RAS#	Input	conjunction with the CAS# CLK. When RAS# and CS# the BankActivate command When the WE# is asserted bank designated by BA is "LOW," the Precharge command."	Row Address Strobe: The RAS# signal defines the operation commands in conjunction with the CAS# and WE# signals and is latched at the positive edges of CLK. When RAS# and CS# are asserted "LOW" and CAS# is asserted "HIGH," either the BankActivate command or the Precharge command is selected by the WE# signal. When the WE# is asserted "HIGH," the BankActivate command is selected and the bank designated by BA is turned on to the active state. When the WE# is asserted "LOW," the Precharge command is selected and the bank designated by BA is switched to the idle state after the precharge operation.					
CAS#	Input	Column Address Strobe: The CAS# signal defines the operation commands in conjunction with the RAS# and WE# signals and is latched at the positive edges of CLK. When RAS# is held "HIGH" and CS# is asserted "LOW," the column access is started by asserting CAS# "LOW." Then, the Read or Write command is selected by asserting WE# "LOW" or "HIGH."						
WE#	Input	RAS# and CAS# signals ar	Write Enable: The WE# signal defines the operation commands in conjunction with the RAS# and CAS# signals and is latched at the positive edges of CLK. The WE# input is used to select the BankActivate or Precharge command and Read or Write command.					
LDQM, UDQM	Input	Data Input/Output Mask: (Input data in write mode.	Controls output buffers in r	read mode and masks				

Confidential 4 Rev. 3.0 Mar. /2015



AS4C16M16SA-C&I

DQ0-DQ15	Input / Output	Data I/O: The DQ0-15 input and output data are synchronized with the positive edges of CLK. The I/Os are maskabled during Reads and Writes.
NC	-	No Connect: These pins should be left unconnected.
VDDQ	Supply	DQ Power: Provide isolated power to DQs for improved noise immunity. (3.3V± 0.3V)
Vssq	Supply	DQ Ground: Provide isolated ground to DQs for improved noise immunity. (0 V)
V _{DD}	Supply	Power Supply: +3.3V ± 0.3V
Vss	Supply	Ground

Confidential 5 Rev. 3.0 Mar. /2015



Operation Mode

Fully synchronous operations are performed to latch the commands at the positive edges of CLK. Table 4 shows the truth table for the operation commands.

Table 4. Truth Table (Note (1), (2))

Command	State	CKE _{n-1}	CKEn	DQM	BA0,1	A10	A0-9,11-12	CS#	RAS#	CAS#	WE#
BankActivate	Idle ⁽³⁾	Н	Х	Х	V	Ro	w address	L	L	Н	Н
BankPrecharge	Any	Н	Х	Х	V	L	Х	L	L	Н	L
PrechargeAll	Any	Н	Х	Х	Х	Н	Х	L	L	Н	L
Write	Active ⁽³⁾	Н	Х	V	V	L	Column address	L	Н	L	L
Write and AutoPrecharge	Active ⁽³⁾	Н	Х	V	V	Н	(A0 ~ A8)	L	Н	L	L
Read	Active ⁽³⁾	Н	Х	V	V	L	Column	L	Н	L	Н
Read and Autoprecharge	Active ⁽³⁾	Н	Х	V	V	Н	address (A0 ~ A8)	L	Н	L	Н
Mode Register Set	Idle	Н	Х	Х		OP	code	L	L	L	L
No-Operation	Any	Н	Х	Х	Х	Х	Х	L	Н	Н	Н
Burst Stop	Active ⁽⁴⁾	Н	Х	Х	Х	Х	Х	L	Н	Н	L
Device Deselect	Any	Н	Х	Х	Х	Х	Х	Н	Х	Х	Х
AutoRefresh	Idle	Н	Н	Х	Х	Х	Х	L	L	L	Н
SelfRefresh Entry	Idle	Н	L	Х	Х	Х	X	L	L	L	Τ
SelfRefresh Exit	Idle	L	Н	Х	Х	Х	Х	Ι	Χ	Χ	Χ
	(SelfRefresh)	L	17	^	^	^	^	L	Н	Н	Τ
Clock Suspend Mode Entry	Active	Н	L	Х	Х	Х	Х	Ι	Χ	Χ	Χ
								L	V	V	V
Power Down Mode Entry	Any ⁽⁵⁾	Н	L	Х	Х	Х	Х	Ι	Χ	Χ	Χ
			L	^	^	^	^	L	Н	Н	Н
Clock Suspend Mode Exit	Active	L	Н	Х	Х	Х	Х	Х	Х	Х	Х
Power Down Mode Exit	Any	L	Н	Х	Х	Х	Х	Н	Х	Х	Х
	(PowerDown)							L	Н	Н	Η
Data Write/Output Enable	Active	Н	Х	L	Х	Χ	Х	Х	Х	Х	Х
Data Mask/Output Disable	Active	Н	Х	Н	Х	Х	Х	Х	Х	Χ	Х

Note: 1. V=Valid, X=Don't Care, L=Low level, H=High level

2. CKE_n signal is input level when commands are provided. CKE_{n-1} signal is input level one clock cycle before the commands are provided.

- 3. These are states of bank designated by BA signal.
- 4. Device state is 1, 2, 4, 8, and full page burst operation.
- 5. Power Down Mode can not enter in the burst operation.

 When this command is asserted in the burst cycle, device state is clock suspend mode.

Confidential 6 Rev. 3.0 Mar. /2015



Commands

1 BankActivate

(RAS# = "L", CAS# = "H", WE# = "H", BAs = Bank, A0-A12 = Row Address)

The BankActivate command activates the idle bank designated by the BA0, 1 signals. By latching the row address on A0 to A12 at the time of this command, the selected row access is initiated. The read or write operation in the same bank can occur after a time delay of tRCD(min.) from the time of bank activation. A subsequent BankActivate command to a different row in the same bank can only be issued after the previous active row has been precharged (refer to the following figure). The minimum time interval between successive BankActivate commands to the same bank is defined by tRC(min.). The SDRAM has four internal banks on the same chip and shares part of the internal circuitry to reduce chip area; therefore it restricts the back-to-back activation of the two banks. trrd(min.) specifies the minimum time required between activating different banks. After this command is used, the Write command and the Block Write command perform the no mask write operation.

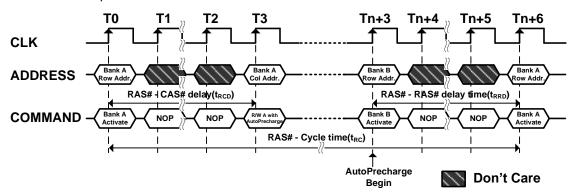


Figure 3. BankActivate Command Cycle (Burst Length = n)

2 BankPrecharge command

(RAS# = "L", CAS# = "H", WE# = "L", BAs = Bank, A10 = "L", A0-A9, A11 and A12 = Don't care)

The BankPrecharge command precharges the bank designated by BA signal. The precharged bank is switched from the active state to the idle state. This command can be asserted anytime after tras(min.) is satisfied from the BankActivate command in the desired bank. The maximum time any bank can be active is specified by tras(max.). Therefore, the precharge function must be performed in any active bank within tras(max.). At the end of precharge, the precharged bank is still in the idle state and is ready to be activated again.

3 PrechargeAll command

(RAS# = "L", CAS# = "H", WE# = "L", BAs = Don't care, A10 = "H", A0-A9, A11 and A12 = Don't care)

The PrechargeAll command precharges all banks simultaneously and can be issued even if all banks are not in the active state. All banks are then switched to the idle state.

4 Read command

(RAS# = "H", CAS# = "L", WE# = "H", BAs = Bank, A10 = "L", A0-A8 = Column Address)

The Read command is used to read a burst of data on consecutive clock cycles from an active row in an active bank. The bank must be active for at least tRCD(min.) before the Read command is issued. During read bursts, the valid data-out element from the starting column address will be available following the CAS latency after the issue of the Read command. Each subsequent data-out element will be valid by the next positive clock edge (refer to the following figure). The DQs go into high-impedance at the end of the burst unless other command is initiated. The burst length, burst sequence, and CAS latency are determined by the mode register, which is already programmed. A full-page burst will continue until terminated (at the end of the page it will wrap to column 0 and continue).

Confidential 7 Rev. 3.0 Mar. /2015



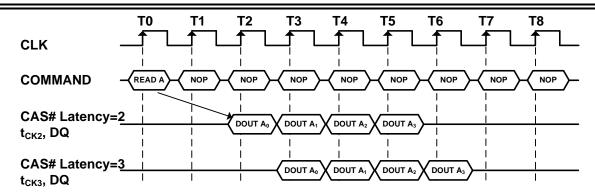


Figure 4. Burst Read Operation (Burst Length = 4, CAS# Latency = 2, 3)

The read data appears on the DQs subject to the values on the DQM inputs two clocks earlier (i.e. DQM latency is two clocks for output buffers). A read burst without the auto precharge function may be interrupted by a subsequent Read or Write command to the same bank or the other active bank before the end of the burst length. It may be interrupted by a BankPrecharge/ PrechargeAll command to the same bank too. The interrupt coming from the Read command can occur on any clock cycle following a previous Read command (refer to the following figure).

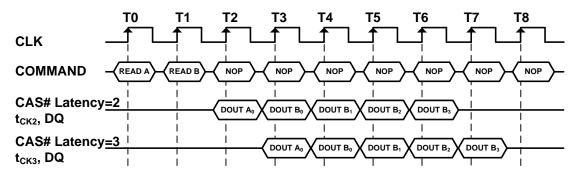


Figure 5. Read Interrupted by a Read (Burst Length = 4, CAS# Latency = 2, 3)

The DQM inputs are used to avoid I/O contention on the DQ pins when the interrupt comes from a Write command. The DQMs must be asserted (HIGH) at least two clocks prior to the Write command to suppress data-out on the DQ pins. To guarantee the DQ pins against I/O contention, a single cycle with high-impedance on the DQ pins must occur between the last read data and the Write command (refer to the following three figures). If the data output of the burst read occurs at the second clock of the burst write, the DQMs must be asserted (HIGH) at least one clock prior to the Write command to avoid internal bus contention.

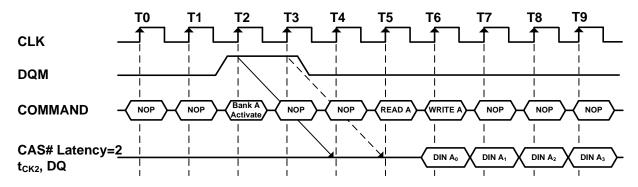


Figure 6. Read to Write Interval (Burst Length ≥ 4, CAS# Latency = 2)

Confidential 8 Rev. 3.0 Mar. /2015



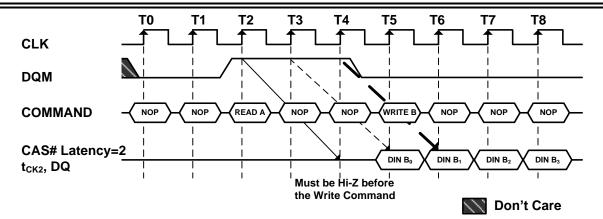


Figure 7. Read to Write Interval (Burst Length ≥ 4, CAS# Latency = 2)

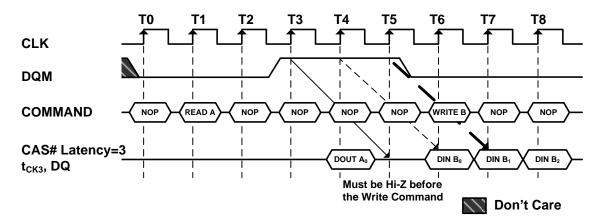


Figure 8. Read to Write Interval (Burst Length ≥ 4, CAS# Latency = 3)

A read burst without the auto precharge function may be interrupted by a BankPrecharge/ PrechargeAll command to the same bank. The following figure shows the optimum time that BankPrecharge/ PrechargeAll command is issued in different CAS latency.

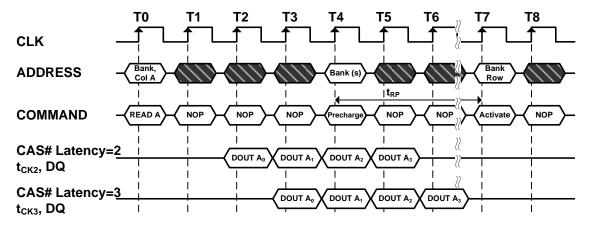


Figure 9. Read to Precharge (CAS# Latency = 2, 3)

Confidential 9 Rev. 3.0 Mar. /2015



5 Read and AutoPrecharge command

(RAS# = "H", CAS# = "L", WE# = "H", BAs = Bank, A10 = "H", A0-A8 = Column Address)

The Read and AutoPrecharge command automatically performs the precharge operation after the read operation. Once this command is given, any subsequent command cannot occur within a time delay of {t_{RP}(min.) + burst length}. At full-page burst, only the read operation is performed in this command and the auto precharge function is ignored.

6 Write command

(RAS# = "H", CAS# = "L", WE# = "L", BAs = Bank, A10 = "L", A0-A8 = Column Address)

The Write command is used to write a burst of data on consecutive clock cycles from an active row in an active bank. The bank must be active for at least tRCD(min.) before the Write command is issued. During write bursts, the first valid data-in element will be registered coincident with the Write command. Subsequent data elements will be registered on each successive positive clock edge (refer to the following figure). The DQs remain with high-impedance at the end of the burst unless another command is initiated. The burst length and burst sequence are determined by the mode register, which is already programmed. A full-page burst will continue until terminated (at the end of the page it will wrap to column 0 and continue).

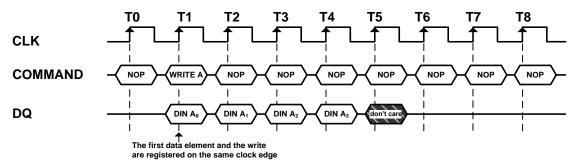


Figure 10. Burst Write Operation (Burst Length = 4)

A write burst without the auto precharge function may be interrupted by a subsequent Write, BankPrecharge/PrechargeAll, or Read command before the end of the burst length. An interrupt coming from Write command can occur on any clock cycle following the previous Write command (refer to the following figure).

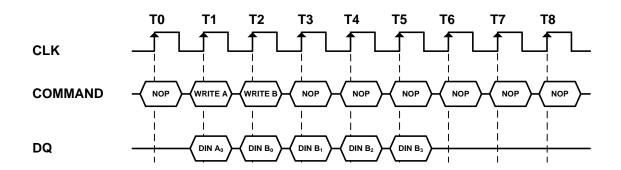


Figure 11. Write Interrupted by a Write (Burst Length = 4)

The Read command that interrupts a write burst without auto precharge function should be issued one cycle after the clock edge in which the last data-in element is registered. In order to avoid data contention, input data must be removed from the DQs at least one clock cycle before the first read data appears on the outputs (refer to the following figure). Once the Read command is registered, the data inputs will be ignored and writes will not be executed.

Confidential 10 Rev. 3.0 Mar. /2015




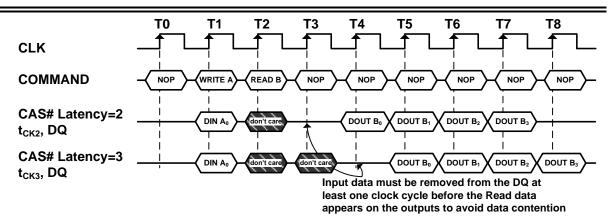


Figure 12. Write Interrupted by a Read (Burst Length = 4, CAS# Latency = 2, 3)

The BankPrecharge/PrechargeAll command that interrupts a write burst without the auto precharge function should be issued m cycles after the clock edge in which the last data-in element is registered, where m equals twr/tck rounded up to the next whole number. In addition, the DQM signals must be used to mask input data, starting with the clock edge following the last data-in element and ending with the clock edge on which the BankPrecharge/PrechargeAll command is entered (refer to the following figure).

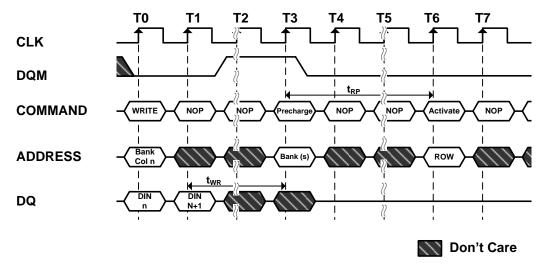

Note: The DQMs can remain low in this example if the length of the write burst is 1 or 2.

Figure 13. Write to Precharge

7 Write and AutoPrecharge command (RAS# = "H", CAS# = "L", WE# = "L", BAs = Bank, A10 = "H", A0-A8 = Column Address)

The Write and AutoPrecharge command performs the precharge operation automatically after the write operation. Once this command is given, any subsequent command can not occur within a time delay of $\{(burst length -1) + tw_R + t_{RP}(min.)\}$. At full-page burst, only the write operation is performed in this command and the auto precharge function is ignored.

Confidential 11 Rev. 3.0 Mar. /2015



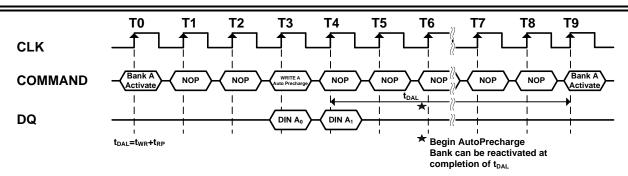


Figure 14. Burst Write with Auto-Precharge (Burst Length = 2)

8 Mode Register Set command (RAS# = "L", CAS# = "L", WE# = "L", A0-A12 = Register Data)

The mode register stores the data for controlling the various operating modes of SDRAM. The Mode Register Set command programs the values of CAS latency, Addressing Mode and Burst Length in the Mode register to make SDRAM useful for a variety of different applications. The default values of the Mode Register after power-up are undefined; therefore this command must be issued at the power-up sequence. The state of pins A0~ A12 in the same cycle is the data written to the mode register. Two clock cycles are required to complete the write in the mode register (refer to the following figure). The contents of the mode register can be changed using the same command and the clock cycle requirements during operation as long as all banks are in the idle state.

Table 5. Mode Register Bitmap

BA1	BA0	A12	A11	A10		A9	A8	A7	A6	A5	A4	АЗ	A2	A1	A0
RFU*	0		RFU*		٧	NBL	Test	Mode	CAS Latency		ency	BT	Burst Length		gth
		┰						—		<u></u>			—		
A9	Write I	Burst I	Mode		84	A7		Test N	∕lode			A3	Βι	ırst Typ	е
0		Burst			0	0		Norr	mal			0	Se	equenti	al
1	Sii	ngle B	it		1	0	Ve	ndor U	lse On	ly		1	In	terleav	е
					0	1	Ve	ndor U	lse On	ly					
			Ţ										▼		
A6	A5	A4	CA	S Lat	end	су			A2	A1	A0		Burst	t Lengt	h
0	0	0	F	Reserv	/ed				0	0	0			1	
0	0	1	F	Reserv	/ed				0	0	1			2	
0	1	0		2 cloc	ks				0	1	0			4	
0	1	1	;	3 clocks					0	1	1			8	_
1	1 0 0 Reserved							1	1	1	Ful	l Page	(Sequ	ential)	
	All	other F	Reserv	⁄ed						-	All othe	r Rese	erved		

^{*}Note: RFU (Reserved for future use) should stay "0" during MRS cycle.

Confidential 12 Rev. 3.0 Mar. /2015



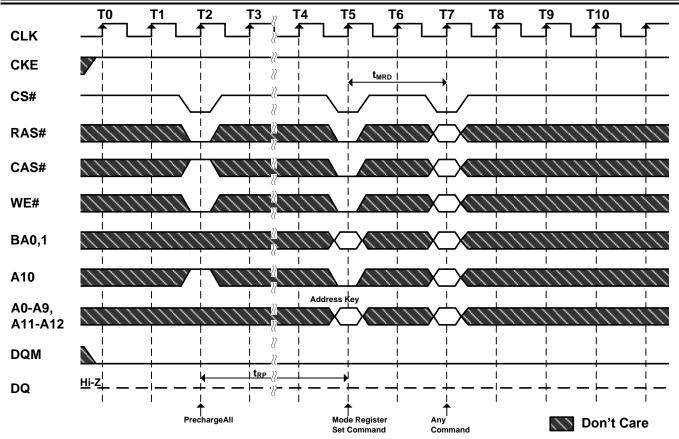


Figure 15. Mode Register Set Cycle

• Burst Length Field (A2~A0)

This field specifies the data length of column access using the A2~A0 pins and selects the Burst Length to be 2, 4, 8, or full page.

Table 6. Burst Length Field

A2	A1	A0	Burst Length
0	0	0	1
0	0	1	2
0	1	0	4
0	1	1	8
1	0	0	Reserved
1	0	1	Reserved
1	1	0	Reserved
1	1	1	Full Page

Full Page Length: 512

• Burst Type Field (A3)

The Addressing Mode can be one of two modes, Interleave Mode or Sequential Mode. Sequential Mode supports burst length of 1, 2, 4, 8, or full page, but Interleave Mode only supports burst length of 4 and 8.

Table 7. Addressing Mode Select Field

A3	Burst Type
0	Sequential
1	Interleave

Confidential 13 Rev. 3.0 Mar. /2015



• Burst Definition, Addressing Sequence of Sequential and Interleave Mode

Table 8. Burst Definition

Durat Langth	Sta	rt Addr	ess	Cognential	Interlegue
Burst Length	A2	A1	A0	Sequential	Interleave
2	Х	Х	0	0, 1	0, 1
	Х	Х	1	1, 0	1, 0
	Х	0	0	0, 1, 2, 3	0, 1, 2, 3
4	Х	0	1	1, 2, 3, 0	1, 0, 3, 2
4	Χ	1	0	2, 3, 0, 1	2, 3, 0, 1
	Χ	1	1	3, 0, 1, 2	3, 2, 1, 0
	0	0	0	0, 1, 2, 3, 4, 5, 6, 7	0, 1, 2, 3, 4, 5, 6, 7
	0	0	1	1, 2, 3, 4, 5, 6, 7, 0	1, 0, 3, 2, 5, 4, 7, 6
	0	1	0	2, 3, 4, 5, 6, 7, 0, 1	2, 3, 0, 1, 6, 7, 4, 5
8	0	1	1	3, 4, 5, 6, 7, 0, 1, 2	3, 2, 1, 0, 7, 6, 5, 4
0	1	0	0	4, 5, 6, 7, 0, 1, 2, 3	4, 5, 6, 7, 0, 1, 2, 3
	1	0	1	5, 6, 7, 0, 1, 2, 3, 4	5, 4, 7, 6, 1, 0, 3, 2
	1	1	0	6, 7, 0, 1, 2, 3, 4, 5	6, 7, 4, 5, 2, 3, 0, 1
	1	1	1	7, 0, 1, 2, 3, 4, 5, 6	7, 6, 5, 4, 3, 2, 1, 0
Full page	location = 0-511			n, n+1, n+2, n+3,511, 0, 1, 2, n-1, n,	Not Support

• CAS Latency Field (A6~A4)

This field specifies the number of clock cycles from the assertion of the Read command to the first read data. The minimum whole value of CAS Latency depends on the frequency of CLK. The minimum whole value satisfying the following formula must be programmed into this field.

tcac(min) ≤ CAS Latency X tck

Table 9. CAS Latency

A6	A5	A4	CAS Latency
0	0	0	Reserved
0	0	1	Reserved
0	1	0	2 clocks
0	1	1	3 clocks
1	Х	Х	Reserved

• Test Mode field (A8~A7)

These two bits are used to enter the test mode and must be programmed to "00" in normal operation.

Table 10. Test Mode

A8	A7	Test Mode
0	0	normal mode
0	1	Vendor Use Only
1	X	Vendor Use Only

Confidential 14 Rev. 3.0 Mar. /2015



Write Burst Length (A9)

This bit is used to select the write burst mode. When the A9 bit is "0", the Burst-Read-Burst-Write mode is selected. When the A9 bit is "1", the Burst-Read-Single-Write mode is selected.

Table 11. Write Burst Length

A9	Write Burst Mode			
0	Burst-Read-Burst-Write			
1	Burst-Read-Single-Write			

Note: A10 and BA0, 1 should stay "L" during mode set cycle.

9 No-Operation command

(RAS# = "H", CAS# = "H", WE# = "H")

The No-Operation command is used to perform a NOP to the SDRAM which is selected (CS# is Low). This prevents unwanted commands from being registered during idle or wait states.

10 Burst Stop command

(RAS# = "H", CAS# = "H", WE# = "L")

The Burst Stop command is used to terminate either fixed-length or full-page bursts. This command is only effective in a read/write burst without the auto precharge function. The terminated read burst ends after a delay equal to the CAS latency (refer to the following figure). The termination of a write burst is shown in the following figure.

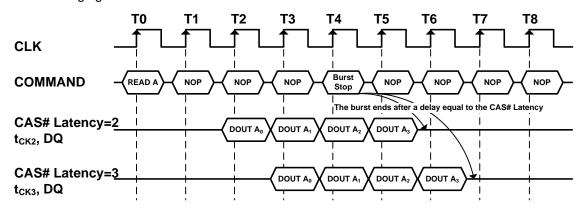


Figure 16 .Termination of a Burst Read Operation (Burst Length>4, CAS# Latency = 2, 3)

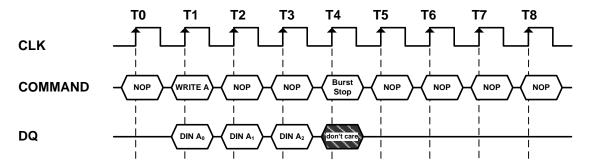


Figure 17 .Termination of a Burst Write Operation (Burst Length = X)

Confidential 15 Rev. 3.0 Mar. /2015



11 Device Deselect command (CS# = "H")

The Device Deselect command disables the command decoder so that the RAS#, CAS#, WE# and Address inputs are ignored, regardless of whether the CLK is enabled. This command is similar to the No Operation command.

12 AutoRefresh command

(RAS# = "L", CAS# = "L", WE# = "H", CKE = "H", A0-A12 = Don't care)

The AutoRefresh command is used during normal operation of the SDRAM and is analogous to CAS#-before-RAS# (CBR) Refresh in conventional DRAMs. This command is non-persistent, so it must be issued each time a refresh is required. The addressing is generated by the internal refresh controller. This makes the address bits a "don't care" during an AutoRefresh command. The internal refresh counter increments automatically on every auto refresh cycle to all of the rows. The refresh operation must be performed 8192 times within 64ms. The time required to complete the auto refresh operation is specified by tRc(min.). To provide the AutoRefresh command, all banks need to be in the idle state and the device must not be in power down mode (CKE is high in the previous cycle). This command must be followed by NOPs until the auto refresh operation is completed. The precharge time requirement, tRP(min), must be met before successive auto refresh operations are performed.

13 SelfRefresh Entry command

(RAS# = "L", CAS# = "L", WE# = "H", CKE = "L", A0-A12 = Don't care)

The SelfRefresh is another refresh mode available in the SDRAM. It is the preferred refresh mode for data retention and low power operation. Once the SelfRefresh command is registered, all the inputs to the SDRAM become "don't care" with the exception of CKE, which must remain LOW. The refresh addressing and timing is internally generated to reduce power consumption. The SDRAM may remain in SelfRefresh mode for an indefinite period. The SelfRefresh mode is exited by restarting the external clock and then asserting HIGH on CKE (SelfRefresh Exit command).

14 SelfRefresh Exit command

This command is used to exit from the SelfRefresh mode. Once this command is registered, NOP or Device Deselect commands must be issued for $t_{\rm XSR}({\rm min.})$ because time is required for the completion of any bank currently being internally refreshed. If auto refresh cycles in bursts are performed during normal operation, a burst of 8192 auto refresh cycles should be completed just prior to entering and just after exiting the SelfRefresh mode.

15 Clock Suspend Mode Entry / PowerDown Mode Entry command (CKE = "L")

When the SDRAM is operating the burst cycle, the internal CLK is suspended (masked) from the subsequent cycle by issuing this command (asserting CKE "LOW"). The device operation is held intact while CLK is suspended. On the other hand, when all banks are in the idle state, this command performs entry into the PowerDown mode. All input and output buffers (except the CKE buffer) are turned off in the PowerDown mode. The device may not remain in the Clock Suspend or PowerDown state longer than the refresh period (64ms) since the command does not perform any refresh operations.

16 Clock Suspend Mode Exit / PowerDown Mode Exit command (CKE= "H")

When the internal CLK has been suspended, the operation of the internal CLK is reinitiated from the subsequent cycle by providing this command (asserting CKE "HIGH", the command should be NOP or deselect). When the device is in the PowerDown mode, the device exits this mode and all disabled buffers are turned on to the active state. tpde (min.) is required when the device exits from the PowerDown mode. Any subsequent commands can be issued after one clock cycle from the end of this command.

17 Data Write / Output Enable, Data Mask / Output Disable command (DQM = "L", "H")

During a write cycle, the DQM signal functions as a Data Mask and can control every word of the input data. During a read cycle, the DQM functions as the controller of output buffers. DQM is also used for device selection, byte selection and bus control in a memory system.

Confidential 16 Rev. 3.0 Mar. /2015



Table 12. Absolute Maximum Rating

Symbol	Item		Rating	Unit	Note
VIN, VOUT	Input, Output Voltage	Input, Output Voltage		V	1
V _{DD} , V _{DDQ}	Power Supply Voltage	Power Supply Voltage		V	1
TA	Ambient Temperature	Commercial 0 ~ 70		°C	1
	Ambient Temperature Industria	Industrial	-40 ~ 85	°C	1
Tstg	Storage Temperature	Storage Temperature		°C	1
TSOLDER	Soldering Temperature (10 se	Soldering Temperature (10 second)		°C	1
Po	Power Dissipation		1	W	1
los	Short Circuit Output Current		50	mA	1

Table 13. Recommended D.C. Operating Conditions ($T_A = -40 \sim 85$ °C)

Symbol	nbol Parameter		Тур.	Max.	Unit	Note
V_{DD}	Power Supply Voltage	3.0	3.3	3.6	V	2
V _{DDQ}	Power Supply Voltage(for I/O Buffer)	3.0	3.3	3.6	٧	2
ViH	LVTTL Input High Voltage	2.0	3.0	V _{DDQ} +0.3	V	2
V_{IL}	LVTTL Input Low Voltage	- 0.3	0	0.8	V	2
I_{IL} Input Leakage Current ($0V \le V_{IN} \le V_{DD}$, All other pins not under test = $0V$)		- 10	-	10	μΑ	
Output Leakage Current Output disable, $0V \le V_{OUT} \le V_{DDQ}$)		- 10	-	10	μΑ	
VoH LVTTL Output "H" Level Voltage (lout = -2mA)		2.4	_	_	V	
Vol	LVTTL Output "L" Level Voltage (Iout = 2mA)		_	0.4	V	

Table 14. Capacitance ($V_{DD} = 3.3V$, f = 1MHz, $T_A = 25$ °C)

Symbol	Parameter	Min.	Max.	Unit
Сі	Input Capacitance	2	4	рF
CI/O	Input/Output Capacitance	4	6	pF

Note: These parameters are periodically sampled and are not 100% tested.

Confidential 17 Rev. 3.0 Mar. /2015





Table 15. D.C. Characteristics ($V_{DD} = 3.3V \pm 0.3V$, $T_A = -40 \sim 85$ °C)

Description/Test condition		- 6	-7	Unit	Note
		Max.		Oiiit	14016
Operating Current					
trc ≥ trc(min), Outputs Open	I _{DD1}	60	55		3
One bank active					
Precharge Standby Current in non-power down mode					
$t_{CK} = 15 \text{ns}, CS\# \geq V_{IH}(\text{min}), CKE \geq V_{IH}$	I _{DD2N}	25	20		
Input signals are changed every 2clks					
Precharge Standby Current in non-power down mode		40	40		
$t_{CK} = \infty$, $CLK \le V_{IL}(max)$, $CKE \ge V_{IH}$	IDD2NS	18	18		
Precharge Standby Current in power down mode		2	2		
$t_{CK} = 15$ ns, $CKE \le V_{IL}(max)$	IDD2P	2	2		
Precharge Standby Current in power down mode		•	0		
$t_{CK} = \infty$, $CKE \le V_{IL}(max)$	IDD2PS	2	2	mΑ	
Active Standby Current in non-power down mode					
$t_{CK} = 15ns, CKE \ge V_{IH}(min), CS\# \ge V_{IH}(min)$	Іррзи	35	30		
Input signals are changed every 2clks	1550.1				
Active Standby Current in non-power down mode		0.5	30		
CKE \geq V _{IH} (min), CLK \leq V _{IL} (max), tck = ∞	IDD3NS	35	30		
Operating Current (Burst mode)	_		CO.		
tcк=tcк(min), Outputs Open, Multi-bank interleave	I _{DD4}	62	60		3, 4
Refresh Current	_	75	70		
$t_{RC} \ge t_{RC}(min)$	I _{DD5}	75	70		3
Self Refresh Current		0	0		
CKE $\leq 0.2 V$; for other inputs V $_{IH}\! \geq \! VDD$ - 0.2 V, V $_{IL} \! \leq \! 0.2 V$	I _{DD6}	2	2		

Confidential 18 Rev. 3.0 Mar. /2015



Table 16. Electrical Characteristics and Recommended A.C. Operating Conditions $(V_{DD} = 3.3V \pm 0.3V, T_A = -40 \sim 85^{\circ}C)$ (Note: 5, 6, 7, 8)

O	A.C. Barramatan		-6		-7		l lm!4	Nata
Symbol	A.C. Parameter		Min.	Max.	Min.	Max.	Unit	Note
trc	Row cycle time (same bank)		60	-	63	-		
trfc	Refresh cycle time		60	-	63	-		
tRCD	RAS# to CAS# delay (same bank)		18	-	21	-		
t _{RP}	Precharge to refresh/row activate (same bank)	command	18	-	21	-		
trrd	Row activate to row activate delay (different banks)	1	12	-	14	-		
tmrd	Mode register set cycle time		12	-	14	-		
tras	Row activate to precharge time (same bank)		42	120K	42	120K		
twr	Write recovery time		12	-	14	-		
_		CL* = 2	10 -	-	10	-	ns	
tcĸ	Clock cycle time	CL* = 3	6	-	7	-		9
tсн	Clock high time		2	-	2.5	-		10
tcL	Clock low time		2	-	2.5	-		10
tac	Access time from CLK	CL* = 2	-	6	-	6		10
IAC	(positive edge)	CL* = 3	-	5	-	5.4		
tон	Data output hold time		2.5	-	2.5	-		9
t _{LZ}	Data output low impedance		0	-	0	-		
tHZ	Data output high impedance		-	5	-	5.4		8
tıs	Data/Address/Control Input set-up time		1.5	-	1.5	-		10
tıн	Data/Address/Control Input hold time		0.8	-	0.8	-		10
tpde	Power Down Exit set-up time	Power Down Exit set-up time		-	tıs+tcĸ	-		
trefi	Average Refresh interval time		-	7.8	-	7.8	μs	
txsr	Exit Self-Refresh to Read Comma	nd	t _{RC+} t _{IS}	-	t _{RC+} t _{IS}	-	ns	

^{*} CL is CAS Latency.

Note:

- 1. Stress greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device.
- 2. All voltages are referenced to V_{SS} . Overshoot V_{IH} (Max) = 4.6V for pulse width \leq 3ns. Undershoot V_{IL} (Min) = -1.0V for pulse width \leq 3ns.
- 3. These parameters depend on the cycle rate and these values are measured by the cycle rate under the minimum value of t_{RC} . Input signals are changed one time during every 2 t_{CK} .
- 4. These parameters depend on the output loading. Specified values are obtained with the output open.
- 5. Power-up sequence is described in Note 11.
- 6. A.C. Test Conditions

Confidential 19 Rev. 3.0 Mar. /2015



Table 17. LVTTL Interface

Reference Level of Output Signals	1.4V / 1.4V			
Output Load	Reference to the Under Output Load (B)			
Input Signal Levels	2.4V / 0.4V			
Transition Time (Rise and Fall) of Input Signals	1ns			
Reference Level of Input Signals	1.4V			

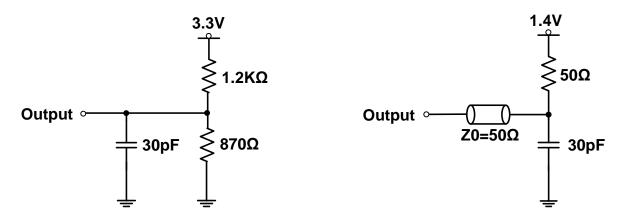


Figure 18.1 LVTTL D.C. Test Load (A)

Figure 18.2 LVTTL A.C. Test Load (B)

- 7. Transition times are measured between V_{IH} and V_{IL}. Transition (rise and fall) of input signals are in a fixed slope (1 ns).
- 8. thz defines the time in which the outputs achieve the open circuit condition and are not at reference levels.
- 9. If clock rising time is longer than 1 ns, (t_R / 2 -0.5) ns should be added to the parameter.
- 10. Assumed input rise and fall time t_T ($t_R \& t_F$) = 1 ns

If t_R or t_F is longer than 1 ns, transient time compensation should be considered, i.e., [(tr + tf)/2 - 1] ns should be added to the parameter.

11. Power up Sequence

Power up must be performed in the following sequence.


- 1) Power must be applied to V_{DD} and V_{DDQ} (simultaneously) when CKE= "LOW", DQM= "HIGH" and all input signals are held "NOP" state.
- 2) Start clock and maintain stable condition for minimum 200 μ s, then bring CKE "HIGH" and, it is recommended that DQM is held "HIGH" (V_{DD} levels) to ensure DQ output is in high impedance.
- 3) All banks must be precharged.
- 4) Mode Register Set command must be asserted to initialize the Mode register.
- 5) A minimum of 2 Auto-Refresh dummy cycles must be required to stabilize the internal circuitry of the device.
 * The Auto Refresh command can be issue before or after Mode Register Set command

Confidential 20 Rev. 3.0 Mar. /2015



Timing Waveforms


Figure 19. AC Parameters for Write Timing (Burst Length=4)

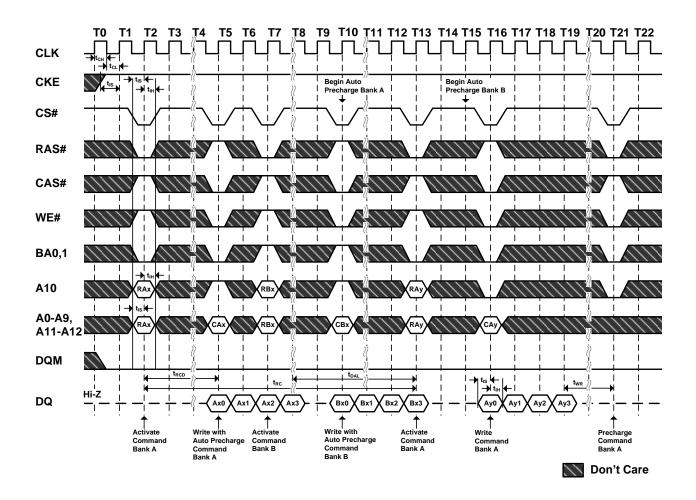

Confidential 21 Rev. 3.0 Mar. /2015




Figure 20. AC Parameters for Read Timing (Burst Length=2, CAS# Latency=2)

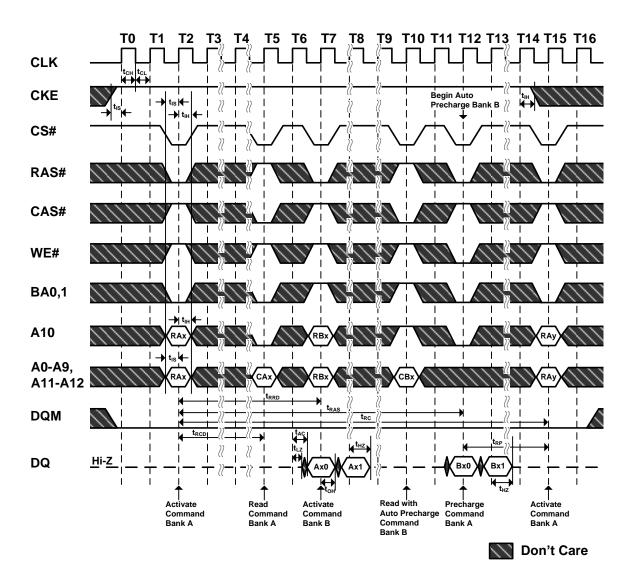

Confidential 22 Rev. 3.0 Mar. /2015




Figure 21. Auto Refresh (Burst Length=4, CAS# Latency=2)

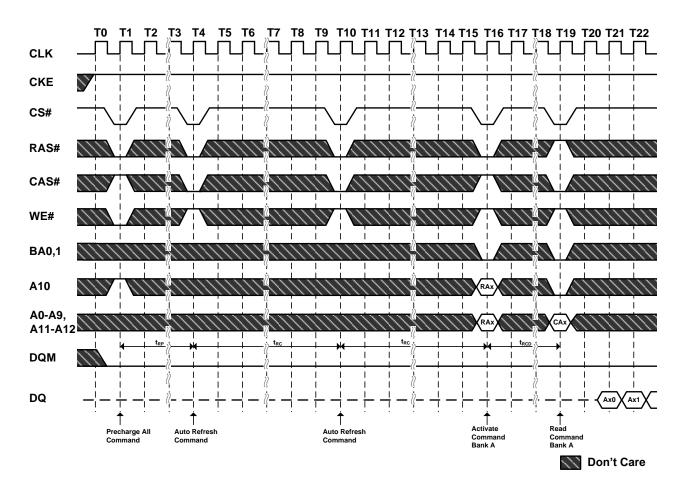

Confidential 23 Rev. 3.0 Mar. /2015




Figure 22. Power on Sequence and Auto Refresh

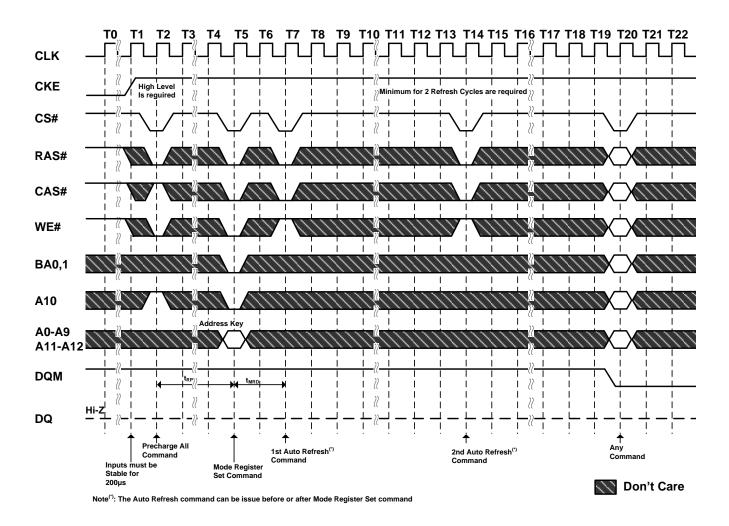

Confidential 24 Rev. 3.0 Mar. /2015



Figure 23. Self Refresh Entry & Exit Cycle

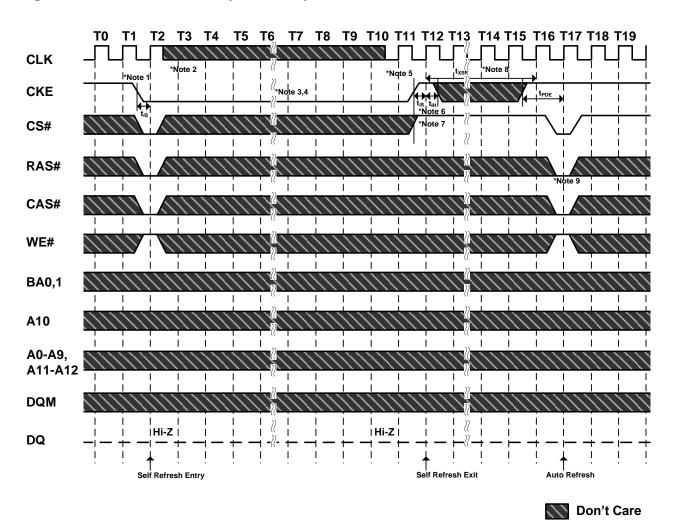

Note: To Enter SelfRefresh Mode

- 1. CS#, RAS# & CAS# with CKE should be low at the same clock cycle.
- 2. After 1 clock cycle, all the inputs including the system clock can be don't care except for CKE.
- 3. The device remains in SelfRefresh mode as long as CKE stays "low".
- 4. Once the device enters SelfRefresh mode, minimum t_{RAS} is required before exit from SelfRefresh.

To Exit SelfRefresh Mode


- 5. System clock restart and be stable before returning CKE high.
- 6. Enable CKE and CKE should be set high for valid setup time and hold time.
- 7. CS# starts from high.
- 8. Minimum txsR is required after CKE going high to complete SelfRefresh exit.
- 9. 8192 cycles of burst AutoRefresh is required before SelfRefresh entry and after SelfRefresh exit if the system uses burst refresh.

Confidential 25 Rev. 3.0 Mar. /2015



Figure 24.1. Clock Suspension During Burst Read (Using CKE)


(Burst Length=4, CAS# Latency=2)

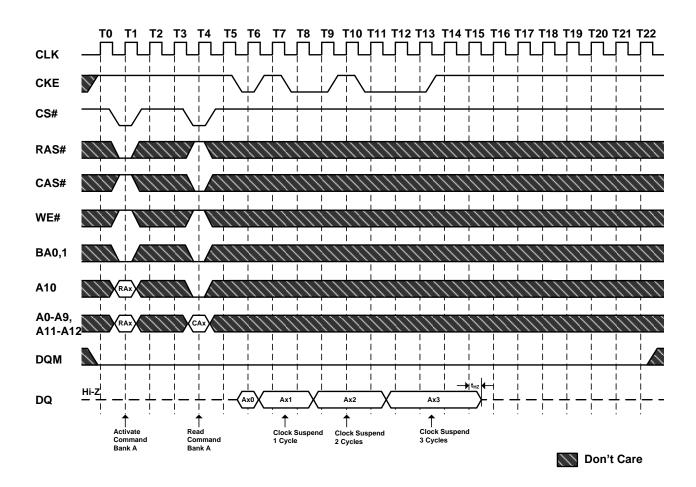

Confidential 26 Rev. 3.0 Mar. /2015




Figure 24.2. Clock Suspension During Burst Read (Using CKE)
(Burst Length=4, CAS# Latency=3)

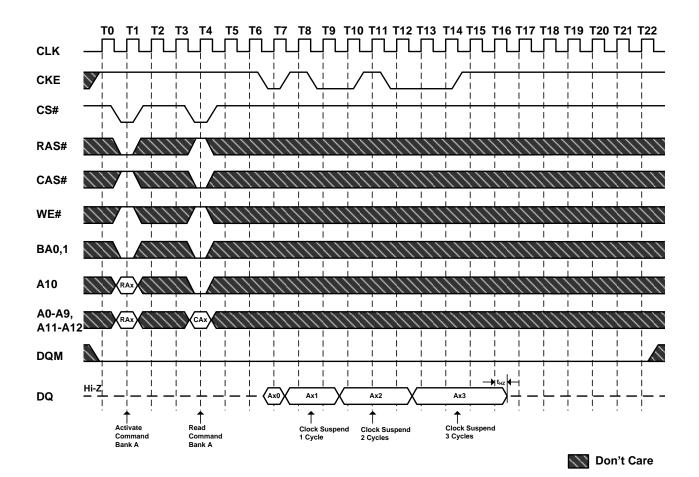

Confidential 27 Rev. 3.0 Mar. /2015




Figure 25. Clock Suspension During Burst Write (Using CKE)
(Burst Length=4)

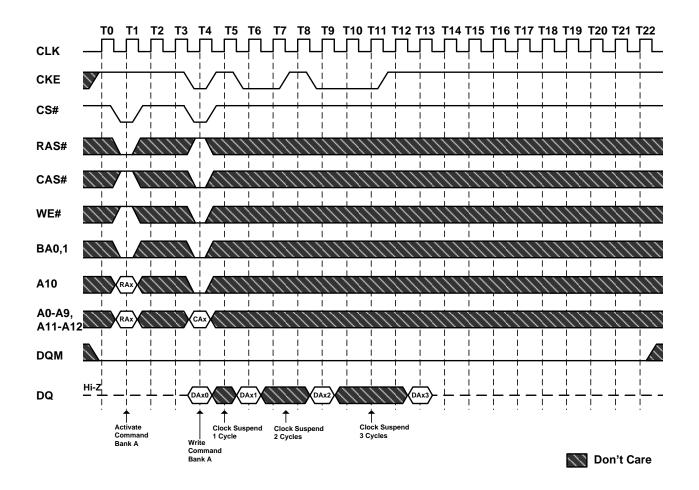

Confidential 28 Rev. 3.0 Mar. /2015




Figure 26. Power Down Mode and Clock Suspension (Burst Length=4, CAS# Latency=2)

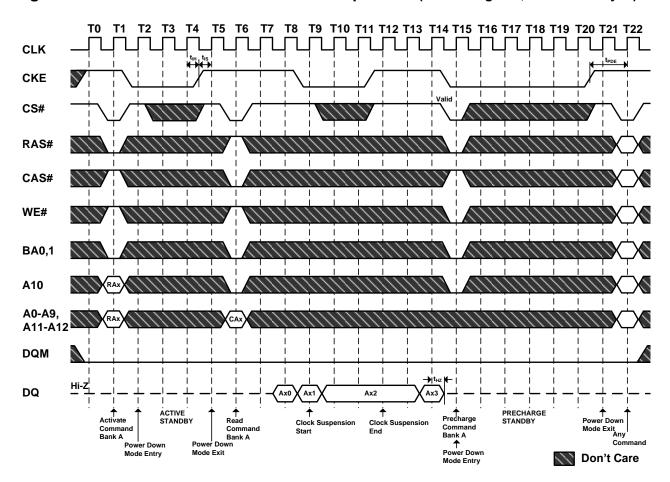

Confidential 29 Rev. 3.0 Mar. /2015




Figure 27.1. Random Column Read (Page within same Bank)
(Burst Length=4, CAS# Latency=2)

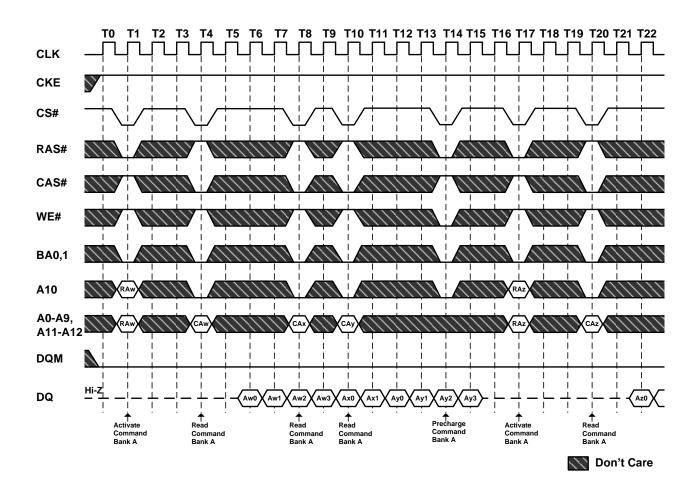

Confidential 30 Rev. 3.0 Mar. /2015




Figure 27.2. Random Column Read (Page within same Bank)
(Burst Length=4, CAS# Latency=3)

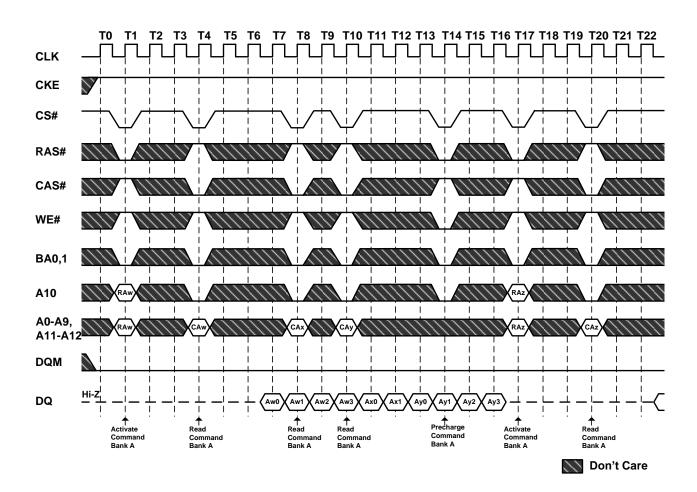

Confidential 31 Rev. 3.0 Mar. /2015




Figure 28. Random Column Write (Page within same Bank)
(Burst Length=4)

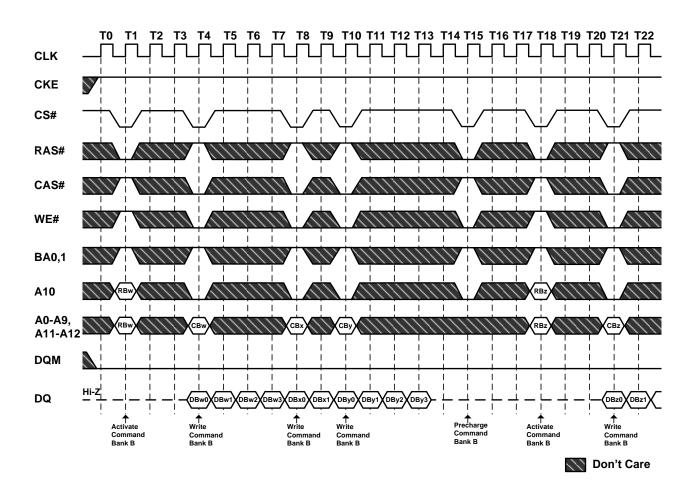

Confidential 32 Rev. 3.0 Mar. /2015




Figure 29.1. Random Row Read (Interleaving Banks)
(Burst Length=8, CAS# Latency=2)

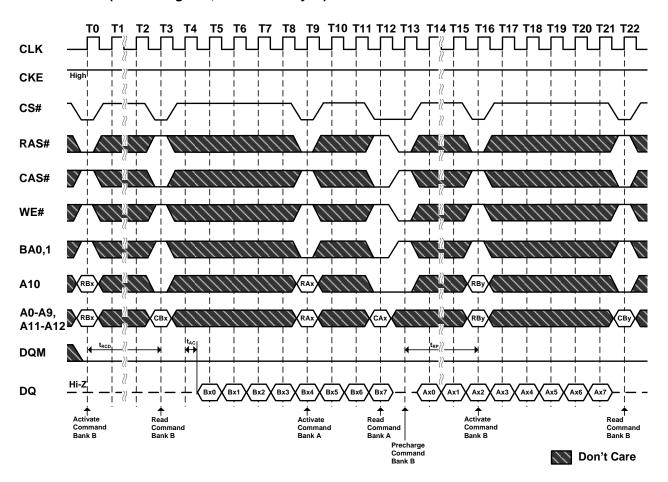

Confidential 33 Rev. 3.0 Mar. /2015




Figure 29.2. Random Row Read (Interleaving Banks)
(Burst Length=8, CAS# Latency=3)

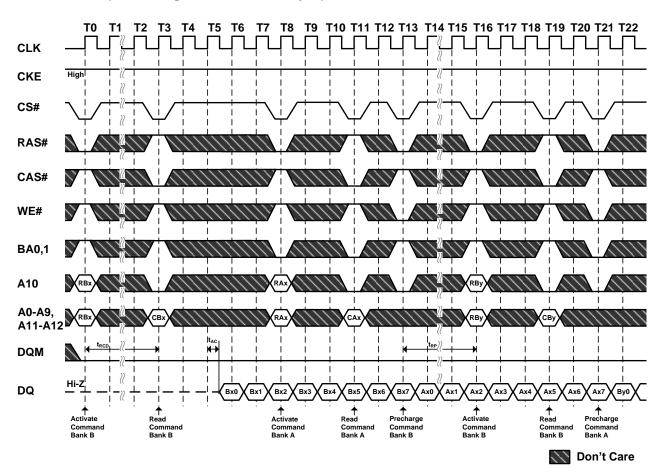

Confidential 34 Rev. 3.0 Mar. /2015




Figure 30. Random Row Write (Interleaving Banks) (Burst Length=8)

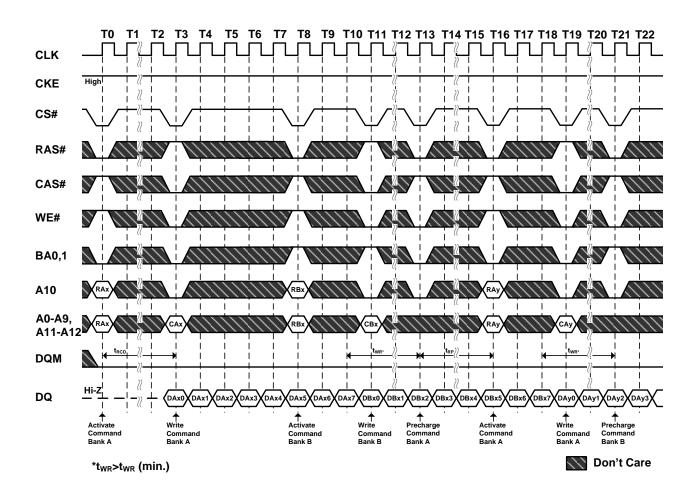

Confidential 35 Rev. 3.0 Mar. /2015




Figure 31.1. Read and Write Cycle (Burst Length=4, CAS# Latency=2)

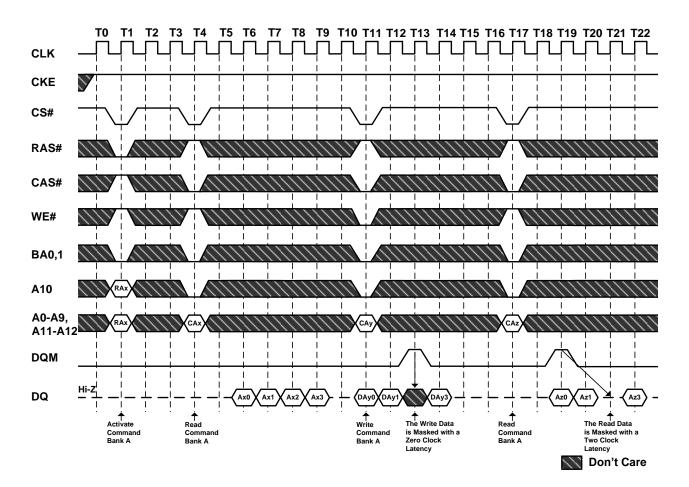

Confidential 36 Rev. 3.0 Mar. /2015




Figure 31.2. Read and Write Cycle (Burst Length=4, CAS# Latency=3)

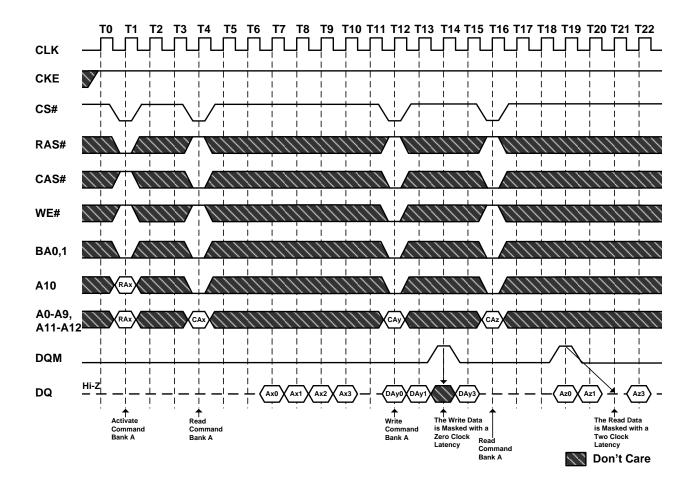

Confidential 37 Rev. 3.0 Mar. /2015




Figure 32.1. Interleaving Column Read Cycle (Burst Length=4, CAS# Latency=2)

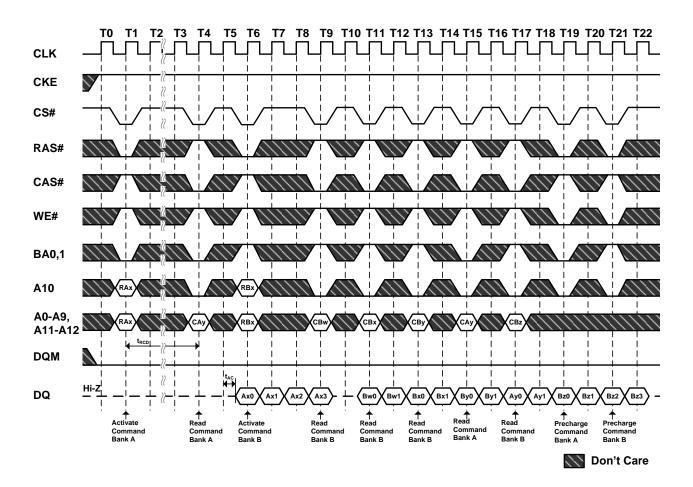

Confidential 38 Rev. 3.0 Mar. /2015




Figure 32.2. Interleaved Column Read Cycle (Burst Length=4, CAS# Latency=3)

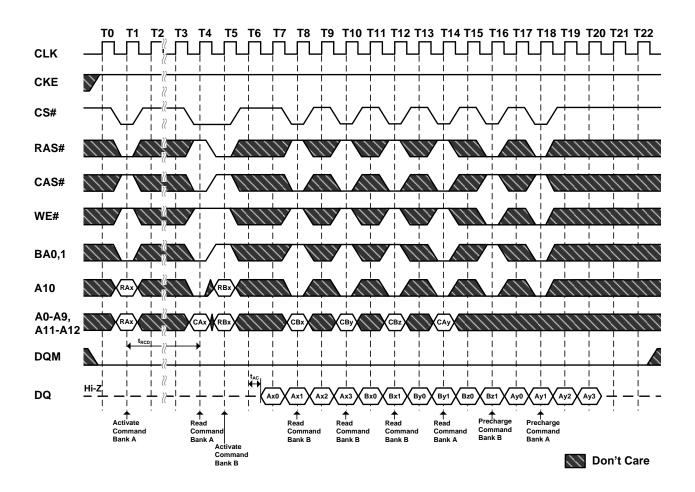

Confidential 39 Rev. 3.0 Mar. /2015




Figure 33. Interleaved Column Write Cycle (Burst Length=4)

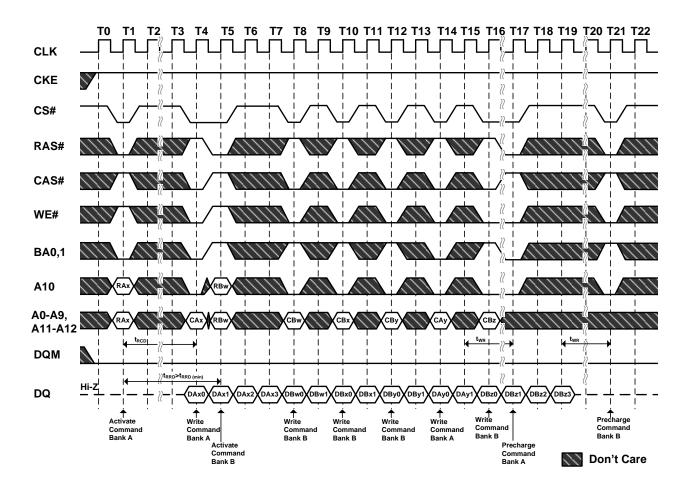

Confidential 40 Rev. 3.0 Mar. /2015




Figure 34.1. Auto Precharge after Read Burst (Burst Length=4, CAS# Latency=2)

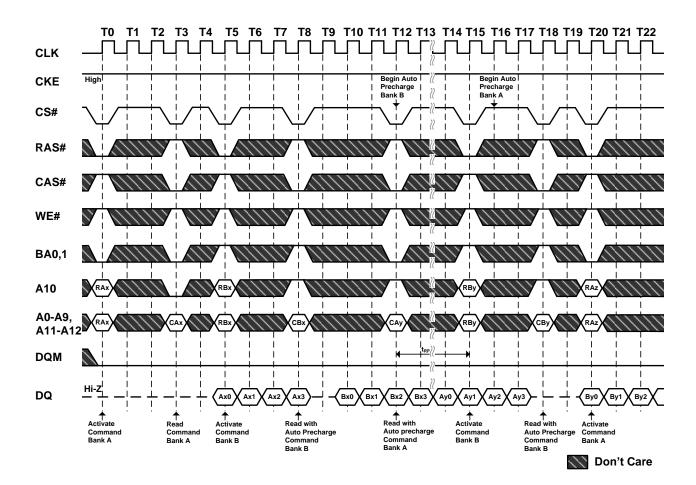

Confidential 41 Rev. 3.0 Mar. /2015




Figure 34.2. Auto Precharge after Read Burst (Burst Length=4, CAS# Latency=3)

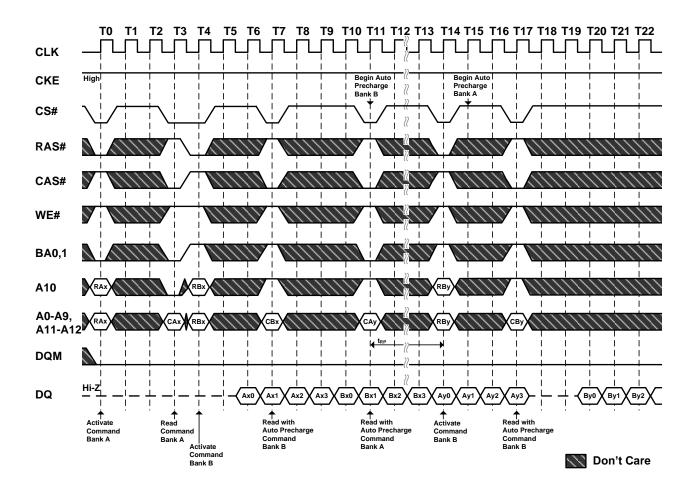

Confidential 42 Rev. 3.0 Mar. /2015




Figure 35. Auto Precharge after Write Burst (Burst Length=4)

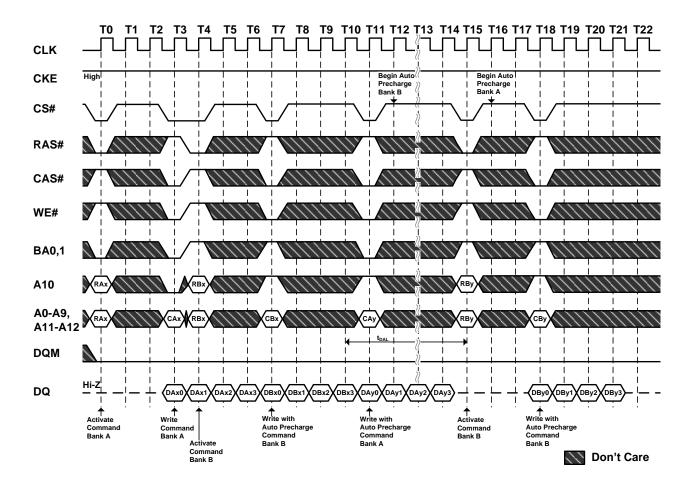

Confidential 43 Rev. 3.0 Mar. /2015




Figure 36.1. Full Page Read Cycle (Burst Length=Full Page, CAS# Latency=2)

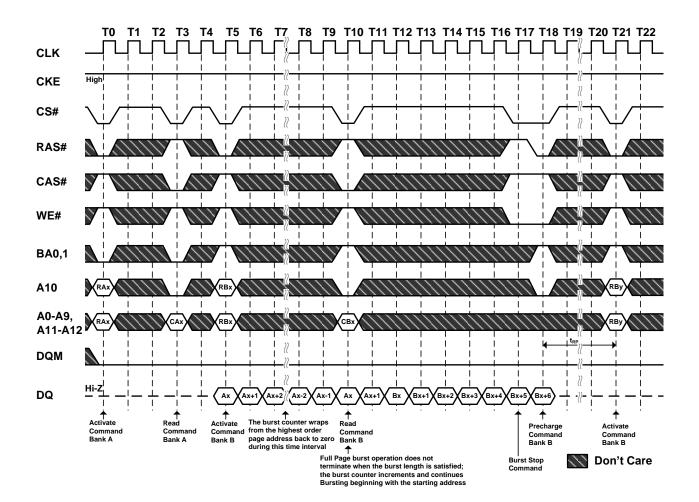

Confidential 44 Rev. 3.0 Mar. /2015



Figure 36.2. Full Page Read Cycle (Burst Length=Full Page, CAS# Latency=3)

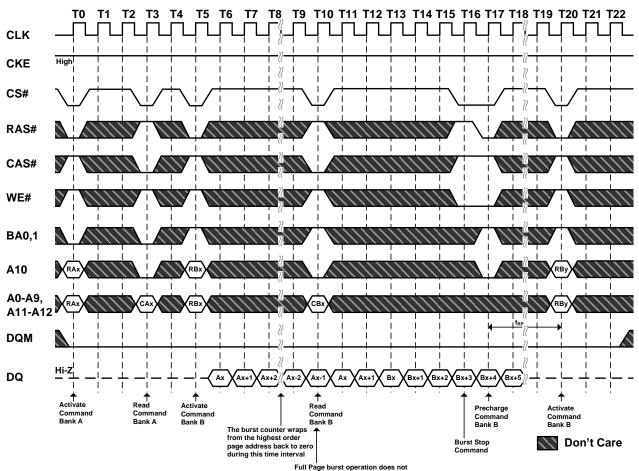


Full Page burst operation does not terminate when the burst length is satisfied; the burst counter increments and continues Bursting beginning with the starting address

Confidential 45 Rev. 3.0 Mar. /2015




Figure 37. Full Page Write Cycle (Burst Length=Full Page)

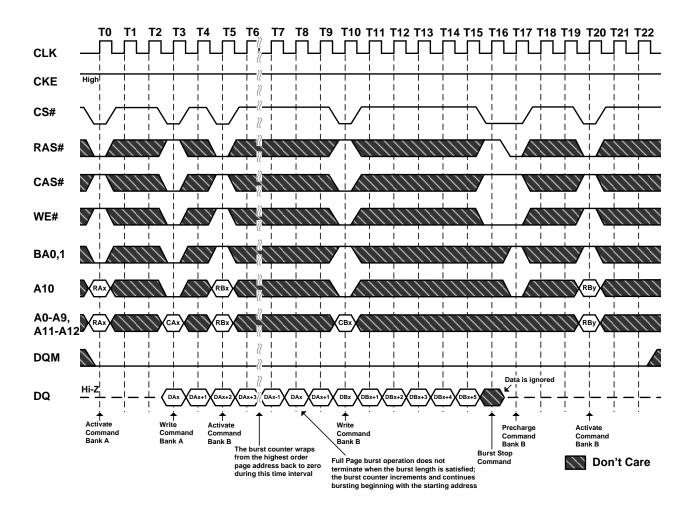

Confidential 46 Rev. 3.0 Mar. /2015



Figure 38. Byte Read and Write Operation (Burst Length=4, CAS# Latency=2)

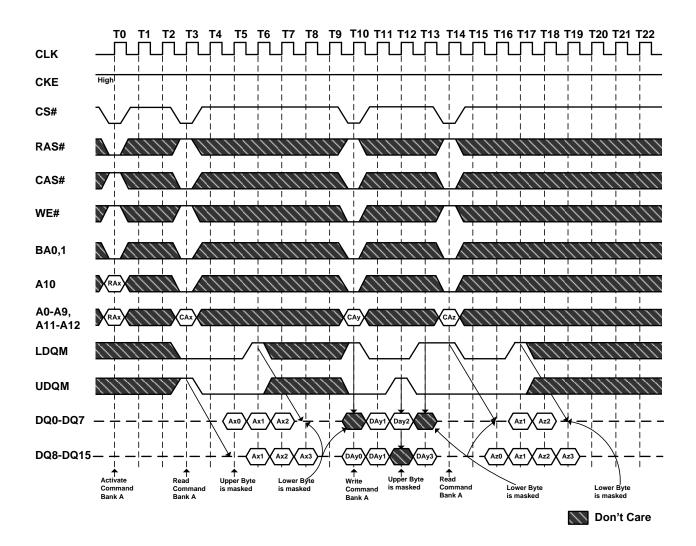


Confidential 47 Rev. 3.0 Mar. /2015



Figure 39. Random Row Read (Interleaving Banks)


(Burst Length=4, CAS# Latency=2)

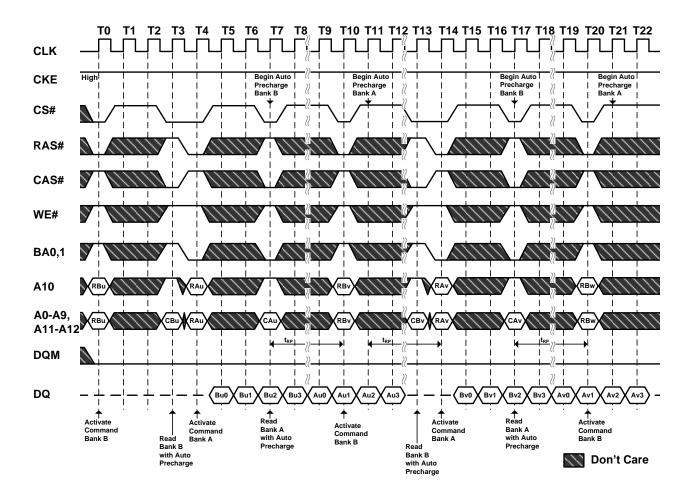

Confidential 48 Rev. 3.0 Mar. /2015




Figure 40. Full Page Random Column Read (Burst Length=Full Page, CAS# Latency=2)

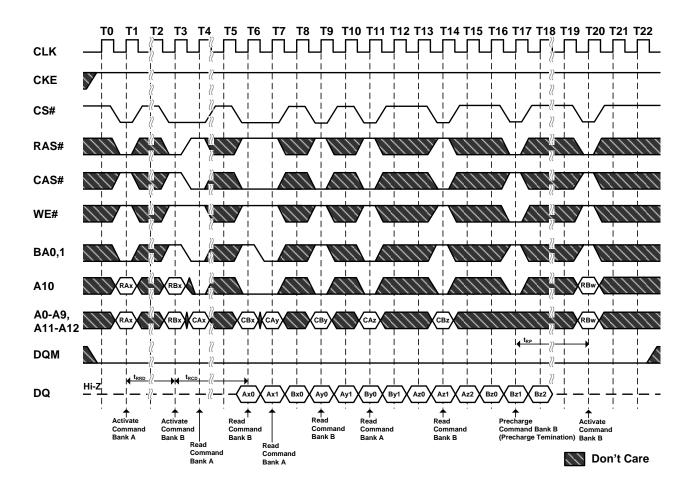

Confidential 49 Rev. 3.0 Mar. /2015




Figure 41. Full Page Random Column Write (Burst Length=Full Page)

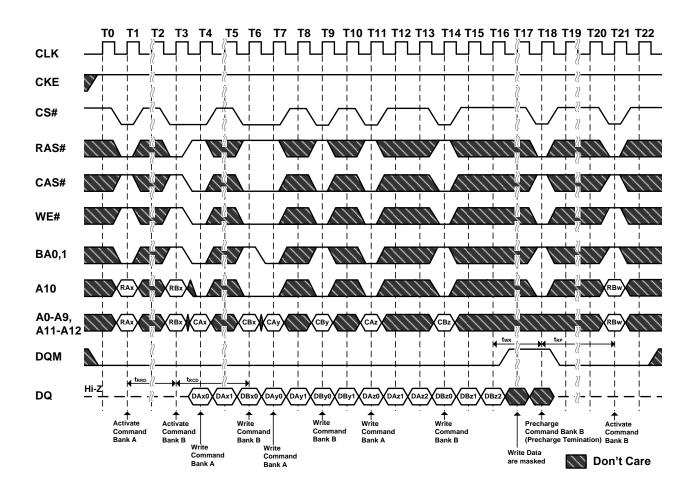

Confidential 50 Rev. 3.0 Mar. /2015




Figure 42. Precharge Termination of a Burst (Burst Length=4, 8 or Full Page, CAS# Latency=3)

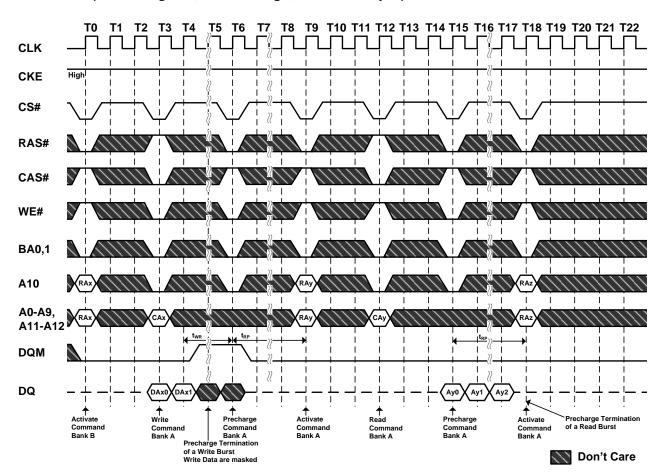

Confidential 51 Rev. 3.0 Mar. /2015



Figure 43. 54 Pin TSOP II Package Outline Drawing Information

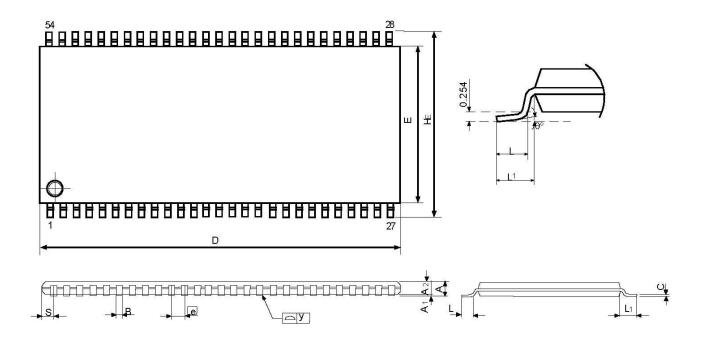


Symbol	Dimension in inch			Dimension in mm		
	Min	Nom	Max	Min	Nom	Max
Α			0.047			1.2
A1	0.002		0.008	0.05		0.2
A2	0.035	0.039	0.043	0.9	1.0	1.1
В	0.01	0.014	0.018	0.25	0.35	0.45
С	0.004	0.006	0.008	0.12	0.165	0.21
D	0.87	0.875	0.88	22.09	22.22	22.35
E	0.395	0.400	0.405	10.03	10.16	10.29
е		0.031			0.8	
HE	0.455	0.463	0.471	11.56	11.76	11.96
L	0.016	0.02	0.024	0.4	0.5	0.6
L1		0.032			0.84	
S		0.028			0.71	
У			0.004			0.1
θ	0°		8°	0°		8°

Confidential 52 Rev. 3.0 Mar. /2015



Figure 44. 54 Ball TFBGA Package Outline Drawing Information

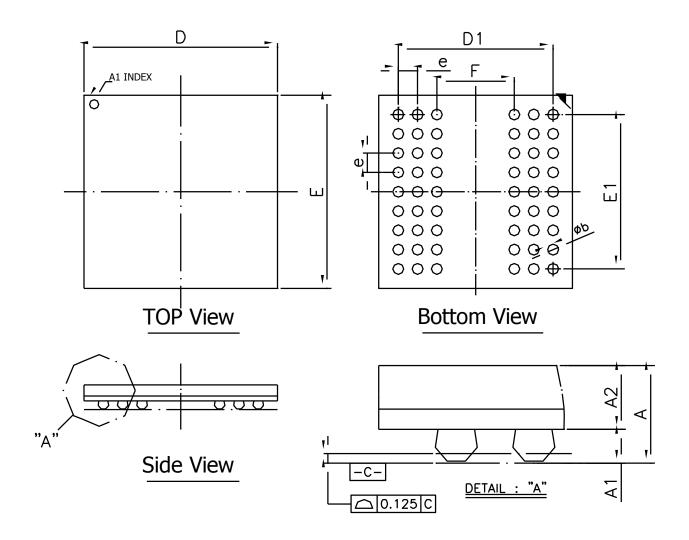

Symbol	Dimension in inch			Dimension in mm		
	Min	Nom	Max	Min	Nom	Max
Α			0.047			1.20
A1	0.010	0.012	0.014	0.25	0.30	0.35
A2		0.033			0.85	
D	0.311	0.315	0.319	7.90	8.00	8.10
Е	0.311	0.315	0.319	7.90	8.00	8.10
D1		0.252			6.40	
E1		0.252			6.40	
е		0.031			0.80	
b	0.016	0.018	0.020	0.40	0.45	0.50
F		0.126			3.20	

Confidential 53 Rev. 3.0 Mar. /2015



PART NUMBERING SYSTEM

AS4C	16M16SA	6/7	T/B	C/I	N
DRAM	16M16=16Mx16 SA=SDRAM(A version)	6=166MHz 7=143MHZ	T = TSOP II B = FBGA	C=Commercial $(0^{\circ}\ C \sim 70^{\circ}\ C)$ I=Industrial $(-40^{\circ}\ C \sim 85^{\circ}\ C)$	Indicates Pb and Halogen Free



Alliance Memory, Inc. 511 Taylor Way, San Carlos, CA 94070 Tel: 650-610-6800 Fax: 650-620-9211

All Rights Reserved

Copyright © Alliance Memory

www.alliancememory.com

© Copyright 2007 Alliance Memory, Inc. All rights reserved. Our three-point logo, our name and Intelliwatt are trademarks or registered trademarks of Alliance. All other brand and product names may be the trademarks of their respective companies. Alliance reserves the right to make changes to this document and its products at any time without notice. Alliance assumes no responsibility for any errors that may appear in this document. The data contained herein represents Alliance's best data and/or estimates at the time of issuance. Alliance reserves the right to change or correct this data at any time, without notice. If the product described herein is under development, significant changes to these specifications are possible. The information in this product data sheet is intended to be general descriptive information for potential customers and users, and is not intended to operate as, or provide, any quarantee or warrantee to any user or customer. Alliance does not assume any responsibility or liability arising out of the application or use of any product described herein, and disclaims any express or implied warranties related to the sale and/or use of Alliance products including liability or warranties related to fitness for a particular purpose, merchantability, or infringement of any intellectual property rights, except as express agreed to in Alliance's Terms and Conditions of Sale (which are available from Alliance). All sales of Alliance products are made exclusively according to Alliance's Terms and Conditions of Sale. The purchase of products from Alliance does not convey a license under any patent rights, copyrights; mask works rights, trademarks, or any other intellectual property rights of Alliance or third parties. Alliance does not authorize its products for use as critical components in life-supporting systems where a malfunction or failure may reasonably be expected to result in significant injury to the user, and the inclusion of Alliance products in such life-supporting systems implies that the manufacturer assumes all risk of such use and agrees to indemnify Alliance against all claims arising from such use.

Confidential 54 Rev. 3.0 Mar. /2015



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru