


SARGENT

4100 CRIMP TOOL OPERATING PROCEDURE

Apply force as shown until ratchet releases. The force at a point approx. $1\frac{3}{4}$ " from handle ends should vary between 5-75 lbs. depending on the style/type and size of contact and/or wire size.

In general, the style or type of contact crimped determines the level of handle pre-load, with larger contacts requiring higher pre-loads for properly completed crimps.

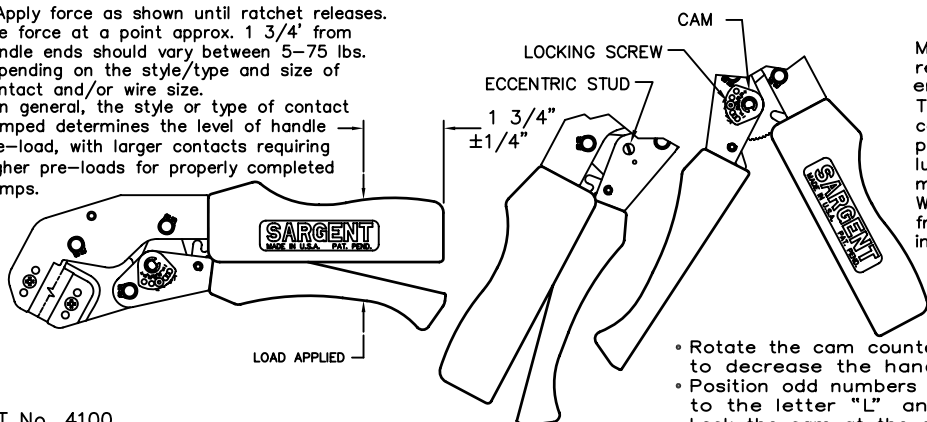

PART No. 4100
(TOOL FRAME)


TOOL MAINTENANCE

Maintenance and inspection should be performed regularly. Tool should be wiped clean with special emphasis on the crimping cavities.


Tool may be cleaned by immersing in a suitable commercial solvent or cleaner which does not attack paints or plastic material. The tool should be re-lubricated after cleaning using a light film of a medium weight oil on bearing surfaces and pivot pins. When not in use, keep handles closed to prevent objects from becoming lodged in the crimping dies and store in a clean dry area.

ECCENTRIC ADJUSTMENT

- To adjust the tool to obtain the proper force values, open the handles and remove the cam locking screw with a $1/16$ " hex wrench.
- Rotate the cam counterclockwise to increase handle load or clockwise to decrease the handle load.
- Position odd numbers on the cam in the locking screw hole adjacent to the letter "L" and even numbers adjacent to the letter "T".
- Lock the cam at the desired handle load setting and remeasure force. Continue adjustment if necessary.



CAT No.	NUMBER POSITIONS	MOD. PLUGS ACCOMMODATED
4100-06	4/6 POSITION	RJ-11
4100-06LB	6 POSITION	RJ-11 LONGBODY
4100-08	8 POSITION	RJ-45
4100-10	10 POSITION	10 POSITION

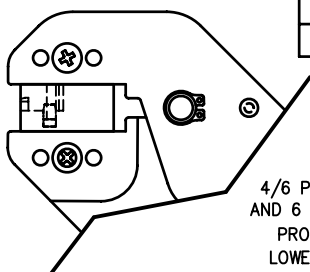


PART No. 4100-06 SHOWN



4/6 POSITION DIES
AND 6 POSITION DIES
PROVIDED WITH
LOWER DIE ONLY

8 & 10 POSITION
DIES PROVIDED WITH
TOP SPACER, BOTTOM
DIE, RIVETS & SCREW



#8-32 X $1\frac{1}{2}$ "
SCREWS (2)


5/32 X $1\frac{1}{2}$ "
FLAT HD. RIVETS (2)

Strip cable according to manufacturer's specifications. Insert cable fully into connector. Place connector in die, end of modular plug butting against back of die cavity, and close tool completing crimp cycle. Grasp cable near connector and lift and pull to remove cable/plug assembly. Inspect crimp to assure all contacts are crimped and strain relief portion is latched. Test by holding plug and pulling firmly on cable.

THE TOOL IS EQUIPPED WITH A RATCHET MECHANISM TO ASSURE RELIABLE CRIMP TERMINATIONS.


A RATCHET RELEASE LEVER IS PROVIDED TO ALLOW FOR REMOVAL OF AN INCORRECTLY PLACED OR OVERSIZE CONNECTOR.

ADJUST RATCHET RELEASE HANDLE FORCE TO **5-15 LBS.** FOR MODULAR PLUGS AS INSTRUCTED ABOVE IN ECCENTRIC ADJUSTMENT SECTION.




22-10 AWG

SEAM GOES DOWN
INTO NEST

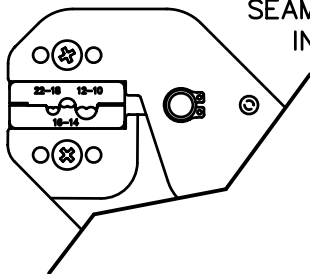

PART No. 4100-25

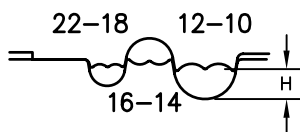

GAGING		
NEST	HEIGHT	UL (LBS)
22-18	.079-.075	8, 20
16-14	.095-.091	30, 50
12-10	.127/.123	70, 80

GAGING WITH WIRE SOLDER


THE NON-INSULATED CRIMP DIE CRIMPS STANDARD NON-INSULATED RING, FORK AND SPADE BRAZED AND UNBRAZED CONNECTORS AS WELL AS MISCELLANEOUS OTHER TYPES OF NON-INSULATED CONNECTORS.

ALL CRIMPS SHOULD BE TESTED FOR ACCEPTABLE TENSILE VALUES FOR THE PARTICULAR TERMINAL AND WIRE BEING USED AND COMPARED AGAINST ACCEPTED STANDARDS (UL OR MIL). VALUES FOR THE INTENDED WIRE SIZES ARE LISTED AND SHOULD BE CHECKED WITH AN APPROPRIATE TENSILE TESTING MACHINE OR OTHER DEVICE.


THE TOOL IS EQUIPPED WITH A RATCHET MECHANISM TO ASSURE RELIABLE CRIMP TERMINATIONS.

A RATCHET RELEASE LEVER IS PROVIDED TO ALLOW FOR REMOVAL OF AN INCORRECTLY PLACED OR OVERSIZE CONNECTOR.


ADJUST RATCHET RELEASE HANDLE FORCE TO **15-30 LBS.** FOR OPEN BARREL TERMINALS AS INSTRUCTED IN THE ECCENTRIC ADJUSTMENT SECTION.



28-20 AWG

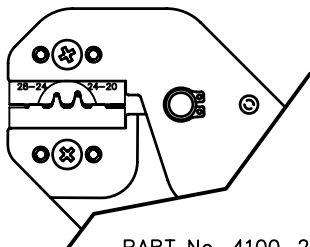

PART No. 4100-27

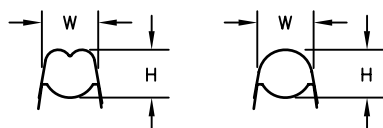

NEST	CONDUCTOR	INSULATION
	HEIGHT	HEIGHT
28-24	.027/.025	.041 MAX.
24-20	.029/.027	.062 MAX.

GAGING WITH WIRE SOLDER

NOTE: SHOULD OVERCRIMPING OF CONTACT RESULT- ADJUST RATCHET RELEASE FORCE TO **30-50 LBS.**


FOR D-SUB. STYLE CONTACTS. GAGE CRIMPS WITHIN SPECIFICATIONS- ADJUST HANDLE PRE-LOADS ACCORDINGLY.

REFER TO ECCENTRIC ADJUSTMENT PROCEDURE ABOVE.

OPEN BARREL




22-10 AWG

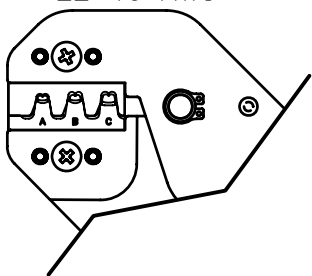

PART No. 4100-30 SHOWN

PART No. 4100-29 SIMILAR EXCEPT
FOR WIRE SIZES

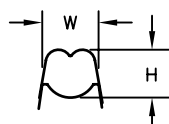

4100-30 GAGING INFORMATION

NEST	WIRE SIZE	COND. JAW	
		HEIGHT	WIDTH
A	22-18 AWG	.034 NOM.	.107 NOM.
B	16-14 AWG	.042 NOM.	.111 NOM.
C	12-10 AWG	.070 NOM.	.134 NOM.

4100-29 GAGING INFORMATION

NEST	WIRE SIZE	COND. JAW	
		HEIGHT	WIDTH
A	16-20 AWG	.054-.046	.075-.071
B	14-16 AWG	.062-.055	.087-.083
C	22-30 AWG	.030-.025	.067-.063

GAGING WITH WIRE SOLDER

EARLY DESIGN CRIMP DIES HAD TO BE PINNED
IN PLACE FOR PROPER OPERATION USING THE FOUR
DOWEL PINS PROVIDED.

TAP PINS IN PLACE WHILE ALIGNING DIE/SPACER HOLES
WITH HOLES IN TOOL FRAME.

REPEAT PROCEDURE FOR LOWER DIE.

REPLACE THE #8-32 SCREWS AS SHOWN.

LATER DESIGNS HAVE DIE HALVES PINNED TOGETHER AND
ARE HELD IN PLACE BY THE CENTER SCREW ONLY.

THE TOOL IS EQUIPPED WITH A RATCHET MECHANISM TO
ASSURE RELIABLE CRIMP TERMINATIONS.

A RATCHET RELEASE LEVER IS PROVIDED TO ALLOW FOR
REMOVAL OF AN INCORRECTLY PLACED OR OVERSIZE
CONNECTOR.


15-30 LBS.

ADJUST RATCHET RELEASE HANDLE FORCE TO
FOR OPEN BARREL TERMINALS AS INSTRUCTED IN THE
ECCENTRIC ADJUSTMENT SECTION.

INSULATED




RED 18-22 BLUE 14-16
YELLOW 10-12

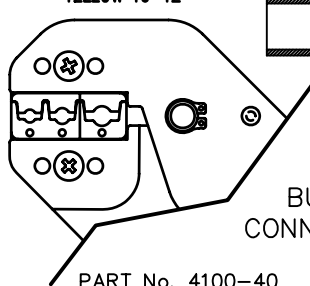

PART No. 4100-40

DIE FRONT VIEW

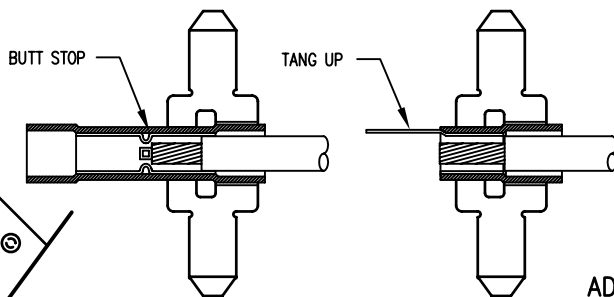

Select the appropriate nest for the terminal or wire
splice being crimped.

Position terminal or splice as shown in diagram.
Close tool carefully until jaws grip the terminal
without distortion.

Insert the properly stripped wire into the terminal.
Holding the wire in place close the tool past the
ratchet release position and allow the jaws to spring
open.

Remove and inspect the crimp.


ADJUST RATCHET RELEASE HANDLE FORCE TO **30-50 LBS.**
FOR INSULATED TERMINALS AS INSTRUCTED IN THE ECCENTRIC
ADJUSTMENT SECTION DEPENDING ON WIRE SIZE AND CONNECT-
OR BRAND AND STYLE OR TYPE.

NOTE: 4100-20 & -22 INSULATED TERMINAL DIES CRIMP CONDUCTOR PORTION ONLY!


SLIDE-ON



RED 18-22 BLUE 14-16

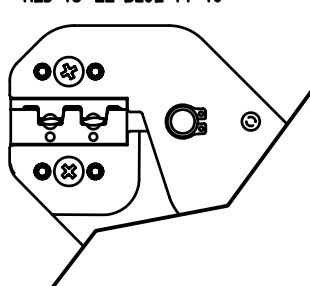

PART No. 4100-41

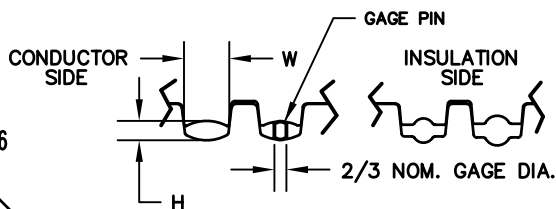

GAGING INFORMATION

NEST	CONDUCTOR		INSULATION	
	H	W	H	W
22-18 RED	.100 NOM.	.220 REF.	.135 NOM.	.240 REF.
16-14 BLUE	.108 NOM.	.240 REF.	.165 NOM.	.260 REF.

* GAGING USING FLATTED GO/NO GO PINS WITH
TOOL CLOSED TO LAST TOOTH OF RATCHET

SELECT THE APPROPRIATE NEST FOR THE TERMINAL
BEING CRIMPED.

POSITION THE TERMINAL WITH INSULATION SIDE TOWARDS
THE FRONT OF THE TOOL.


CLOSE THE TOOL CAREFULLY UNTIL THE JAWS GRIP THE
TERMINAL WITHOUT DISTORTION.

INSERT THE PROPERLY STRIPPED WIRE INTO THE TERMINAL.
HOLDING THE WIRE IN PLACE, CLOSE THE TOOL PAST
THE RATCHET RELEASE POSITION AND ALLOW THE JAWS
TO OPEN.

REMOVE AND INSPECT THE CRIMP.

ADJUST RATCHET RELEASE HANDLE FORCE TO **60-75 LBS.**
FOR SLIDE-ON TERMINALS AS INSTRUCTED IN THE ECCENTRIC
ADJUSTMENT SECTION.


COAX

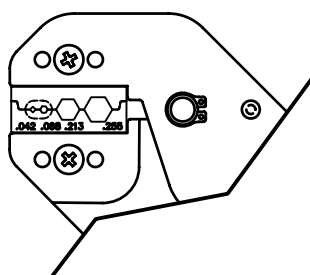


PART No. 4100-66 SHOWN

CAT No.	CAVITY HEX. (EXCEPT WHERE NOTED)	CABLES ACCOMMODATED
4100-65	.042(SQ), .068, .128, .151 & .178	RG-174/FIBER OPTIC
4100-66	.042(SQ), .068, .213 & .255	RG58/59/62 (PVC)
4100-67	.042(SQ), .068, .255 & .324	RG58/59 & 8281
4100-68	.076(2) & .429	TWINAXIAL
4100-69	.068, .080, .100 & .429	RG8/11
4100-72	.324 & .360	CATV
4100-75	.151, .178 & .213	FIBER OPTIC
4100-76	.050(SQ), .044(SQ), .206(RO) & .239(RO)	RG58/59 (ROUND)
4100-78	.100, .128 & .429	RG8
4100-79	.128, .151, .178	SC & ST FIBER OPTIC

WIDTH ACROSS FLATS



CENTER CONDUCTOR CRIMP



FERRULE CRIMP

Strip cable according to manufacturer's specifications.
Select proper hex cavity for size of cable being used.
Crimp center conductor in area shown. Assemble conn-
ector and crimp outer ferrule.

THE TOOL IS EQUIPPED WITH A RATCHET MECHANISM TO
ASSURE RELIABLE CRIMP TERMINATIONS.

A RATCHET RELEASE LEVER IS PROVIDED TO ALLOW FOR
REMOVAL OF AN INCORRECTLY PLACED OR OVERSIZE
CONNECTOR.

ADJUST RATCHET RELEASE HANDLE FORCE TO **30-50 LBS.**
DEPENDING ON SIZE OF CONNECTOR & CABLE. LARGER
CONNECTORS REQUIRE HIGHER HANDLE PRE-LOADS TO
ASSURE A SECURE AND SYMMETRICAL CRIMP. MEASURE
EACH CRIMP ACROSS THE FLATS AND ADJUST THE
HANDLE PRE-LOAD TO OBTAIN SYMMETRY WITHIN .003.

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru