

Capacitive Controller ICs

Capacitive Switch Controller IC

BU21170MUV

General Description

BU21170MUV is a capacitive sensor controller for switch operation.

BU21170MUV has five sensors and provides the simple switch function by each sensor.

If external noise and temperature drift are detected, the automatic self-calibration is operated.

Include LED controller with PWM function.

Features

- 5 capacitive sensor ports.
- Automatic self-calibration.
- Continued touch detection.
- LED controller with PWM function.
- Inform the detected result of switch operation by interrupt.
- 2-wire serial bus interface.
- Single power supply.
- Built-in Power-On-Reset and Oscillator.

Applications

- Information appliance as printer.
- AV appliance as digital TV and HDD recorder.
- Notebook PC.

Key Specifications

Power Supply Voltage Range: 3.0V to 5.5V
 Operating Temperature Range: -25°C to +85°C
 Operating Current: 3.5mA(Typ without load)
 Scan Rate: 14.8msec(Typ)

 Package
 W(Typ) x D(Typ) x H(Max)

 VQFN020V4040
 4.00mm x 4.00mm x 1.00mm



Typical Application Circuit

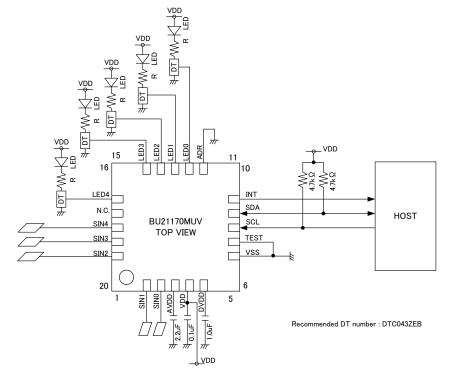


Figure 1. Typical Application Circuit

Pin Configuration

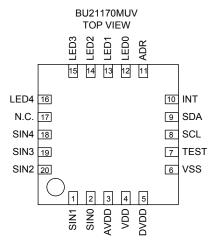


Figure 2. Pin Configuration

Pin Descriptions

Pin No.	Pin Name	Туре	Function	Note	Power	Initial Condition	I/O Equivalent Circuit
1	SIN1	Ain	Capacitive touch sensor 1		AVDD	Hi-Z	Figure 3
2	SIN0	Ain	Capacitive touch sensor 0		AVDD	Hi-Z	Figure 3
3	AVDD	Power	LDO output for analog blocks		-	-	-
4	VDD	Power	Power		-	-	-
5	DVDD	Power	LDO output for digital blocks		-	-	-
6	VSS	Ground	Ground		-	-	-
7	TEST	In	Test input	Fixed 'L' at the normal operation	VDD	-	Figure 4
8	SCL	InOut	Host I/F : SCL		VDD	Hi-Z	Figure 4
9	SDA	InOut	Host I/F : SDA		VDD	Hi-Z	Figure 4
10	INT	Out	Interrupt output	Active High interrupt	VDD	'L'	Figure 5
11	ADR	In	Select slave address input	'H':0x4D , 'L':0x4C	VDD	-	Figure 4
12	LED0	Out	LED control with PWM output 0	Active High	VDD	Hi-Z	Figure 5
13	LED1	Out	LED control with PWM output 1	Active High	VDD	Hi-Z	Figure 5
14	LED2	Out	LED control with PWM output 2	Active High	VDD	Hi-Z	Figure 5
15	LED3	Out	LED control with PWM output 3	Active High	VDD	Hi-Z	Figure 5
16	LED4	Out	LED control with PWM output 4	Active High	VDD	Hi-Z	Figure 5
17	N.C.	-	-		-	-	-
18	SIN4	Ain	Capacitive touch sensor 4		AVDD	Hi-Z	Figure 3
19	SIN3	Ain	Capacitive touch sensor 3		AVDD	Hi-Z	Figure 3
20	SIN2	Ain	Capacitive touch sensor 2		AVDD	Hi-Z	Figure 3

I/O Equivalent Circuits

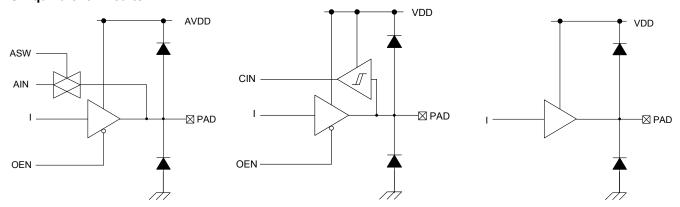


Figure 3. I/O Equivalent Circuit (a)

Figure 4. I/O Equivalent Circuit (b)

Figure 5. I/O Equivalent Circuit (c)

Block Diagram

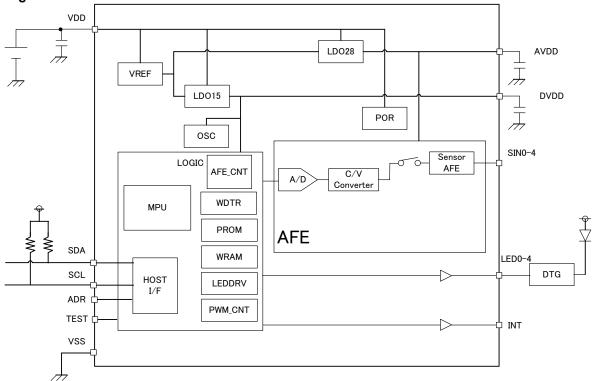


Figure 6. Block Diagram

Block Descriptions

Sensor AFE, C/V Converter

Convert from capacitance to voltage following the order of sensors.

<u>A/D</u>

Convert from voltage to the detected result the digital value.

LDO28

2.73V output LDO for Sensor AFE, C/V Converter and A/D.

LDO15

1.5V output LDO for OSC and digital blocks.

<u>OSC</u>

Ring oscillator as the system clock.

<u>POR</u>

Power-On-Reset monitoring VDD as the system reset.

MPU

Based on the detection result, detect switch operations (Touch/Release/Hold) and run Auto-calibration. Inform by the INT port to the host about that the switch operations are detected.

LED ports are controlled by the commands from the host.

HOST I/F

2-wire serial bus interface compatible with I2C protocol. Slave address is selectable by pin ADR.

AFE_CNT

Sequencer of Sensor AFE, C/V converter and A/D.

PWM CNT

PWM timers for the LED ports.

LEDDRV

LED port drivers.

WDTR

Watchdog timer Timeout Reset. It releases the system reset after 0.6sec from that MPU cannot clear WDTR. (If MPU cannot clear WDTR, MPU is hung up.)

PROM

Program ROM for the included MPU.

WRAM

... Work RAM for the included MPU. Absolute Maximum Ratings (Ta=25°C)

Parameter	Symbol	Rating	Unit
Power Supply Voltage	V_{DD}	-0.5 to 7.0	V
Input Voltage	V _{IN}	-0.3 to V _{DD} +0.7	V
Power Dissipation ^(Note 1)	Pd	0.55	W
Operating Temperature Range	Topr	-25 to +85	°C
Storage Temperature Range	Tstg	-55 to +125	°C
Maximum Junction Temperature	Tjmax	125	°C

(Note 1) Mounted on 74.2mm x 74.2mm x 1.6mm glass epoxy 1layer board (Copper foil area : 10.29mm²). Reduce 5.5mW per 1°C above 25°C **Caution:** Operating the IC over the absolute maximum ratings may damage the IC. The damage can either be a short circuit between pins or an open circuit between pins and the internal circuitry. Therefore, it is important to consider circuit protection measures, such as adding a fuse, in case the IC is operated over the absolute maximum ratings.

Recommended Operating Conditions

Parameter	Symbol	Min	Тур	Max	Unit
Power Supply Voltage	V_{DD}	3.0	3.3	5.5	V

Electrical Characteristics

(V_{DD}=3.3V , V_{SS}=0V , Ta=25°C, unless otherwise specified.)

Parameter	Symbol	Min	Тур	Max	Unit	Condition
	,		. 7 P		V	00110111011
Input High voltage	V _{IH}	$V_{DD} \times 0.7$	-	$V_{DD} + 0.3$	V	
Input Low voltage	V_{IL}	V _{SS} - 0.3	-	$V_{DD} \times 0.3$	V	
Output High voltage	V_{OH}	V _{DD} - 0.5	-	V_{DD}	V	$I_{OH} = -4mA$
Output Low voltage	V_{OL}	V_{SS}	-	V _{SS} + 0.5	V	I _{OL} = 4mA
Oscillator clock frequency	f _{OSC}	45	50	55	MHz	
DVDD LDO output voltage	V_{DVDD}	1.35	1.50	1.65	V	
AVDD LDO output voltage	V_{AVDD}	2.63	2.73	2.83	٧	
Power-on-reset release voltage		2.25	-	2.55	V	
Power-on-reset detect voltage		2.10	-	2.40	V	
Operating Current	I _{DD}	-	3.5	-	mA	Without load of sensors.

Register Map

(OSC = 50MHz , unless otherwise noted) No accessing to the reserved areas is allowed.

Group	Address	Name	RW	Initial	7	6	5	4	3	2	1	0
	0x00	SIN0_DATA	R	0x00				SD_SI	N0[7:0]			
	0x01	SIN1_DATA	R	0x00				SD_SI	N1[7:0]			
Detected value	0x02	SIN2_DATA	R	0x00				SD_SI				
D C C C C C C V C C C	0x03	SIN3_DATA	R	0x00				SD_SI				
	0x04	SIN4_DATA	R	0x00				SD_SI	N4[7:0]			
	0x05-0x0D	Reserved		000					DIAMO	DIAMO	DWM	DUMO
	0x0E 0x0F	STATE_PWM	R	0x00	•	•	-	-	PWM3 PWM3	PWM2 PWM2	PWM1 PWM1	PWM0 PWM0
	0x0F 0x10	CONT_PWM INTERRUPT	R	0x00	CONTDET	OFFDET	ONDET	PERCAL	PWM	ERCAL	CAL	INI
	0x10	DETECT_ON	R	0x00	- CONTIDET	-	- ONDET	ON_SW4	ON_SW3	ON SW2	ON SW1	ON SW0
	0x12	DETECT OFF	R	0x00		-	-	OFF SW4	OFF SW3	OFF SW2	OFF SW1	OFF SW0
	0x13	DETECT CONT	R	0x00	-	-	-	CONT_SW4	CONT_SW3	CONT_SW2	CONT_SW1	CONT_SW0
	0x14	DETECT_PWM_FINISH	R	0x00	-	-	-	-	PWM3	PWM2	PWM1	PWM0
Detected result	0x15-0x1A	Reserved										
	0x1B	STATE_INT	R	0x00	PWM3	PWM2	PWM1	PWM0	WDT	-	AFE	I2C
	0x1C	STATE	R	0x00	-	-	-	-	-	•	-	CALIB
	0x1D	STATE_SIN	R	0x00	-	-	-	SIN4	SIN3	SIN2	SIN1	SIN0
	0x1E	RACT	R	0x00				RAC*	[7:0]			
	0x1F 0x20-0x84	Reserved Reserved										
Reset Setting	0x20-0x64 0x85	SOFTRESET	DW.	0x00				SRS'	T[7:0]			
reserseumy	0x86-0x89	Reserved	IVW	UAUU				010	[1.0]			
Reset Setting	0x8A	SOFTRESET	RW	0x00				SRST	[15:8]			
-	0x8B-0xBF	Reserved										
	0xC0		R/W	0x00	-	MASK_CONT_SW0	MASK_OFF_SW0	MASK_ON_SW0		GAIN_S	IN0[3:0]	
	0xC1	SIN0_CFG	R/W	0x00				ON_TH_				
	0xC2		R/W	0x00				OFF_TH_	SIN0[7:0]			
	0xC3		R/W	0x00	-	MASK_CONT_SW1	MASK_OFF_SW1	MASK_ON_SW1		GAIN_S	IN1[3:0]	
	0xC4	SIN1_CFG	RW	0x00				ON_TH_				
	0xC5		RW	0x00		MARK CONT OWN	HARL OFF OWN	OFF_TH_	SIN1[7:0]	CAIN O	INIOTO-O1	
	0xC6 0xC7	SIN2_CFG	R/W	0x00	•	MASK_CONT_SW2	MASK_OFF_SW2	MASK_ON_SW2 ON_TH_	OIN1017-01	GAIN_S	IN2[3:0]	
	0xC7	SINZ_OFG	RW	0x00				OFF_TH				
Sensor setting	0xC9		RW 0x00 - MASK_CONT_SW3 MASK_OFF_SW3 MASK_ON_SW3 GAIN_SIN3[3:0]									
	0xCA	SIN3_CFG RA		0x00		minor_corr_cris	mnort_orr_orrs	ON TH	SIN3[7:0]	5/11/_0		
	0xCB	Silvs_CFG R/W		0x00		OFF_TH_SIN3[7:0]						
	0xCC		R/W	0x00	- MASK_CONT_SW4 MASK_OFF_SW4 MASK_ON_SW4 GAIN_SIN4(3:0)							
	0xCD	SIN4_CFG	RW	0x00				ON_TH_				
	0xCE		RW	0x00				OFF_TH_	SIN4[7:0]			
	0xCF	MONI_ACT	R/W	0x00	-	-	-	-	-	-	-	MONI_ACT
	0xD0	CONTTIMES	RW	0x00	CONTSEL	- 007	12-01		CON	1[5:0]		I
	0xD1	OSTIMES	RW	0x00		OST	[3:0]		-			-
Mask setting	0xD2-0xDE 0xDF	Reserved MASK_INTERRUPT	R/W	0x00				MSK_PERCAL		MSK ERCAL	MSK CAL	
wash sturiy	0xE0	MAON_INTERROLL	RW	0x00	<u> </u>	FAL PV	/M0[3:0]	MON_I ENGAL	-	RIS PV		
	0xE1	PWM0_CFG	RW	0x00		OFF_PV						
	0xE2	_	R/W			_				ON PW		
	0xE3			0x00	-	-	-			ON_PW REP_PV	/M0[3:0]	
	0xE4		RW	0x00	-	- FAL_PV	-	-			/M0[3:0] VM0[3:0]	
		PWM1_CFG	R/W	0x00 0x00	-	FAL_PV	-	-		REP_PV RIS_PV ON_PV	/M0[3:0] VM0[3:0] /M1[3:0] /M1[3:0]	
	0xE5	PWM1_CFG	R/W R/W	0x00 0x00 0x00	-	FAL_PV OFF_PV -	- VM1[3:0] VM1[3:0] -	-		REP_PV RIS_PV ON_PW REP_PV	M0[3:0] VM0[3:0] /M1[3:0] /M1[3:0] VM1[3:0]	
	0xE5 0xE6		R/W R/W R/W	0x00 0x00 0x00 0x00		FAL_PV OFF_PV - FAL_PV	- /M1[3:0] vM1[3:0] - /M2[3:0]			REP_PV RIS_PV ON_PW REP_PV RIS_PV	M0[3:0] VM0[3:0] M1[3:0] M1[3:0] VM1[3:0] VM1[3:0] M2[3:0]	
LED/PWM setting	0xE5 0xE6 0xE7	PWM1_CFG	R/W R/W R/W R/W	0x00 0x00 0x00 0x00 0x00		FAL_PV OFF_PV - FAL_PV OFF_PV	- /M1[3:0] VM1[3:0] - /M2[3:0] VM2[3:0]	-		REP_PV RIS_PV ON_PV REP_PV RIS_PV ON_PV	MO[3:0] VMO[3:0] M1[3:0] M1[3:0] VM1[3:0] VM1[3:0] M2[3:0]	
LED/PWM setting	0xE5 0xE6 0xE7 0xE8		R/W R/W R/W R/W R/W	0x00 0x00 0x00 0x00 0x00		FAL_PV OFF_PV - FAL_PV OFF_PV	- /M1[3:0] VM1[3:0] /M2[3:0] VM2[3:0]			REP_P\ RIS_PW ON_PW REP_P\ RIS_PW ON_PW REP_P\ RIS_PW ON_PW REP_P\	MO[3:0] VMO[3:0] /M1[3:0] /M1[3:0] VM1[3:0] /M2[3:0] /M2[3:0] VM2[3:0]	
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9	PWM2_CFG	RW RW RW RW RW RW	0x00 0x00 0x00 0x00 0x00 0x00 0x00		FAL_PV OFF_PV - FAL_PV OFF_PV - FAL_PV	- //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - /// - //// - /// - /// - /// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - //// - ////	-		REP_PV RIS_PV ON_PV REP_PV RIS_PV ON_PV REP_PV REP_PV RIS_PV	MO[3:0] VMO[3:0] /M1[3:0] /M1[3:0] VM1[3:0] /M2[3:0] /M2[3:0] VM2[3:0] /M3[3:0]	
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA		RW RW RW RW RW RW RW	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x0		FAL_PV OFF_PV - FAL_PV OFF_PV - FAL_PV	- /M1[3:0] VM1[3:0] /M2[3:0] VM2[3:0]	-		REP_PV RIS_PV ON_PV REP_PV RIS_PV ON_PV REP_PV RIS_PV ON_PV RIS_PV ON_PV	MO[3:0] VMO[3:0] VM1[3:0] VM1[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM3[3:0]	
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9	PWM2_CFG	RW RW RW RW RW RW	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x0	-	FAL_PV OFF_PV - FAL_PV OFF_PV - FAL_PV OFF_PV	- //// / /// /// /// /// /// /// /// //		MSK PWM3	REP_PV RIS_PV ON_PV REP_PV RIS_PV ON_PV REP_PV REP_PV RIS_PV	MO[3:0] VMO[3:0] VM1[3:0] VM1[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM3[3:0]	MSK PWM0
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB	PWM2_CFG PWM3_CFG MASK_PWM_FINISH	R/W R/W R/W R/W R/W R/W R/W	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x0		FAL_PV OFF_PV - FAL_PV OFF_PV				REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PV ON_PW REP_PV RIS_PV ON_PW REP_PV REP_PV	MO[3:0] VM0[3:0] VM1[3:0] M1[3:0] M1[3:0] VM1[3:0] M2[3:0] M2[3:0] VM2[3:0] VM3[3:0] VM3[3:0] VM3[3:0] VM3[3:0] VM3[3:0]	MSK_PWM0
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC	PWM2_CFG PWM3_CFG	RW RW RW RW RW RW RW RW	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00		FAL_PV OFF_PV				REP_PV RIS_PW ON_PW REP_PV RIS_PV ON_PW REP_PV RIS_PW REP_PV RIS_PW ON_PW REP_PV REP_PV	MO[3:0] VM0[3:0] VM1[3:0] M1[3:0] M1[3:0] M2[3:0] M2[3:0] M2[3:0] M2[3:0] VM3[3:0] VM3[3:0] M3[3:0] M3[3:0] M5K_PWM1 PWMA_L	
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED	PWM2_CFG PWM3_CFG MASK_PWM_FINISH	R/W R/W R/W R/W R/W R/W R/W R/W R/W R/W	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	- - - PWMA_I	FAL_PV OFF_PV			- PWMA_L	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW REP_PV RIS_PW ON_PW REP_PV MSK_PWM2 ED1[1:0]	MO[3:0] VM0[3:0] VM1[3:0] M1[3:0] M1[3:0] M2[3:0] M2[3:0] M2[3:0] M2[3:0] VM3[3:0] VM3[3:0] M3[3:0] M3[3:0] M5K_PWM1 PWMA_L	ED0[1:0]
LEDIPWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xFF	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT	R/W R/W R/W R/W R/W R/W R/W R/W R/W R/W	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	- - - PWMA_I	FAL_PV OFF_PV			PWMA_L - PWMCAL -	REP_PV RIS_PW ON_PV REP_PV RIS_PW ON_PV REP_PV RIS_PW ON_PV REP_PV EP_PV EP_PV MSK_PWM2 ED1[1:0] - PRECALCOND ERCAL	MO[3:0] VMO[3:0] VMO[3:0] M1[3:0] M1[3:0] VM2[3:0] VM2[3:0] VM2[3:0] VM3[3:0] M3[3:0] MSK_PWM1 PWMA_L PERCAL CAL	ED0[1:0] ED4[1:0] LEDCAL INI
LEDIPWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xEF 0xFF0 0xF1	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_	FAL_PV OFF_PV		ED2[1:0] PERCAL ON_SW4	PWMA_L - PWMCAL - ON_SW3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV EP_PV AREP_PV ON_PW REP_PV AREP_PV BED1[1:0] PRECALCOND ERCAL ON_SW2	MO[3:0] VMO[3:0] VMO[3:0] M1[3:0] M1[3:0] VM1[3:0] VM2[3:0] M2[3:0] M2[3:0] M3[3:0] MSK_PWM1 PWMA_L PERCAL CAL ON_SW1	ED0[1:0] .ED4[1:0] LEDCAL INI ON_SW0
LEDIPWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xEC 0xEC 0xEC 0xEE 0xFF 0xF0 0xF1	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_1	FAL_PV OFF_PV		- - - - - - ED2[1:0] - - - - - - - - - - - - - - - - - - -	PWMA_L - PWMCAL - ON_SW3 OFF_SW3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV ED1[1:0] PRECALCOND ERCAL ON_SW2 OFF_SW2	MO[3:0] VMO[3:0] VMO[3:0] M1[3:0] M1[3:0] VM1[3:0] VM2[3:0] M2[3:0] M3[3:0] M3[3:0] MSK_PWM1 PWMA_L PERCAL CAL ON_SW1 OFF_SW1	ED0[1:0] .ED4[1:0] LEDCAL INI ON_SW0 OFF_SW0
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEC 0xED 0xEF 0xFF 0xF7 0xF9 0xF1 0xF2 0xF3	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ONF CLR_DETECT_OFF CLR_DETECT_CONT	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	· · · · · · · · · · · · · · · · · · ·	FAL_PV OFF_PV		- ED2[1:0] - PERCAL ON_SW4 OFF_SW4 CONT_SW4	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PV ON_PW REP_PV MSK_PWM2 ED1[1:0]	MO[3:0] VMO[3:0] VMO[3:0] M1[3:0] M1[3:0] VM1[3:0] M2[3:0] M2[3:0] VM2[3:0] M3[3:0] M3[3:0] PWMA_L PERCAL CAL ON_SW1 OFF_SW1 CONT_SW1	ED0[1:0] ED4[1:0] LEDCAL INI ON_SW0 OFF_SW0 CONT_SW0
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xEF 0xF0 0xF1 0xF2 0xF3	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF CLR_DETECT_CONT CLR_DETECT_PWM_FINISH	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_1	FAL_PV OFF_PV		- - - - - - ED2[1:0] - - - - - - - - - - - - - - - - - - -	PWMA_L - PWMCAL - ON_SW3 OFF_SW3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV ED1[1:0] PRECALCOND ERCAL ON_SW2 OFF_SW2	MO[3:0] VMO[3:0] VMO[3:0] M1[3:0] M1[3:0] VM1[3:0] VM2[3:0] M2[3:0] M3[3:0] M3[3:0] MSK_PWM1 PWMA_L PERCAL CAL ON_SW1 OFF_SW1	ED0[1:0] .ED4[1:0] LEDCAL INI ON_SW0 OFF_SW0
	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xEF 0xF0 0xF1 0xF2 0xF3 0xF4	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF CLR_DETECT_CONT CLR_DETECT_PWM_FINISH Reserved	RWW RWW RWW RWW RWW RWW RWW RWW RWW RWW	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_I	FAL_PV OFF_PV			PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PV ON_PW REP_PV MSK_PWM2 ED1[1:0] - PRECALCOND ERCAL ON_SW2 OFF_SW2 CONT_SW2 PWM2	MO[3:0] VM0[3:0] VM0[3:0] M1[3:0] M1[3:0] VM1[3:0] M2[3:0] M2[3:0] VM2[3:0] M3[3:0] M3[3:0] MSK_PWM1 PWMA_L PERCAL CAL ON_SW1 OFF_SW1 CONT_SW1	LEDO[1:0] LED4[1:0] LEDCAL INI ON_SWO OFF_SWO CONT_SWO PWM0
LED/PWM setting	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xFF 0xF1 0xF1 0xF2 0xF3 0xF4 0xF5-0xF8	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF CLR_DETECT_CONT CLR_DETECT_PWM_FINISH Reserved PWM_SWITCH	RW RW RW RW RW RW RW RW RW RW RW RW RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_I	FAL_PV OFF_PV		ED2[1:0]	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3	REP_PV RIS_PW ON_PV REP_PV RIS_PW ON_PV REP_PV RIS_PW ON_PV REP_PV ON_PV REP_PV ON_PV REP_PV ON_PW REP_PV ON_PW REP_PV ON_PW REP_PV ON_PW	MO[3:0] MO[3:0] MM[3:0] MM[3	LED0[1:0] LED4[1:0] LEDCAL INI ON_SWO OFF_SWO CONT_SWO PWMO CFG
	0xE5 0xE6 0xE7 0xE8 0xE9 0xE9 0xEB 0xEC 0xED 0xEE 0xF0 0xF1 0xF2 0xF3 0xF4 0xF5-0xF8	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF CLR_DETECT_CONFINISH Reserved PWM_SWITCH LED_CNT	RW RW RW RW RW RW RW RW RW RW RW RW RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_I	FAL_PV OFF_PV		ED2[1:0] PERCAL ON_SW4 OFF_SW4 CONT_SW4	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3	REP_PV RIS_PW ON_PV REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV ED1[1:0] - PRECALCOND ERCAL ON_SW2 OFF_SW2 CONT_SW2 PWM2 - LED2_EN	MO[3:0] MO[3:0] MM[3:0] MM[3:0] MM[3:0] MM[3:0] MM[23:0] MM[23:0] MM[23:0] MM[3:0] M	ED0[1:0] ED4[1:0] LEDCAL INI ON_SWO OFF_SWO CONT_SWO PWMO CFG LED0_EN
	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xFF 0xF1 0xF1 0xF2 0xF3 0xF4 0xF5-0xF8	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF CLR_DETECT_CONT CLR_DETECT_PWM_FINISH Reserved PWM_SWITCH	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_I	FAL_PV OFF_PV		ED2[1:0]	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV EP_PV NS_PVM2 ED1[1:0] PRECALCOND ERCAL ON_SW2 OFF_SW2 CONT_SW2 PWM2 LED2_EN PWMS_LED2	MO[3:0] MO[3:0] MM[3:0] MM[3	ED0[1:0] ED4[1:0] LEDCAL INI ON_SWO OFF_SWO CONT_SWO PWMO CFG
	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xEC 0xED 0xEF 0xF0 0xF1 0xF2 0xF3 0xF4 0xF4 0xF5-0xF8 0xF9 0xF4	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ONF CLR_DETECT_OFF CLR_DETECT_CONT CLR_DETECT_FWM_FINISH RESENBED PWM_SWITCH LED_CNT PWM_SELECT	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x0	PWMA_I	FAL_PV OFF_PV		PERCAL ON_SW4 OFF_SW4 CONT_SW4 - LED4_EN PWMS_LED4	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3 LED3_EN PWMS_LED3 PWMS_LED3	REP_PV RIS_PW ON_PV REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV ED1[1:0] - PRECALCOND ERCAL ON_SW2 OFF_SW2 CONT_SW2 PWM2 - LED2_EN	MO[3:0] MO[3:0] MM[3:0] MM[3:0] MM[3:0] MM[3:0] MM[23:0] MM[23:0] MM[23:0] MM[3:0] M	ED0[1:0] ED4[1:0] ED4[1:0] LEDCAL INI ON_SW0 OFF_SW0 CONT_SW0 PWM0 CFG LED0_EN PWMS_LED0
	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xFF 0xF7 0xF3 0xF4 0xF5-0xF8 0xF9 0xF9 0xFA 0xFB	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OFF CLR_DETECT_CONT CLR_DETECT_FWM_FINISH RESENED PWM_SWITCH LED_CNT PWM_SELECT PWM_CNT	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x0	PWMA_I	FAL_PV OFF_PV		PERCAL ON_SW4 OFF_SW4 CONT_SW4 - LED4_EN PWMS_LED4	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3 LED3_EN PWMS_LED3 PWMS_LED3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV EP_PV NS_PVM2 ED1[1:0] PRECALCOND ERCAL ON_SW2 OFF_SW2 CONT_SW2 PWM2 LED2_EN PWMS_LED2	MO[3:0] MO[3:0] MM[3:0] MM[3:0] MM[3:0] MM[3:0] MM[23:0] MM[23:0] MM[23:0] MM[3:0] M	ED0[1:0] ED4[1:0] ED4[1:0] LEDCAL INI ON_SWO OFF_SWO CONT_SWO PWM0 CFG LED0_EN PWMS_LED0
	0xE5 0xE6 0xE7 0xE8 0xE9 0xEA 0xEB 0xEC 0xED 0xEE 0xFF 0xF7 0xF1 0xF2 0xF3 0xF4 0xF5-0xF8 0xF9 0xFA	PWM2_CFG PWM3_CFG MASK_PWM_FINISH PWM_ASSIGN LED_CALIB CLR_INTERRUPT CLR_DETECT_ON CLR_DETECT_OF CLR_DETECT_CONT CLR_DETECT_CONT CLR_DETECT_FWM_FINISH Resened PWM_SWITCH LED_CNT PWM_SELECT PWM_SELECT PWM_SELECT PWM_CNT Reserved	RW R	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	PWMA_I	FAL_PV OFF_PV		PERCAL ON_SW4 OFF_SW4 CONT_SW4 - LED4_EN PWMS_LED4	PWMA_L PWMCAL ON_SW3 OFF_SW3 CONT_SW3 PWM3 LED3_EN PWMS_LED3 PWMS_LED3	REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV RIS_PW ON_PW REP_PV EP_PV NS_PVM2 ED1[1:0] PRECALCOND ERCAL ON_SW2 OFF_SW2 CONT_SW2 PWM2 LED2_EN PWMS_LED2	MO[3:0] MO[3:0] MM[3:0] MM[3:0] MM[3:0] MM[3:0] MM[23:0] MM[23:0] MM[23:0] MM[3:0] M	ED0[1:0] ED4[1:0] ED4[1:0] LEDCAL INI ON_SW0 OFF_SW0 CONT_SW0 PWM0 CFG LED0_EN PWMS_LED0

[0x00-0x04 : Sensor Data]

Name: SIN_DATA Address: 0x00-0x04

Description: This registers shows 8bit ADC value of each sensor.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
0x00		SD SIN0[7:0]								
0x01		SD_SIN1[7:0]								
0x02				SD_SI	N2[7:0]					
0x03				SD_SI	N3[7:0]					
0x04				SD_SI	N4[7:0]					
R/W	R	R R R R R R								
Initial val.	0	0	0	0	0	0	0	0		

[0x0E : State of the peripheral PWM timer]

Name: STATE_PWM Address: 0x0E

Description: 1: The PWM timer is running. PWM state is on 'RISE', 'FALL', 'ON' or 'OFF'.

0 : The PWM timer is not running.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x0E	-	-	-	-	PWM3	PWM2	PWM1	PWM0
R/W	-	-	-	-	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x0F : State of the PWM sequence]

Name: CONT_PWM Address: 0x0F

Description: 1 : PWM timer is running and not received stop command.

0 : PWM timer is running and received stop command. Or PWM timer is stopped.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x0F	-	-	-	-	PWM3	PWM2	PWM1	PWM0
R/W	-	-	-	-	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x10 : Interrupt factor]

Name: INTERRUPT Address: 0x10

Description: This register shows the interrupt factors. Port INT outputs this register's OR operation.

INI: Initialization finish:

This register is set to '1' when initialization is complete after power-on-sequence or watch dog timer reset. This register is cleared by setting '0' to the bit INI that is included the 'Clear interrupt' registers (Address 0xF0).

CAL: Software-calibration finish:

This register is set to '1' when software calibration is complete. This register is cleared by setting '0' to the bit CAL that is included the 'Clear interrupt' registers (Address 0xF0).

ERCAL: Self-re-calibration finish:

This register is set to '1' when self-re-calibration is complete. Self-re-calibration runs automatically after the detection that IC should be re-calibration. This register is cleared by setting '0' to the bit ERCAL that is included the 'Clear interrupt' registers (Address 0xF0).

PWM: PWM continuous flashing of LED finish:

This register is set to '1' when LED's PWM drive has finished. This register is cleared by clearing every bit of the 'Interrupt of PWM continuous flashing' register.

PERCAL: Periodic calibration finish:

This register is set to '1' when periodic calibration is complete. This register is cleared by setting '0' to the bit PERCAL that is included the 'Clear interrupt' registers (Address 0xF0).

ONDET: Detection of switch-on:

This register is set to '1' when it detects a switch operation is considered to be On. This register is cleared by clearing every bit of the 'Detection Switch-On' register.

OFFDET: Detection of switch-off:

This register is set to '1' when it detects a switch operation is considered to be Off. This register is cleared by clearing every bit of the 'Detection Switch-Off' register.

CONTDET: Detection of continued touch:

This register is set to '1' when it detects a continued touch switch operation. This register is cleared by clearing every bit of the 'Detection continuous touch' register.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x10	CONTDET	OFFDET	ONDET	PERCAL	PWM	ERCAL	CAL	INI
R/W	R	R	R	R	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x11 : Detection Switch-On]

Name: DETECT_ON

Address: 0x11

Description: This register indicates the change to ON from OFF of each switch.

If the mask for the ON operation included in the sensor settings is enabled, this register is disabled.

Logical OR of this register is ONDET included 'Interrupt factor' register.

1 : Detect On. 0 :Not detect On.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x11	-	-	-	ON_SW4	ON_SW3	ON_SW2	ON_SW1	ON_SW0
R/W	-	-	-	R	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x12 : Detection Switch-Off]

Name: DETECT_OFF

Address: 0x12

Description: This register indicates the change to OFF from ON of each switch.

If the mask for the OFF operation included in the sensor settings is enabled, this register is disabled.

Logical OR of this register is OFFDET included 'Interrupt factor' register.

1 : Detect Off. 0 :Not detect Off.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x12	-	-	-	OFF_SW4	OFF_SW3	OFF_SW2	OFF_SW1	OFF_SW0
R/W	-	-	-	R	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x13 : Detection continuous touch]

Name: DETECT CONT

Address: 0x13

Description: This register indicates the detection of continuous touch of each switch.

If the mask for the continuous touch operation included in the sensor settings is enabled, this register is

disabled.

Logical OR of this register is CONTDET included 'Interrupt factor' register.

1 : Detect Continuous touch. 0 :Not detect Continuous touch.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x13	ı	-	-	CONT_SW4	CONT_SW3	CONT_SW2	CONT_SW1	CONT_SW0
R/W	-	-	-	R	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x14 : Interrupt of PWM continuous flashing]

Name: DETECT PWM FINISH

Address: 0x14

Description: This register indicates the end of the each LED PWM drive. And in the case that the PWM function is

stopped by the writing 0 to the PWM operation register (0xFC), this register is set to 1.

Logical OR of this register is PWM included 'Interrupt factor' register.

1 : Finished LED PWM drive. 0 :Clear.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x14	-	-	-	-	PWM3	PWM2	PWM1	PWM0
R/W	-	-	-	-	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x1B : State of interrupt from the peripherals]

Name: STATE_INT Address: 0x1B

Description: This register shows the peripheral which issues an interrupt to MPU.

1 : Interrupt is. 0 : Interrupt is not.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x1B	PWM3	PWM2	PWM1	PWM0	WDT	-	AFE	I2C
R/W	R	R	R	R	R	-	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x1C : State of IC]

Name: STATE Address: 0x1C

Description: This register indicates the state of IC.

Indicates whether the IC is in calibration or not.

1 : In calibration. 0 : Not in calibration

The required time for calibration. : About 140 msec.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x1C	-	-	-	-	-	-	-	CALIB
R/W	-	-	-	-	-	-	-	R
Initial val.	0	0	0	0	0	0	0	0

[0x1D : Sensor State]

Name: STATE_SIN Address: 0x1D

Description: This register indicates the state of each sensor

1 : Switch-on. (Register 'SIN_DATA' > Register 'TH_ON')
0 : Switch-off. (Register 'SIN_DATA' < Register 'TH_OFF')

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0x1D	-	-	-	SIN4	SIN3	SIN2	SIN1	SIN0
R/W	-	-	-	R	R	R	R	R
Initial val.	0	0	0	0	0	0	0	0

[0x1E : Read register for operation check of IC]

Name: RACT Address: 0x1E

Description: This register is a read register for operational check of the IC. The value written to the write register for

operation check (Address is 0xFE) is copied to this register. If the write value and the read value are equal,

MPU and I/F are operating normally.

The required time to copy to this register from the write register for operation check: About 20usec.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
0x1E		RACT[7:0]								
R/W	R	R R R R R R								
Initial val.	0	0	0	0	0	0	0	0		

[0x85, 0x8A: Software Reset]

Name: SOFTRESET Address: 0x85, 0x8A

Description: These registers are used for hardware reset. If the 0x85 register's value is 0x55 and the 0x8A is 0xAA,

then a hardware reset will be done.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
0x85		SRST[7:0]								
0x8A		SRST[15:8]								
R/W	R/W	RW RW RW RW RW RW RW								
Initial val.	0	0	0	0	0	0	0	0		

[0xC0-0xCE : Sensor Settings]

Name: SIN_CFG Address: 0xC0 – 0xCE

Description: These registers are for setting of each SIN sensor.

The settings are the thresholds (from On to Off, and from Off to On), the gain and the mask function of the

each switch operation (On / Off / Continuous touch).

GAIN_SIN*[3:0] : Setting for the gain :

This register is for setting the gain of AFE. The smaller the value of this register is, the higher the gain is.

Adjustment range : 0x1 ≤ GAIN_SIN ≤ 0xF

The sensor which setting value is 0 has no switch function.

ON_TH_SIN*[7:0] : The threshold from Off to On :

This register is the threshold from Off to On. This value is compared to the register SIN_DATA. If the value of this register is larger than SIN_DATA, the On operation is detected.

OFF_TH_SIN*[7:0]: The threshold from On to Off:

This register is the threshold from On to Off. This value is compared to the register SIN_DATA. If the value of this register is smaller than SIN_DATA, the Off operation is detected.

Adjustment range: 0x00 < OFF SIN* < ON SIN* < 0xFF

The sensor which setting value is out of this range is unusable for switch operation.

MSK_ON_SIN*, MSK_OFF_SIN*, MSK_CONT_SIN*: Mask for the switch operation:

This register is the mask function of the each switch operation (On / Off / Continuous touch). If the mask function is enabled, the register for detection of switch operation is disabled.

1 : Mask function is enable. 0 : Mask function is disable (default).

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xC0	-	MSK_CONT_SIN0	MSK_OFF_SIN0	MSK_ON_SIN0		GAIN_S	SIN0[3:0]	
0xC1				ON_TH_SIN0[7:0]			
0xC2				OFF_TH_SIN0	[7:0]			
0xC3	-	MSK_CONT_SIN1	MSK_OFF_SIN1	MSK_ON_SIN1		GAIN_S	SIN1[3:0]	
0xC4				ON_TH_SIN1[7:0]			
0xC5				OFF_TH_SIN1	[7:0]			
0xC6	-	MSK_CONT_SIN2	MSK_OFF_SIN2	MSK_ON_SIN2		GAIN_S	SIN2[3:0]	
0xC7	ON_TH_SIN2[7:0]							
0xC8	OFF TH SIN2[7:0]							
0xC9	-	MSK_CONT_SIN3	MSK_OFF_SIN3	MSK_ON_SIN3		GAIN_S	SIN3[3:0]	
0xCA				ON_TH_SIN3[7:0]			
0xCB				OFF_TH_SIN3	[7:0]			
0xCC	-	MSK_CONT_SIN4	MSK_OFF_SIN4	MSK_ON_SIN4		GAIN_S	SIN4[3:0]	
0xCD	ON_TH_SIN4[7:0]							
0xCE	OFF_TH_SIN4[7:0]							
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xCF: Monitor activity of the sensor]

Name: MONI_ACT Address: 0xCF

Description: This register is used to select whether to monitor the register ACT (scan enable bit at the address 0xFF).

The monitor's purpose is to prevent erroneous stop of detection of the AFE.

If the state that the AFE scan is stopped in the case that the monitor function is enabled is detected, the

AFE scan will be self-restarted.

Monitor function is executed about 300 msec.

1 : Monitor function is enabled. 0 : Monitor function is disabled (default).

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xCF	1	-	-	-	-	-	1	MONI_ACT
R/W	-	-	-	-	-	-	-	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xD0 : Configuration continuous touch]

Name: CONTTIMES

Address: 0xD0

Description: CONTSEL: This register is to select the interrupt frequency by detection continuous touch.

1 : Every continuous touch period.

0: First detect only.

CONT[5:0]: Continuous touch period is about 0.1[sec] x CONT.

If the setting value is 0x0, continuous touch function is disable.

 $(0.1 \sec \le \text{Continuous touch period} \le 6.3 \sec)$

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
0xD0	CONTSEL	-		CONT[5:0]						
R/W	R/W	-	R/W	R/W	R/W	R/W	R/W	R/W		
Initial val.	0	0	0	0	0	0	0	0		

[0xD1 : Configuration oversampling]

Name: OSTIMES Address: 0xD1

Description: OST[3:0]: This register is the number of times of oversampling for canceling chattering to the 'ON' or 'OFF'

operation. If the continuance of the 'ON' or 'OFF' operations is lower than this register, the operations are ignored. If this register value is '0', the number of times of oversampling is '1'.

Sampling rate: About 14.8msec.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xD1		OST[3:0]				-	-	-
R/W	R/W	RW RW RW				-	-	-
Initial val.	0	0	0	0	0	0	0	0

[0xDF: Mask interrupt]

Name: MASK_INTERRUPT

Address: 0xDF

Description: This register is for mask to the interrupt factor. The masked interrupt factor is not shown on the register

'Interrupt factor (address 0x10)', so it does not affect to output port INT.

1 : Masked 0 : Unmasked (default)

MSK CAL: Mask for Software-calibration finish:

This bit does mask to the interrupt of Software-calibration finish (the bit CAL in the register 'Interrupt factor' (address 0x10)).

MSK_ERCAL : Mask for Self-calibration finish :

This bit does mask to the interrupt of Self-calibration finish (the bit ERCAL in the register 'Interrupt factor' (address 0x10)).

MSK PERCAL: Mask for Periodic calibration finish:

This bit does mask to the interrupt of Periodic calibration finish (the bit PERCAL in the register 'Interrupt factor' (address 0x10)).

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xDF	-	-	-	MSK_PERCAL	-	MSK_ERCAL	MSK_CAL	-
R/W	-	-	-	R/W	-	R/W	R/W	-
Initial val.	0	0	0	0	0	0	0	0

[0xE0-0xEB : Configuration of PWM]

Name: PWM_CFG Address: 0xE0 - 0xEB

Description: Each of the 4 PWM timers (PWM-0/1/2/3) has 5 parameters.

When the register for PWM operation (0xFC) is changed from 0 to 1, these setting will be enabled.

I. RIS_PWM* : Rising Time Adjustment range : 0x0 ≤ RIS_PWM ≤ 0xF Rising Time = About 317msec x RIS_PWM* (0 ≤ Rising Time ≤ 4755 [msec])

II. FAL_PWM* : Falling Time Adjustment range : $0x0 \le FAL_PWM \le 0xF$ Falling Time = About 317msec x FAL_PWM* ($0 \le Falling Time \le 4755 [msec]$)

III. ON_PWM*: Lights-On Time. Adjustment range: 0x1 ≤ RIS_PWM ≤ 0xF.
Lights-On Time = About 300msec x ON_PWM* (300 ≤ Lights-On Time ≤ 4500 [msec])
If the setting value is 0x0, the PWM timer continues to lighting. In the case of continuous lighting, the way how to turn off the light is to change the value of the register for PWM operation (0xFC) from 1 to 0

IV. OFF_PWM* : Lights-Off Time. Adjustment range : 0x0 ≤ OFF_PWM ≤ 0xF Lights-Off Time = About 300msec x OFF_PWM* (0 ≤ Lights-Off Time ≤ 4500 [msec])

V. REP_PWM* : Repeat Count.

In the case that the setting value is 0x0 or 0x1, non repeat.

In the case that the setting value is 0xF, unlimited repeat.

In the case that the setting value is from 0x2 to 0xE, repeat as many times as the setting value.

When the PWM function is finished, the bit PWM which is included in 'Interrupt factor' register (0x10) will be set to 1 and the level of the port INT will be High-Level. The bit PWM which is included in 'Interrupt factor' register is cleared by the writing 0 to the bit PWM which is included in 'Interrupt clear' register. And FAL PWM is applied in the falling time.




Figure 7. PWM waveform

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
0xE0		FAL_PW	/M0[3:0]			RIS_PW	/M0[3:0]		
0xE1		OFF_PV	VM0[3:0]			ON_PW	'M0[3:0]		
0xE2	-	-	1	-	REP_PWM0[3:0]				
0xE3		FAL_PW	/M1[3:0]		RIS_PWM1[3:0]				
0xE4		OFF_PV	VM1[3:0]		ON_PWM1[3:0]				
0xE5					REP_PWM1[3:0]				
0xE6		FAL_PW	/M2[3:0]		RIS_PWM2[3:0]				
0xE7		OFF_PV	VM2[3:0]			ON_PW	'M2[3:0]		
0xE8					REP_PWM2[3:0]				
0xE9		FAL_PW	/M3[3:0]			RIS_PW	/M3[3:0]		
0xEA		OFF_PV	VM3[3:0]			ON_PW	'M3[3:0]		
0xEB					REP_PWM3[3:0]				
R/W	R/W	R/W	R/W	R/W	R/W R/W R/W				
Initial val.	0	0	0	0	0	0	0	0	

[0xEC : Mask Interrupt of PWM continuous flashing]

Name: MASK_PWM_FINISH

Address: 0xEC

Description: This register is the mask function for the interrupt of the end of the each LED PWM drive.

1 : Masked 0 : Unmasked (default)

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xEC	-	-	-	-	MSK_PWM3	MSK_PWM2	MSK_PWM1	MSK_PWM0
R/W	-	-	-	-	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xED-0xEE : LED-PWM assign]

Name: PWM_ASSIGN Address: 0xED - 0xEE

Description: These registers are used to set any PWM setting from the four settings to each LED port.

0x0 : Assign PWM-0 0x1 : Assign PWM-1 0x2 : Assign PWM-2 0x3 : Assign PWM-3

These registers value is set by writing '1' to the Switch PWM assign register (Address = 0xF9).

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xED	PWMA_L	ED3[1:0]	PWMA_L	ED2[1:0]	PWMA_L	ED1[1:0]	PWMA_L	ED0[1:0]
0xEE	-	-	-	-	-	-	PWMA_L	.ED4[1:0]
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xEF : LED calibration]

Name: LED_CALIB Address: 0xEF

Description: This register is used to select whether to perform the calibration. The calibration is done by writing to any

LED port or by periodic calibration.

LEDCAL: Self-calibration enable bit at controlled for LED/PWM:

This register is used to select whether to perform the self-calibration when the corresponding registers for LED/PWM control are written. The corresponding registers' addresses are from 0xF9 to 0xFC.

1 : Not perform the self-calibration. 0 : Perform the self-calibration (default).

PERCAL: Periodical calibration:

This register is used to select whether to perform the periodical calibration.

1: Not perform the periodical calibration. 0: Perform the periodical calibration (default).

PERCALCOND: Condition of the periodical calibration:

This register is used to select the condition to perform the periodical calibration.

1 : Always. 0 : At any LED port is lighting (default).

PWMCAL : Condition of the periodical calibration when the PWM function is active :

This register is used to select whether to perform the periodical calibration in the case that the periodical calibration is enable.

- 1: Perform the periodical calibration regardless of the condition of the LED port assigned to PWM function.
- $0: Perfor\underline{m} \ the \ periodical \ calibration \ only \ the \ LED \ port \ assigned \ to \ PWM \ function \ is \ set \ to \ inactive \ (default).$

Conditions			
State of the LED port assigned to PWM function	bit s	state	Periodical Calibration
State of the LED port assigned to PWW function	PERCAL	PWMCAL	
	0	0	Not performed
With flashing by PWM drive.	U	1	Performed
With hashing by F Wivi drive.	1	0	Not performed
	'	1	Not performed
	0	0	Performed
Without flashing by PWM drive.	U	1	1 enomed
Without hashing by I Wivi drive.	1 1	0	Not performed
	'	1	Not performed

PERIOD[7:4]: Interval of the periodical calibration:

This register is used to set the interval of the periodical calibration.

The interval of the periodical calibration = About 5 seconds x (PERIOD + 1)

 $(5 \text{ seconds} \leq \text{Interval time} \leq 80 \text{ seconds})$

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xEF		PERI	OD[3:0]		PWMCAL	PERCALCOND	PERCAL	LEDCAL
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xF0 : Clear Interrupt]

Name: CLR INTERRUPT

Address: 0xF0

Description: Clear Interrupt Register.

INI: Clear Interrupt of Initialization finish:

Clear the INI interrupt by writing '0' to this register. If the written value is '1', the operation is not valid.

CAL: Clear Interrupt of Software-calibration finish:

Clear the CAL interrupt by writing '0' to this register. If the written value is '1', the operation is not valid.

ERCAL: Clear Interrupt of Self-calibration finish:

Clear the ERCAL interrupt by writing '0' to this register. If the written value is '1', the operation is not valid.

PERCAL: Clear Interrupt of Periodic calibration finish:

Clear the PERCAL interrupt by writing '0' to this register. If the written value is '1', the operation is not valid.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xF0	1	-	-	PERCAL	-	ERCAL	CAL	INI
R/W	-	-	-	R/W	-	R/W	R/W	R/W
Initial val.	-	-	-	0	-	0	0	0

[0xF1 : Clear Switch-On]

Name: CLR_DETECT_ ON

Address: 0xF1

Description: DETECT ON Clear Register. Clear the DETECT ON by writing '0' in these registers. If the written

value is '1', the operation is not valid.

1 : Invalid. 0 : Clear.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xF1	Ī	-	-	ON_SW4	ON_SW3	ON_SW2	ON_SW1	ON_SW0
R/W	-	-	-	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xF2 : Clear Switch-Off]

Name: CLR_DETECT_OFF

Address: 0xF2

Description: DETECT_OFF Clear Register. Clear the DETECT_OFF by writing '0' in these registers. If the written

value is '1', the operation is not valid.

1 : Invalid. 0 : Clear.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xF2	-	-	-	OFF_SW4	OFF_SW3	OFF_SW2	OFF_SW1	OFF_SW0
R/W	-	-	-	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xF3: Clear continuous touch]

Name: CLR_DETECT_CONT

Address: 0xF3

Description: DETECT_CONT Clear Register. Clear the DETECT_CONT by writing '0' to these registers. If the

written value is '1', the operation is not valid.

1 : Invalid. 0 : Clear.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xF3	-	-	-	CONT_SW4	CONT_SW3	CONT_SW2	CONT_SW1	CONT_SW0
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xF4 : Clear Interrupt of PWM continuous flashing]

Name: CLR_DETECT_PWM_FINISH

Address: 0xF4

Description: DETECT_PWM_FINISH Clear Register. Clear the DETECT_PWM_FINISH by writing '0' to these registers.

If the written value is '1', the operation is not valid.

1 : Invalid. 0 : Clear.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xF4	-	-	-	-	PWM3	PWM2	PWM1	PWM0
R/W	-	-	-	-	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xF9 : Switch PWM assign]

Name: PWM_SWITCH

Address: 0xF9

Description: CFG: Switch PWM assign:

If the written value is '1', the PWM configurations (Address from 0xED to 0xEE) are valid.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xF9	-	-	-	-	-	-	-	CFG
R/W	-	-	-	-	-	-	-	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xFA: Control LED port]

Name: LED_CNT Address: 0xFA

Description: This register is used to control each LED port.

1 : Always On (High drive) 0 : Always Off (Low drive)

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xFA	-	-	-	LED4_EN	LED3_EN	LED2_EN	LED1_EN	LED0_EN
R/W	-	-	-	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xFB : Select PWM]

Name: PWM SELECT

Address: 0xFB

Description: This register is used to select whether PWM function for each LED port.

1: Use PWM function. 0: Not use PWM function (default).

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xFB	-	-	-	PWMS_LED4	PWMS_LED3	PWMS_LED2	PWMS_LED1	PWMS_LED0
R/W	-	-	-	R/W	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xFC : Control PWM function]

Name: PWM_CNT Address: 0xFC

Description: This register is used to control PWM function.

By writing '1' to the register which value is '0', the PWM function is started. By writing '0' to the register which value is '1', the PWM function is stopped.

In the case that the PWM function is finished by reaching repeat number, set '0' to this register for the next

operation of PWM function.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xFC	-	-	-	-	PWM3_EN	PWM2_EN	PWM1_EN	PWM0_EN
R/W	-	-	-	-	R/W	R/W	R/W	R/W
Initial val.	0	0	0	0	0	0	0	0

[0xFE : Write register for operation check of IC]

Name: WACT Address: 0xFE

Description: This register is a write register for operational check of the IC. This register's value is copied to the read

register for operation check (Address is 0x1E). If the write value and the read value are equal, MPU and

I/F are operating normally.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0						
0xFE			WACT[7:0]											
R/W	R/W	R/W	R/W	RW RW RW										
Initial val.	0	0	0	0	0	0	0	0						

[0xFF : AFE Control]

Name: CNT Address: 0xFF

Description: This register is for controlling AFE.

ACT : Scan Enable :

This bit is the scan enable for AFE. 1: Scan Enable. 0: Scan Disable.

CAL: Act Soft-calibration:

The calibration is operated by setting '1'.

CFG: Enable Configuration Value:

Writing '1' to this bit, the value of Sensor configuration (address from 0xC0 to 0xD1), Mask Configuration (address 0xDF), Mask Interrupt of PWM continuous flashing (address = 0xEC), LED calibration (address = 0xEF), FRCRLS and CALOVF are effective to the IC's operation.

CALMOD: Select Software-calibration mode:

0: All sensors are the targets for soft-calibration. If some sensor has the value more than the threshold for 'OFF' to 'ON', the sensors are changed to 'OFF', and DETECT_OFF register is enabled (default).

1: The sensors with the value more than the threshold for 'OFF' to 'ON' are not calibrated.

CALOVF: Select Self-calibration mode detected overflow:

When the periodic calibration is active, it selects whether to activate self-calibration or not to activate in the case that the sensor values are over the dynamic range of included ADC.

0: Deactivate self-calibration (default). 1: Activate self-calibration

FRCRLS: Select Force OFF at continuous touch:

When the continuous touch is active, select whether to activate force OFF or not in the case that the max value after detect continuous touch minus the current sensor value is more than the threshold for 'OFF' to 'ON'.

0 : Deactivate force OFF (default). 1: Activate force OFF.

By force OFF is performed, the continuous touch sensor is changed to OFF, and DETECT_OFF register is enabled.

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0xFF	FRCRLS	CALOVF	-	CALMOD	ı	CFG	CAL	ACT
R/W	R/W	R/W	-	R/W	-	R/W	R/W	R/W
Initial val.	0	0	-	0	-	0	0	0

Timing Charts

Host interface

2-wire serial bus.

Compatible with I²C protocol.

Support slave mode only.

7-bit Slave Address = 0x4C (in the case of ADR = 'L'), 0x4D (in the case of ADR = 'H').

Standard-mode (data transfer rate of 100kbit/s), Fast-mode (data transfer rate of 400kbit/s).

Supports sequential read.

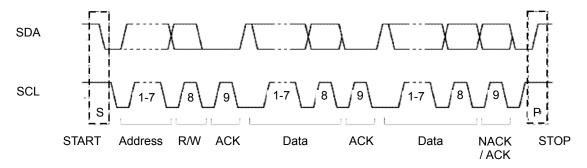


Figure 8. 2-wire serial bus data format


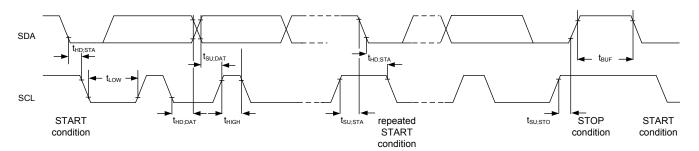


Figure 9. 2-wire serial bus data timing chart

Doromotor	Cumbal	Standar	d-mode	Fast-r	node	Unit
Parameter	Symbol	MIN	MAX	MIN	MAX	Unit
SCL clock frequency	f _{SCL}	0	100	0	400	kHz
Hold time (repeated) START condition	t _{HD;STA}	4.0	-	0.6	-	usec
LOW period of the SCL clock	t_{LOW}	4.7	-	1.3	-	usec
HIGH period of the SCL clock	t _{HIGH}	4.0	-	0.6	-	usec
Data hold time	t _{HD;DAT}	0.1	3.45	0.1	0.9	usec
Data set-up time	t _{SU;DAT}	0.25	ı	0.1	ı	usec
Set-up time for a repeated START condition	t _{SU;STA}	4.7	-	0.6	-	usec
Set-up time for STOP condition	t _{su;sto}	4.0	-	0.6	-	usec
Bus free time between STOP and START condition	t _{BUF}	4.7	-	1.3	-	usec

^{*}It is necessary that interval time for writing to register which address is from 0xF0 to 0xFF is more than 650usec.

Byte Write

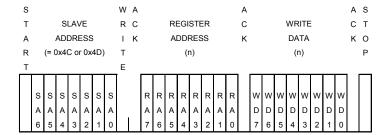

SA: Slave Address RA: Register Address RD: Read Data WD: Write Data

Random Read

S								W	Α									Α	S								R	Α									Ν	S
Т			SI	LA۱	/E			R	С			RE	EGI	STE	R			С	Т			S	LA۱	/E			Ε	С				RE	AD				Α	Т
Α		,	ADI	DRE	ESS	3		1	K			ΑI	DDF	RES	SS			K	Α			ADI	DRI	ESS	3		Α	K				D٨	TΑ				С	0
R	(= 0)x4(C o	r 0x	4D))	Т					(r	1)					R		(= 0)x4	C o	r 0x	4D)		D					(1	1)				K	Р
Т								Е											Т																			
	s	s	S	s	s	s	s			R	R	R	R	R	R	R	R			s	s	s	s	s	s	s			R	R	R	R	R	R	R	R		
	Α	А	Α	Α	Α	Α	Α			Α	Α	Α	Α	Α	Α	Α	Α			Α	Α	Α	Α	Α	Α	Α			D	D	D	D	D	D	D	D		
	6	5	4	3	2	1	0			7	6	5	4	3	2	1	0			6	5	4	3	2	1	0			7	6	5	4	3	2	1	0		

Sequential Read

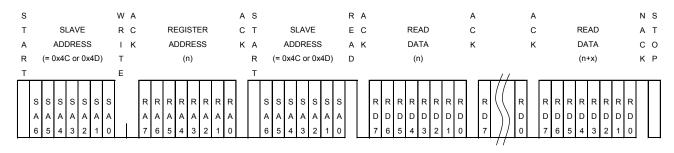


Figure 10. 2-wire serial bus protocol

Scan Rate

After scan each sensor in time series, MPU convert to the switch operations from the detected results. One scan rate is about 14.8msec at typical.

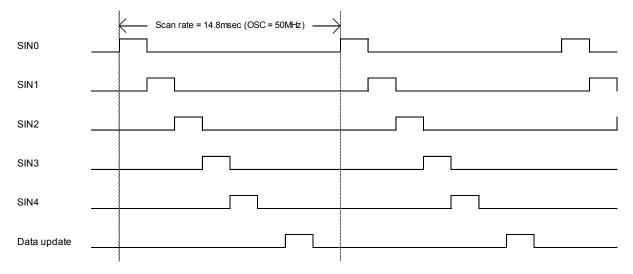


Figure 11. Timing chart of scan rate

Power on sequence

Power supply pin is VDD only. AVDD and DVDD are supplied by each LDO included this IC, so that have no priority about power on sequence. When VDD reaches to the effective voltage, power-on-reset which initializes the digital block is released.

Power-on-reset is monitoring VDD, so it needs that decoupling capacitor's value is suitable for VDD rising time. (DVDD's rising time < VDD's rising time.)

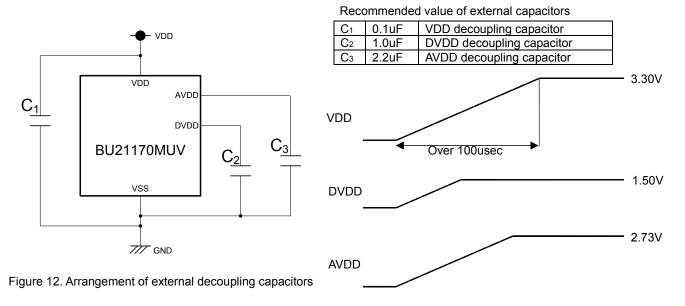


Figure 13. Timing chart of power on sequence

When power-on-reset is released, MPU starts initial sequence. Inform by the INT port to the host that the initialization has been completed. After verify that the initialization has been completed, the host will need to resend the command to this IC.

In the case that WDTR is released as well, MPU starts initial sequence. If WDTR has released, all registers of this IC have been initialized. So the host will need to resend the command to this IC.

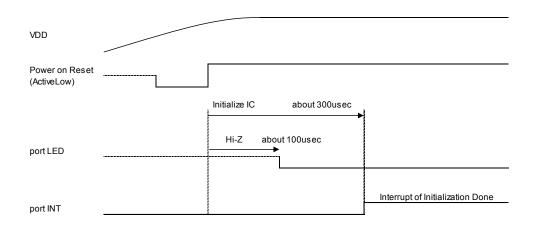


Figure 14. Timing chart of initialization

Initialize operation

This IC is initialized and all registers are cleared by Power-on reset, WDT time-out reset, and Software reset command. When initialization is complete, the register INI is set to '1' and I/O port INT is set to 'H'.

After the IC is initialized, write the configuration values to registers. After setting configuration values, the next action is sensor calibration. Set '1' to the registers ACT, CFG and CAL on Address 0xFF, so calibration sequence is performed.

IC's initialization after hardware reset

Power-on-reset

WDTR (Watchdog timer timeout reset)

Software reset command

The above actions act hardware reset to the IC. Hardware reset clear the all registers to the default value and initialize MPU. After hardware reset, MPU runs the initial sequence of firmware on Program ROM.

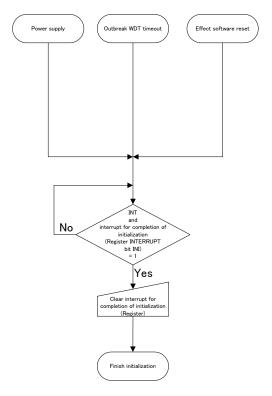


Figure 15. Initialization routine after hardware reset

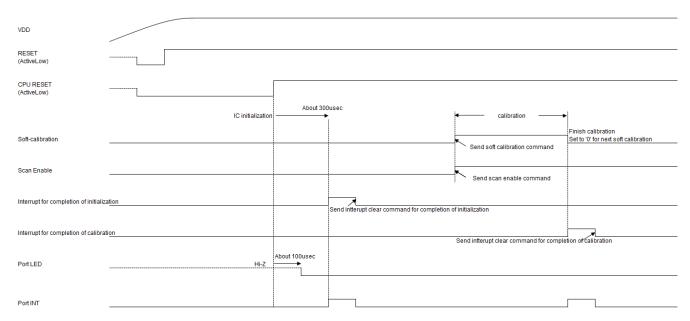


Figure 16. Configuration sequence including clear interrupts

Calibration

Self-calibration

Self-calibration is performed by this IC automatically. It is performed in the following cases.

1. Detect drift condition:

When the IC detects the drift condition, the IC acts self-calibration. When calibration is complete, the interrupt factor register CAL is set to '1' and I/O port INT is set to 'H'. When there is the sensor with the sensor value more than the threshold for 'Off to On', IC does not detect drift condition. The interrupt factor register CAL is maskable by the mask interrupt register CAL. The interrupt factor register CAL is cleared by writing '1' to the interrupt clear register CAL.

2. Detect noise:

When the IC detects the noise, the IC changes the scan rate to not synchronize with the noise, and the IC acts self-calibration. When calibration is complete, the Interrupt factor register CAL is set to '1' and I/O port INT is set to 'H'. The interrupt factor register CAL is maskable by the mask interrupt register CAL. The interrupt factor register CAL is cleared by writing '1' to the interrupt clear register CAL.

Detect incorrect operation :

When the finger is on the sensor at the calibration, the sensor base state is with the finger. Without the finger, the sensor value is under the base state value. This abnormal condition is defined to incorrect operation. Detected incorrect operation, the IC acts self-calibration. The interrupt factor register CAL is maskable by the mask interrupt register CAL. The interrupt factor register CAL is cleared by writing '1' to the interrupt clear register CAL.

Software-calibration

Software-calibration is performed by the command from the host.

- 1. Write '1' to the Act Software-calibration bit.
- 2. Finishing the calibration, the Software-calibration finish bit (CAL on Address0x10) is set to '1' and I/O port INT is set to 'H'. For next calibration, clear the interrupt.

When the sensor setting value is changed, it is necessary to execute a soft calibration. It is necessary for changing the value of the sensor setting that the scan is disabled.

In the act of calibration, sensor values are not changed. So the switching operations are invalid.

If the software-calibration is released at sensing sensors, IC acts calibration at next sensing sensors.

LED calibration

When the register for LED/PWM drivers operation (address area from 0xF9 to 0xFC) is written, this IC is selectable whether to perform self-calibration. Selecting whether to perform the LED calibration is defined by the configuration for calibration register (LEDCAL on Address 0xEF).

If there is the writing to the register for LED/PWM drivers operation (address area from 0xF9 to 0xFC), when the finger on the sensors. Incorrect operation will be detected at the finger leaving, and so IC will act self-calibration.

Periodical calibration

The periodical calibration is to perform self-calibration periodically. This IC is selectable whether to perform periodical calibration. Selecting whether to perform the periodical calibration is defined by the configuration for calibration register (PERCAL on Address0xEF).

The sensor with the finger is not calibrated by the periodical calibration.

Whenever periodical calibration is complete, the interrupt factor register PERCAL is set to '1' and I/O port INT is set to 'H'. The interrupt factor register PERCAL is maskable by the mask interrupt register PERCAL. The interrupt factor register CAL is cleared by writing '1' to the interrupt clear register PERCAL.

Interrupt when multi calibration factor occurs

The calibration of the four factors to carry out the calibration is different respectively. Therefore, state the calibration of another is started during the conduct of certain calibration, the conflict occurs.

If the calibration different conditions occur in the middle of the calibration, calibration being performed to stop, a new calibration is carried out from the beginning.

The interrupt by finishing the first factor's calibration is set, and the interrupt by the new factor's calibration is set too.

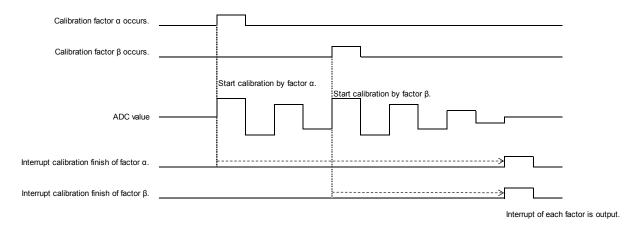


Figure 17. Interrupt when multi calibration factor occurs

Switch operation

Every sensor is used for simple switch. Each switch has the registers of detected Touch/Release/Hold operations. Every switch supports to multi-detect Touch/Release/Hold. Unused switches are maskable.

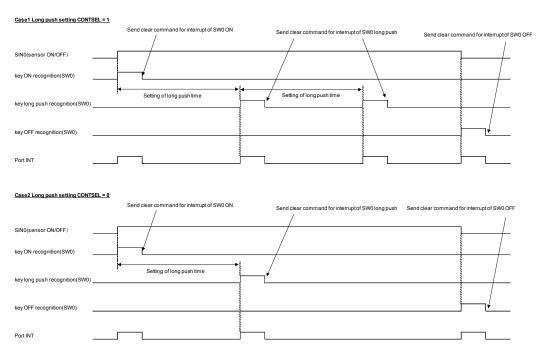


Figure 18. Interrupt of switch operation (1)

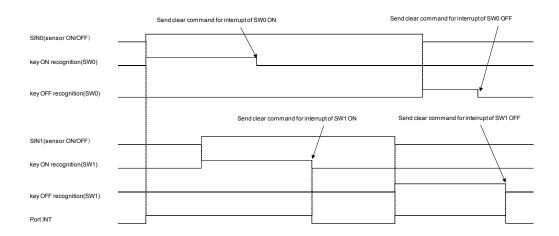


Figure 19. Interrupt of switch operation (2)

Interrupt of PWM continuous flashing

When PWM configuration is set to not always lights, PWM drive repeat as many times as the setting value. The interrupt is released at finishing PWM drive.

In the case that PWM always lights, the way to turn PWM off is to write '0' to the Control PWM function register which value is '1', and the interrupt is released at finishing PWM drive. However, if you restart the PWM timer before the PWM timer will not finish, the interrupt is not released.

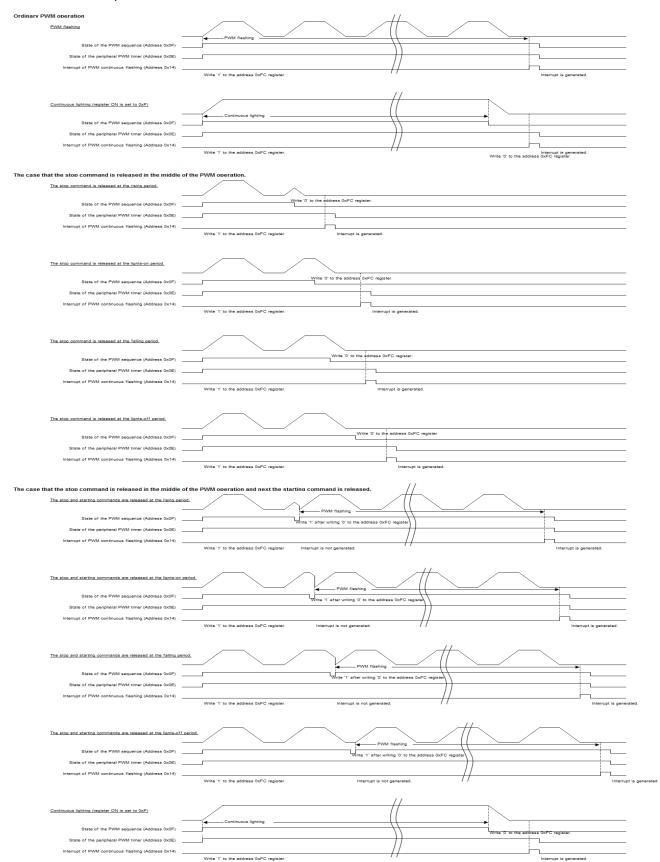


Figure 20. Interrupt of PWM drive

Operational Notes

1. Reverse Connection of Power Supply

Connecting the power supply in reverse polarity can damage the IC. Take precautions against reverse polarity when connecting the power supply, such as mounting an external diode between the power supply and the IC's power supply terminals.

2. Power Supply Lines

Design the PCB layout pattern to provide low impedance supply lines. Separate the ground and supply lines of the digital and analog blocks to prevent noise in the ground and supply lines of the digital block from affecting the analog block. Furthermore, connect a capacitor to ground at all power supply pins. Consider the effect of temperature and aging on the capacitance value when using electrolytic capacitors.

3. Ground Voltage

Ensure that no pins are at a voltage below that of the ground pin at any time, even during transient condition.

4. Ground Wiring Pattern

When using both small-signal and large-current ground traces, the two ground traces should be routed separately but connected to a single ground at the reference point of the application board to avoid fluctuations in the small-signal ground caused by large currents. Also ensure that the ground traces of external components do not cause variations on the ground voltage. The ground lines must be as short and thick as possible to reduce line impedance.

5. Thermal Consideration

Should by any chance the power dissipation rating be exceeded the rise in temperature of the chip may result in deterioration of the properties of the chip. The absolute maximum rating of the Pd stated in this specification is when the IC is mounted on 74.2mm x 74.2mm x 1.6mm glass epoxy 1 layer board (Copper foil area: 10.29mm²). In case of exceeding this absolute maximum rating, increase the board size and copper area to prevent exceeding the Pd rating.

6. Recommended Operating Conditions

These conditions represent a range within which the expected characteristics of the IC can be approximately obtained. The electrical characteristics are guaranteed under the conditions of each parameter.

7. Rush Current

When power is first supplied to the IC, it is possible that the internal logic may be unstable and inrush current may flow instantaneously due to the internal powering sequence and delays, especially if the IC has more than one power supply. Therefore, give special consideration to power coupling capacitance, power wiring, width of ground wiring, and routing of connections.

8. Operation Under Strong Electromagnetic Field

Operating the IC in the presence of a strong electromagnetic field may cause the IC to malfunction.

9. Testing on Application Boards

When testing the IC on an application board, connecting a capacitor directly to a low-impedance output pin may subject the IC to stress. Always discharge capacitors completely after each process or step. The IC's power supply should always be turned off completely before connecting or removing it from the test setup during the inspection process. To prevent damage from static discharge, ground the IC during assembly and use similar precautions during transport and storage.

10. Inter-pin Short and Mounting Errors

Ensure that the direction and position are correct when mounting the IC on the PCB. Incorrect mounting may result in damaging the IC. Avoid nearby pins being shorted to each other especially to ground, power supply and output pin. Inter-pin shorts could be due to many reasons such as metal particles, water droplets (in very humid environment) and unintentional solder bridge deposited in between pins during assembly to name a few.

11. Unused Input Terminals

Input terminals of an IC are often connected to the gate of a MOS transistor. The gate has extremely high impedance and extremely low capacitance. If left unconnected, the electric field from the outside can easily charge it. The small charge acquired in this way is enough to produce a significant effect on the conduction through the transistor and cause unexpected operation of the IC. So unless otherwise specified, unused input terminals should be connected to the power supply or ground line.

12. Regarding the Input Pin of the IC

In the construction of this IC, P-N junctions are inevitably formed creating parasitic diodes or transistors. The operation of these parasitic elements can result in mutual interference among circuits, operational faults, or physical damage. Therefore, conditions which cause these parasitic elements to operate, such as applying a voltage to an input pin lower than the ground voltage should be avoided. Furthermore, do not apply a voltage to the input terminals when no power supply voltage is applied to the IC. Even if the power supply voltage is applied, make sure that the input terminals have voltages within the values specified in the electrical characteristics of this IC.


13. Ceramic Capacitor

When using a ceramic capacitor, determine the dielectric constant considering the change of capacitance with temperature and the decrease in nominal capacitance due to DC bias and others.


14. Area of Safe Operation (ASO)

Operate the IC such that the output voltage, output current, and power dissipation are all within the Area of Safe Operation (ASO).

Ordering Information



Marking Diagram

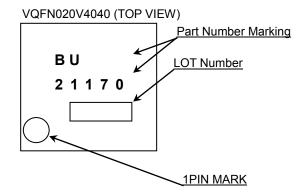

Physical Dimension, Tape and Reel Information Package Name VQFN020V4040 4. 0 ± 0.1 0 ± 0 1PIN MARK OMAX 22) 0.02^{+0}_{-0} 0. 08 S (0) 2. 1 ± 0.1 C0. 2 20 0.4 ± 0.1 5 16 15 11 (UNIT: mm) 1. 0 PKG: VQFN020V4040 $0.\ \ 2\ 5\ ^{+0.}_{-0.}\ \ ^{0\ 5}_{0\ 4}$ 0. 5 Drawing No. EX474-5001-1 <Tape and Reel information> Embossed carrier tape Tape 2500pcs Quantity Direction The direction is the 1pin of product is at the upper left when you hold reel on the left hand and you pull out the tape on the right hand of feed Direction of feed 1pin Reel *Order quantity needs to be multiple of the minimum quantity.

Revision History

Date	Revision	Changes
31.Oct.2013	001	New Release
31.Oct.2013 14.Jul.2016	001	P3 Figure 6. Block Diagram Correct wiring error to the block PoR. P7 Correct clerical error (old) couth (new) touch P7 Correct clerical error (old) 'Detection continued touch' (new) 'Detection continuous touch' P13 Correct clerical error (old) the periodical: (new) the periodical calibration: P13 Correct clerical error (old) the periodical delibration when P14 Correct clerical error (old) Clear the INI interrupt (new) Clear the PERCAL interrupt P19 Correct clerical error (old) the initialization has been completed, (new) the initialization has been completed, (new) Register

Notice

Precaution on using ROHM Products

1. Our Products are designed and manufactured for application in ordinary electronic equipments (such as AV equipment, OA equipment, telecommunication equipment, home electronic appliances, amusement equipment, etc.). If you intend to use our Products in devices requiring extremely high reliability (such as medical equipment (Note 1), transport equipment, traffic equipment, aircraft/spacecraft, nuclear power controllers, fuel controllers, car equipment including car accessories, safety devices, etc.) and whose malfunction or failure may cause loss of human life, bodily injury or serious damage to property ("Specific Applications"), please consult with the ROHM sales representative in advance. Unless otherwise agreed in writing by ROHM in advance, ROHM shall not be in any way responsible or liable for any damages, expenses or losses incurred by you or third parties arising from the use of any ROHM's Products for Specific Applications.

(Note1) Medical Equipment Classification of the Specific Applications

JÁPAN	USA	EU	CHINA			
CLASSⅢ	CL ACCIII	CLASS II b	CL ACCIII			
CLASSIV	CLASSⅢ	CLASSⅢ	CLASSⅢ			

- 2. ROHM designs and manufactures its Products subject to strict quality control system. However, semiconductor products can fail or malfunction at a certain rate. Please be sure to implement, at your own responsibilities, adequate safety measures including but not limited to fail-safe design against the physical injury, damage to any property, which a failure or malfunction of our Products may cause. The following are examples of safety measures:
 - [a] Installation of protection circuits or other protective devices to improve system safety
 - [b] Installation of redundant circuits to reduce the impact of single or multiple circuit failure
- 3. Our Products are designed and manufactured for use under standard conditions and not under any special or extraordinary environments or conditions, as exemplified below. Accordingly, ROHM shall not be in any way responsible or liable for any damages, expenses or losses arising from the use of any ROHM's Products under any special or extraordinary environments or conditions. If you intend to use our Products under any special or extraordinary environments or conditions (as exemplified below), your independent verification and confirmation of product performance, reliability, etc, prior to use, must be necessary:
 - [a] Use of our Products in any types of liquid, including water, oils, chemicals, and organic solvents
 - [b] Use of our Products outdoors or in places where the Products are exposed to direct sunlight or dust
 - [c] Use of our Products in places where the Products are exposed to sea wind or corrosive gases, including Cl₂, H₂S, NH₃, SO₂, and NO₂
 - [d] Use of our Products in places where the Products are exposed to static electricity or electromagnetic waves
 - [e] Use of our Products in proximity to heat-producing components, plastic cords, or other flammable items
 - [f] Sealing or coating our Products with resin or other coating materials
 - [g] Use of our Products without cleaning residue of flux (even if you use no-clean type fluxes, cleaning residue of flux is recommended); or Washing our Products by using water or water-soluble cleaning agents for cleaning residue after soldering
 - [h] Use of the Products in places subject to dew condensation
- 4. The Products are not subject to radiation-proof design.
- 5. Please verify and confirm characteristics of the final or mounted products in using the Products.
- 6. In particular, if a transient load (a large amount of load applied in a short period of time, such as pulse. is applied, confirmation of performance characteristics after on-board mounting is strongly recommended. Avoid applying power exceeding normal rated power; exceeding the power rating under steady-state loading condition may negatively affect product performance and reliability.
- 7. De-rate Power Dissipation depending on ambient temperature. When used in sealed area, confirm that it is the use in the range that does not exceed the maximum junction temperature.
- 8. Confirm that operation temperature is within the specified range described in the product specification.
- 9. ROHM shall not be in any way responsible or liable for failure induced under deviant condition from what is defined in this document.

Precaution for Mounting / Circuit board design

- 1. When a highly active halogenous (chlorine, bromine, etc.) flux is used, the residue of flux may negatively affect product performance and reliability.
- 2. In principle, the reflow soldering method must be used on a surface-mount products, the flow soldering method must be used on a through hole mount products. If the flow soldering method is preferred on a surface-mount products, please consult with the ROHM representative in advance.

For details, please refer to ROHM Mounting specification

Precautions Regarding Application Examples and External Circuits

- 1. If change is made to the constant of an external circuit, please allow a sufficient margin considering variations of the characteristics of the Products and external components, including transient characteristics, as well as static characteristics.
- You agree that application notes, reference designs, and associated data and information contained in this document are presented only as guidance for Products use. Therefore, in case you use such information, you are solely responsible for it and you must exercise your own independent verification and judgment in the use of such information contained in this document. ROHM shall not be in any way responsible or liable for any damages, expenses or losses incurred by you or third parties arising from the use of such information.

Precaution for Electrostatic

This Product is electrostatic sensitive product, which may be damaged due to electrostatic discharge. Please take proper caution in your manufacturing process and storage so that voltage exceeding the Products maximum rating will not be applied to Products. Please take special care under dry condition (e.g. Grounding of human body / equipment / solder iron, isolation from charged objects, setting of lonizer, friction prevention and temperature / humidity control).

Precaution for Storage / Transportation

- 1. Product performance and soldered connections may deteriorate if the Products are stored in the places where:
 - [a] the Products are exposed to sea winds or corrosive gases, including Cl2, H2S, NH3, SO2, and NO2
 - [b] the temperature or humidity exceeds those recommended by ROHM
 - [c] the Products are exposed to direct sunshine or condensation
 - [d] the Products are exposed to high Electrostatic
- Even under ROHM recommended storage condition, solderability of products out of recommended storage time period
 may be degraded. It is strongly recommended to confirm solderability before using Products of which storage time is
 exceeding the recommended storage time period.
- 3. Store / transport cartons in the correct direction, which is indicated on a carton with a symbol. Otherwise bent leads may occur due to excessive stress applied when dropping of a carton.
- 4. Use Products within the specified time after opening a humidity barrier bag. Baking is required before using Products of which storage time is exceeding the recommended storage time period.

Precaution for Product Label

A two-dimensional barcode printed on ROHM Products label is for ROHM's internal use only.

Precaution for Disposition

When disposing Products please dispose them properly using an authorized industry waste company.

Precaution for Foreign Exchange and Foreign Trade act

Since concerned goods might be fallen under listed items of export control prescribed by Foreign exchange and Foreign trade act, please consult with ROHM in case of export.

Precaution Regarding Intellectual Property Rights

- 1. All information and data including but not limited to application example contained in this document is for reference only. ROHM does not warrant that foregoing information or data will not infringe any intellectual property rights or any other rights of any third party regarding such information or data.
- 2. ROHM shall not have any obligations where the claims, actions or demands arising from the combination of the Products with other articles such as components, circuits, systems or external equipment (including software).
- 3. No license, expressly or implied, is granted hereby under any intellectual property rights or other rights of ROHM or any third parties with respect to the Products or the information contained in this document. Provided, however, that ROHM will not assert its intellectual property rights or other rights against you or your customers to the extent necessary to manufacture or sell products containing the Products, subject to the terms and conditions herein.

Other Precaution

- 1. This document may not be reprinted or reproduced, in whole or in part, without prior written consent of ROHM.
- 2. The Products may not be disassembled, converted, modified, reproduced or otherwise changed without prior written consent of ROHM.
- In no event shall you use in any way whatsoever the Products and the related technical information contained in the Products or this document for any military purposes, including but not limited to, the development of mass-destruction weapons.
- 4. The proper names of companies or products described in this document are trademarks or registered trademarks of ROHM, its affiliated companies or third parties.

Notice-PGA-E Rev.003

General Precaution

- 1. Before you use our Products, you are requested to care fully read this document and fully understand its contents. ROHM shall not be in any way responsible or liable for failure, malfunction or accident arising from the use of a ny ROHM's Products against warning, caution or note contained in this document.
- 2. All information contained in this docume nt is current as of the issuing date and subject to change without any prior notice. Before purchasing or using ROHM's Products, please confirm the latest information with a ROHM sale s representative.
- 3. The information contained in this doc ument is provided on an "as is" basis and ROHM does not warrant that all information contained in this document is accurate an d/or error-free. ROHM shall not be in an y way responsible or liable for any damages, expenses or losses incurred by you or third parties resulting from inaccuracy or errors of or concerning such information.

Notice – WE © 2015 ROHM Co., Ltd. All rights reserved. Rev.001

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

ROHM Semiconductor: BU21170MUV-E2



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru