

MAX22191 Evaluation Kit

Evaluates: MAX22191

General Description

The MAX22191 evaluation kit (EV kit) is a fully assembled and tested circuit board that demonstrates the functionality of the MAX22191 digital input in an optical isolator circuit. The EV kit features two circuits: one for a 24V digital input signal and one for a 48V input signal.

Features

- 24V and 48V Circuits for Easy Evaluation
- Proven PCB Layout
- Fully Assembled and Tested

[Ordering Information](#) appears at end of data sheet.

Quick Start

Required Equipment

- MAX22191 EV kit
- 24V Digital signal generator
- Oscilloscope

Startup Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation:

- 1) Ensure that the jumpers are in the default position ([Table 1](#)).
- 2) Connect the digital signal generator to the IN+ test point (TP3) and IN- test point (TP4).
- 3) Connect the oscilloscope to the IN+ test point (TP3), and the OUT (TP14) test point. Connect return terminals to the IN- test point (TP4)
- 4) Set the digital signal generator to generate a 0V–24V 2kHz pulse.
- 5) Turn on the digital signal generator.
- 6) Monitor the IN+ and OUT signals. Verify that the OUT signal toggles as expected.

Detailed Description of Hardware

The MAX22191 EV kit is a fully assembled and tested circuit board for evaluating the MAX22191 digital input (DI) with either a 24V or 48V input.

Powering the MAX22191 EV Kit

The MAX22191 can be powered parasitically, from the signal on IN, or from a local V_{CC} supply. To power the circuit parasitically, ensure that the V_{CC} jumper is set to LOW (J9 or J10 is 2-3) and apply a digital input signal to IN+.

To power the circuit from a local power supply, connect the V_{CC} jumper to 'TP' (J9 or J10 to 1-2) and apply a 3V to 5.5V supply to the V_{CC} test point.

Selecting the Test Circuit (24V or 48V)

The MAX22191 EV kit supports 0-24V or 0-48V digital input (DI) signals. These circuits are clearly labeled on the silkscreen.

In the 48V circuit, R1 and R2 are used to shift the input voltage, such that the IEC 61131-2 thresholds are met for a 48V input signal. Additionally, R1 limits surge current, allowing for a higher voltage TVS clamp on the input.

Apply the digital input (DI) signal to the J1 terminal block when using signal voltages above 30V. Apply the DI signal to the J2 terminal block when using signal voltages below 30V.

Testing the MAX22191 as a Current-Sinking Input

The MAX22191 EV kit can be used to evaluate the device in either a current sinking or current sourcing configuration.

To test the MAX22191 as a current sinking input, connect the proximity sensor/switch to the IN+ test point (TP1 or TP3) or terminal block (J1 or J2) on the EV kit. Connect the negative/return terminal of the sensor/switch to positive output of the 24V or 48V supply. Connect the return terminal of the supply to the IN- test point (TP2 or TP4) or terminal block (J1 or J2).

Testing the MAX22191 as a Current Sourcing Input

The MAX22191 EV kit can be used to evaluate the device in either a current sinking or current sourcing configuration.

To test the MAX22191 as a current sourcing input, connect the proximity sensor/switch to the negative terminal of the 24V or 48V supply. Connect the positive terminal of the supply to the IN+ test point (TP1 or TP3) or terminal block (J1 or J2) on the EV kit. Connect the negative/return terminal of the sensor/switch to IN- test point (TP2 or TP4) or terminal block (J1 or J2).

Evaluating the MAX22191 with an Optical Isolator ($V_{CC} = 0V$)

The MAX22191 includes an on-board high-speed optical isolator for easy evaluation. To use the optical isolator, set $V_{CC} = 0V$ (J9 or J10 to 2-3) and connect an isolated supply between 2.7V and 5.5 to the V_{DD} test point (TP9 or TP11) on the isolated side of the board. Connect an oscilloscope to the VO test point (TP10 or TP12) to see the output of the isolator switch as the input signal (IN+) switches.

Evaluating the MAX22191 with an Optical Isolator ($3V \leq V_{CC} \leq 5.5V$)

OUT is a push-pull buffered output when V_{CC} is present. Remove the R13 or R15 resistor and connect a resistive load to R9/R10 to test functionality in this mode.

Table 1. Jumper Table (J3–J12)

JUMPER	SHUNT POSITION	DESCRIPTION
J3	Open	58V TVS diode connected to IN+ on 48V circuit.
	Closed*	58V TVS diode not connected to IN+ on 48V circuit.
J4	Open	33V TVS diode connected to IN+ on 24V circuit.
	Closed*	33V TVS diode not connected to IN+ on 24V circuit.
J5	Open*	10Ω resistor connected between IN- and GND pin on IC on 48V circuit. This resistor can be used to monitor return current.
	Closed	IN- is connected directly to GND pin on the IC on the 48V circuit.
J6	Open*	10Ω resistor connected between IN- and GND pin on IC on 24V circuit. This resistor can be used to monitor return current.
	Closed	IN- is connected directly to GND pin on the IC on the 24V circuit.
J7	Open*	10nF capacitor connected to IN+ on 48V circuit.
	Closed	10nF capacitor not connected to IN+ on 48V circuit.
J8	Open*	10nF capacitor connected to IN+ on 24V circuit.
	Closed	10nF capacitor not connected to IN+ on 24V circuit.
J9	1-2	VCC is connected low on the 48V circuit.
	2-3*	VCC is connected to the test point (TP5) on the 48V circuit. Connect an external 3V to 5.5V supply to VCC to power the device.
J10	1-2	VCC is connected low on the 24V circuit.
	2-3*	VCC is connected to the test point (TP6) on the 24V circuit. Connect an external 3V to 5.5V supply to VCC to power the device.
J11	1-2	TEST is connected to GND on the 48V circuit.
	2-3*	TEST is connected to the TEST test point (TP7) on the 48V circuit.
J12	1-2	TEST is connected to GND on the 24V circuit.
	2-3*	TEST is connected to the TEST test point (TP8) on the 24V circuit.

MAX22191 EV Kit Bill of Materials

ITEM	REF- DES	DNI/D NP	QTY	MFG PART #	MFG	VALUE	DESCRIPTION
1	C1, C2, C5, C6	-	4	GRM188R72A103KA01	MURATA	0.01UF	CAPACITOR; SMT (0603); CERAMIC CHIP; 0.01UF; 100V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R
2	C3, C4	-	2	GRM188R61A105KA61	MURATA	1UF	CAPACITOR; SMT (0603); CERAMIC CHIP; 1UF; 10V; TOL=10%; MODEL=; TG=-55 DEGC TO +85 DEGC; TC=X5R;
3	D1	-	1	C1608X5R1A105K	TDK	58V	DIODE; TVS; SMA; VRM=58V; IPP=4.3A
4	D2	-	1	SMAJ58CA	DIODES INCORPORATED	33V	DIODE; TVS; SMA (DO-214AC); VRM=33V; IPP=7.5A
5	J1, J2	-	2	SMAJ33CA	VISHAY GENERAL SEMICONDUCTOR	1729018	CONNECTOR; FEMALE; THROUGH HOLE; GREEN TERMINAL BLOCK; RIGHT ANGLE; 2PINS
6	J3-J8	-	6	TSW-102-23-G-S	PHOENIX CONTACT	TSW-102-23-G-S	CONNECTOR; THROUGH HOLE; SINGLE ROW; STRAIGHT; 2PINS; -55 DEGC TO +125 DEGC
7	J9-J12	-	4	TSW-103-23-G-S	SAMTEC	TSW-103-23-G-S	CONNECTOR; THROUGH HOLE; SINGLE ROW; STRAIGHT; 3PINS; -55 DEGC TO +125 DEGC
8	J17, J18	-	2	TSW-104-23-G-S	SAMTEC	TSW-104-23-G-S	CONNECTOR; THROUGH HOLE; SINGLE ROW; STRAIGHT; 4PINS
9	R1	-	1	CMB02070X150TG	VISHAY BEYSCHLAG	1.5K	RESISTOR; SMT; 1.5K OHM; 2%; 1W; CARBON FILM
10	R2	-	1	CRCW06031K20FK	VISHAY DALE	1.2K	RESISTOR; 0603; 1.2K; 1%; 100PPM; 0.10W; THICK FILM
11	R3, R4	-	2	6ENF10R0V	VISHAY DALE; PANASONIC	10	RESISTOR; 0805; 10 OHM; 1%; 100PPM; 0.125W; THICK FILM
12	R5, R6	-	2	CRCW040240K2FK	VISHAY DALE	40.2K	RESISTOR; 0402; 40.2K OHM; 1%; 100PPM; 0.063W; THICK FILM
13	R11, R12	-	2	3EKF1002	VISHAY DALE; PANASONIC	10K	RESISTOR; 0603; 10K; 1%; 100PPM; 0.10W; THICK FILM
14	R13, R15, R18, R19	-	4	RC0402JR-070RL; CR0402-16W-000RJ	YAGEO PHYCOMP; VENKEL LTD.	0	RESISTOR; 0402; 0 OHM; 5%; JUMPER; 0.063W; THICK FILM
15	TP1, TP3, TP9, TP11	-	4	5010	KEYSTONE	N/A	TESTPOINT WITH 1.80MM HOLE DIA. RED. MULTIPURPOSE; TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
16	TP2, TP4, TP15, TP16	-	4	5011	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; YELLOW; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
17	TP5-TP8, TP10, TP12-TP14	-	8	5014	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; YELLOW; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
18	U1, U2	-	2	MAX22191AUT+	MAXIM	MAX22191AU T+	EVKIT PART-IC; PARASITICALLY POWERED TYPE 3 DIGITAL INPUT; PACKAGE DWG NO.: 21-0058; PACKAGE LAND PATTERN: 90-0175; SOT23-6
19	U3, U4	-	2	ACPL-061L-560E	BROADCOM LIMITED	ACPL-061L-560E	IC; OPTO; ULTRA LOW POWER 10MBD DIGITAL CMOS
20	PCB	-	1	MAX22191	MAXIM	PCB	OPTOCOUPLER; NSOIC8
21	R9, R10	DNP	0	CRCW06031K50FK	VISHAY DALE	1.5K	PCB: MAX22191 RESISTOR; 0603; 1.5K; 1%; 100PPM; 0.10W; THICK FILM
22	R16, R17	DNP	0	RC0402JR-070RL; CR0402-16W-000RJ	YAGEO PHYCOMP; VENKEL LTD.	0	RESISTOR; 0402; 0 OHM; 5%; JUMPER; 0.063W; THICK FILM
NOTE: DNI--> DO NOT INSTALL(PACKOUT) ; DNP--> DO NOT PROCURE							
TOTAL							55

The image displays two PCB layout diagrams for the MAX22191 EVKIT, one for a 48V circuit and one for a 24V circuit. Both diagrams show the placement of components, test points, and connectors.

48V CIRCUIT (Top Diagram):

- Components:** MAX22191 (U1), MAXIM INTEGRATED (P1), R1, R2, R3, R4, R5, R6, R7, R8, R9, R10, R11, R12, R13, R14, R15, R16, R17, R18, R19, R20, R21, R22, R23, R24, R25, R26, R27, R28, R29, R30, R31, R32, R33, R34, R35, R36, R37, R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53, R54, R55, R56, R57, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R70, R71, R72, R73, R74, R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R86, R87, R88, R89, R90, R91, R92, R93, R94, R95, R96, R97, R98, R99, R100, R101, R102, R103, R104, R105, R106, R107, R108, R109, R110, R111, R112, R113, R114, R115, R116, R117, R118, R119, R120, R121, R122, R123, R124, R125, R126, R127, R128, R129, R130, R131, R132, R133, R134, R135, R136, R137, R138, R139, R140, R141, R142, R143, R144, R145, R146, R147, R148, R149, R150, R151, R152, R153, R154, R155, R156, R157, R158, R159, R160, R161, R162, R163, R164, R165, R166, R167, R168, R169, R170, R171, R172, R173, R174, R175, R176, R177, R178, R179, R180, R181, R182, R183, R184, R185, R186, R187, R188, R189, R190, R191, R192, R193, R194, R195, R196, R197, R198, R199, R200, R201, R202, R203, R204, R205, R206, R207, R208, R209, R210, R211, R212, R213, R214, R215, R216, R217, R218, R219, R220, R221, R222, R223, R224, R225, R226, R227, R228, R229, R230, R231, R232, R233, R234, R235, R236, R237, R238, R239, R240, R241, R242, R243, R244, R245, R246, R247, R248, R249, R250, R251, R252, R253, R254, R255, R256, R257, R258, R259, R260, R261, R262, R263, R264, R265, R266, R267, R268, R269, R270, R271, R272, R273, R274, R275, R276, R277, R278, R279, R280, R281, R282, R283, R284, R285, R286, R287, R288, R289, R290, R291, R292, R293, R294, R295, R296, R297, R298, R299, R300, R301, R302, R303, R304, R305, R306, R307, R308, R309, R310, R311, R312, R313, R314, R315, R316, R317, R318, R319, R320, R321, R322, R323, R324, R325, R326, R327, R328, R329, R330, R331, R332, R333, R334, R335, R336, R337, R338, R339, R340, R341, R342, R343, R344, R345, R346, R347, R348, R349, R350, R351, R352, R353, R354, R355, R356, R357, R358, R359, R360, R361, R362, R363, R364, R365, R366, R367, R368, R369, R370, R371, R372, R373, R374, R375, R376, R377, R378, R379, R380, R381, R382, R383, R384, R385, R386, R387, R388, R389, R390, R391, R392, R393, R394, R395, R396, R397, R398, R399, R400, R401, R402, R403, R404, R405, R406, R407, R408, R409, R410, R411, R412, R413, R414, R415, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R426, R427, R428, R429, R430, R431, R432, R433, R434, R435, R436, R437, R438, R439, R440, R441, R442, R443, R444, R445, R446, R447, R448, R449, R450, R451, R452, R453, R454, R455, R456, R457, R458, R459, R460, R461, R462, R463, R464, R465, R466, R467, R468, R469, R470, R471, R472, R473, R474, R475, R476, R477, R478, R479, R480, R481, R482, R483, R484, R485, R486, R487, R488, R489, R490, R491, R492, R493, R494, R495, R496, R497, R498, R499, R500, R501, R502, R503, R504, R505, R506, R507, R508, R509, R510, R511, R512, R513, R514, R515, R516, R517, R518, R519, R520, R521, R522, R523, R524, R525, R526, R527, R528, R529, R530, R531, R532, R533, R534, R535, R536, R537, R538, R539, R540, R541, R542, R543, R544, R545, R546, R547, R548, R549, R550, R551, R552, R553, R554, R555, R556, R557, R558, R559, R560, R561, R562, R563, R564, R565, R566, R567, R568, R569, R570, R571, R572, R573, R574, R575, R576, R577, R578, R579, R580, R581, R582, R583, R584, R585, R586, R587, R588, R589, R590, R591, R592, R593, R594, R595, R596, R597, R598, R599, R600, R601, R602, R603, R604, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807

Figure 1 illustrates the assembly of a circuit board. The top row shows the initial state with components (circles, squares, and dots) scattered on a blue background. The bottom row shows the final state where the components are connected by white lines representing circuit traces. A scale bar at the bottom left indicates 1 inch.


The diagram shows a square arena with a 10x10 cm scale. The particles are distributed as follows:

- Top-left corner:** A large grey circle, a medium grey circle, and a small grey circle.
- Top-right corner:** A large grey circle, a medium grey circle, and a small grey circle.
- Bottom-left corner:** A large grey circle, a medium grey circle, and a small grey circle.
- Bottom-right corner:** A large grey circle, a medium grey circle, and a small grey circle.
- Center:** A cluster of small grey circles and squares.
- Other locations:** Several small grey circles and squares are scattered throughout the arena.

A scale bar at the bottom indicates 1 cm.

Maxim Integrated | 5

MAX22191 EV Kit Schematic

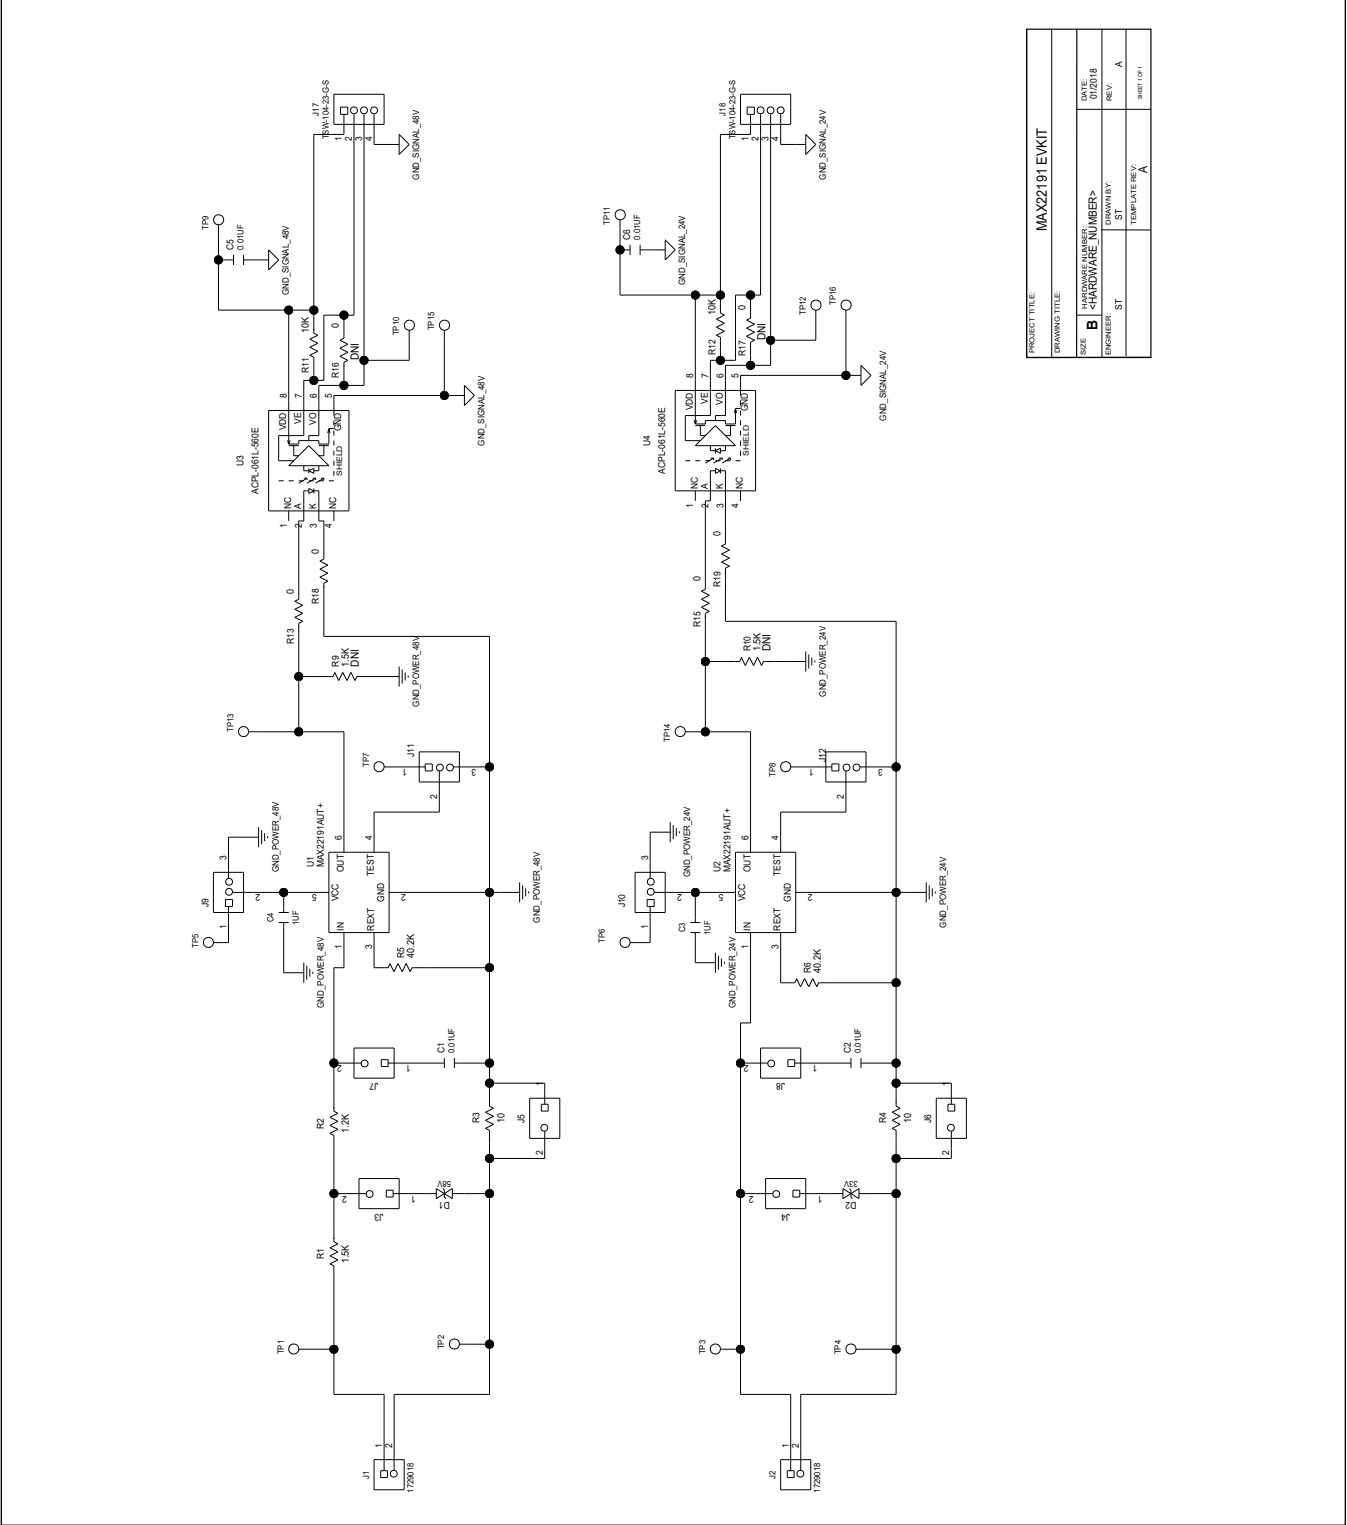

Ordering Information

PART	TYPE
MAX22191EVKIT#	EV Kit

#Denotes RoHS compliant.

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	3/18	Initial release	—

For information on other Maxim Integrated products, visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru