



New Screwless Terminal Sockets Added for MY and G2R Relays.

- Simplified wiring without tightening screws.
- Two wires can be independently wired for each terminal.
- Coil terminals and contact terminals are completely separated in an organized wiring layout.
- Release Levers and Nameplates are available (sold separately).

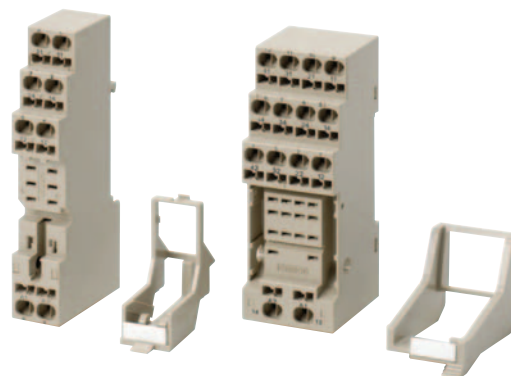


Features

Structured for Easy Wiring

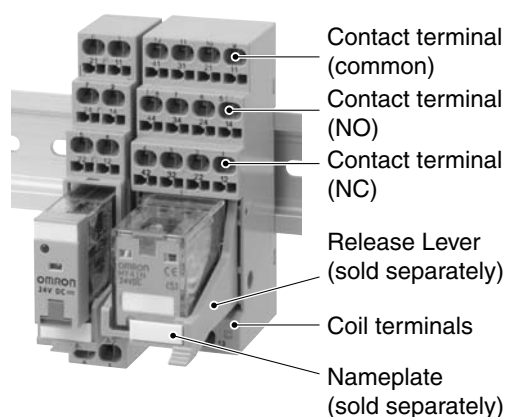

Complete Wiring in Three Steps

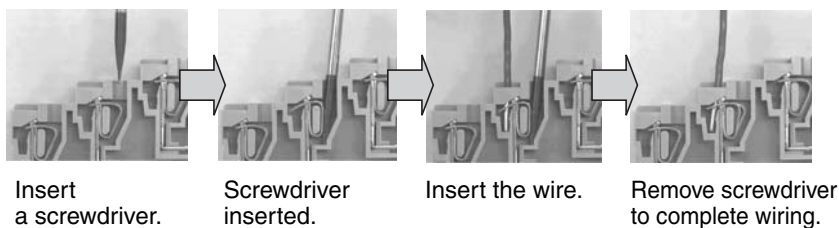

- A spring holds the wire in place to reduce wiring work by 30% (according to OMRON comparison) and eliminates the need to manage torque.
- DIN terminal numbers also indicated.

Ordering Information

Sockets

Applicable model (typical example)	Socket
	Model
MY2	PYF08S
MY4	PYF14S
G2R-1-S	P2RF-05-S
G2R-2-S	P2RF-08-S

Options (Order Separately)

Applicable Socket	Release Bar	Nameplates	Socket Bridges with Red Insulation	Socket Bridges with Blue Insulation
	Model	Model	Model	Model
PYF08S	PYCM-08S	R99-11	PYDM-08SR	PYDM-08SB
PYF14S	PYCM-14S		PYDM-14SR	PYDM-14SB
P2RF-05-S	P2CM-S		P2RM-SR	P2RM-SB
P2RF-08-S				

Note: Pieces per Package
 Nameplates: 100
 Socket Bridges: 50

Ratings/Characteristics

Characteristics

PYF□□S

Item	Model	PYF08S	PYF14S
Ambient operating temperature		-55 to 70°C	
Ambient operating humidity		5% to 85%	
Continuous carry current*		10 A	5 A
Dielectric strength	Between contact terminals of same polarity	2,000 VAC, 1 min	2,000 VAC, 1 min
	Between contact terminals of different polarity	2,000 VAC, 1 min	2,000 VAC, 1 min
	Between coil and contact terminals	2,000 VAC, 1 min	2,000 VAC, 1 min
Insulation resistance		1,000 MΩ min.	
Weight (approx.)		46 g	62 g

* The continuous carry current of 10 A for the PYF08S is for an ambient temperature of 55°C.
At an ambient temperature of 70°C, the value is 7 A.

P2RF-□□-S

Item	Model	P2RF-05-S	P2RF-08-S
Ambient operating temperature		-40 to 70°C	
Ambient operating humidity		5% to 85%	
Continuous carry current		10 A	5 A
Dielectric strength	Between contact terminals of same polarity	1,000 VAC, 1 min	1,000 VAC, 1 min
	Between contact terminals of different polarity	---	3,000 VAC, 1 min
	Between coil and contact terminals	4,000 VAC, 1 min	4,000 VAC, 1 min
Insulation resistance		1,000 MΩ min.	
Weight (approx.)		36 g	40 g

Ratings for Safety Standard Certification

PYF□□S

Standard	File No.
VDE0627 (EN61984)	Certificate No. 40015509
UL508 (UL1059)	E87929 Vol.3
CSA C22.2 No.14 (CSA C22.2 No.158)	LR31928

P2RF-□□-S


Standard	File No.
VDE0627 (EN61984)	Certificate No. 40002313
UL508 (UL1059)	E87929 Vol.3
CSA C22.2 No.14 (CSA C22.2 No.158)	LR31928

Dimensions


(Unit: mm)

Sockets



PYF08S

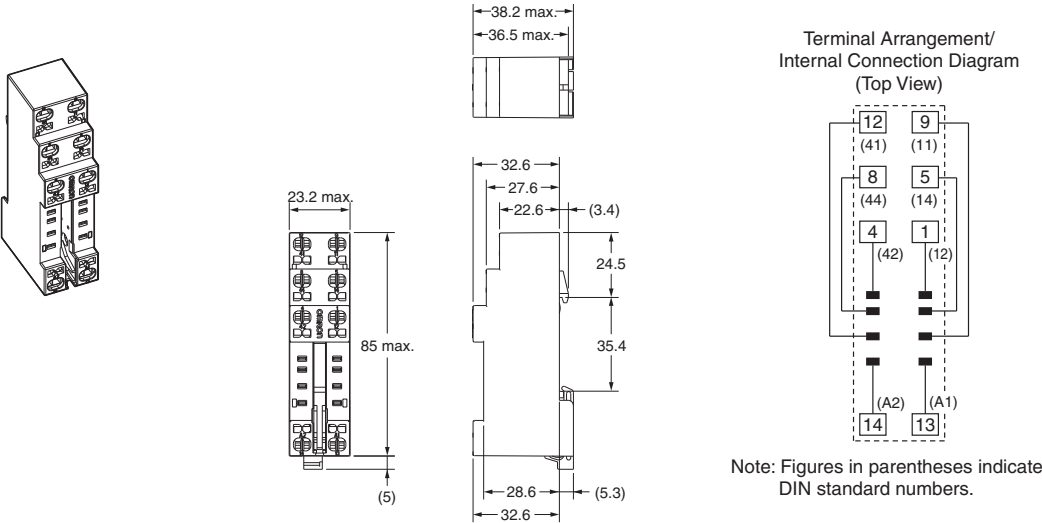


PYF14S

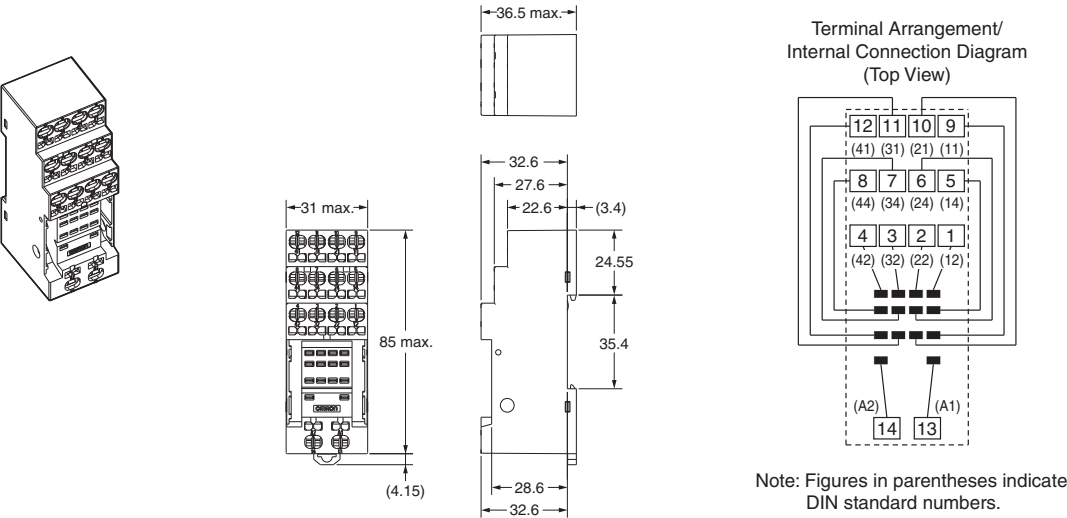

P2RF-05-S

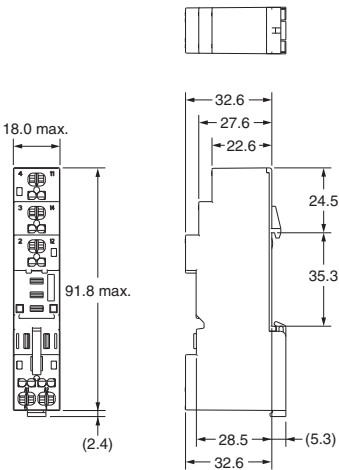



Terminal Arrangement/
Internal Connection Diagram
(Top View)




Note: Figures in parentheses indicate
DIN standard numbers.

P2RF-08-S

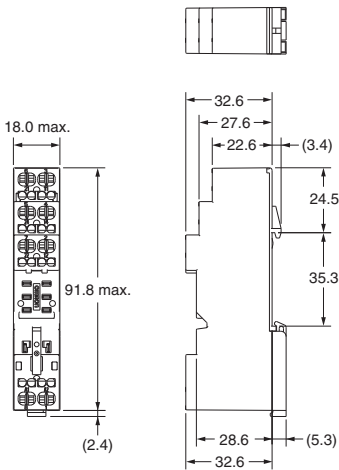


Terminal Arrangement/
Internal Connection Diagram
(Top View)

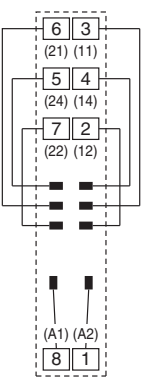

Note: Figures in parentheses indicate
DIN standard numbers.

Accessories (Order Separately)

Socket Bridges

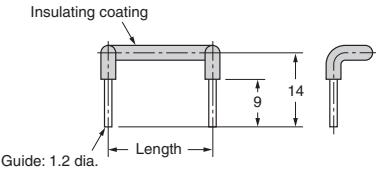


Applicable Sockets	Model	Length (mm)	Insulation color
PYF08S	PYDM-08SR	19.7	Red
	PYDM-08SB		Blue
PYF14S	PYDM-14SR	27.5	Red
	PYDM-14SB		Blue
P2RF-□□-S	P2RM-SR	14.3	Red
	P2RM-SB		Blue


Note: Use the Socket Bridges for relay coil bridge wiring.

Release Levers


PYCM-14S

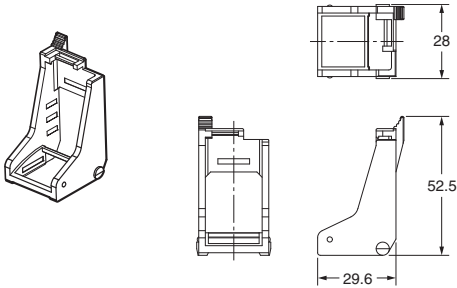

PYCM-08S

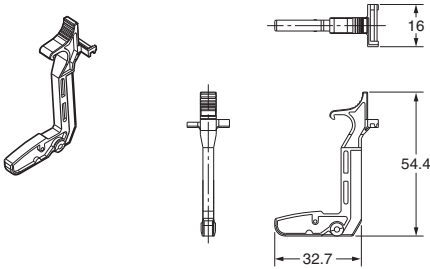


P2CM-S

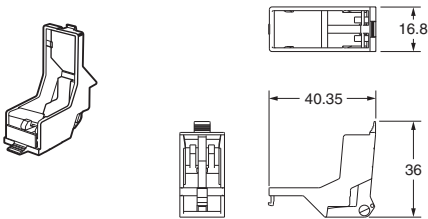


Mounting Heights


PYF08S

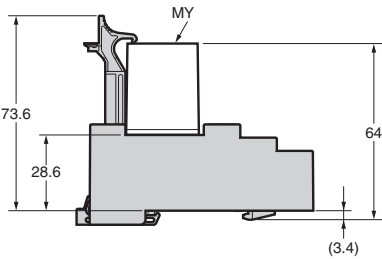

PYF14S

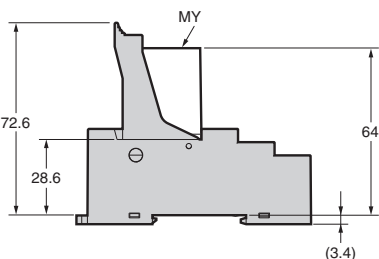

P2RF-□□-S

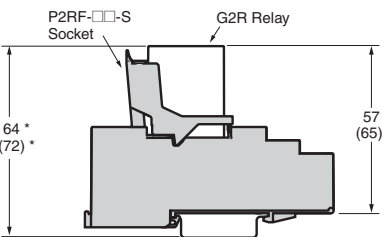

Figures of height in () is with G2R Relays with Latching Levers. Values indicated with asterisks are for when using a PFP-N Track. The values increase by approximately 9 mm when using a PFP-N Track.


Safety Precautions

Precautions for Safe Use

- Do not move the screwdriver up, down, or from side to side or rotate it while it is inserted in the hole. Doing so may damage internal components in the Socket.




- Do not insert more than one wire into the same hole. Doing so may cause abnormal heating.
- There are two internally connected wiring holes for each terminal.
- Insert the screwdriver along the hole wall as shown below.



Screwdriver


- When you remove a Socket from a support rail, insert the end of a screwdriver into the fixture and move the screwdriver as shown by the arrow in the following figure.

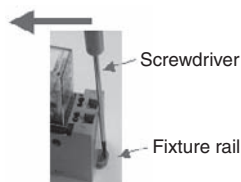

Screwdriver

Fixture rail

- When you use a Release Lever to remove a Relay from a P2RF-□□-S Socket, insert a screwdriver at the location shown in the following figure and move the Release Lever in the direction indicated by the arrow to release the lock on the release lever.

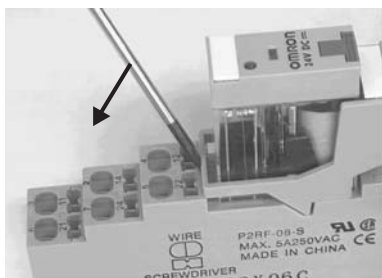


Precautions for Correct Use

Wiring Tools

Applicable Screwdriver

Use a flat-blade screwdriver with a tip that is 2.5 mm wide (3.0 mm max.).



You cannot use a screwdriver with a thick shaft.

Applicable Screwdriver (Example)
VESSEL No.9900 – (–) 2.5 × 75

Applicable Wires

- You can use either solid wires or stranded wires. Applicable wire size: 0.2 to 1.5 mm² (AWG24 to AWG16)
- Strip 8 to 9 mm of insulation from the ends of the wires.




- If you insert stranded wires without ferrules, make sure that the wires are twisted when you insert them.
- If you use bare ferrules, always attach insulating sleeves.
- If you insert a wire with a sheath outer diameter of 2.2 mm or less, do not insert the wire far enough so that the sheath is engaged inside the hole, as shown below.




- Two wires with a sheath outer diameter of 3.2 mm or larger cannot be inserted for the same terminal at the same time.
- Use heat-shrinking tubes to indicate wire numbers.


Wiring

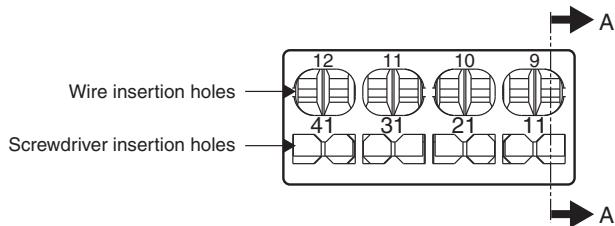


- (1) Insert a screwdriver into a screwdriver insertion hole on the Socket.

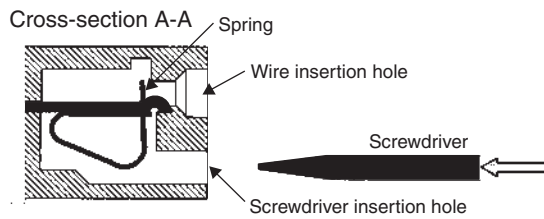


- (2) Press the screwdriver in until it reaches the stopper inside the Socket. The spring at the back of the wire insertion hole will be completely open in this condition. The screwdriver will be held in place even if you remove your hand.

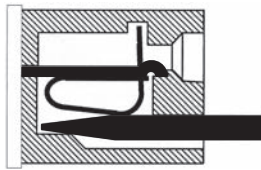

- (3) With the screwdriver held in place, insert the wire or ferrule into the wire insertion hole.

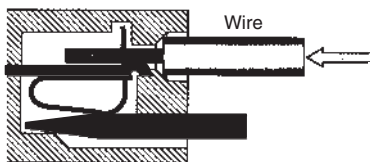

- (4) Remove the screwdriver. The spring will hold the wire. This concludes the connection procedure.

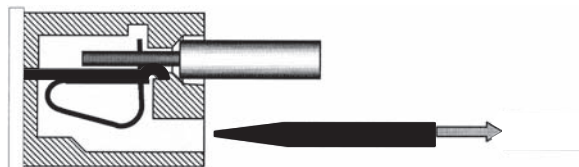

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Omron:

[P2RF-05S](#) [P2R-05P](#) [P2RF-05-E](#) [P2R-08P](#) [P2RF-08-E](#) [P2CM-S](#) [P2R-057P](#) [P2R-05A](#) [P2RM-SB](#) [P2RM-SR](#) [P2R-08A](#)

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru