

MagAlpha MA700 Angular Sensor for Position Control with Side-Shaft Positioning Capability

The Future of Analog IC Technology

DESCRIPTION

The MagAlpha MA700 is a robust, contactless, angle encoder. The IC detects the absolute angular position of a permanent magnet, typically a diametrically magnetized cylinder attached to the rotor. The data acquisition and processing is extremely fast, allowing accurate angle measurement at speeds from 0 to 100,000 RPM

The MA700 supports a wide range of magnetic field strengths and spatial configurations, which help to relax mechanical tolerances and simplify system design. Both end-of-shaft magnet and off axis magnet positioning (side-shaft mounting) topologies are supported.

Please See Position Sensor Design Support for Al Supporting Software


FEATURES

- 11-Bit Resolution Absolute Angle Encoder
- 500kHz Refresh Rate
- Ultra-Low Latency: 3µs
- Serial Interface for Data Readout and settings
- 10-Bit Incremental Output (A, B, Z)
- Built-In Linearization for Side-Shaft
 Mounting
- 3.3V, 7.7mA Supply
- Available in a QFN-16 (3mmx3mm) Package


APPLICATIONS

- Servo Drives
- Robotics
- Automotive
- PSM/BLDC Motors
- Encoders

All MPS parts are lead-free, halogen-free, and adhere to the RoHS directive. For MPS green status, please visit the MPS website under Quality Assurance. "MPS" and "The Future of Analog IC Technology" are registered trademarks of Monolithic Power Systems, Inc.

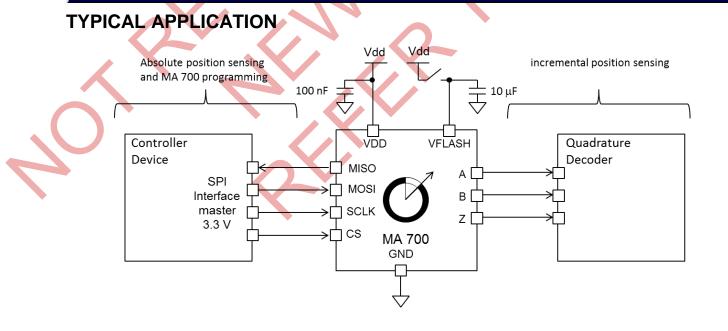



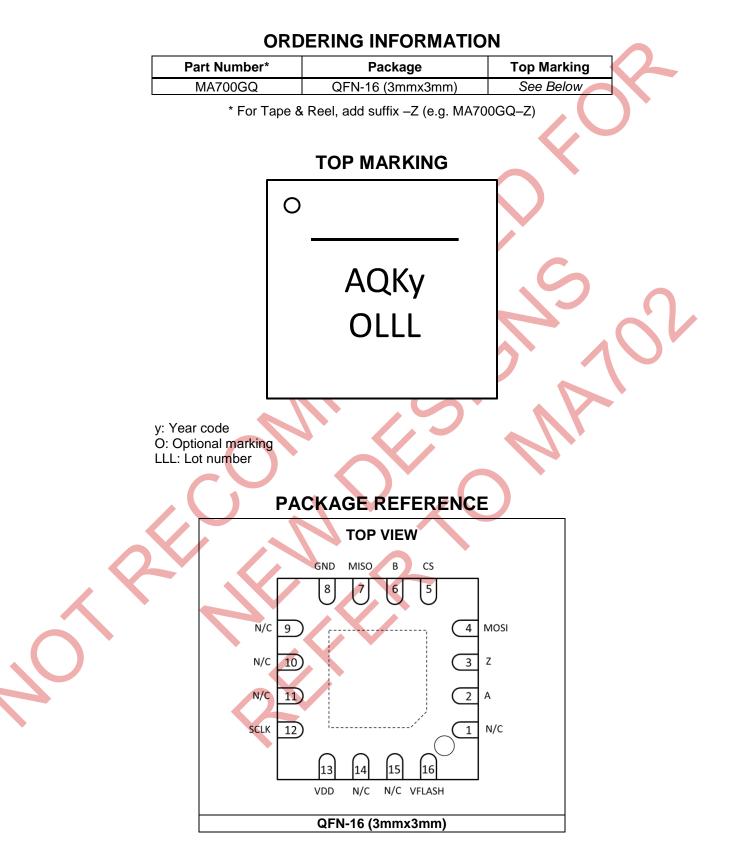



ABSOLUTE MAXIMUM RATINGS (1)

Supply voltage (continuous)0.5V to +3.8V
Supply voltage short term0.5V to +4.1V
I/O pin voltage0.5V to 3.8V
Continuous power dissipation $(T_A = +25^{\circ}C)^{(2)}$
2.5W

Thermal Resistance ⁽³⁾

 θ_{JA} θ_{JC} QFN-16 (3mmx3mm)......50......12... °C/W

NOTES:

- 1) Exceeding these ratings may damage the device.
- The maximum allowable power dissipation is a function of the maximum junction temperature T_J (MAX), the junction-to-ambient thermal resistance θ_{JA} , and the ambient temperature T_A . The maximum allowable continuous power dissipation at 2) any ambient temperature is calculated by P_D (MAX) = (T_J $(MAX)-T_A)/\theta_{JA}$. Measured on JESD51-7, 4-layer PCB.
- 3)

ELECTRICAL CHARACTERISTICS

Parameter	Symbol	Condition		Min	Тур	Max	Units
Operating Conditions	Operating Conditions						
Supply voltage	VDD			3.0	3.3	3.6	V
Supply voltage for OTP flashing	V _{flash}			3.9	4.0	4.1	V
Supply current for OTP flashing ⁽⁴⁾	I _{flash}			50		100	mA
Operating temperature	Тор			-40		125	°C
Applied magnetic field	В			30	75		mT

NOTE:

4) Please see the OTP Programming section for more details about the supply circuits for OTP flashing.


Parameter	Symbol	Condition	Min	Тур	Max	Units		
Sensor Output Specificat	ions							
Power-up time ⁽⁵⁾				2	3	ms		
Supply current			6.0	7.7	8.8	mA		
INL at 25°C		At room temperature over the field range	±0.9	±1.6	±2.0	deg		
INL between -40°C to +125°C ⁽⁵⁾		The largest value over the temperature range and field range	±0.5	±1.6	±2.5	deg		
Output Drift								
Temperature induced ⁽⁵⁾			-0.026	C	+0.026	deg/°C		
Magnetic field induced ⁽⁵⁾			-0.023		+0.023	deg/mT		
Voltage supply induced ⁽⁵⁾			-0.7		+0.7	deg/V		
Absolute Output – Serial								
Data output length			16		16	bit		
Refresh rate			488	524	558	kHz		
Latency ⁽⁶⁾		Measured at constant speed		3		μs		
Resolution (3σ noise level)		Measured by averaging over all angles	10.7	12.0	13.0	bit		
Incremental Output – AB	Z ⁽⁷⁾							
Resolution				1024		edges/revol.		
Pulses per channel				256		A or B/revol		
Jitter		Up to 15,000 RPM		10		% of a period		
Hysteresis ⁽⁶⁾			0.2		0.27	deg		
Digital I/O								
Threshold voltage high				1.75		V		
Threshold voltage low				1.05		V		
Rising edge slew rate		CL = 50pF		0.7		V/ns		
Falling edge slew rate		CL = 50pF		0.7		V/ns		
OTP Flash Timing								
Flashing time for one register ⁽⁶⁾					2.6	ms		
Period for multiple		Time between 2 successive	2.6			ms		

NOTES:

5)

Guaranteed by design. Guaranteed by characteristic test. 6)


See Appendix B. 7)

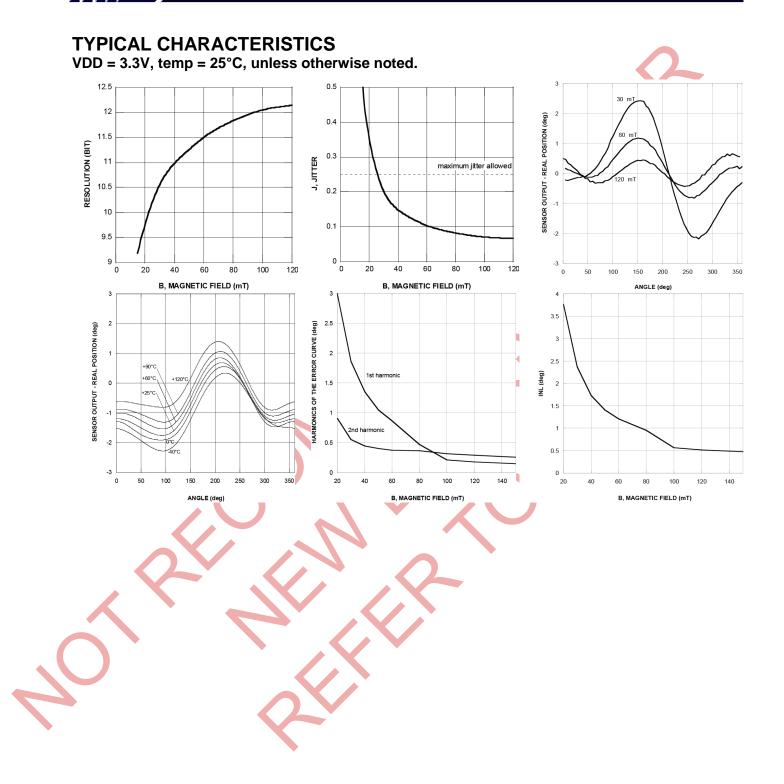

PIN FUNCTIONS

Package Pin #	Name	Description
1, 9, 10, 11, 14, 15	NC	No connection. Leave unconnected.
2	А	Incremental output.
3	Z	Incremental output.
4	MOSI	Data in. Serial.
5	CS	Chip select. Serial.
6	В	Incremental output.
7	MISO	Data out. Serial.
8	GND	Ground.
12	SCLK	Clock. Serial.
13	VDD	3.3V supply.
16	VFLASH	Voltage supply for OTP flash. Leave unconnected if not used.

BLOCK DIAGRAM

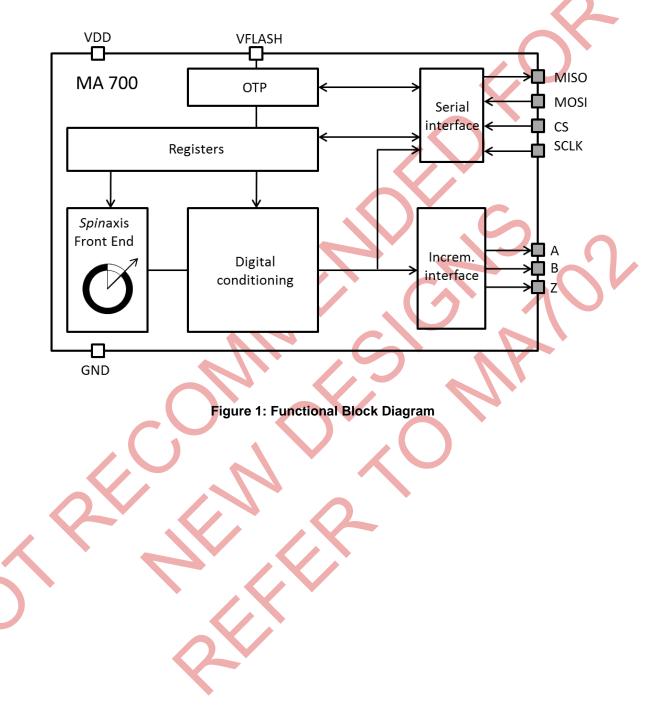

OPERATION

Timing of the Serial Interface

The data link is a 4-wire serial bus complying with the serial peripheral interface (SPI) usual convention (see Table 1 and Table 2). The MagAlpha sensor operates as a slave. During one transmission, a 16-bit word can be sent to the sensor MOSI and received from the sensor MISO simultaneously (see Figure 2 and Table 3). A time stamp is accessible by clocking more than 16 pulses, 24 bits of data total (16 bits for the angle and 8 bits for a time index). See the Output Signals section on page 13 for details. Table 1: SPI Specification

SCLK idle state	High
SCLK readout edge	Rising
CS idle state	High
Data order	MSB first

Table 2: SPI Standard

CPOL	1
СРНА	1
MODE	3
DORD	0

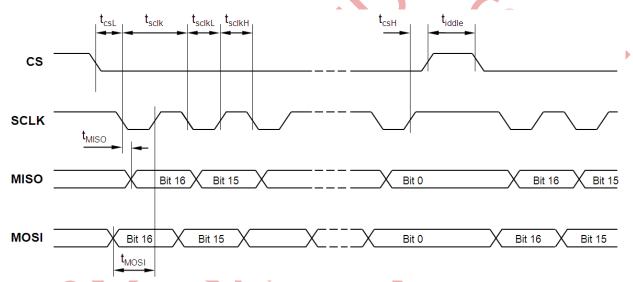


Figure 2: SPI Timing Diagram

Table 3: SPI Timing

Parameter	Description	Min	Max	Unit
t _{idle}	Time between two subsequent transmissions	50		ns
t _{csL}	Time between CS falling edge and SCLK falling edge	50		ns
t _{sclk}	SCLK period	40		ns
t _{sclkL}	Low level of SCLK signal	20		ns
t _{sclkH}	High level of SCLK signal	20		ns
t _{csH}	Time between SCLK rising edge and CS rising edge	25		ns
t _{MOSI}	Data input valid to SCLK reading edge	15		ns
t _{MISO}	SCLK setting edge to data output valid		15	ns

REGISTERS

Table 4: Register Map									2	
No	Hex	Bin	Bit 7 MSB	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0 LSB
3	0x3	0011				BCT	(7:0)			
4	0x4	0100		Z(11:4)						
5	0x5	0101	0	0	ETY	ETX		Z	(3:0)	
9	0x9	1001	-	-	F5	F4	F3	-	-	-

Table 5: Programming Parameters

Parameters	Symbol	Number of Bits	Description	See Table
Bias current trimming	BCT	8	For side-shaft configuration: reduce the Hall device bias current of the X- and/or Y-axis	
Zero setting	Z	12	Set the zero position	7
Enable trimming X	ETX	1	When enabled, the X-axis bias current is trimmed by the quantity BCT	6
Enable trimming Y	ETY	1	When enabled, the Y-axis bias current is trimmed by the quantity BCT	6
Flash register n	Fn	1	Flash the content of register number n	

Sensor – Magnet Mounting

The sensitive volume of the MA700 is confined in a region less than 100µm wide and has multiple integrated Hall devices. This volume is located both horizontally and vertically within 50µm of the center of the QFN package. The sensor detects the angle of the magnetic field projected in a plane parallel to the package's upper surface. This means that the only relevant magnetic field is the in-plane component (X and Y components) in the middle point of the package.

Rotation Direction

Looking at the MagAlpha from the top, the angle increases when the magnetic field rotates clockwise. Figure 3 shows the zero angle of the unprogrammed MA700, where the cross indicates the sensitive point.


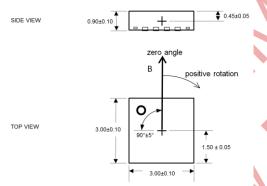


Figure 3: Zero Angle of Unprogrammed MA700

This type of detection provides flexibility for the design of an angular encoder. The sensor only requires the magnetic vector to lie essentially within the sensor plane with an amplitude of at least 30mT. Note that the MA700 can work with fields smaller than 30mT, but the linearity and resolution performance may deviate from the specifications. The straightforward solution is to place the MA700 sensor on the rotation axis of a permanent magnet (i.e.: a diametrically magnetized cylinder) (see Figure 4).



If the end-of-shaft position is not available, the sensor can be positioned away from the rotation axis of a cylinder or ring magnet (see Figure 5). In this case, the magnetic field angle is no longer directly proportional to the mechanical angle. The MA700 can be adjusted to compensate for this effect and recover the linear relation between the mechanical angle and the sensor output. With multiple pole pair magnets, the MA700 can indicate multiple rotations for each mechanical turn.

Figure 5: Side-Shaft Mounting Mounting and Power Supply Decoupling

For most applications, a single 100nF bypass capacitor placed close to the supply pins decouples the MA700 from power supply noise. If better decoupling is required, a larger capacitor (i.e.: 1µF to 10µF) can be added in parallel with the 100nF capacitor, and/or a serial resistor (i.e.: 10 Ω) can be added on the supply line. Ensure that the capacitor is connected with low impedance paths.

VFLASH needs to be supplied only when flashing the memory. Otherwise, VFLASH should remain unconnected (see Figure 6).

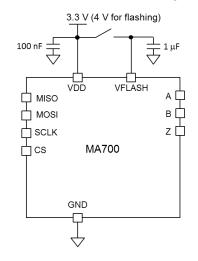


Figure 6: Connection for Supply Decoupling


Figure 4: End-of-Shaft Mounting

www.MonolithicPower.com MPS Proprietary Information. Patent Protected. Unauthorized Photocopy and Duplication Prohibited. © 2018 MPS. All Rights Reserved. The exposed pad of the package can be soldered to the PCB to ensure optimum electrical, thermal, and mechanical conditions. In case the exposed pad is soldered, it is recommended that the pad be electrically connected to ground.

Sensor Front End

The magnetic field is detected with integrated Hall devices located in the center of the package. The angle is measured using the *Spin*axis method, which directly digitizes the direction of the field without any arctangent computation or feedback loop-based circuit (interpolators, etc.).

The Spinaxis method is based on phase detection. It requires sensitive circuitry that generates a sinusoidal signal with a phase that represents the angle of the magnetic field. The angle is then retrieved by a time-to-digital converter, which counts the time between the zero crossing of the sinusoidal signal and the edge of a constant waveform (see Figure 7). The digitized time is the front-end output. At the output, the front-end delivers a digital number proportional to the angle of the magnetic field at the rate of 500kHz in a straightforward and open-loop manner.

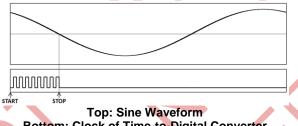

Bottom: Clock of Time-to-Digital Converter Figure 7: Phase Detection Method


Side Shaft

In case the MA700 is mounted in a side-shaft configuration, the relationship between the field angle and the mechanical angle is no longer directly linear. This is related to the fact that the tangential magnetic field is usually smaller than the radial field.

The field ratio (k) can be defined with Equation (1):

$$k = B_{rad} / B_{tan}$$
 (1)

Where B_{rad} is the maximum radial magnetic field, and B_{tan} is the maximum tangential magnetic field (see Figure 8).

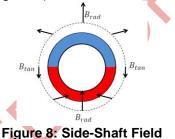

The ratio (k) depends on the magnet geometry and the distance to the sensor.

The X-axis or the Y-axis bias currents can be reduced to recover an equal Hall signal for all angles, and therefore suppress non-linearity. The parameters ETX and ETY control in which direction sensitivity is reduced. The current reduction is set by the parameter bias current trimming (BCT) (7:0), which is an integer from 0 to 255.

To find the optimum BCT, change the value until the non-linearity reaches a minimum. Such calibration should be performed on individual parts.

Sensor Orientation: ETX and ETY

The dot printed on the package shows whether the radial field is aligned with the sensor coordinate X or Y (see Figure 9).



Figure 9: Package Top View with X- and Y-Axes

First, determine which axis needs to be reduced (see the qualitative field distribution around in Figure 8). For instance, with the arrangement depicted in Figure 9, the field along Y is tangential and therefore weaker. The X-axis should be reduced (ETX = 1, ETY = 0). Note that if both ETX and ETY are set to 1, the current bias is reduced in both directions the same way (i.e.: without side-shaft correction) (see Table 6).

ETX	Enable Trimming the X-axis
0	Disabled
1	Enabled
ETY	Enable Trimming the Y-axis
0	Disabled
1	Enabled

Table 6: ETX and ETY

Digital Signal Conditioning

Digital Filtering

Advanced digital filtering improves the resolution without adding latency. Measuring the rotation speed over the last 256 data points in addition to the angular position provides the best possible evaluation of the present position with the smallest possible lag.

Zero Setting

The zero position of the MagAlpha (a_0) can be programmed with 12 bits of resolution. The angle streamed out (a_{out}) can be calculated with Equation (3):

$$a_{out} = a_{fe} - a_0 \tag{3}$$

Where $a_{f_{e}}$ is the raw angle out of the front end.

The parameter Z(11:0), which is 0 by default, determines a_0 (see Table 7). This setting is valid for all output formats, such as SPI, ABZ, and UVW.

Zero Position
Zero Position a_{ρ} (deg)
0
0.088
359.912

Programming the MA700

The MA700 incorporates three programmable registers. Each register has 8 bits of memory. When the MA700 is powered up, each of these three 8 bits of memory are set to zero, unless the register was previously stored in the one-time programmable (OTP) memory. This means that during start-up, the content of the OTP memory is copied to the registers. Once flashed, the register content can no longer be modified.

To set the content of a register, a digital stream must be sent to the register consisting of the 4-

bit register/write command (0010), a 4-bit register address, and the 8-bit value.

The data stream, sent through the MOSI wire is a total of 16 bits long:

command	reg. addre <mark>ss</mark>	MSB	value	LSB
0 0 1 0				

Once the command is sent, it is effective immediately and affects the next data sent from the MagAlpha.

Reading Back the Register Content

To check the content of a register to verify that the programming was successful, first send the register/read command (0001) and the 4-bit address of the register being tested. The last 8 bits of the stream are irrelevant. For instance, the value 0000 0000 can be sent:

command reg. address	MSB	value	LSB
0 0 0 1	- x x	x x x	x x x

The MagAlpha response is within the same transmission. In the first byte (simultaneous to the 4-bit read command and the 4-bit address), the MagAlpha sends the 8 MSB of the measured angle A(15:8). The second byte is the content of the register being tested. After this transmission, the MagAlpha continues delivering the usual 16-bit angles A(15:0).

For example, to check the content of the register 4 (0100), which contains 8 MSBs of the zero setting, send the data:

	С	om	mai	nd		а	reg. address					в	value				LSB		
ſ	0	0	0	1	Η	0	1	0	0	_	0	0	0	0	0	0	0	0	

Simultaneously, the MagAlpha replies:

Angle out	MSB	value	LSB
A(15:12) – A(11:8)		Z(7:0)	

Output Signals

The bit order of the transmitted data is MSB first and LSB last. Every 2µs, new data is transferred into the output buffer. The master device connected to the MagAlpha triggers the reading by pulling CS down. When a CS signal falling edge occurs, the data remains in the output buffer until the CS signal returns to logic 1. When CS is low, the master can read the data by sending clock pulses with a maximum frequency of 25MHz. There is no minimum frequency or timeout. See Figure 10 for a simple reading of the 16-bit data.

<u>CS</u>	transmission 1	transmission 2
<u>SCLK</u>	1 2 3 16	1 2 3 16
MISO	A(15)A(14)A(14)A(0)	XA(15)XA(14)XXA(0)

Figure 10: Timing Diagram for Simple SPI Readout

A full reading requires 16 clock pulses. The MA700 delivers:

MSB	LSB
A(15:8)	— A(7:0)

If less resolution is needed, the angle can be read by sending fewer than 16 pulses since the MSB is sent first. For instance, by sending only 8 pulses, the MagAlpha provides an 8-bit angle without ambiguity over 360 degrees:

> MSB LSB A(15:8)

If the master triggers the reading faster than the refresh rate, the MagAlpha may send the same sample several times.

In some applications, it is helpful to know how many data updates occur between two successive readouts or if the same data points were read more than once. For this purpose, an 8-bit index attached to the data can be read. This keeps track of the precise time of measurement without needing to control the readout time precisely. This index runs from 0 to 255 and is incremented by 1 each time the output buffer is refreshed. The index can detect a double reading of the same data (same index) or show how many data points were skipped (see Figure 11).

To read the 8-bit index, the master must send 16 + 8 = 24 clock pulses.




Figure 11: Timing Diagram for SPI Angle + Index Readout

Incremental - ABZ

With the ABZ output, the MA700 emulates a 10bit incremental encoder (such as an optical encoder) providing logic pulses in quadrature (see Figure 12). Compared to signal A, signal B is shifted by a quarter of the pulse period. Over one revolution, signal A pulses 256 times. This yields 1024 edges per revolution. Signal Z (zero or index) raises only once per turn at the zeroangle position. The minimum recommended field for ABZ reading is 35mT. See Appendix B for more information.

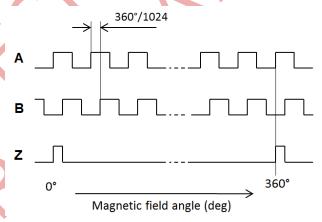


Figure 12: ABZ Output during Rotation

The ABZ state is updated every 2µs. This means that at a high RPM, an ABZ jitter is caused by the discretization of the pulse length. For instance, at 15,000 RPM, the period (P) of the signal A or B is 16µs. Therefore, the jitter is 2/16 = 12.5%. Note that the raising edge of Z occurs exactly at the sensor zero position. Due to the 1 LSB hysteresis introduced on both the A and B channels, the Z edge is not necessarily synchronized with an A or B edge (see Figure 13).

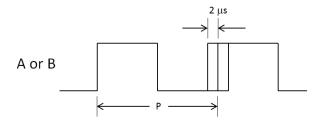


Figure 13: ABZ Jitter

Above 15,000, the ABZ signal is still usable. Note that when the jitter is larger than 25% (i.e.: when the speed exceeds 30,000 RPM), the A and B signal edge may coincide.

One-Time Programmable (OTP) Programming

The one-time programmable (OTP) memory can permanently store the content of the programmable registers. The OTP memory is made of poly-silicon fuses. By activating the flash command, the content of an entire register can be stored in the OTP memory. The flash command consists of setting some bits (F*n*, where *n* is the register number) in register 9. For flashing the register, when the bit F*n* is set, the register *n* is stored permanently. It is important to note that only one register can be flashed at a time. It is possible to operate the MagAlpha without flashing the registers (see Figure 14).

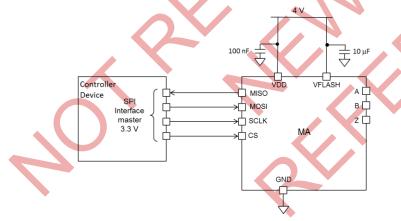


Figure 14: Circuit for Flashing

Burning the fuses during the flash process is irreversible. Once a register is flashed, the default values at power-up are always the same. After flashing, the content of the registers can no longer be modified.

Flashing Procedure

Prior to flashing, it is recommended to test the MagAlpha with the new settings and verify the performance of the sensor. Then, proceed with the flashing using the below steps:

- 1. Send the parameter to the register.
- 2. Read back for verification.
- 3. Connect VFLASH to VDD.
- 4. Raise VDD to 4V.
- 5. Set the bit corresponding to the register to be flashed in register 9.
- 6. Untie VFLASH.
- 7. Return VDD to 3.3V.
- 8. Switch the MagAlpha off and on.
- 9. Check by reading back the register content.

Permanently Storing the Zero Position

The following example shows how to set and flash the zero position at 50 degrees. Note that permanently storing the zero position requires burning the registers 4 and 5.

- 1. Convert into binary within a resolution of 12 bits. 50 deg in binary is 001000111000 (≈49.92 dea).
- 2. Store the 8 MSB (00100011) of the zero position in register 4:

co	command reg. address								l	MSB							LSB		
0	0	1	0	- (0	1	0	0		0 0)	1	0	0	0	1	1		

0	0	1	0	- (0	1	0	0	0	0	1	0	0

Read back register 4:

	command	ac	re <mark>g.</mark> Idres	s	MSE	3		val	ue		L	SB	
	0001	- 0	1 0	0	0	0	0	0	0	0	0	0	
	lf the MagAlph		gram plies		-						· · ·	th nte	
	Ang	le ou	t		MSE	3		val	ue		L	SB	
	A(15:12)	A	(11:8)	0	0	1	0	0	0	1	1	
4.	Store the into the 4			•				e z	er	o p	005	itic	n
	command	ac	reg. ddres	s	MSE	3	X	val	ue		L	SB	
	0 0 1 0	0	1 0	1	0	0	0	0	1	0	0	0	
5.	Read ba	ck re	giste	er 5:									
	command		reg.		MO			val			,	~ ~	

command					reg. address					MSB			val	LSB			
0001					0	1	0	1	-	0	0	0	0	0	0	0	0
The MagAlpha retu							tur	n	s:								
Angle out									MSI	в		val	ue		L	SB	
A(15:12) A(11:8)					L	0	0	0	0	1	0	0	0				

Completing Flashing

- Connect VFLASH to VDD (4V).
- 2. Flash register 4:

С	om	mai	nd		reg. address					мѕв			ue	LSB			
0	0 0 1 0				1	0	0	1	0	0	0	1	0	0	0	0	

3. Flash register 5:

command	reg. address	MSB	value	LSB
0 0 1 0	1001	00	1 0 0 0	00

- 4. Disconnect VFLASH from VDD.
- Turn the MagAlpha off and on (with VDD 5. back to the normal 3.3V value).
- Read back registers 4 and 5 to verify that 6. the flashing was successfully accomplished.


For flashing multiple registers, send the flash command one by one. The flashing rate is specified in Sensor Output Specifications in the EC table.

Note that flashing of the OTP registers requires raising both 3.3V VDD and VFlash to 4V. Isolate other devices sharing the 3.3V VDD rail if they are not tolerant to 4V.

www.MonolithicPower.com

MPS Proprietary Information. Patent Protected. Unauthorized Photocopy and Duplication Prohibited. © 2018 MPS. All Rights Reserved.



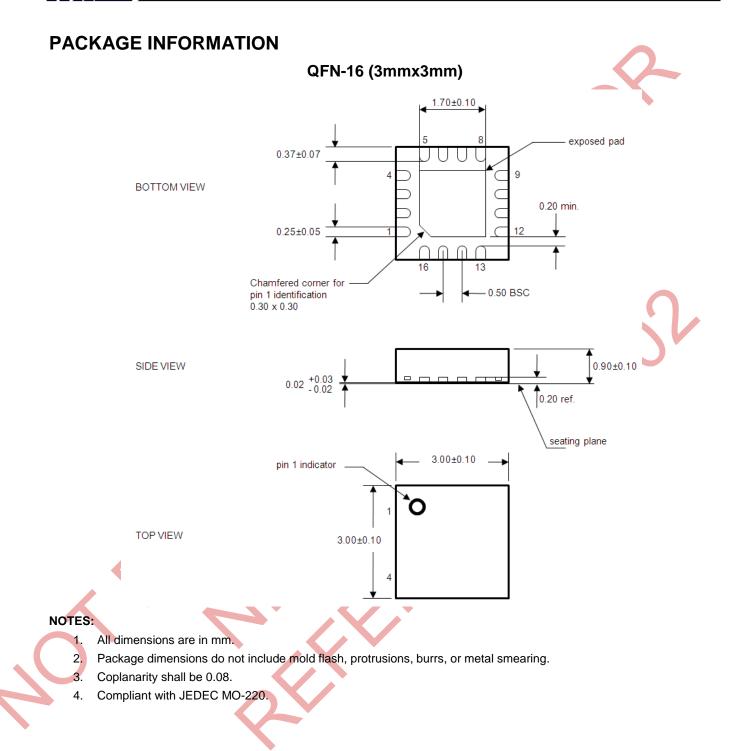

APPENDIX A: DEFINITIONS

Resolution (3\sigma noise level) The smallest angle increment distinguishable from the noise. Here, the resolution is defined as 3 times σ (the standard deviation in degrees) taken over 1,000 data points at a constant position. The resolution in bits is obtained with log₂(360/6 σ).


Refresh Rate Rate at which new data points are stored in the output buffer.

LatencyThe time between the data-ready at the output and the instant at which
the shaft passes that position. The lag in degrees is $lag = latency \cdot v$,
where v is the angular velocity in deg/s.

Power-Up Time Time until the sensor delivers valid data starting at power-up.

Integral Non-Linearity (INL) Maximum deviation between the noiseless sensor output and the shaft angle if the shaft zero angle coincides with the sensor zero angle.

Angle variation rate when one parameter is changed (e.g.: temperature, VDD) and all the others, including the shaft angle, are maintained constant.

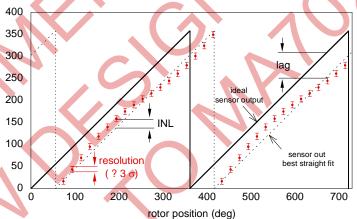

Jitter

Drift

Figure A1: Absolute Angle Errors

For the incremental output, da is the maximum deviation of the angular position of an edge with respect to the ideal value. This means that each edge occurs at the ideal angle + or - the angle da.

Since the period of the A or B channel is $P = 4 \cdot 360/N$, where N is the number of edges per revolution (EPR), the jitter is J = da/P.

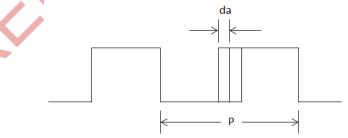


Figure A2: Jitter of Incremental Outputs

Overall Reproducibility

Maximum variation between two readings, successive or not, of the same shaft position at a fixed magnetic field over the complete temperature range.


APPENDIX B: ERRATA


Drift of the ABZ Output

Symptom: when changing the rotation direction, the ABZ output may exhibits one extra edge, thus creating an angle offset of 1 LSB (360/2^10).

Detailed Description

In case of rotation direction change, the AB output behaves as shown in Figure B1. Note that to simplify this errata, we neglect the hysteresis, which does not have any effect on this issue.

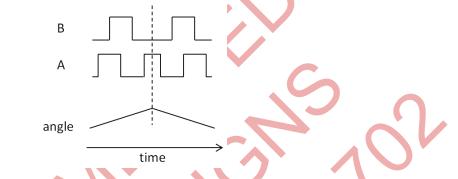



Instead, when the direction change occurs when one channel is high and the other is low, one channel exhibits an extra transition, as if the rotation continues in the first direction by an angle 360°/1024=0.35°. Figure B2 shows a change from CW to CCW. In the figure, the ABZ output delivered an extra transition, creating an offset of 1 LSB in the CW direction.

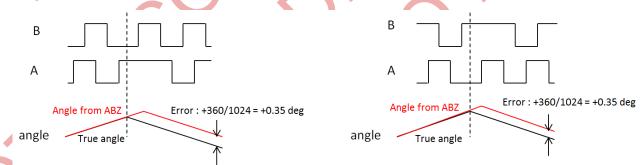


Figure B2: Direction Change from CW to CCW

In case of change from CCW to CW the same issue occurs, an extra transition induces an angle offset of 0.35°, but this time in the CCW direction.

When both A and B channels are in the same state, there is no extra transition (see Figure B3).

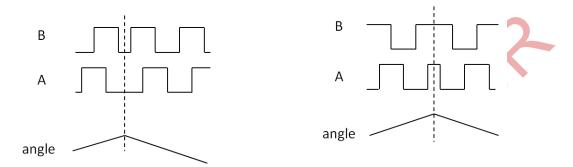


Figure B3: Direction Change from CW to CCW when Both Channels are in the Same Logical State (No Issue)

Consequence

In applications where the direction of rotation changes, the ABZ output generates additional edge transitions 50% of the time on average with equal probability in either CW or CCW directions. The angular position given by the ABZ output after N direction change behaves as a random walk. The indicated angle drifts by the quantity shown in Equation (A1):

 $drift(in \deg) = \frac{2N 0.35}{2N}$

Recommended Actions

No fix is planned for this on the MA300 and MA700 devices. For applications using ABZ with direction change, MPS recommends using the MA302 and MA702 devices.

NOTICE: The information in this document is subject to change without notice. Users should warrant and guarantee that third party Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.

20

(A1)



ООО "ЛайфЭлектроникс"

ИНН 7805602321 КПП 780501001 Р/С 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru

www.lifeelectronics.ru