



## User Guide

UG000424

# AS6500-DK

## Development Kit

### Hardware and Graphical User Interface

v1-00 • 2019-Mar-14

---


# Content Guide

|          |                                          |          |          |                                        |           |
|----------|------------------------------------------|----------|----------|----------------------------------------|-----------|
| <b>1</b> | <b>Introduction.....</b>                 | <b>3</b> | 4.1      | Main Window.....                       | 9         |
| 1.1      | Kit Content & Ordering Information ..... | 3        | 4.2      | Menu & Support Windows .....           | 11        |
| <b>2</b> | <b>Quick Start Guide .....</b>           | <b>4</b> | <b>5</b> | <b>Schematics, Layers and BOM ....</b> | <b>14</b> |
| 2.1      | Manual Driver Installation.....          | 5        | <b>6</b> | <b>Revision Information.....</b>       | <b>17</b> |
| <b>3</b> | <b>Hardware Description.....</b>         | <b>7</b> | <b>7</b> | <b>Legal Information .....</b>         | <b>18</b> |
| 3.1      | Introduction.....                        | 7        |          |                                        |           |
| 3.2      | Communication Interface .....            | 8        |          |                                        |           |
| <b>4</b> | <b>Software Description.....</b>         | <b>9</b> |          |                                        |           |

# 1 Introduction

## 1.1 Kit Content & Ordering Information

**Figure 1:**  
Kit Content

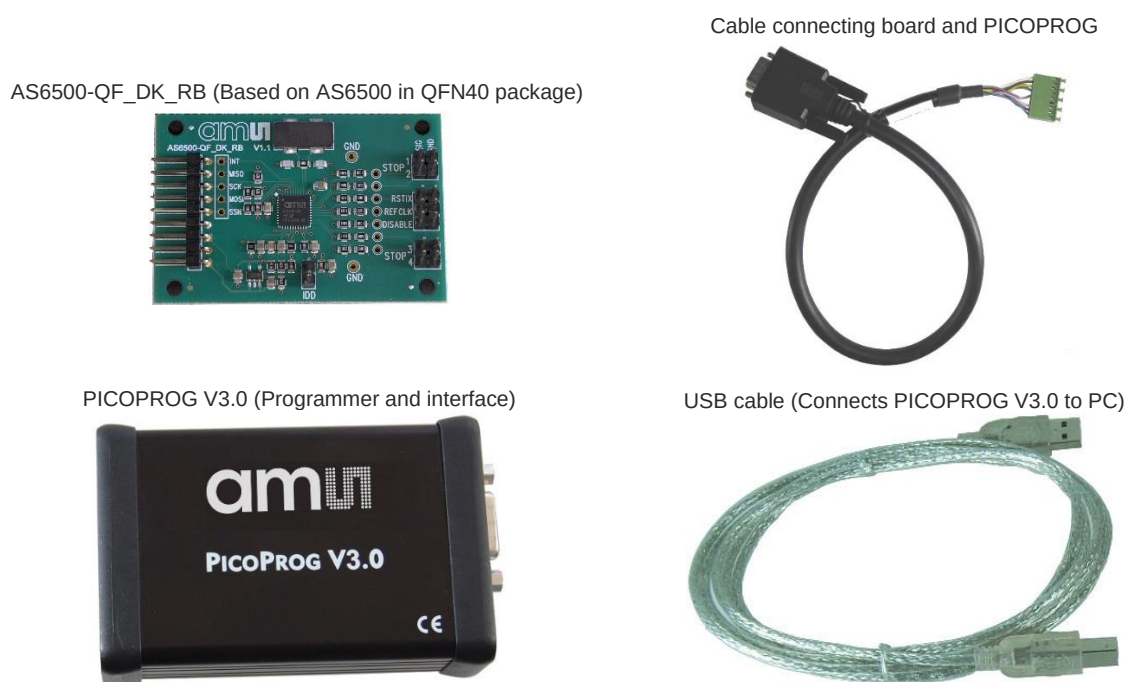

Please download the latest software for the kit from  
<https://download.ams.com/SPECIALTY-SENSORS/AS6500>

| Ordering Code   | Part Number | Description                                   |
|-----------------|-------------|-----------------------------------------------|
| AS6500-QF_DK    | 221050003   | AS6500 Demo Kit including PICOPROG and cables |
| AS6500-QF_DK_RB | 221050002   | AS6500 Reference board                        |


## 2 Quick Start Guide

This section describes how to quickly set up the AS6500-DK, establish basic operation and make measurements.

- It is crucial to install the software before connecting the development kit to your computer:  
<https://download.ams.com/SPECIALTY-SENSORS/AS6500>
- Unzip the package to the desired directory, open “setup.exe” and follow the instructions on the screen
- Connect the PICOPROG V3.0 to the computer using the USB cable and connect the board to the PICOPROG using the DB15 connector cable.
- Quick Start for Initial Measurements

From the “**Start**” menu, go to “**All Programs**” and then to the “**ams AG**” directory. Click the “**AS6500 Evaluation Software**” icon to begin execution of the evaluation software. The following screen should appear:


**Figure 2 :**  
**Opening Page**

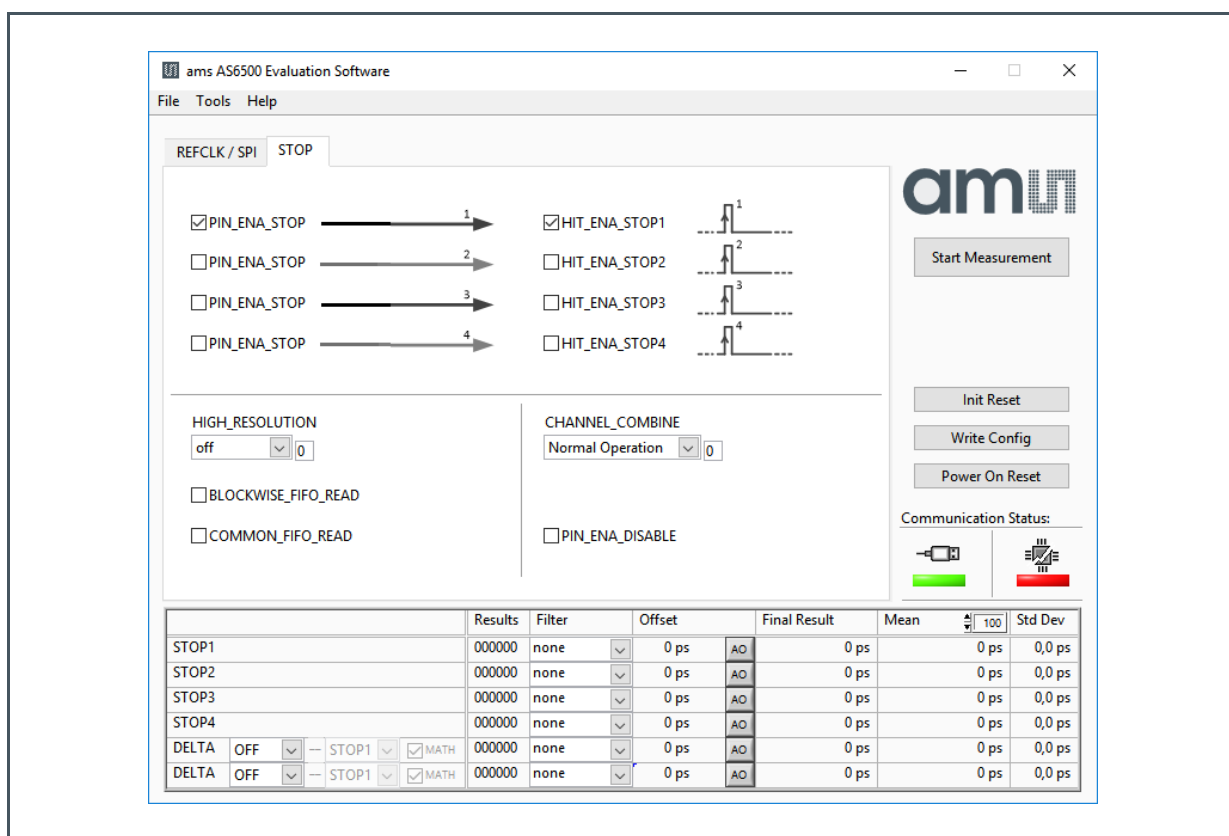

- First click **“Power On Reset”**, **“Write Config”** and **“Init Reset”**.  
The lights for the communication status should both become green.
- Enable the channels that are used.
- Check the REFCLK/SPI page settings
- Connect your signal source
- Press **“Start Measurement”**

At this point, after successful completion of the above steps, a basic operation of the development kit should be possible.


**Figure 3:**  
**Setup Window**

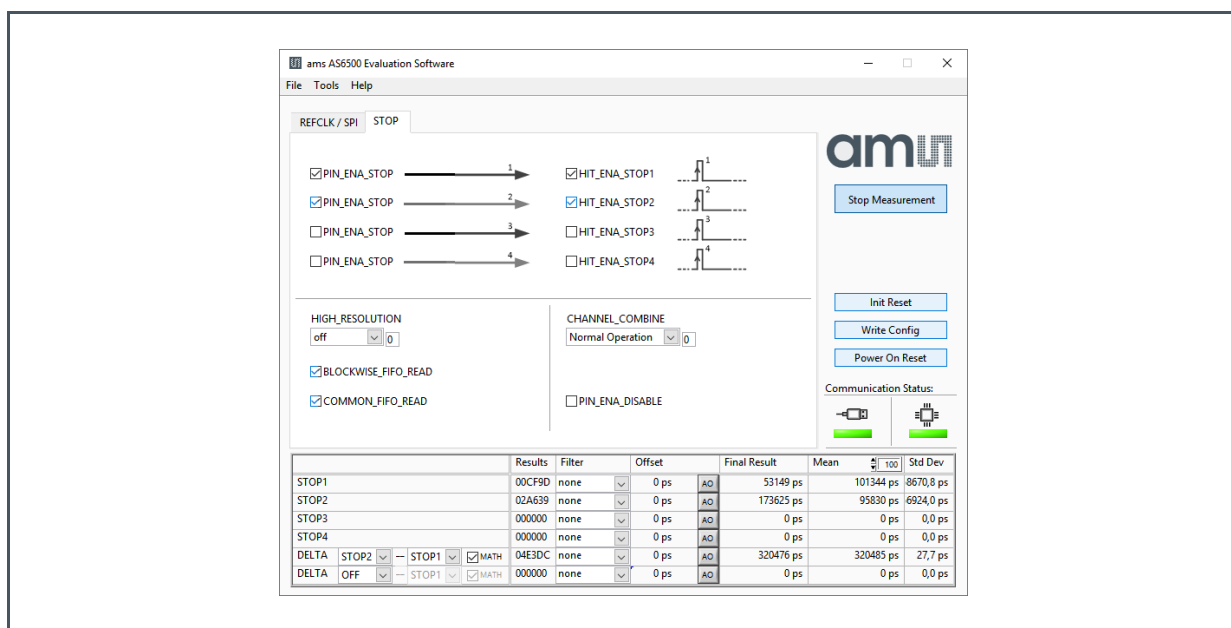

## 2.1 Manual Driver Installation

If PICOPROG is not displayed correctly then go to the drivers folder, e.g. *C:\Program Files\ams AG\AS6500 Evaluation Software* and install the driver for your operating system manually.

**Figure 4:**  
**Device Manager**

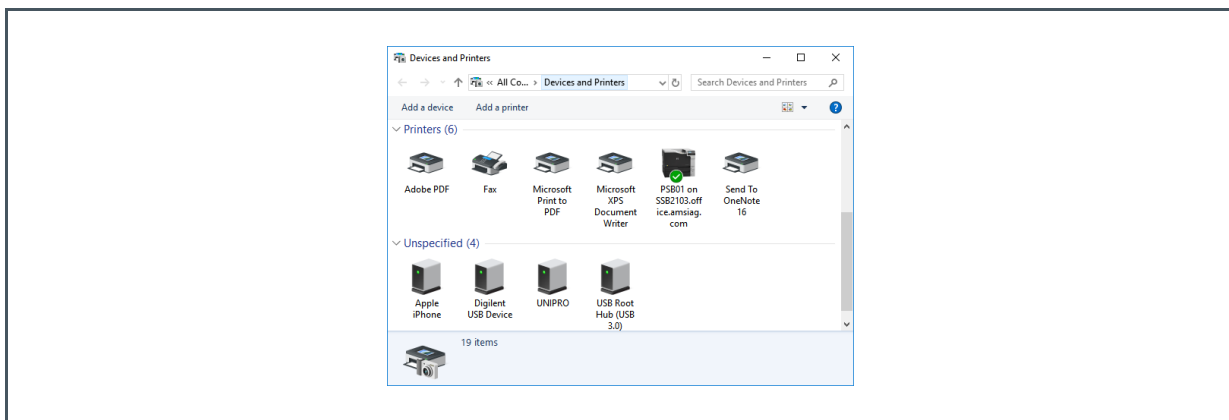


## 3 Hardware Description

### 3.1 Introduction

The AS6500-QF\_DK\_RB board, shown in Figure 5, is a basic board for the 4-channel time-to-digital converter AS6500. The reference clock can be applied from external via pin or from the on-board 4 MHz quartz oscillator (X1).

**Figure 5:**  
AS6500-QF\_DK\_RB

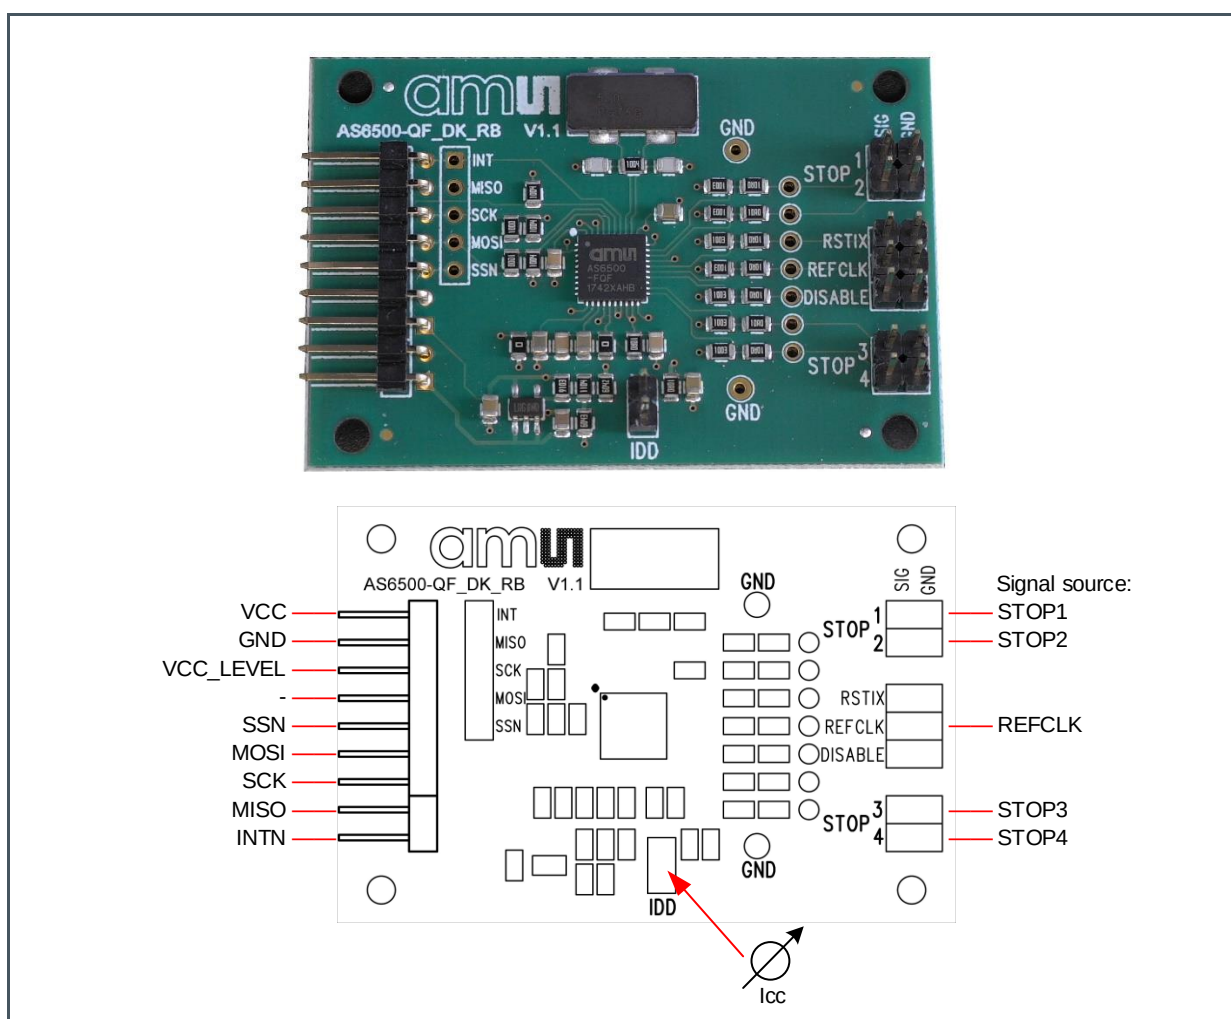

---

## 3.2 Communication Interface

The PICOPROG device is a USB-to-SPI converter box that interfaces all UFC evaluation systems. The PICOPROG is registered by the operating system initially as “PICOPROG v2.0 unprogrammed”. As soon as the AS6500-QF\_DK\_RB evaluation software starts, a special firmware is written into the PICOPROG to handle the SPI communication with the AS6500-DK. The PICOPROG is now listed as “UNIPRO” in the device manager. For SPI communication only, PICOPROG version 2.0 is sufficient.

The flat connector connecting the PICOPROG and the AS6500-QF\_DK\_RB. includes the power lines and the SPI communication lines. VCC\_LEVEL is the voltage feedback for the PICOPROG level shifters.

---

## 4 Software Description

---

### 4.1 Main Window


The main windows shows two pages for configuration and result display:

#### 4.1.1 Stop Page

On this window major settings are made:


1. Selects the input pins that are used in the application
2. Enable the internal measurement channels. Each pin refers to minimum one internal channel. Two will be needed in case of channel combination.
3. Select the resolution. High resolution achieves a better single-shot rms noise, but at the cost of pulse-pair resolution.
4. Selects optional channel combination  
This can be for better pulse-pair resolution or for pulse width measurement. Both options demand internally two channels per stop pin.
5. Having done the settings, download the configuration and initialize the chip.
6. Start the measurement.
7. At the bottom the results for the four stop channels are displayed.
8. In many cases the differences between the channels are of interest. This can be activated here.

Figure 6:  
Stop Page

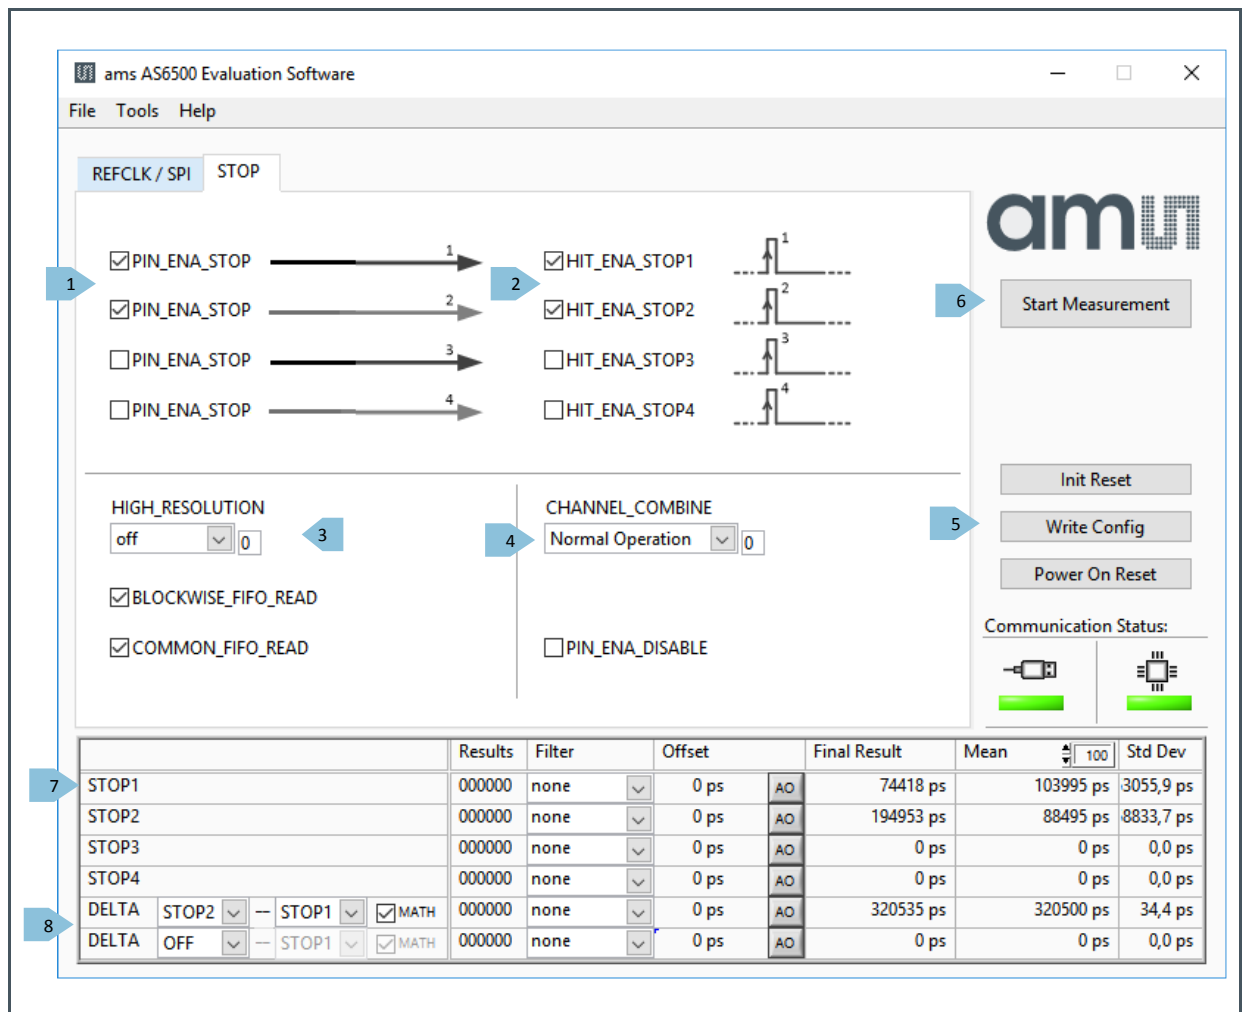

### 4.1.2 REFCLK/SPI Page

Figure 7:  
REFCLK/SPI Page

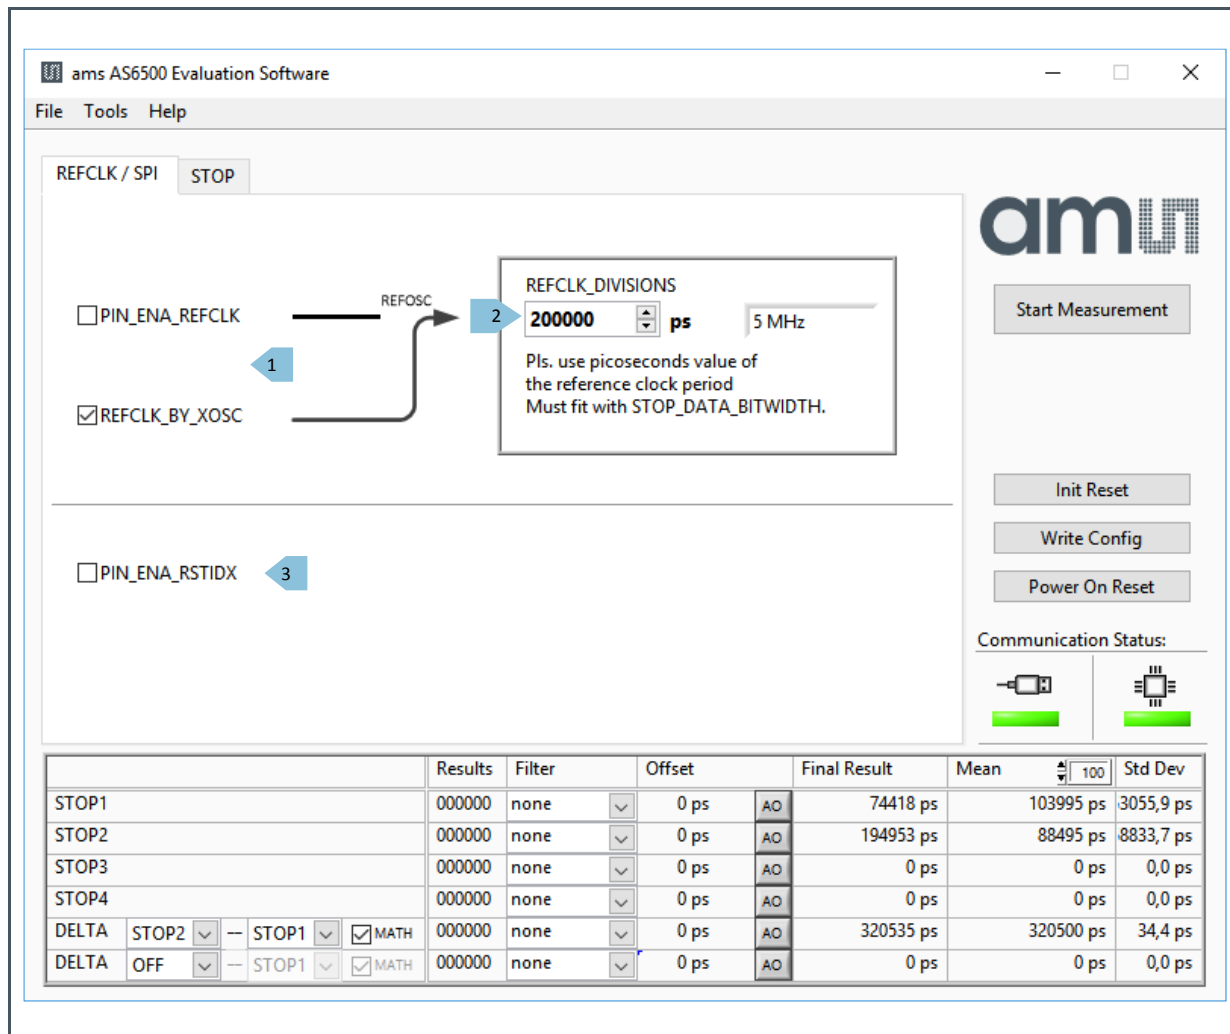


## 4.2 Menu & Support Windows

Beside main window, the software menu allows the opening of other windows. There are some menu items which are redundant to available buttons of main window.

### 4.2.1 File

- **Load Config**  
This dialog box allows the path selection of a configuration file, covering the register settings, necessary for a proper configuration of the AS6500. After opening this file, the control settings are updated in the GUI.
- **Save Config**  
This menu item allows the saving of the current GUI control settings into a configuration file
- **Save Graph Data**  
Allows to store the measurement data as they are stored in the data buffer for the graphical display. It is possible to store the STOP data only or the STOP together with the reference numbers.

**Figure 8:**  
**File Menu**

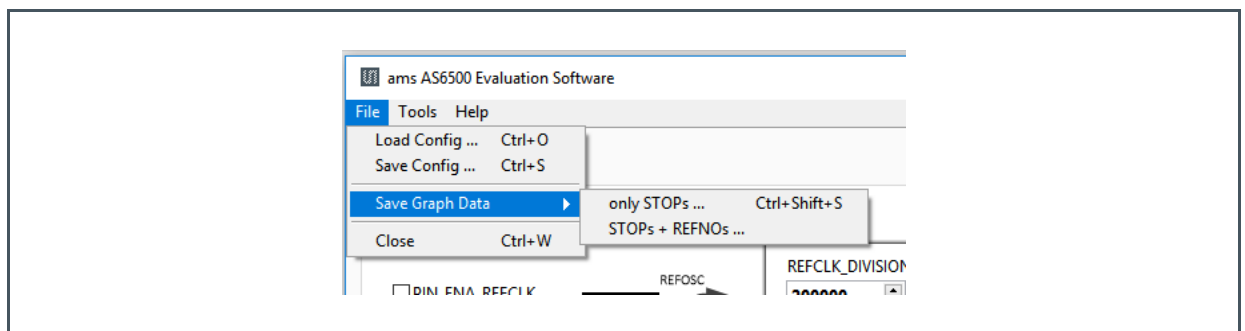


- **Close**  
Close all open windows of the AS6500-QF\_DK Evaluation software.

### 4.2.2 Tools

- **Run Measurement**  
Same function as "Start/Stop Measurement" button in "Measurement" tab of main window.
- **Graph...**  
Opens the window for a graphical display of the measurement data

**Figure 9:**  
**Graph Window**

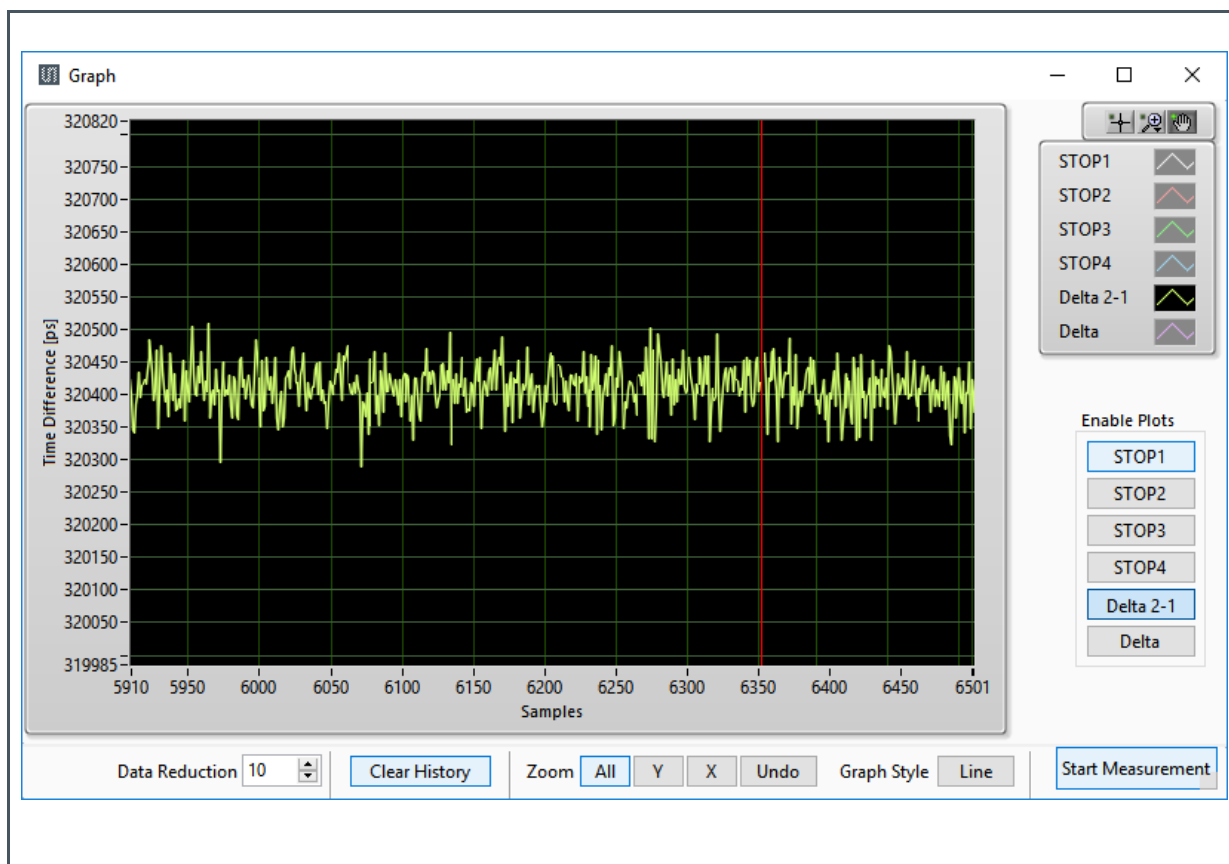

- **Registers**  
Opens a separate window for the display and setting of the configuration registers and the display of the read registers.

**Figure 10:**  
**Configuration Registers**


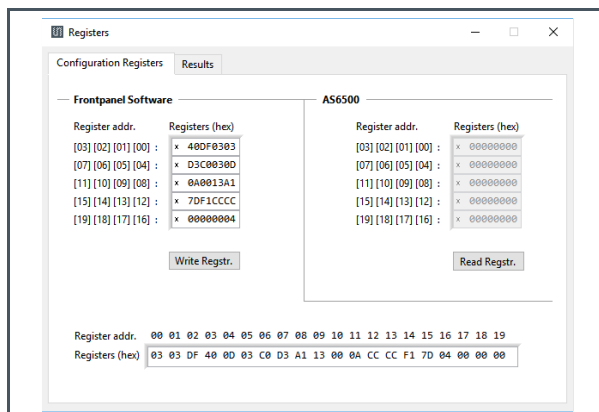


**Figure 11:**  
**Result Registers**

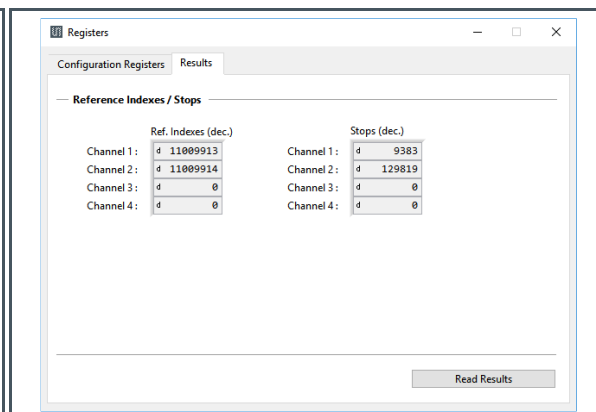

## 5 Schematics, Layers and BOM

**Figure 12:**  
**AS6500-QF\_DK\_RB Schematics**

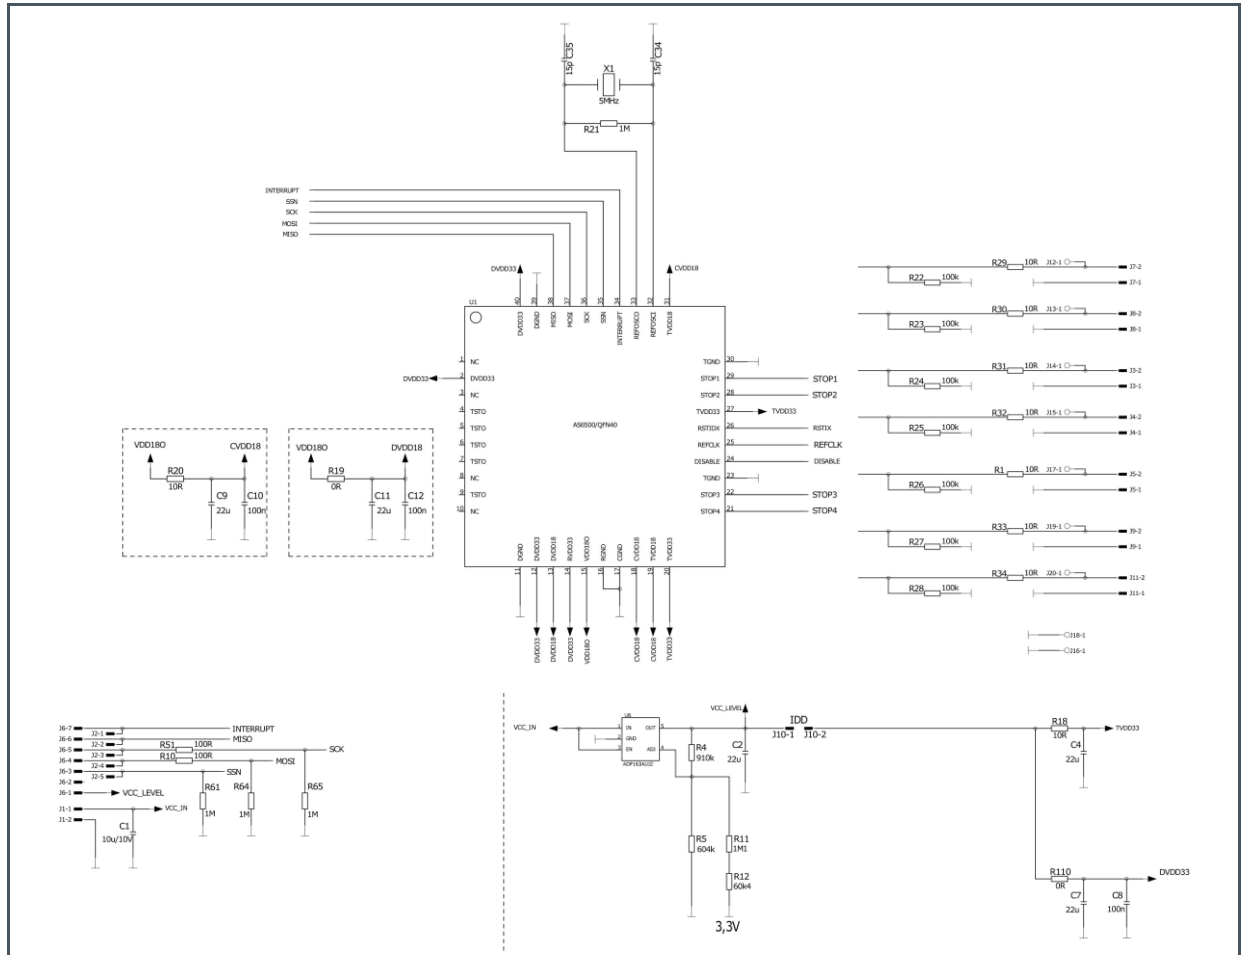


**Figure 13:**  
AS6500-QF\_DK\_RB Layout & Assembly

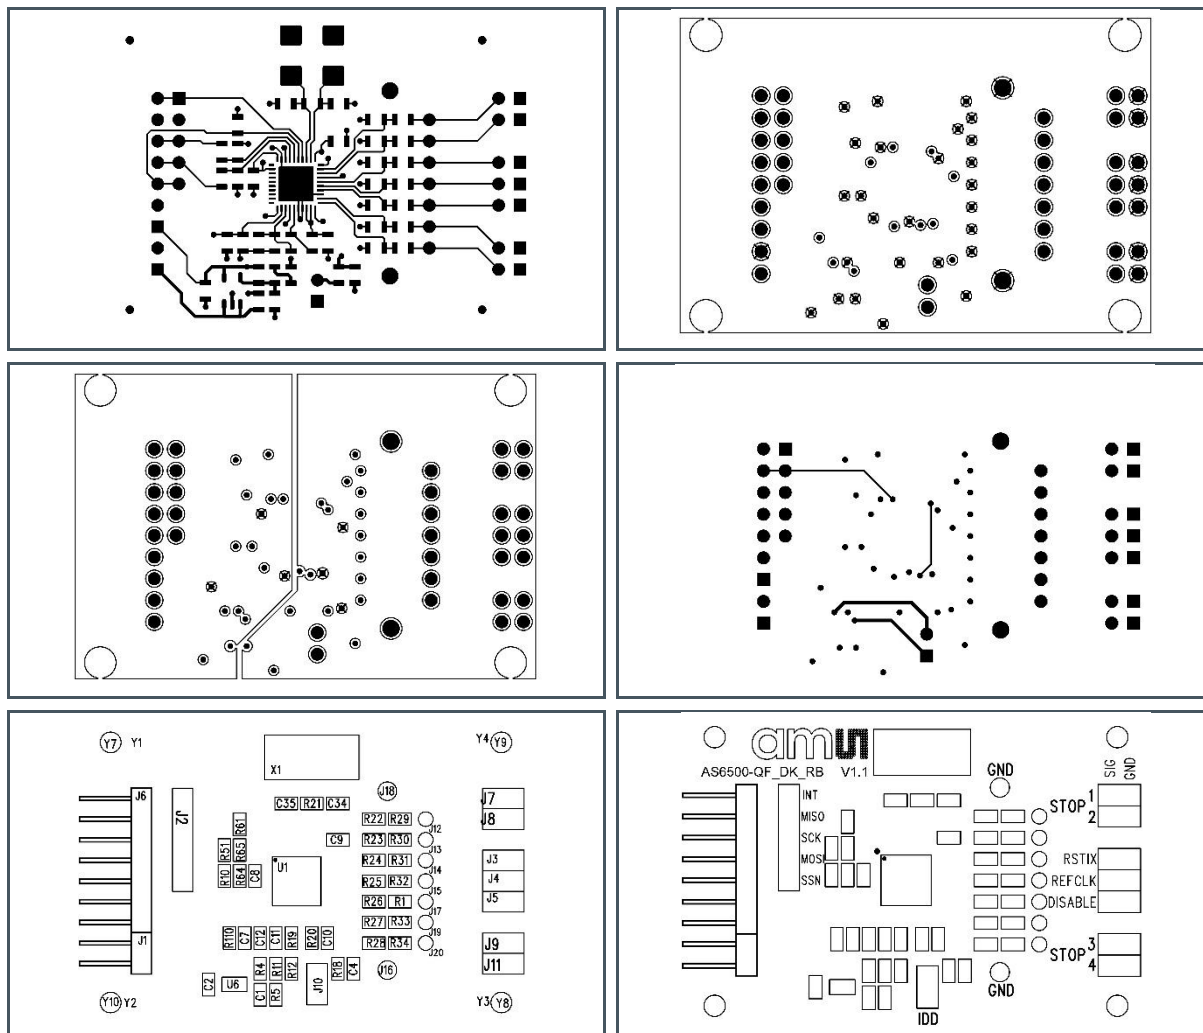


**Figure 14:**  
Bill of Materials for AS6500-QF\_DK\_RB

| Item | Qty | Reference       | Value      | Part Desc  | Type                             |
|------|-----|-----------------|------------|------------|----------------------------------|
| 1    | 1   | U1              | AS6500     | QFN40      | AS6500 TDC <b>ams</b>            |
| 2    | 1   | U6              | 3.0 V      | ADP163AUJZ | Linear regulator, Analog Devices |
| 3    | 1   | X1              | 5 MHz      | KX-20      | Quartz crystal Geyer             |
| 4    | 3   | C8, C10, C12    | 100 nF     | 0805       | Chip capacitor                   |
| 5    | 2   | C34,C35         | 15 pF      | 0805       | Chip capacitor                   |
| 6    | 5   | C2,C4,C7,C9,C11 | 22 $\mu$ F | 0805       | Chip capacitor                   |
| 7    | 2   | R19,R110        | 0 $\Omega$ | 0805       | Chip resistor                    |

| Item | Qty | Reference                      | Value           | Part Desc | Type          |
|------|-----|--------------------------------|-----------------|-----------|---------------|
| 8    | 2   | R10,R51                        | 100 $\Omega$    | 0805      | Chip resistor |
| 9    | 7   | R22,R23,R24,R25,R26,R27,R28    | 100 k $\Omega$  | 0805      | Chip resistor |
| 10   | 9   | R1,R18,R20,R29,R30,R31,R32,R33 | 1 M $\Omega$    | 0805      | Chip resistor |
| 11   | 4   | R21,R61,R64,R65                | 1.1 M $\Omega$  | 0805      | Chip resistor |
| 12   | 1   | R5                             | 604 k $\Omega$  | 0805      | Chip resistor |
| 13   | 1   | R12                            | 60.4 k $\Omega$ | 0805      | Chip resistor |
| 14   | 1   | R4                             | 910 k $\Omega$  | 0805      | Chip resistor |
| 15   | 1   | R8                             | 10 M $\Omega$   | 0805      | Chip resistor |
| 16   | 1   | J6                             | 7 x 1 x 90°     |           | 2.54          |
| 17   | 1   | J1                             | 2 x 1 x 90°     |           | 2.54          |
| 18   | 1   | J2                             | 5 x 1 x 180°    |           | 2.54          |

# 6      Revision Information

| Changes from previous version to current revision v1-00 | Page |
|---------------------------------------------------------|------|
| First edition                                           | All  |
|                                                         |      |
|                                                         |      |
|                                                         |      |
|                                                         |      |
|                                                         |      |
|                                                         |      |

- Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- Correction of typographical errors is not explicitly mentioned.

## 7 Legal Information

### Copyrights & Disclaimer

Copyright ams AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Demo Kits, Evaluation Kits and Reference Designs are provided to recipient on an "as is" basis for demonstration and evaluation purposes only and are not considered to be finished end-products intended and fit for general consumer use, commercial applications and applications with special requirements such as but not limited to medical equipment or automotive applications. Demo Kits, Evaluation Kits and Reference Designs have not been tested for compliance with electromagnetic compatibility (EMC) standards and directives, unless otherwise specified. Demo Kits, Evaluation Kits and Reference Designs shall be used by qualified personnel only.

ams AG reserves the right to change functionality and price of Demo Kits, Evaluation Kits and Reference Designs at any time and without notice.

Any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed. Any claims and demands and any direct, indirect, incidental, special, exemplary or consequential damages arising from the inadequacy of the provided Demo Kits, Evaluation Kits and Reference Designs or incurred losses of any kind (e.g. loss of use, data or profits or business interruption however caused) as a consequence of their use are excluded.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

### RoHS Compliant & ams Green Statement

**RoHS Compliant:** The term RoHS compliant means that ams AG products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

**ams Green (RoHS compliant and no Sb/Br):** ams Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

**Important Information:** The information provided in this statement represents ams AG knowledge and belief as of the date that it is provided. ams AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams AG and ams AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

### Headquarters

ams AG  
Tobelbader Strasse 30  
8141 Premstaetten  
Austria, Europe  
Tel: +43 (0) 3136 500 0

Please visit our website at [www.ams.com](http://www.ams.com)

Buy our products or get free samples online at [www.ams.com/Products](http://www.ams.com/Products)

Technical Support is available at [www.ams.com/Technical-Support](http://www.ams.com/Technical-Support)

Provide feedback about this document at [www.ams.com/Document-Feedback](http://www.ams.com/Document-Feedback)

For sales offices, distributors and representatives go to [www.ams.com/Contact](http://www.ams.com/Contact)

For further information and requests, e-mail us at [ams\\_sales@ams.com](mailto:ams_sales@ams.com)

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: [org@lifeelectronics.ru](mailto:org@lifeelectronics.ru)

[www.lifeelectronics.ru](http://www.lifeelectronics.ru)