


# Future Technology Devices International Ltd

## Datasheet

### FT12 Series Evaluation Kit

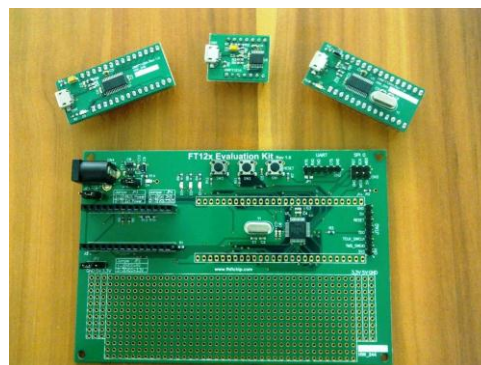

*Generic USB device development kit*

## 1 Introduction

The FT12 series evaluation kit is used to develop and demonstrate functions of FTDI's FT120, FT121 and FT122 ICs. The kit consists of a main board and one of the FT120/FT121/FT122 add-on modules. These modules can provide a generic USB device function to a microcontroller(MCU) with the following interfaces:

- UMFT120DC: 8-bit 8051 interface, up to 3 bi-directional endpoints
- UMFT121DC: SPI slave interface, up to 8 bi-directional endpoints
- UMFT122DC: 8-bit 8051 interface, up to 8 bi-directional endpoints

### 1.1 Features

- Micro-B USB connector to connect to USB host or Charger port
- Allow bus-power or self-power configuration
- LPC1114 Cortex-M0 microcontroller for easy software development
- Pushbutton and LEDs for HID application
- In-system firmware upgradable
- On-board prototype area for application development

## 2 Ordering Information

| Part No * | Description                                                                                                                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| UMFT12XEV | Main board for evaluating FT120, FT121 and FT122 add-on modules. Fitted with LPC1114 Cortex-M0 MCU. Firmware upgradable with UART or SWD interface. Note: Board is shipped with firmware to support CDC class devices pre-loaded |
| UMFT120DC | FT120 add-on module. 8-bit 8051 parallel bus. 3 bi-directional endpoints. I/O level 3.3V (5V tolerant). Compatible to PDIUSB12.                                                                                                  |
| UMFT121DC | FT121 add-on module. SPI slave bus. 8 bi-directional endpoints. I/O level 1.8/2.5/3.3V.                                                                                                                                          |
| UMFT122DC | FT122 add-on module. 8-bit 8051 parallel bus. 8 bi-directional endpoints. I/O level 1.8/2.5/3.3V.                                                                                                                                |

\* Note that PCB label may differ

**Table 2-1 Ordering information**

Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold harmless FTDI from any and all damages, claims, suits or expense resulting from such use.

---

## Table of Contents

|          |                                                 |           |
|----------|-------------------------------------------------|-----------|
| <b>1</b> | <b>Introduction .....</b>                       | <b>1</b>  |
| 1.1      | Features.....                                   | 1         |
| <b>2</b> | <b>Ordering Information .....</b>               | <b>1</b>  |
| <b>3</b> | <b>Hardware description .....</b>               | <b>3</b>  |
| 3.1      | UMFT12XEV Main Board .....                      | 3         |
| 3.2      | UMFT120DC daughter board.....                   | 4         |
| 3.3      | UMFT121DC daughter board.....                   | 6         |
| 3.4      | UMFT122DC daughter board.....                   | 7         |
| 3.5      | Accessories .....                               | 8         |
| <b>4</b> | <b>Initial Board Set-up .....</b>               | <b>10</b> |
| 4.1      | Installing UMFT12xDC daughter board.....        | 10        |
| 4.2      | Set the jumpers.....                            | 10        |
| 4.3      | Install the driver .....                        | 11        |
| <b>5</b> | <b>Running demo tests.....</b>                  | <b>16</b> |
| 5.1      | Serial Loopback test.....                       | 16        |
| 5.2      | USB Charger test.....                           | 16        |
| <b>6</b> | <b>Board Circuit Schematics and BOMs .....</b>  | <b>18</b> |
| 6.1      | UMFT12XEV Schematic and BOM .....               | 18        |
| 6.2      | UMFT120DC Schematic and BOM .....               | 19        |
| 6.3      | UMFT121DC Schematic and BOM .....               | 20        |
| 6.4      | UMFT122DC Schematic and BOM .....               | 21        |
| <b>7</b> | <b>Firmware Upgrade Process .....</b>           | <b>23</b> |
| 7.1      | Put LPC1114 microcontroller in ISP mode.....    | 23        |
| 7.2      | Connect the TTL-232R-3V3 cable .....            | 23        |
| 7.3      | Upgrade firmware .....                          | 24        |
| <b>8</b> | <b>Environmental Compliances .....</b>          | <b>25</b> |
| <b>9</b> | <b>Contact Information .....</b>                | <b>26</b> |
|          | Appendix A - List of Figures and Tables.....    | 27        |
|          | Appendix B – Abbreviations and References ..... | 29        |
|          | Appendix C - Revision History .....             | 30        |


## **3 Hardware description**

### **3.1 UMFT12XEV Main Board**

The UMFT12XEV board is intended for use as a hardware platform to enable easy evaluation of FTDI's FT120, FT121 and FT122 series of USB peripheral controllers. The UMFT12XEV boards utilize a NXP Cortex-M0 based microcontroller (LPC1114) to interface to FT12 series with parallel or SPI bus. The LEDs and push buttons can be used to demo the HID keyboard functions. A prototype area is also built on the UMFT12XEV board, allowing user defined application circuit to be added so that application hardware/firmware can be developed and tested on the prototype before porting over to mass production.

Figure 3-1 shows the PCB layout with main component positions. These components include:


- 14x2 socket for add-on module: insert any of the three daughter boards (UMFT120DC, UMFT121DC, UMFT122DC)
- 3.3V Regulator: It takes 5V input from USB Vbus (bus-power) or DC jack CN4 (self power) and output 3.3V for on-board circuits
- LED(GPIO): 2 LED diodes for GPIO status display. Can be used for HID keyboard status LED
- LED(BCD\_DET): This LED indicates if a USB Charger is attached and detected by FT121/FT122
- Push Button(GPIO): 2 push buttons for GPIO control input. Can be used for HID keyboard function keys
- Reset button: hardware reset button
- UART connector: This 6-pin UART connector can be used for in-system firmware download as well as firmware debug port
- SPI0 connector: This 6-pin SPI connector can be used to connect to a SPI slave board
- JTAG/SWD connector: This 8-pin connector is for connecting to LPC-link for firmware download or debug purpose
- LPC1114 Microcontroller: 44-pin LPC1114 Cortex-M0 MCU to control FT12x and other peripherals
- Prototype area: for adding extra application circuits for prototyping purpose

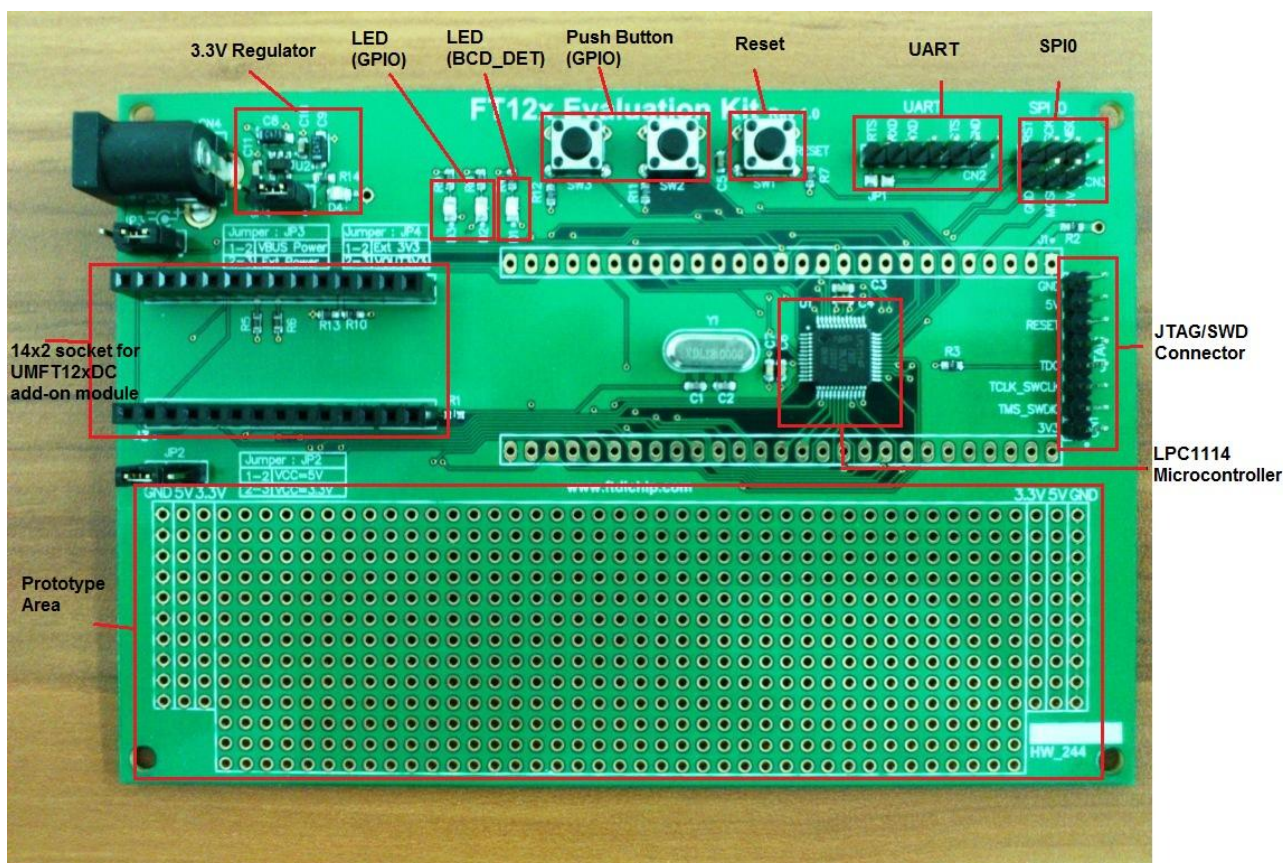

| PIN No. | PIN NAME | TYPE | DESCRIPTION                                                                                                                                                                                                        |
|---------|----------|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6       | GND      | P    | Ground                                                                                                                                                                                                             |
| 7       | D4       | IO   | Data bus bit 4.                                                                                                                                                                                                    |
| 8       | D5       | IO   | Data bus bit 5.                                                                                                                                                                                                    |
| 9       | D6       | IO   | Data bus bit 6.                                                                                                                                                                                                    |
| 10      | D7       | IO   | Data bus bit 7.                                                                                                                                                                                                    |
| 11      | ALE      | I    | Address latch enable for multiplexed address/data bus configuration.<br>This pin must be pulled Low for non-multiplexed address/data bus configuration.                                                            |
| 12      | CS_n     | I    | Chip select (Active Low).                                                                                                                                                                                          |
| 13      | GND      | P    | Ground                                                                                                                                                                                                             |
| 14      | CLKOUT   | O    | Programmable output clock.                                                                                                                                                                                         |
| 15      | RD_n     | I    | Read enable (Active Low).                                                                                                                                                                                          |
| 16      | WR_n     | I    | Write enable (Active Low).                                                                                                                                                                                         |
| 17      | DMREQ    | O    | DMA request.                                                                                                                                                                                                       |
| 18      | DMACK_n  | I    | DMA acknowledge (Active Low).                                                                                                                                                                                      |
| 19      | EOT_n    | I    | End of DMA transfer (Active Low). Also function as Vbus sensing input for self-powered application.                                                                                                                |
| 20      | GL_n     | OD   | USB bus activity indicator (Active Low)                                                                                                                                                                            |
| 21      | A0       | I    | Address bit for non-multiplexed address/data bus configuration.<br>- A0=1 indicates command phase;<br>- A0=0 indicates data phase.<br>This pin must be pulled High for multiplexed address/data bus configuration. |
| 22      | SUSPEND  | I,OD | Device suspend (output) and wakeup (input).                                                                                                                                                                        |
| 23      | INT_n    | OD   | Interrupt (Active Low).                                                                                                                                                                                            |
| 24      | RESET_n  | I    | Asynchronous reset (Active Low).                                                                                                                                                                                   |
| 25      | NC       | -    | No Connection                                                                                                                                                                                                      |
| 26      | VOUT3V3  | P    | 3.3V regulator output                                                                                                                                                                                              |
| 27      | VBUS     | P    | 5V VBUS power from USB connector                                                                                                                                                                                   |
| 28      | VCC      | P    | VCC power supply                                                                                                                                                                                                   |

**Table 3-1 UMFT120DC J1 Pin Out Description**

### 3.3 UMFT121DC daughter board

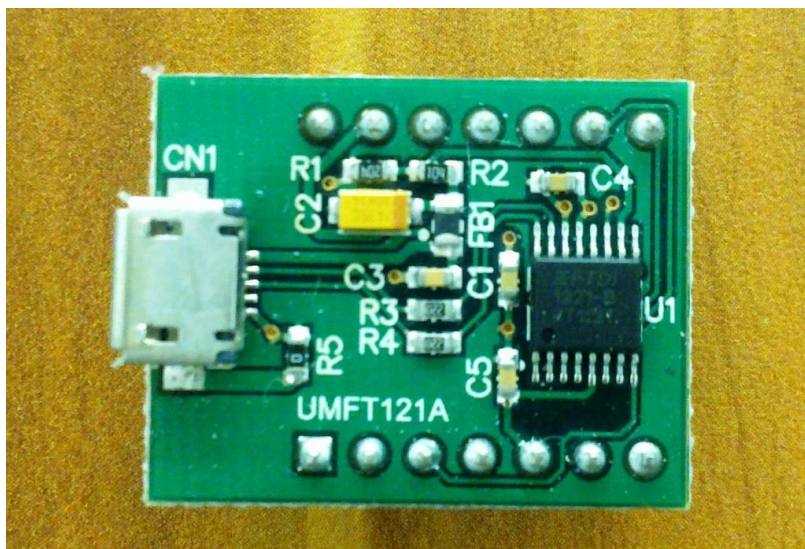


**Figure 3-3 UMFT121DC daughter board**

| PIN No. | PIN NAME | TYPE | DESCRIPTION                                                                        |
|---------|----------|------|------------------------------------------------------------------------------------|
| 1       | SS_n     | I    | SPI slave select input.                                                            |
| 2       | SCLK     | I    | SPI clock input.                                                                   |
| 3       | MISO     | O    | 4-wire mode: SPI slave output.<br>3-wire mode: no function. Leave it un-connected. |
| 4       | MOSI     | I/O  | 4-wire mode: SPI slave input<br>3-wire mode: SPI data input/output                 |
| 5       | VCCIO    | P    | IO Supply Voltage; 1.8V, 2.5V or 3.3V                                              |
| 6       | GND      | P    | Ground                                                                             |
| 7       | NC       | -    | No Connection                                                                      |
| 8       | SUSPEND  | I,OD | Device suspend (output) and wakeup (input).                                        |
| 9       | INT_n    | OD   | Interrupt (Active Low).                                                            |
| 10      | RESET_n  | I    | Asynchronous reset (Active Low).                                                   |
| 11      | BCD_n    | OD   | USB Charger detector output                                                        |
| 12      | VOOUT3V3 | P    | 3.3V regulator output                                                              |
| 13      | VBUS     | P    | 5V VBUS power from USB connector                                                   |
| 14      | VCC      | P    | VCC power supply                                                                   |

**Table 3-2 UMFT121DC J1 Pin Out Description**

### 3.4 UMFT122DC daughter board

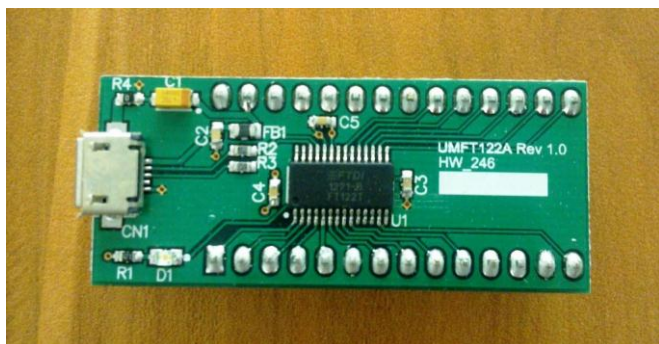

**Figure 3-4 UMFT122DC daughter board**

| PIN No. | PIN NAME | TYPE | DESCRIPTION                                                                                                                                                 |
|---------|----------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | D0       | IO   | Data bus bit 0.                                                                                                                                             |
| 2       | D1       | IO   | Data bus bit 1.                                                                                                                                             |
| 3       | D2       | IO   | Data bus bit 2.                                                                                                                                             |
| 4       | D3       | IO   | Data bus bit 3.                                                                                                                                             |
| 5       | VCCIO    | P    | IO Supply Voltage; 1.8V, 2.5V or 3.3V                                                                                                                       |
| 6       | GND      | P    | Ground                                                                                                                                                      |
| 7       | D4       | IO   | Data bus bit 4.                                                                                                                                             |
| 8       | D5       | IO   | Data bus bit 5.                                                                                                                                             |
| 9       | D6       | IO   | Data bus bit 6.                                                                                                                                             |
| 10      | D7       | IO   | Data bus bit 7.                                                                                                                                             |
| 11      | ALE      | I    | Address latch enable for multiplexed address/data bus configuration.<br><br>This pin must be pulled Low for non-multiplexed address/data bus configuration. |
| 12      | CS_n     | I    | Chip select (Active Low).                                                                                                                                   |
| 13      | GND      | P    | Ground                                                                                                                                                      |
| 14      | CLKOUT   | O    | Programmable output clock.                                                                                                                                  |
| 15      | RD_n     | I    | Read enable (Active Low).                                                                                                                                   |
| 16      | WR_n     | I    | Write enable (Active Low).                                                                                                                                  |
| 17      | DMREQ    | O    | DMA request.                                                                                                                                                |
| 18      | DMACK_n  | I    | DMA acknowledge (Active Low).                                                                                                                               |
| 19      | EOT_n    | I    | End of DMA transfer (Active Low). Also function as Vbus sensing input for self-powered application.                                                         |
| 20      | GL_n     | OD   | USB bus activity indicator (Active Low)                                                                                                                     |
| 21      | A0       | I    | Address bit for non-multiplexed address/data bus configuration.<br>- A0=1 indicates command phase;<br>- A0=0 indicates data phase.                          |

| PIN No. | PIN NAME | TYPE | DESCRIPTION                                                                  |
|---------|----------|------|------------------------------------------------------------------------------|
|         |          |      | This pin must be pulled High for multiplexed address/data bus configuration. |
| 22      | SUSPEND  | I,OD | Device suspend (output) and wakeup (input).                                  |
| 23      | INT_n    | OD   | Interrupt (Active Low).                                                      |
| 24      | RESET_n  | I    | Asynchronous reset (Active Low).                                             |
| 25      | BCD_n    | OD   | USB Charger detector output                                                  |
| 26      | VOOUT3V3 | P    | 3.3V regulator output                                                        |
| 27      | VBUS     | P    | 5V VBUS power from USB connector                                             |
| 28      | VCC      | P    | VCC power supply                                                             |

**Table 3-3 UMFT122DC J1 Pin Out Description**

## 3.5 Accessories

Accessories that might be useful for the FT12x Evaluation kit demo and firmware upgrade/debug:

- a) Micro-B to Standard-A USB cable: for connecting the FT12x evaluation kit to PC host or USB charger port


**Figure 3-5 Micro-B to Standard-A cable**

- b) TTL-232R-3V3 USB cable (optional): for firmware upgrade. For more info please refer to <http://www.ftdichip.com/Products/Cables/USBTTLSerial.htm>. Can be purchased from FTDI online shop ( [http://apple.clickandbuild.com/cnb/shop/ftdichip?productID=53&op=catalogue-product\\_info-null&prodCategoryID=105](http://apple.clickandbuild.com/cnb/shop/ftdichip?productID=53&op=catalogue-product_info-null&prodCategoryID=105) ).


**Figure 3-6 TTL-232R-3V3 USB cable**

- c) LPC-Link JTAG/SWD debugger module (optional): for firmware download and debug. For more info refer to <http://ics.nxp.com/lpcxpresso/> .



**Figure 3-7 LPC-Link debugger module**

## 4 Initial Board Set-up

### 4.1 Installing UMFT12xDC daughter board

Insert the daughter board module (UMFT120DC, UMFT121DC or UMFT122DC) into the UMFT12XEV main board. Pin 1 of daughter board connector J1 shall plug into pin 1 of the socket J2 on the main board. After connection the micro-USB connector on the UMFT12xDC module should be facing outside.




**Figure 4-1 Plug the daughter board module to the main board**

### 4.2 Set the jumpers


On the main board JP2, JP3 and JP4 need to be set to the default location as indicated in Table 4-1.

| Pin header | Jumper Pin position                      | Comment                                                                                              |
|------------|------------------------------------------|------------------------------------------------------------------------------------------------------|
| JP2        | Short pin 1-2 (default)<br>Short pin 2-3 | VCC=5V<br>VCC=3.3V                                                                                   |
| JP3        | Short pin 1-2 (default)<br>Short pin 2-3 | Bus power<br>Self power, a 5V DC power shall be applied to DC jack CN4                               |
| JP4        | Short pin 1-2 (default)<br>Short pin 2-3 | External 3.3V regulator for on-board circuits<br>FT12x built-in 3.3V regulator for on-board circuits |

**Table 4-1 Default setting of the jumpers**

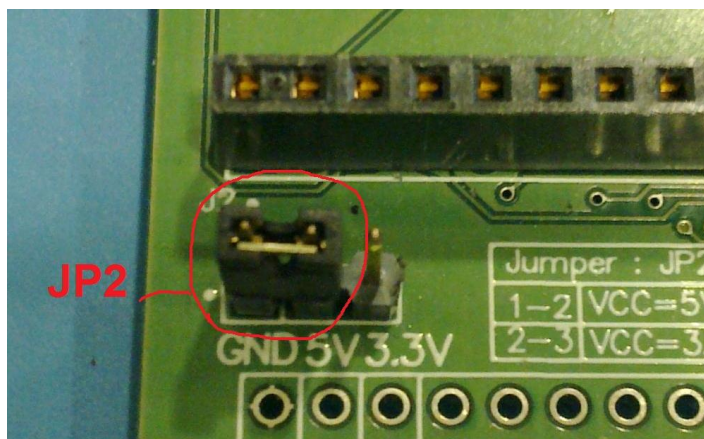

**Figure 4-2 JP2 default setting**

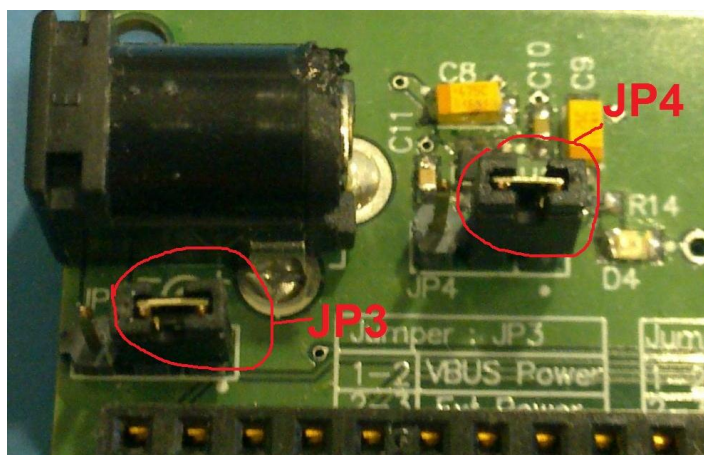

**Figure 4-3 JP3 and JP4 default setting**

### 4.3 Install the driver

The LPC1114 on the UMFT12XEV board is pre-loaded with firmware supporting Communication Device Class (CDC class). The major OSs support the CDC protocol on their USB stack to use serial port communication, allowing PC's to access the CDC device through a virtual COM port (VCP) without developing a new driver.


Linux recognize the CDC device as /dev/ttyACM# (# denotes a number). The driver is loaded automatically when the device is connected.

Mac OS recognize the CDC device as /dev/cu.usbmodem# (# denotes a number). The driver is loaded automatically when the device is connected.

Windows has a CDC protocol driver (usbser.sys) to generate VCP. However, it requires a "Setting Information (INF)" file at the first connection. The required INF file can be download from FTDI website <http://www.ftdichip.com/Products/Modules/DevelopmentModules.htm>.


Here is an example of driver installation under Windows 7 32-bit system:

- ❖ Connect the daughter card USB connector to the test PC with the micro-USB-B to Standard-A cable
- ❖ On Windows 7 PC, open control panel->device manager

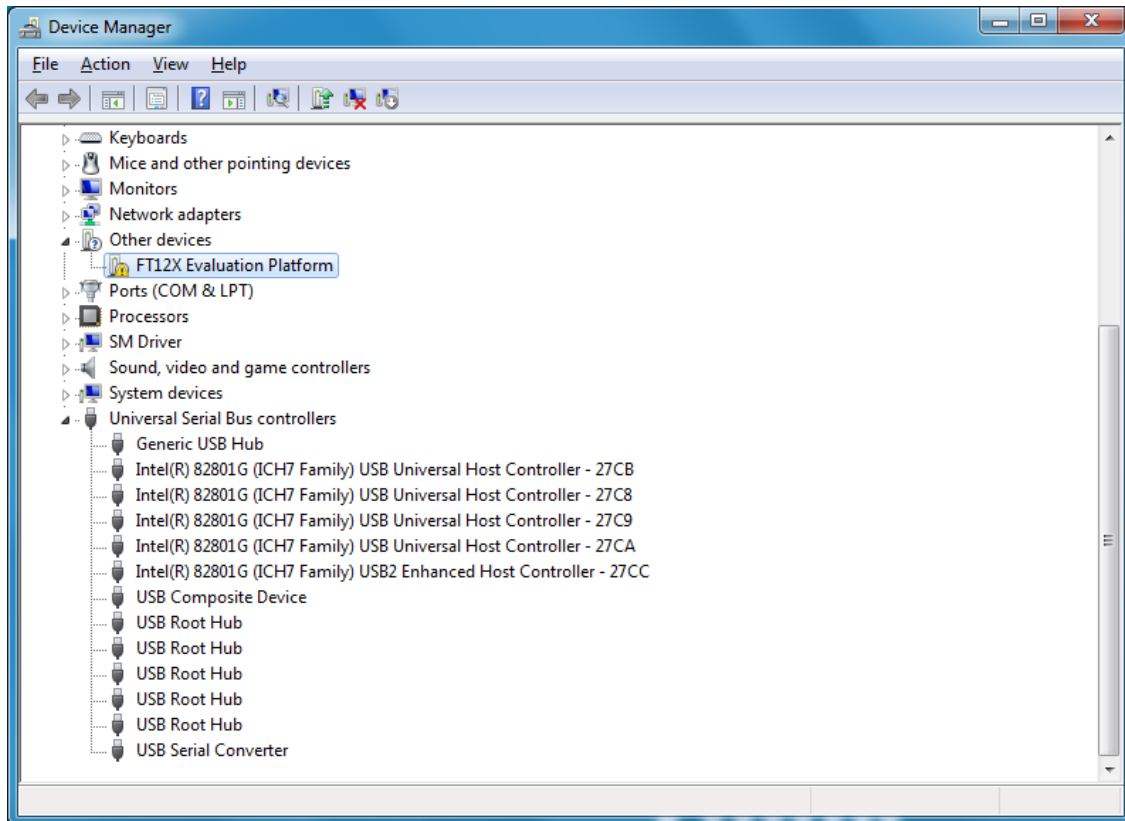


**Figure 4-4 Device manager window**

- ❖ Right click on "FT12X Evaluation Platform" under "Other devices" category, select "Property"

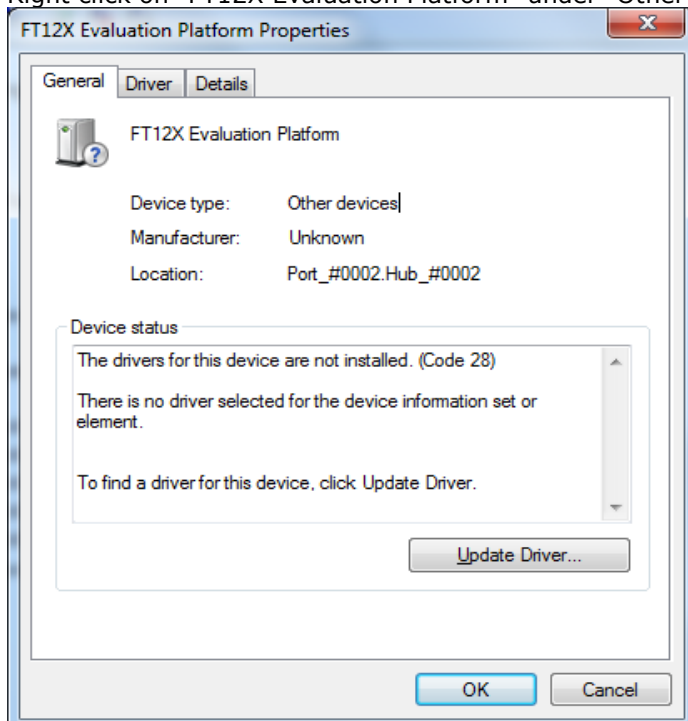


**Figure 4-5 Drive property window**

- ❖ Click "Update Driver..."

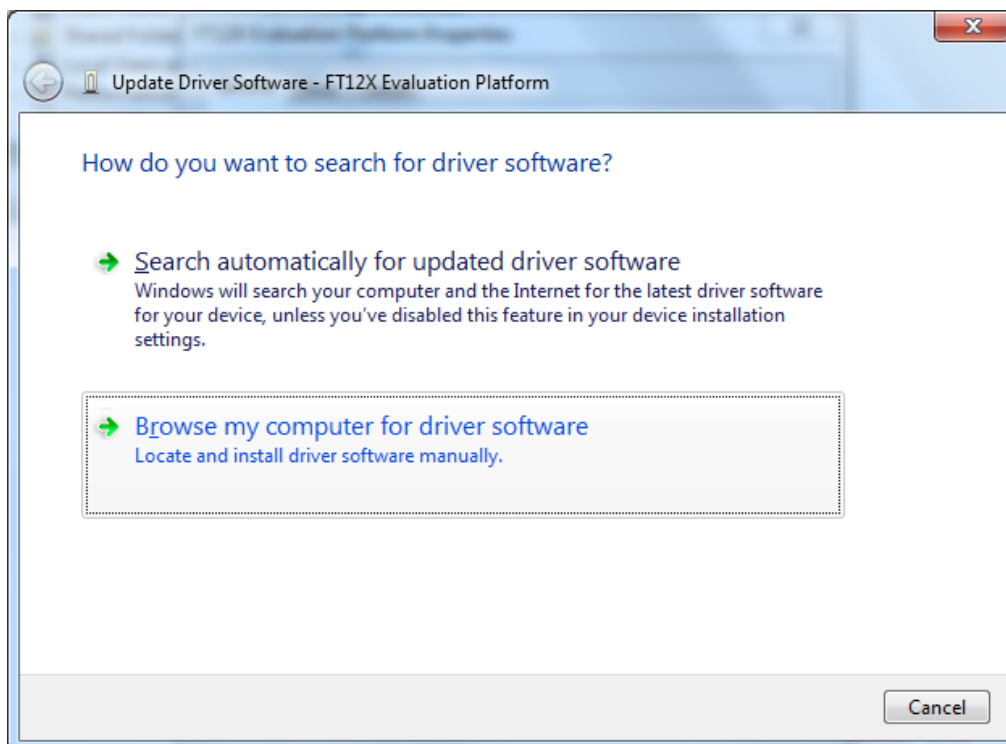


**Figure 4-6 Update driver window**

- ❖ Click "Browse my computer for driver software"

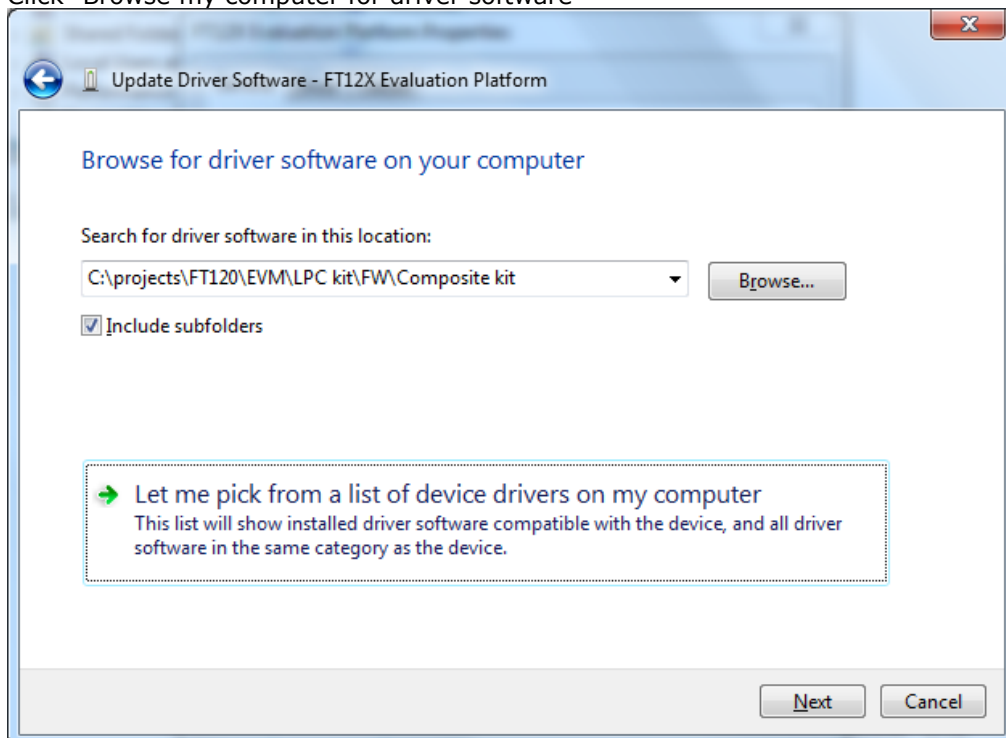


**Figure 4-7 Update driver window**

- ❖ Click "Let me pick from a list of device drivers on my computer"

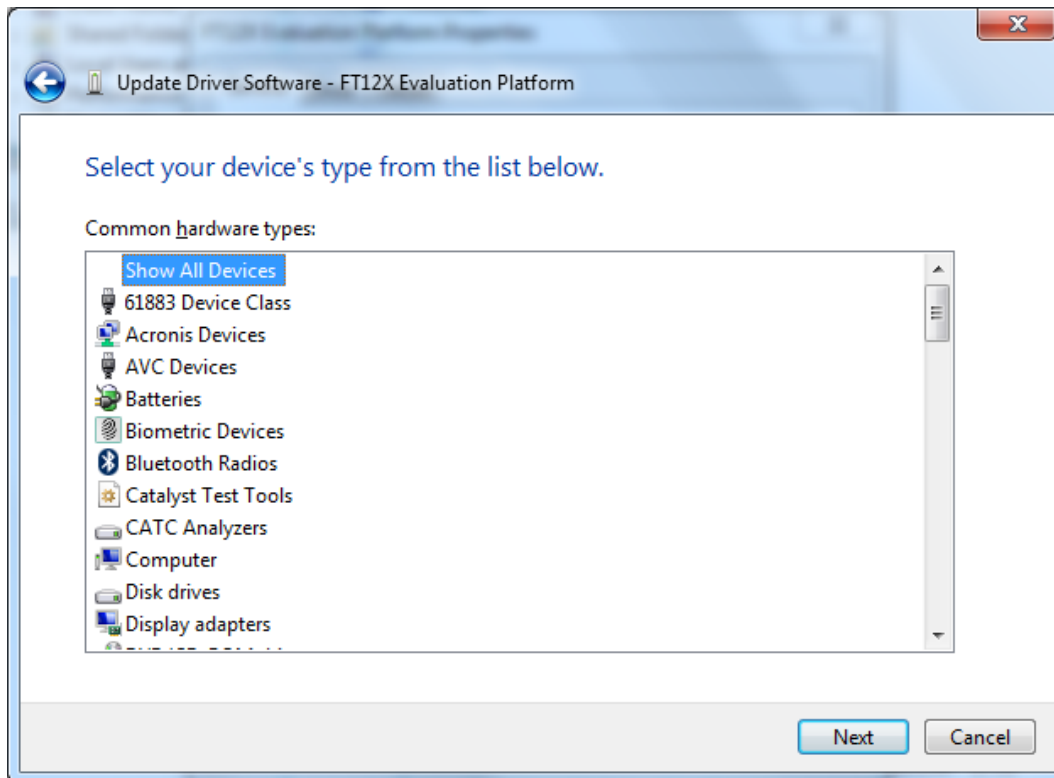


**Figure 4-8 Update driver window**

- ❖ Click "Next"

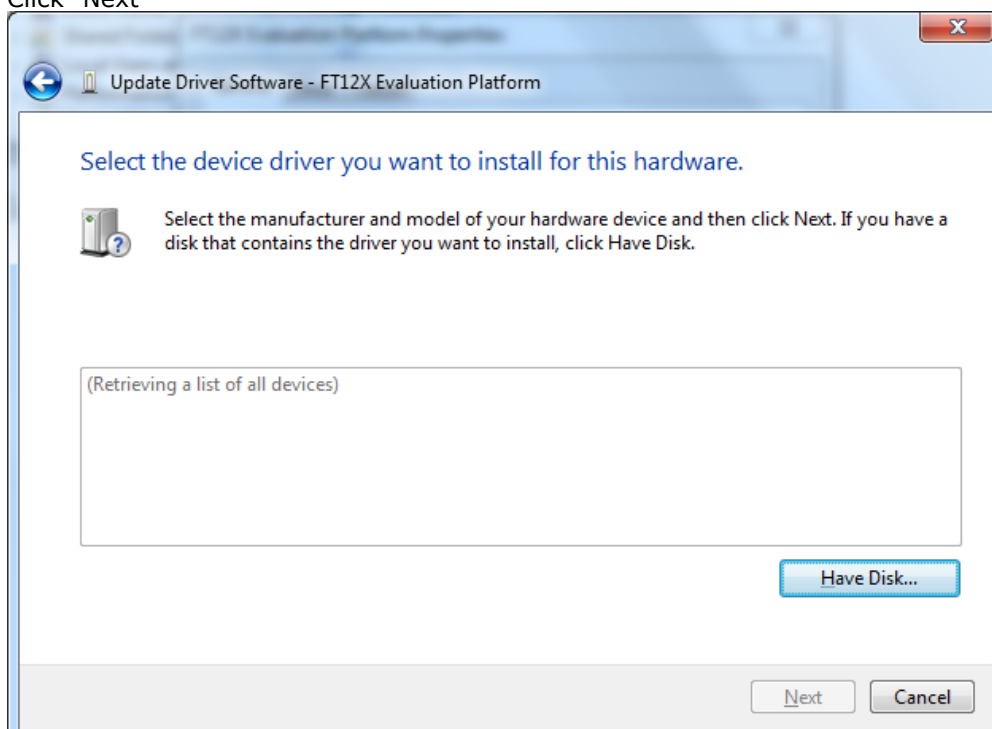


**Figure 4-9 Update driver window**

- ❖ Click "Have Disk..."

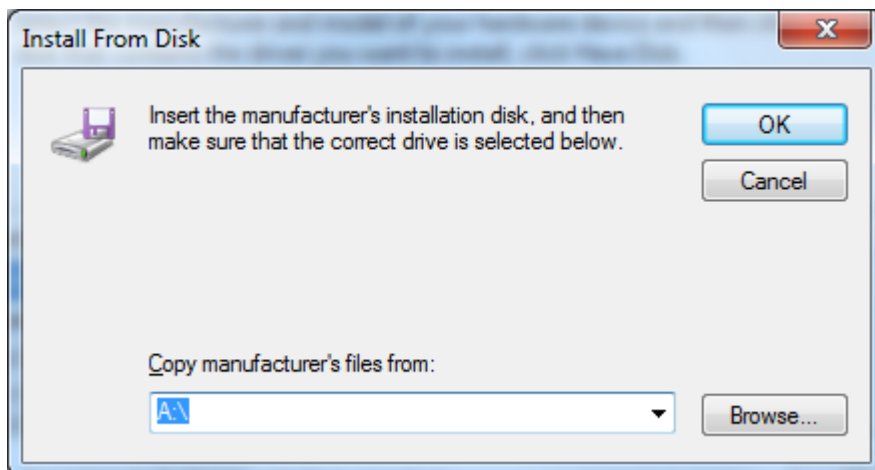

**Figure 4-10 Install from disk window**

- ❖ Click "Browse...", select the downloaded "FT12x.inf" file to load "usbser.sys" driver. Click "OK" and then "Next".
- ❖ The driver installation started. When completed, the below window is displayed. A COM port number (COM25 in this example) will be assigned to the FT12x CDC interface. Write down this port number as it will be required by the serial loopback test utility. Click "Close" to finish the driver installation.

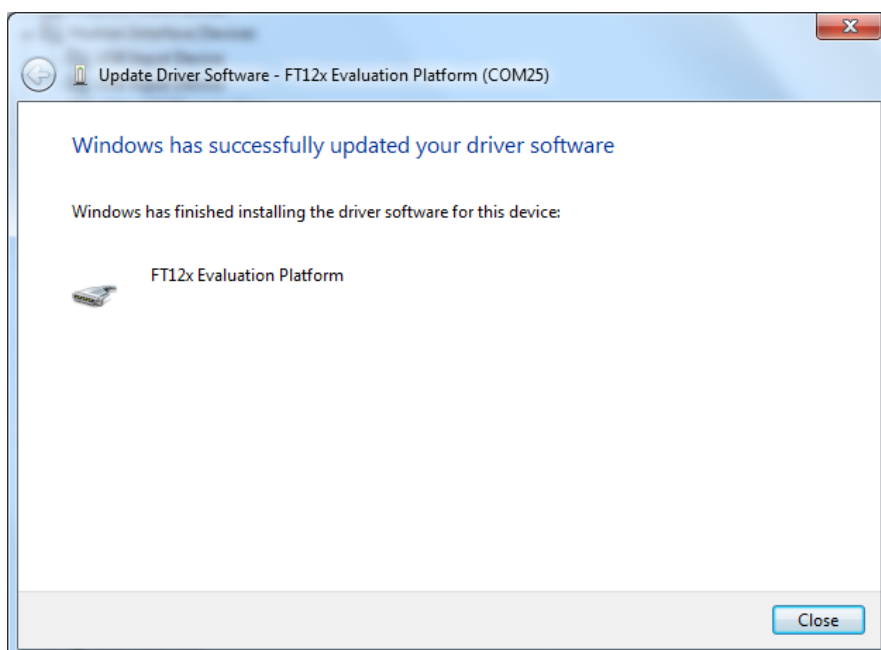

**Figure 4-11 Update driver complete window**

## 5 Running demo tests

The UMFT12XE is pre-loaded with a default firmware. The firmware can auto-detect the daughter card type, and the LPC1114 MCU can communicate to the FT12 series with either SPI(for FT121) or parallel (for FT120 or FT122) protocol. For bus-powered configuration (default setting), the FT12x evaluation kit will power on when the USB cable is plugged in. LED D4 (red) on the main board will be ON, indicating the 3.3V power is ready. The D2 and D3 LEDs (red) will be flashing, indicating the firmware is up and running. For UMFT120DC and UMFT122DC, the LED D1 (green) on the daughter card will be turned ON upon successful enumeration, and blinking when there are USB transactions.

The default firmware supports USB CDC class driver. Upon enumeration a virtual COM port is present on the PC. User can run serial port applications such as serial loopback test, teraterm, hyperterm etc.

### 5.1 Serial Loopback test

Follow the steps below to run the serial loopback test over the FT12x USB serial port interface.

- Install the serial loopback test utility. Download v1.10 of the serial loopback test utility at [http://www.madsencircuits.com/serial\\_loopback.html](http://www.madsencircuits.com/serial_loopback.html).
- Start the loopback test by clicking All Programs -> Serial Loopback Test -> Serial Loopback Test.
- Select the Serial Port number from the pull-down list. In this example COM25 is selected.
- Click "Start Test" button. The utility will send data to the FT12x USB serial port, receive back from the same serial port, and perform the comparison of the received data from the sent one. The FT12x Evaluation kit firmware will route all the received data back to the PC internally (the firmware will store the data from bulk OUT endpoint, and send it back when the bulk IN token comes).

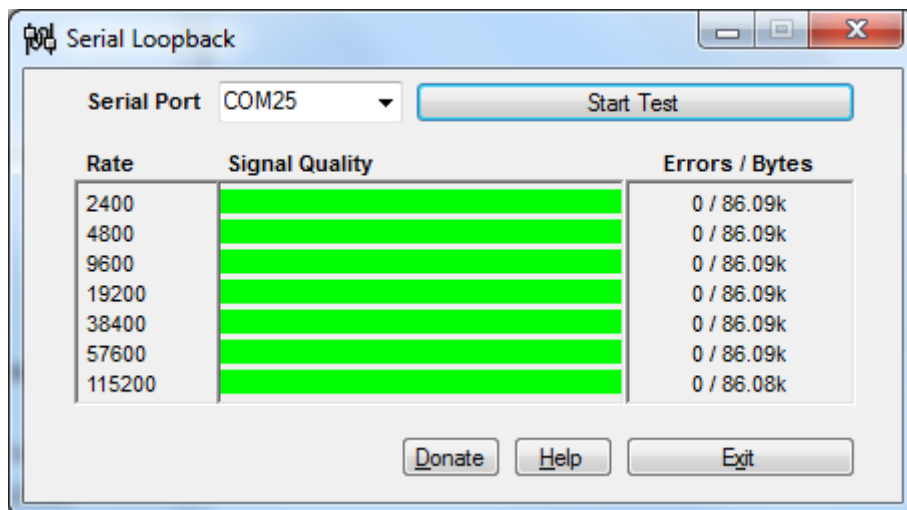


Figure 5-1 Serial Loopback Test

### 5.2 USB Charger test

The FT121 and FT122 supports USB Charger (Wall Charger or Dedicated Charging Port) detection. The USB Charger shall have micro-B plug with its D+/D- pins shorted.

Follow the steps below to check the USB Charger detection function:

- Connect the USB Charger to the micro-B USB connector of UMFT121DC or UMFT122DC module.
- Plug the USB Charger to the Wall power socket and switch on the power.
- The yellow LED (D1 on the UMFT12XEV main board) will be turned ON. This indicates a USB wall charger or dedicated charging port is connected.

## 6 Board Circuit Schematics and BOMs

### 6.1 UMFT12XEV Schematic and BOM

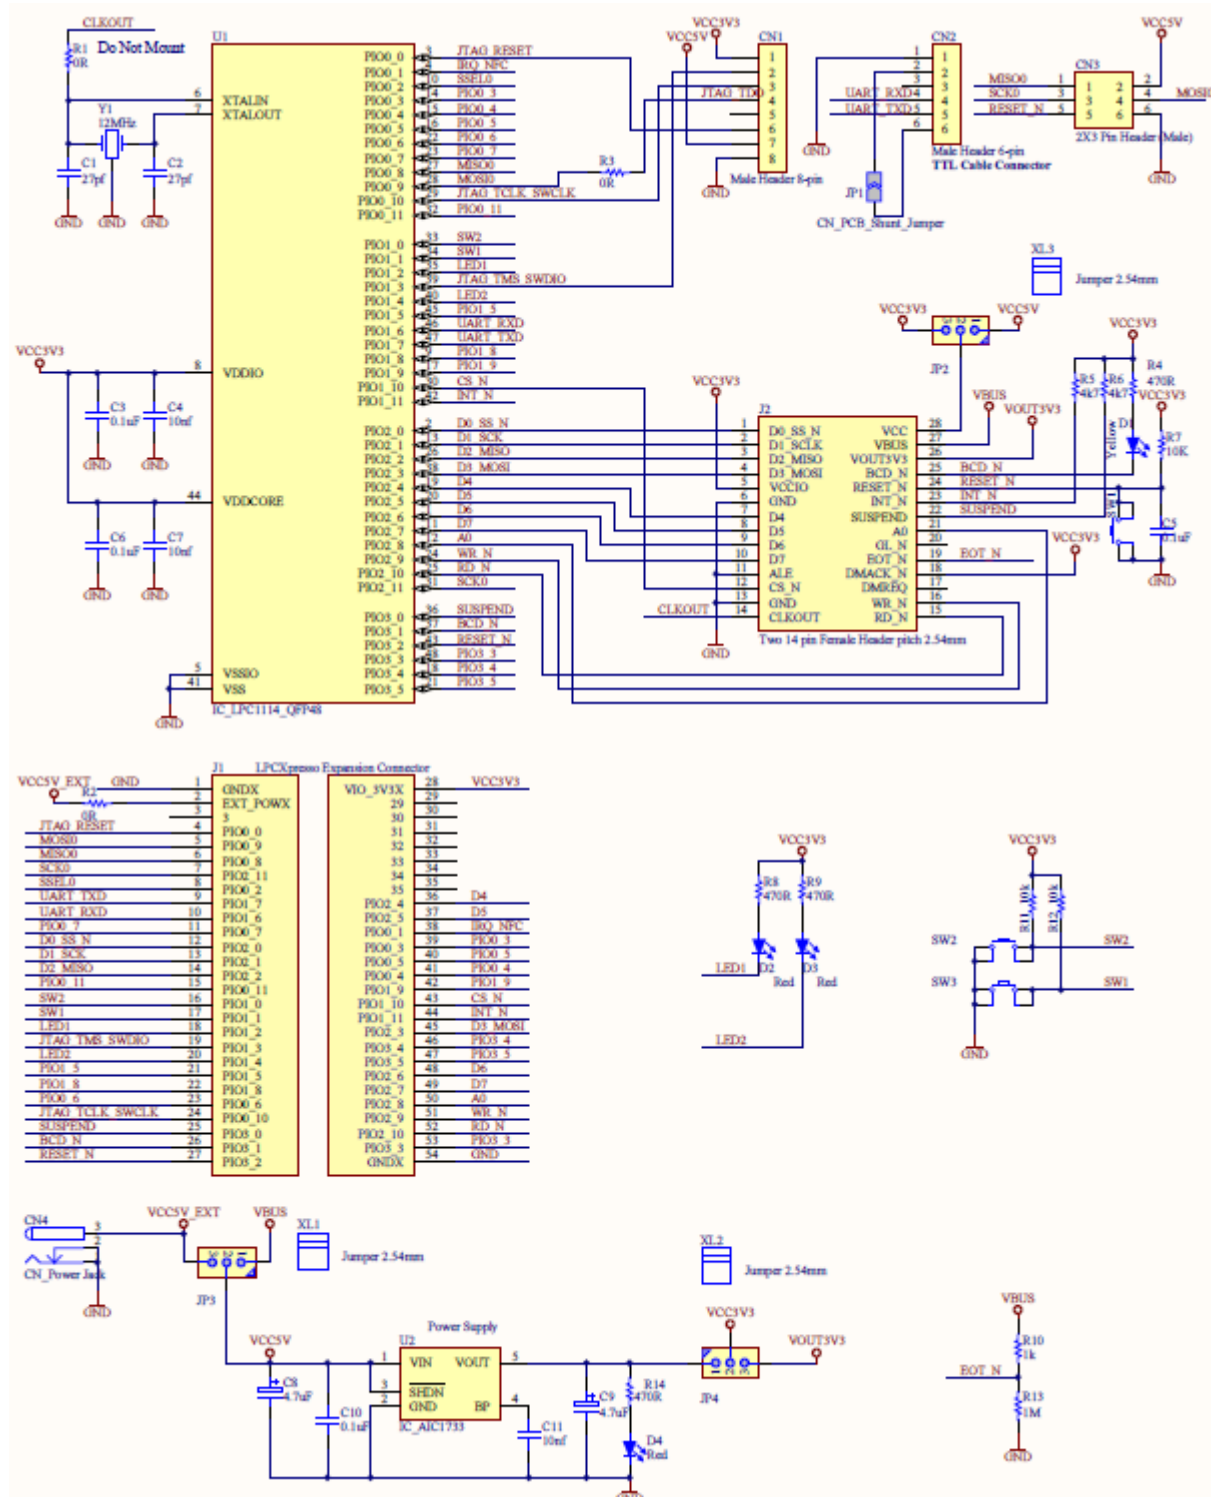



Figure 6-1 UMFT12XEV Circuit Schematic

| #  | Designator      | Comment                               | Description                                          | ManufacturerPartNo               | Manufacturer           |
|----|-----------------|---------------------------------------|------------------------------------------------------|----------------------------------|------------------------|
| 1  | CN4             | Power Jack                            | Low Voltage Power Supply Connector                   | PJ-002A                          | CUI Inc                |
| 2  | XL1, XL2, XL3   | Jumper 2.54mm                         | 2.54mm Shorting Jumper                               | 969102-0000-DA                   | 3M                     |
| 3  | R2, R3          | 0R                                    | Resistor                                             | RC0603JR-070RL                   | Yageo                  |
| 4  | R10             | 1k                                    | Resistor                                             | RC0603JR-071KL                   | Yageo                  |
| 5  | R13             | 1M                                    | Resistor                                             | RC0603FR-071ML                   | Yageo                  |
| 6  | R5, R6          | 4k7                                   | Resistor                                             | RC0603FR-074K7L                  | Yageo                  |
| 7  | R7, R11, R12    | 10K                                   | Resistor                                             | RC0603FR-0710KL                  | Yageo                  |
| 8  | R4, R8, R9, R14 | 470R                                  | Resistor                                             | RC0603FR-07470RL                 | Yageo                  |
| 9  | C4, C7, C11     | 10nf                                  | CAP CER 10000PF 50V 10% X7R 0603                     | C0603C103K5RACTU                 | Kemet                  |
| 10 | C3, C5, C6, C10 | 0.1uF                                 | Capacitor bipolar                                    | 06035C104KAT2A, C0603C104K8RACTU | AVX Corporation, Kemet |
| 11 | SW1, SW2, SW3   | SW_PB_4PIN                            | Push button momentary switch                         | FSM4JH                           | TE Connectivity        |
| 12 | C1, C2          | 27pf                                  | Capacitor bipolar                                    | 06035A270JAT2A, 06035C180JAT2A   | AVX Corporation        |
| 13 | C8, C9          | 4.7uF                                 | CAP TANTALUM 4.7UF 6.3V 20% SMD                      | TAJA475M006RNJ                   | AVX Corporation        |
| 14 | 'JP2, JP3, JP4  | 'SIP-3                                | '3 contact jumper                                    | 'TSW-103-07-T-S                  | 'Samtec Inc            |
| 15 | U1              | IC_LPC1114_QFP48                      |                                                      | LPC1114FBD48/302,1               | NXP Semiconductors     |
| 16 | CN2             | Male Header 6-pin                     | CONN HEADER 6POS .100 STR 15AU                       | 68000-206HLF                     | FCI                    |
| 17 | D2, D3, D4      | Red                                   | Typical LED diode                                    | APT2012EC                        | Kingbright Corp        |
| 18 | D1              | Yellow                                | Typical LED diode                                    | APT2012SYCK                      | Kingbright Corp        |
| 19 | J2              | Two 14 pin Female Header pitch 2.54mm | Board to Board / Mezzanine Connectors RECEPTACLE 14P | 68685-314LF                      | FCI                    |
| 20 | U2              | IC_AIC1733                            | 500mA, Low Dropout Linear Regulator with Shutdown    | AIC1733-33PV                     | AIC                    |
| 21 | CN3             | 2X3 Pin Header (Male)                 | CONN HEADER 6POS .100" DUAL TIN                      | TSW-103-07-T-D                   | Samtec Inc             |
| 22 | CN1             | Male Header 8-pin                     | CONN HEADER 8POS .100" SNGL TIN                      | TSW-108-07-T-S                   | Samtec Inc             |
| 23 | Y1              | 12MHz                                 |                                                      | ECS-120-18-4XEN                  | ECS Inc                |

**Table 6-1 UMFT12XEV BOM list**

Note: J1 not mounted.


## 6.2 UMFT120DC Schematic and BOM

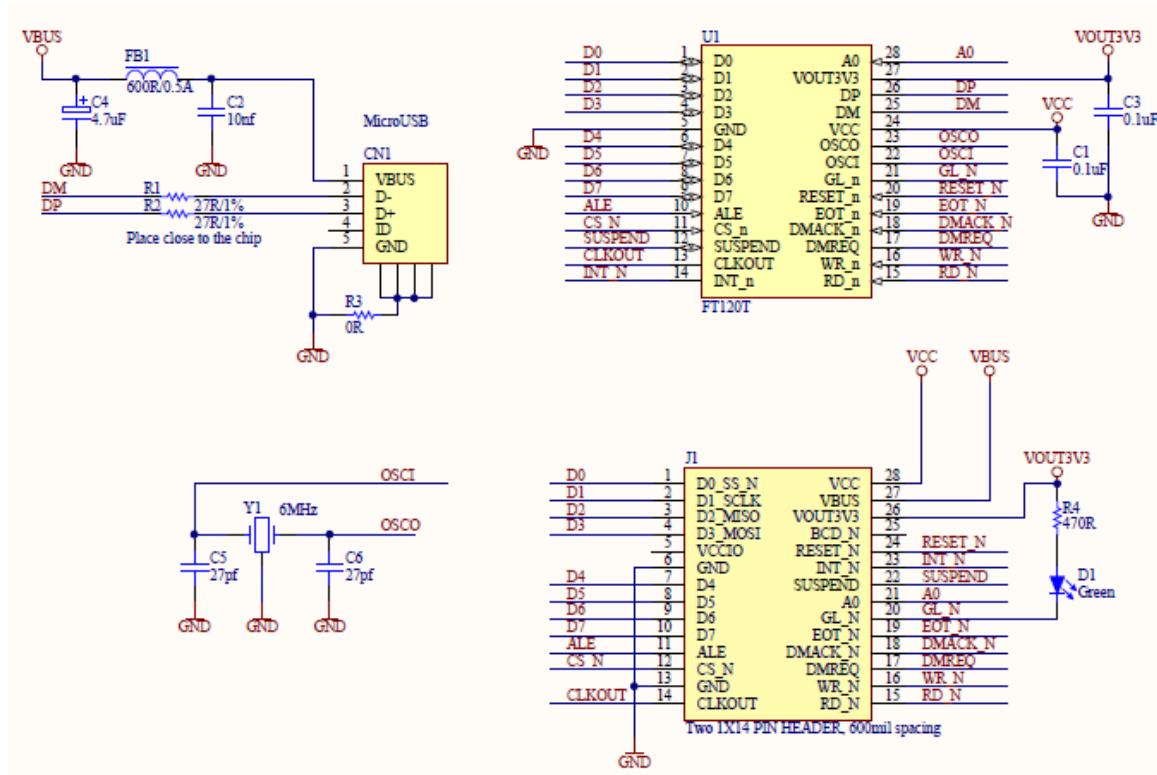
**Figure 6-2 UMFT120DC Circuit Schematic**

| #  | Designator | Comment                             | Description                                                   | ManufacturerPartNo | Manufacturer    |
|----|------------|-------------------------------------|---------------------------------------------------------------|--------------------|-----------------|
| 1  | U1         | FT120T                              | FT120 USB device controller with parallel interface, TSSOP-28 | FT120T             | FTDI Chip       |
| 2  | CN1        | MicroUSB                            | CONN RCPT STD MICRO USB TYPE B                                | 10104110-0001LF    | FCI             |
| 3  | R1, R2     | 27R/1%                              | Resistor                                                      | RC0603FR-0727RL    | Yageo           |
| 4  | R3         | 0R                                  | Resistor                                                      | RC0603FR-07000RL   | Yageo           |
| 5  | R4         | 470R                                | Resistor                                                      | RC0603FR-07470RL   | Yageo           |
| 6  | C2         | 10nf                                | CAP CER 10000PF 50V 10% X7R 0603                              | C0603C103K5RACTU   | Kemet           |
| 7  | FB1        | 600R/0.5A                           | Chip Ferrite Bead 0805                                        | MPZ1608S601A       | TDK Corporation |
| 8  | C5, C6     | 27pf                                | Capacitor bipolar                                             | 06035A270JAT2A     | AVX Corporation |
| 9  | C4         | 4.7uF                               | Polarized Capacitor                                           | TAJA475K016RNJ     | AVX Corporation |
| 10 | C1, C3     | 0.1uF                               | Capacitor bipolar                                             | 06035C104KAT2A     | AVX Corporation |
| 11 | D1         | Green                               | Typical LED diode                                             | APT2012SGC         | Kingbright Corp |
| 12 | J1         | Two 1X14 PIN HEADER, 600mil spacing | 'Headers & Wire Housings 14P SR UNSHRD HRD .76 GOLD OVER NI   | 68000-114HLF       | FCI             |
| 13 | Y1         | 6MHz                                | 6.0MHZ CRYSTAL                                                | ECS-60-18-4XEN     | ECS Inc         |

**Table 6-2 UMFT120DC BOM list**


## 6.3 UMFT121DC Schematic and BOM

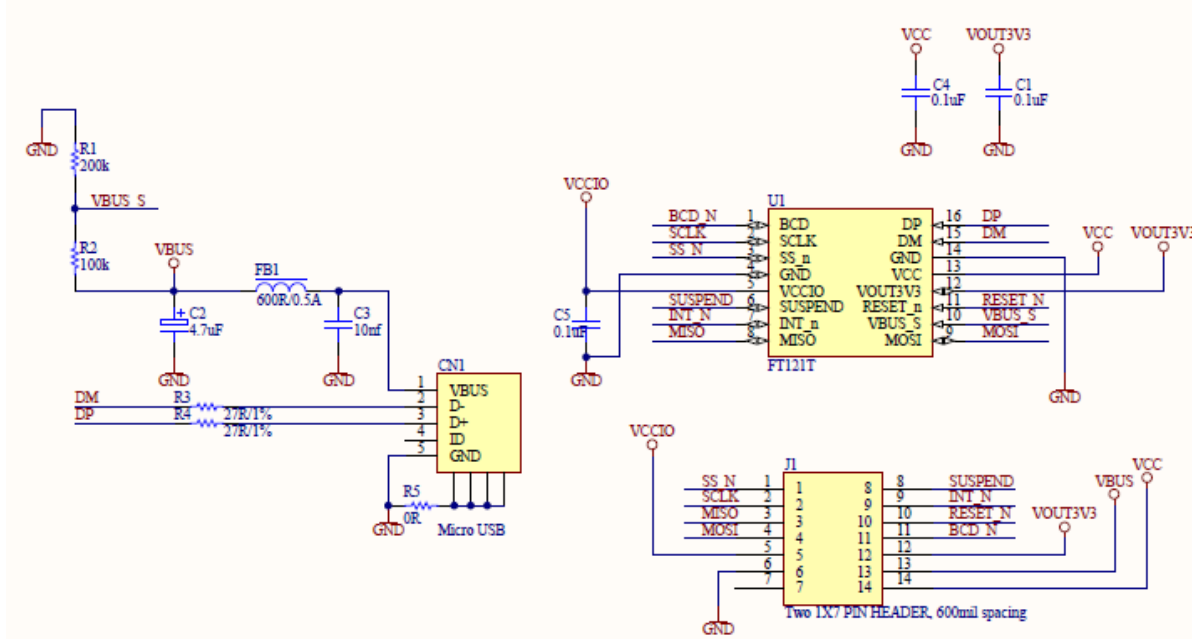
**Figure 6-3 UMFT121DC Circuit Schematic**

| #  | Designator | Comment                            | Description                                                | ManufacturerPartNo | Manufacturer    |
|----|------------|------------------------------------|------------------------------------------------------------|--------------------|-----------------|
| 1  | U1         | FT121T                             | FT121 USB device controller with SPI slave, TSSOP-16       | FT121T             | FTDI Chip       |
| 2  | CN1        | MicroUSB                           | CONN RCPT STD MICRO USB TYPE B                             | 10104110-0001LF    | FCI             |
| 3  | R3, R4     | 27R/1%                             | Resistor                                                   | RC0603FR-0727RL    | Yageo           |
| 4  | R2         | 100k                               | Resistor                                                   | RC0603JR-07100KL   | Yageo           |
| 5  | R1         | 200k                               | Resistor                                                   | RC0603JR-07200KL   | Yageo           |
| 6  | R5         | 0R                                 | Resistor                                                   | RC0603FR-07000RL   | Yageo           |
| 7  | C3         | 10nf                               | CAP CER 10000PF 50V 10% X7R 0603                           | C0603C103K5RACTU   | Kemet           |
| 8  | FB1        | 600R/0.5A                          | Chip Ferrite Bead 0805                                     | MPZ1608S601A       | TDK Corporation |
| 9  | C2         | 4.7uF                              | Polarized Capacitor                                        | TAJA475K016RNJ     | AVX Corporation |
| 10 | C1, C4, C5 | 0.1uF                              | Capacitor bipolar                                          | 06035C104KAT2A     | AVX Corporation |
| 11 | J1         | Two 1X7 PIN HEADER, 600mil spacing | 'Headers & Wire Housings 7P SR UNSHRD HRD .76 GOLD OVER NI | 68000-107HLF       | FCI             |

**Table 6-3 UMFT121DC BOM list**

## 6.4 UMFT122DC Schematic and BOM

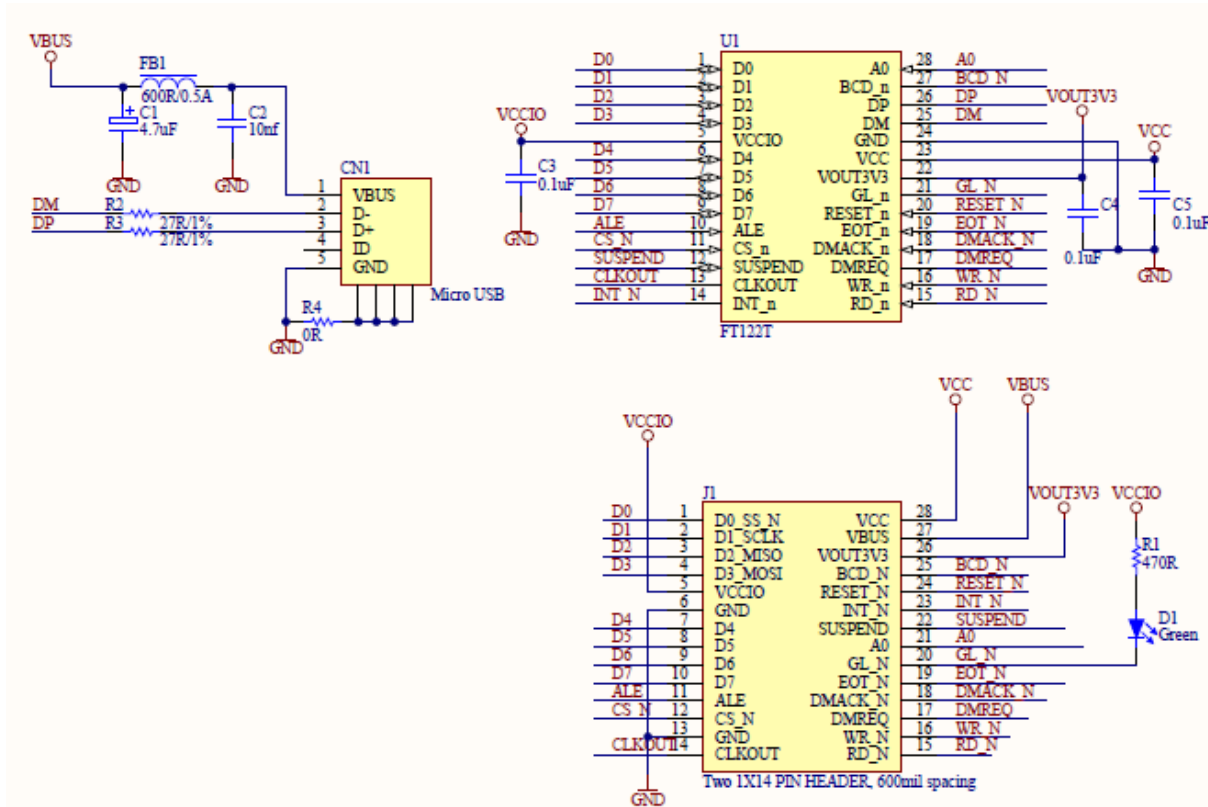
**Figure 6-4 UMFT122DC Circuit Schematic**

| #  | Designator | Comment                             | Description                                                      | ManufacturerPartNo | Manufacturer    |
|----|------------|-------------------------------------|------------------------------------------------------------------|--------------------|-----------------|
| 1  | U1         | FT122T                              | Enhanced USB device controller with parallel interface, TSSOP-28 | FT122T             | FTDI Chip       |
| 2  | CN1        | MicroUSB                            | CONN RCPT STD MICRO USB TYPE B                                   | 10104110-0001LF    | FCI             |
| 3  | R2, R3     | 27R/1%                              | Resistor                                                         | RC0603FR-0727RL    | Yageo           |
| 4  | R4         | 0R                                  | Resistor                                                         | RC0603FR-07000RL   | Yageo           |
| 5  | R1         | 470R                                | Resistor                                                         | RC0603FR-07470RL   | Yageo           |
| 6  | C2         | 10nf                                | CAP CER 10000PF 50V 10% X7R 0603                                 | C0603C103K5RACTU   | Kemet           |
| 7  | FB1        | 600R/0.5A                           | Chip Ferrite Bead 0805                                           | MPZ1608S601A       | TDK Corporation |
| 8  | C1         | 4.7uF                               | Polarized Capacitor                                              | TAJA475K016RNJ     | AVX Corporation |
| 9  | C3, C4, C5 | 0.1uF                               | Capacitor bipolar                                                | 06035C104KAT2A     | AVX Corporation |
| 10 | D1         | Green                               | Typical LED diode                                                | APT2012SGC         | Kingbright Corp |
| 11 | J1         | Two 1X14 PIN HEADER, 600mil spacing | 'Headers & Wire Housings 14P SR UNSHRD HRD .76 GOLD OVER NI      | 68000-114HLF       | FCI             |

**Table 6-4 UMFT122DC BOM list**


## 7 Firmware Upgrade Process

The firmware for the on-board microcontroller LPC1114 can be upgraded through either UART (ISP mode) or JTAG/SWD interface. This section will describe the steps on how to download the firmware through ISP mode. For the usage of JTAG/SWD interface with LPC-Link debug module, please refer to NXP LPCXpresso homepage at <http://ics.nxp.com/lpcxpresso/>. Note that the LPCXpresso is an integrated development platform for firmware development, debug and download for NXP's ARM-based LPC microcontrollers. The LPCXpresso development tool chain can be downloaded from <http://lpcxpresso.code-red-tech.com/LPCXpresso/>.

Check the FTDI website for the available pre-compiled firmware for FT12x Evaluation Kit (<http://www.ftdichip.com/Firmware/Precompiled.htm>).

### 7.1 Put LPC1114 microcontroller in ISP mode


- Use a jumper wire to short pad 38 of J1 to pad 1 or pad 54 of J1. This is to connect the LPC1114 P0\_1 pin to GND so that LPC1114 will enter ISP mode after power on or reset.
- Connect the board to the test PC via the micro-USB cable. The USB-A plug shall be inserted in the PC USB port, while the micro-USB-B plug shall be connected to the daughter card USB port. The board will be powered on with the LPC1114 entering ISP mode. Note for self power configuration the daughter card is not required to be present for firmware upgrading. For bus power configuration the daughter card is required as the power comes from the daughter card USB port.

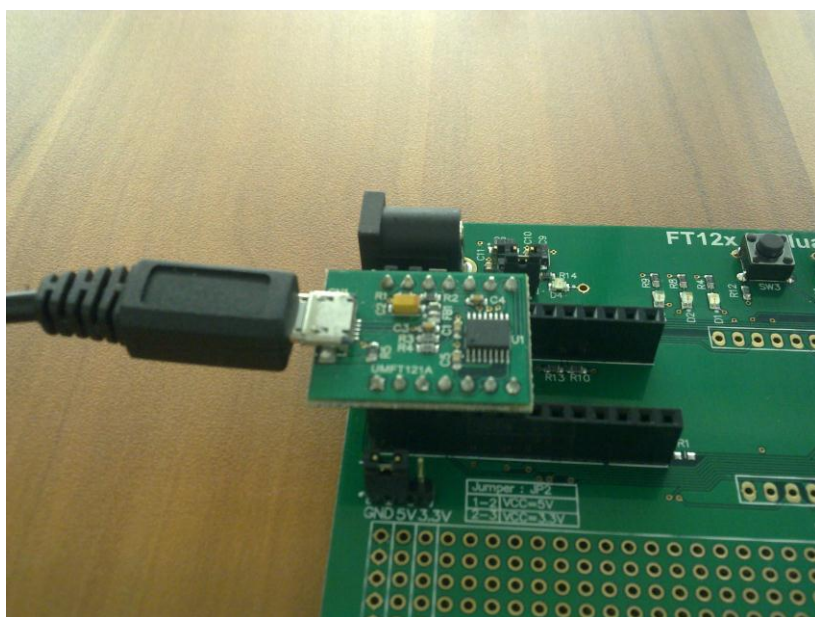

**Figure 7-1 Plug in micro USB cable**

### 7.2 Connect the TTL-232R-3V3 cable


- Connect the board to the test PC using a TTL-232R-3V3 cable. Plug the 6-pin socket of the cable into the CN2 pin header. Please note the direction of the cable, the black wire (GND) should be plugged in to pin 1 of CN2.
- Connect the other end of the TTL-232R-3V3 cable to a USB port of the test PC

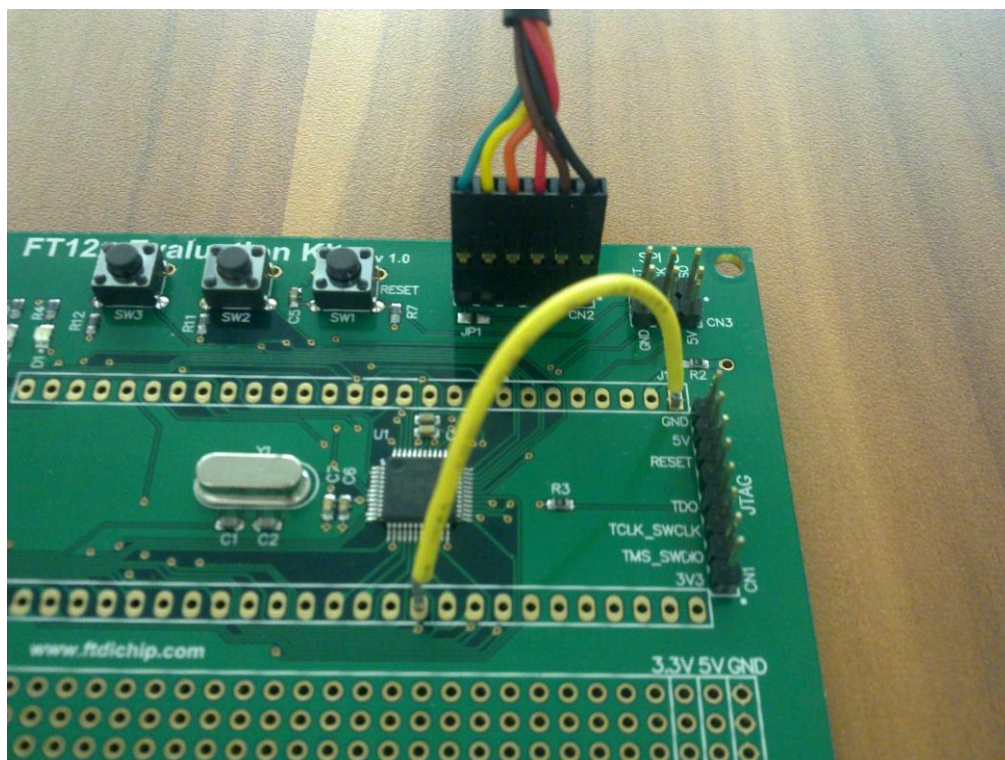

**Figure 7-2 Connect TTL-232R-3V3 UART cable**

## 7.3 Upgrade firmware

- Download and install the driver for the FTDI TTL-232R-3V3 cable. Refer to the cable datasheet for details ( [http://www.ftdichip.com/Support/Documents/DataSheets/Cables/DS\\_TTL-232R\\_CABLES.pdf](http://www.ftdichip.com/Support/Documents/DataSheets/Cables/DS_TTL-232R_CABLES.pdf) )
- Download the Flash Magic firmware programming utility from <http://www.flashmagictool.com>.
- Install the utility on test PC by running "FlashMagic.exe"
- Once installation is complete, launch the utility from Start -> All Programs -> Flash Magic -> Flash Magic.
- Configure the tool by the following steps:
  - o Click "Select Device...", choose LPC1114/302 from the popup window and click OK
  - o COM port: select the COM port number associated with the TTL-232R-3V3 cable. The COM port number can be found in the "Device Manager -> Ports (COM & LPT) -> USB Serial Port (COM3)". Note on different PC this number can be changed.
  - o Interface: select "FTDI USB-Dongle" from the pull-down list.
  - o Oscillator (MHz): key in '12'.
  - o Tick the box "Erase blocks used by Hex File".
  - o Select Hex File: browse to select the desired firmware binary hex file (ie "LPC1114-FT12x.hex").
  - o Tick the box "Verify after programming"
  - o The tool is configured ready for firmware downloading.
- Click "Start" button and the firmware download will begin. Typically the download takes about 2 minutes. Once completed, a 'finished' message will be displayed in the status bar (bottom side), and the green download progress bar will reach 100%. Note the 'finished' message may disappear after a while. If no message is displayed in the status bar after a few minutes, this also indicates that the previous download is completed.
- Power off the board. Remove the ISP jumper wire and then power on the board again. The new firmware will take effect.

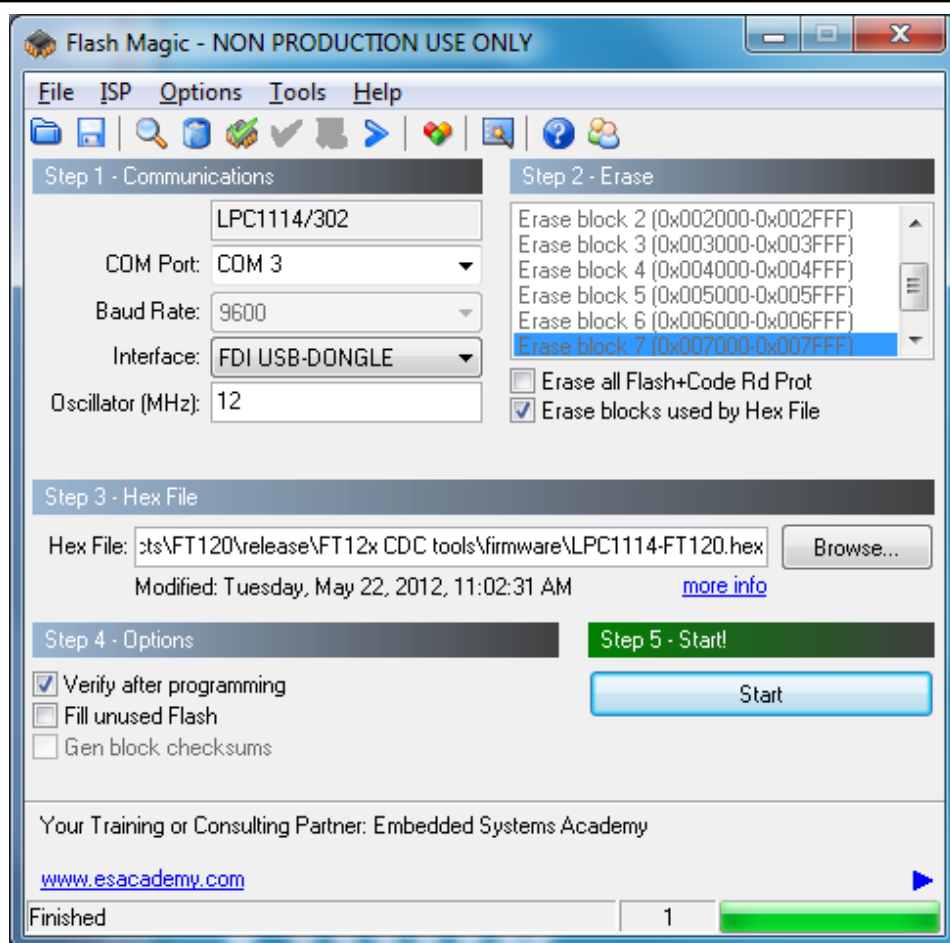

**Figure 7-3 Flash Magic configuration**

## 8 Environmental Compliances

The UMFT12XEV main board and UMFT12XDC daughter boards exclusively use lead free components, and are fully compliant with European Union directive 2002/95/EC.

## 9 Contact Information

### Head Office – Glasgow, UK

Future Technology Devices International Limited  
Unit 1, 2 Seaward Place, Centurion Business Park  
Glasgow G41 1HH  
United Kingdom  
Tel: +44 (0) 141 429 2777  
Fax: +44 (0) 141 429 2758

E-mail (Sales) [sales1@ftdichip.com](mailto:sales1@ftdichip.com)  
E-mail (Support) [support1@ftdichip.com](mailto:support1@ftdichip.com)  
E-mail (General Enquiries) [admin1@ftdichip.com](mailto:admin1@ftdichip.com)

### Branch Office – Hillsboro, Oregon, USA

Future Technology Devices International Limited (USA)  
7130 SW Fir Loop  
Tigard, OR 97223  
USA  
Tel: +1 (503) 547 0988  
Fax: +1 (503) 547 0987

E-Mail (Sales) [us.sales@ftdichip.com](mailto:us.sales@ftdichip.com)  
E-Mail (Support) [us.support@ftdichip.com](mailto:us.support@ftdichip.com)  
E-Mail (General Enquiries) [us.admin@ftdichip.com](mailto:us.admin@ftdichip.com)

### Branch Office – Taipei, Taiwan

Future Technology Devices International Limited (Taiwan)  
2F, No. 516, Sec. 1, NeiHu Road  
Taipei 114  
Taiwan, R.O.C.  
Tel: +886 (0) 2 8791 3570  
Fax: +886 (0) 2 8791 3576

E-mail (Sales) [tw.sales1@ftdichip.com](mailto:tw.sales1@ftdichip.com)  
E-mail (Support) [tw.support1@ftdichip.com](mailto:tw.support1@ftdichip.com)  
E-mail (General Enquiries) [tw.admin1@ftdichip.com](mailto:tw.admin1@ftdichip.com)

### Branch Office – Shanghai, China

Future Technology Devices International Limited (China)  
Room 1103, No. 666 West Huaihai Road,  
Shanghai, 200052  
China  
Tel: +86 (0)21 6235 1596  
Fax: +86 (0)21 6235 1595

E-mail (Sales) [cn.sales@ftdichip.com](mailto:cn.sales@ftdichip.com)  
E-mail (Support) [cn.support@ftdichip.com](mailto:cn.support@ftdichip.com)  
E-mail (General Enquiries) [cn.admin@ftdichip.com](mailto:cn.admin@ftdichip.com)

### Web Site

<http://ftdichip.com>

### Distributor and Sales Representatives

Please visit the Sales Network page of the [FTDI Web site](#) for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any Future Technology Devices International Ltd (FTDI) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested FTDI devices and other materials) is provided for reference only. While FTDI has taken care to assure it is accurate, this information is subject to customer confirmation, and FTDI disclaims all liability for system designs and for any applications assistance provided by FTDI. Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold harmless FTDI from any and all damages, claims, suits or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder. Future Technology Devices International Ltd, Unit 1, 2 Seaward Place, Centurion Business Park, Glasgow G41 1HH, United Kingdom. Scotland Registered Company Number: SC136640

## Appendix A - List of Figures and Tables

### List of Figures

|                                                                   |    |
|-------------------------------------------------------------------|----|
| Figure 3-1 UMFT12XEV main board .....                             | 4  |
| Figure 3-2 UMFT120DC daughter board .....                         | 4  |
| Figure 3-3 UMFT121DC daughter board .....                         | 6  |
| Figure 3-4 UMFT122DC daughter board .....                         | 7  |
| Figure 3-5 Micro-B to Standard-A cable .....                      | 8  |
| Figure 3-6 TTL-232R-3V3 USB cable .....                           | 8  |
| Figure 3-7 LPC-Link debugger module .....                         | 9  |
| Figure 4-1 Plug the daughter board module to the main board ..... | 10 |
| Figure 4-2 JP2 default setting .....                              | 11 |
| Figure 4-3 JP3 and JP4 default setting .....                      | 11 |
| Figure 4-4 Device manager window .....                            | 12 |
| Figure 4-5 Drive property window .....                            | 12 |
| Figure 4-6 Update driver window .....                             | 13 |
| Figure 4-7 Update driver window .....                             | 13 |
| Figure 4-8 Update driver window .....                             | 14 |
| Figure 4-9 Update driver window .....                             | 14 |
| Figure 4-10 Install from disk window .....                        | 15 |
| Figure 5-1 Serial Loopback Test .....                             | 16 |
| Figure 6-1 UMFT12XEV Circuit Schematic .....                      | 18 |
| Figure 6-2 UMFT120DC Circuit Schematic .....                      | 20 |
| Figure 6-3 UMFT121DC Circuit Schematic .....                      | 21 |
| Figure 6-4 UMFT122DC Circuit Schematic .....                      | 22 |
| Figure 7-1 Plug in micro USB cable .....                          | 24 |
| Figure 7-2 Connect TTL-232R-3V3 UART cable .....                  | 24 |
| Figure 7-3 Flash Magic configuration .....                        | 25 |

### List of Tables

|                                                  |    |
|--------------------------------------------------|----|
| Table 2-1 Ordering information .....             | 1  |
| Table 3-1 UMFT120DC J1 Pin Out Description ..... | 5  |
| Table 3-2 UMFT121DC J1 Pin Out Description ..... | 6  |
| Table 3-3 UMFT122DC J1 Pin Out Description ..... | 8  |
| Table 4-1 Default setting of the jumpers .....   | 10 |
| Table 6-1 UMFT12XEV BOM list .....               | 19 |
| Table 6-2 UMFT120DC BOM list .....               | 20 |



|                                           |           |
|-------------------------------------------|-----------|
| <b>Table 6-3 UMFT121DC BOM list .....</b> | <b>21</b> |
| <b>Table 6-4 UMFT122DC BOM list .....</b> | <b>22</b> |
| <b>Table A-1 Abbreviations.....</b>       | <b>29</b> |
| <b>Table A-2 References .....</b>         | <b>29</b> |

## Appendix B – Abbreviations and References

| Term | Description                                 |
|------|---------------------------------------------|
| CDC  | Communications Device Class                 |
| DUT  | Device Under Test                           |
| GPIO | General Purpose Input/Output                |
| HID  | Human Interface Device                      |
| ISP  | In System Program                           |
| JTAG | Joint Test Action Group                     |
| LED  | Light Emitting Diode                        |
| MCU  | Micro Controller Unit                       |
| OS   | Operating System                            |
| PCB  | Printed Circuit Board                       |
| SPI  | Serial Parallel Interface                   |
| SWD  | Serial Wire Debug                           |
| UART | Universal Asynchronous Receiver/Transmitter |
| USB  | Universal Serial Bus                        |
| VCP  | Virtual COM Port                            |

**Table A-1 Abbreviations**

| Title                        | Description                                                                                                                                                                                                                                                 |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FT_000646                    | FT120 IC data sheet                                                                                                                                                                                                                                         |
| FT_000648                    | FT121 IC data sheet                                                                                                                                                                                                                                         |
| FT_000647                    | FT122 IC data sheet                                                                                                                                                                                                                                         |
| AN_209                       | PDIUSBD12 to FT120 Migration Guide                                                                                                                                                                                                                          |
| AN_225                       | FT12x firmware programming guide                                                                                                                                                                                                                            |
| TTL-232R-3V3 USB cable       | USB to UART converter cable. Refer to <a href="http://www.ftdichip.com/Products/Cables/USBTTLSerial.htm">http://www.ftdichip.com/Products/Cables/USBTTLSerial.htm</a>                                                                                       |
| Serial Loopback test utility | <a href="http://www.madsencircuits.com/serial_loopback.html">http://www.madsencircuits.com/serial_loopback.html</a>                                                                                                                                         |
| Flash Magic                  | LPC microcontroller firmware programming tool. Refer to <a href="http://www.flashmagictool.com">http://www.flashmagictool.com</a>                                                                                                                           |
| LPCXpresso                   | LPC microcontroller integrated development platform. Refer to <a href="http://ics.nxp.com/lpcxpresso/">http://ics.nxp.com/lpcxpresso/</a> and <a href="http://lpcxpresso.code-red-tech.com/LPCXpresso/">http://lpcxpresso.code-red-tech.com/LPCXpresso/</a> |

**Table A-2 References**

## Appendix C - Revision History

Document Title: DS\_UMFT12xA FT12 Series Evaluation Kit datasheet  
Document Reference No.: FT\_000728  
Clearance No.: FTDI#314  
Product Page: <http://www.ftdichip.com/Products/Modules/DevelopmentModules.htm>  
Document Feedback: [Send Feedback](#)

**Version 1.0** 1.0 Created

03/09/2012

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: [org@lifeelectronics.ru](mailto:org@lifeelectronics.ru)

[www.lifeelectronics.ru](http://www.lifeelectronics.ru)