

ZL9006M

Digital DC/DC PMBus 6A Power Module

FN7959
Rev 2.00
March 16, 2016

The **ZL9006M** is a 6A adjustable output, step-down synchronous PMBus-compliant digital power supply. Included in the module is a high-performance digital PWM controller, power MOSFETs, an inductor, and all the passive components required for a highly integrated DC/DC power solution. This power module has built-in auto compensation algorithms, which eliminates the need for manual compensation design work. The ZL9006M operates over a wide input voltage range and supports an output voltage range of 0.6V to 3.6V, which can be set by external resistors or via PMBus. Only bulk input and output capacitors are needed to finish the design. The output voltage can be precisely regulated to as low as 0.6V with $\pm 1\%$ output voltage regulation over line, load and temperature variations.

The ZL9006M functions as a switch mode power supply with added benefits of auto compensation, programmable power management features, parametric monitoring, and status reporting capabilities.

The ZL9006M is packaged in a thermally enhanced, compact (17.2mmx11.45mm) and low profile (2.5mm) overmolded High-Density Array (HDA) package module suitable for automated assembly by standard surface mount equipment. The ZL9006M is RoHS compliant.

Figure 1 represents a typical implementation of the ZL9006M. For PMBus operation, it is recommended to tie the Enable pin (EN) to SGND.

Features

- Complete digital switch mode power supply
- Auto compensating PID filter
- $\pm 1\%$ output voltage accuracy
- External synchronization
- Overcurrent/undercurrent protection
- Output voltage tracking
- Phase interleaving
- Programmable sequencing (delay and ramp time)
- Snapshot™ parametric capture
- PMBus compliant

Applications

- Server, telecom, and datacom
- Industrial and medical equipment
- General purpose point of load


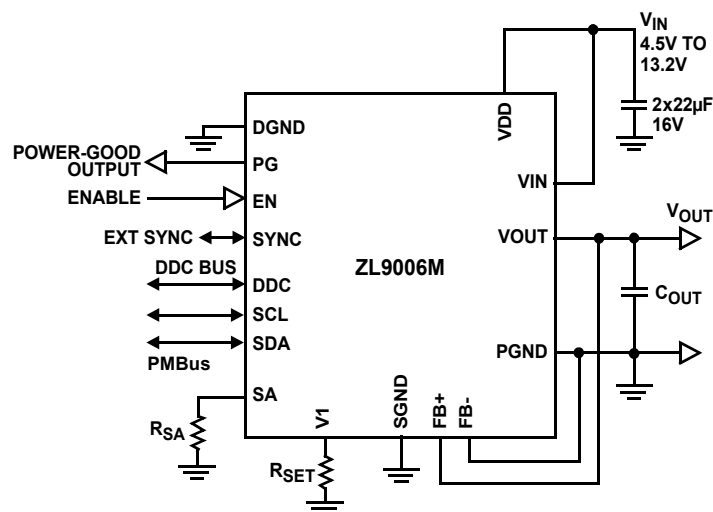


FIGURE 1. TYPICAL APPLICATION CIRCUIT

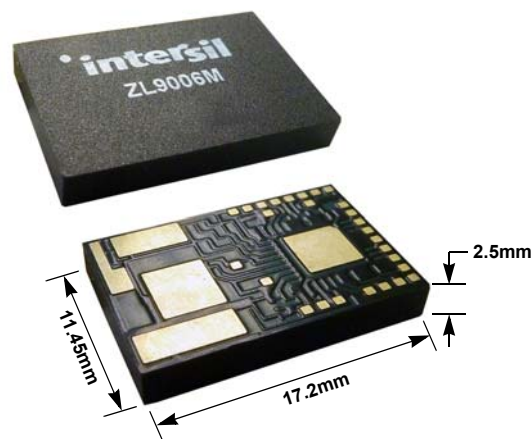


*Patent pending package

FIGURE 2. SMALL FOOTPRINT PACKAGE WITH LOW PROFILE AT 2.5mm

Table of Contents

| | | | |
|--|-----------|--|-----------|
| Pin Configuration | 3 | Firmware Revision History | 64 |
| Pin Descriptions | 3 | Revision History | 65 |
| Ordering Information | 4 | About Intersil | 65 |
| Pinout Internal Circuit | 5 | Package Outline Drawing | 66 |
| Absolute Maximum Ratings | 6 | | |
| Thermal Information | 6 | | |
| Recommended Operating Conditions | 6 | | |
| Electrical Specifications | 6 | | |
| Typical Performance Curves | 9 | | |
| Derating and Power Loss Curves | 11 | | |
| Application Information | 12 | | |
| Internal Bias and Input Voltage Considerations | 12 | | |
| Preprogramming Configuration | 12 | | |
| Design Trade-Offs with Switching Frequency | 13 | | |
| Completing a Power Supply Design | 13 | | |
| Selection of the Input Capacitor | 13 | | |
| Selection of the Output Capacitors | 13 | | |
| Functional Description | 13 | | |
| Multi-mode Pins | 13 | | |
| PMBus Communications | 14 | | |
| PMBus Module Address Selection | 14 | | |
| Phase Spreading for a Single-Phase Mode of Operation | 15 | | |
| Output Voltage Selection | 15 | | |
| Start-Up Procedure | 16 | | |
| Soft-Start Delay and Ramp Times | 17 | | |
| Power-Good | 18 | | |
| Switching Frequency and PLL | 18 | | |
| Loop Compensation | 19 | | |
| Adaptive Diode Emulation | 19 | | |
| Input Undervoltage Lockout | 20 | | |
| Output Overvoltage Protection | 20 | | |
| Output Prebias Protection | 20 | | |
| Output Overcurrent Protection | 21 | | |
| Thermal Overload Protection | 21 | | |
| Voltage Tracking | 21 | | |
| Tracking Groups | 22 | | |
| Voltage Margining | 23 | | |
| Digital-DC Bus | 23 | | |
| Output Sequencing | 23 | | |
| Fault Spreading | 23 | | |
| Monitoring Via PMBus | 24 | | |
| Temperature Monitoring Using the XTEMP Pin | 24 | | |
| SnapShot Parameter Capture | 24 | | |
| Nonvolatile Memory and Device Security Features | 25 | | |
| Layout Guide | 25 | | |
| Thermal Considerations | 26 | | |
| Package Description | 26 | | |
| PCB Layout Pattern Design | 26 | | |
| Thermal Vias | 26 | | |
| Stencil Pattern Design | 26 | | |
| Reflow Parameters | 26 | | |
| PMBus Command Summary | 27 | | |
| PMBus™ Data Formats | 31 | | |
| PMBus Use Guidelines | 32 | | |
| Summary | 32 | | |
| PMBus Commands Description | 32 | | |

Pin Configuration

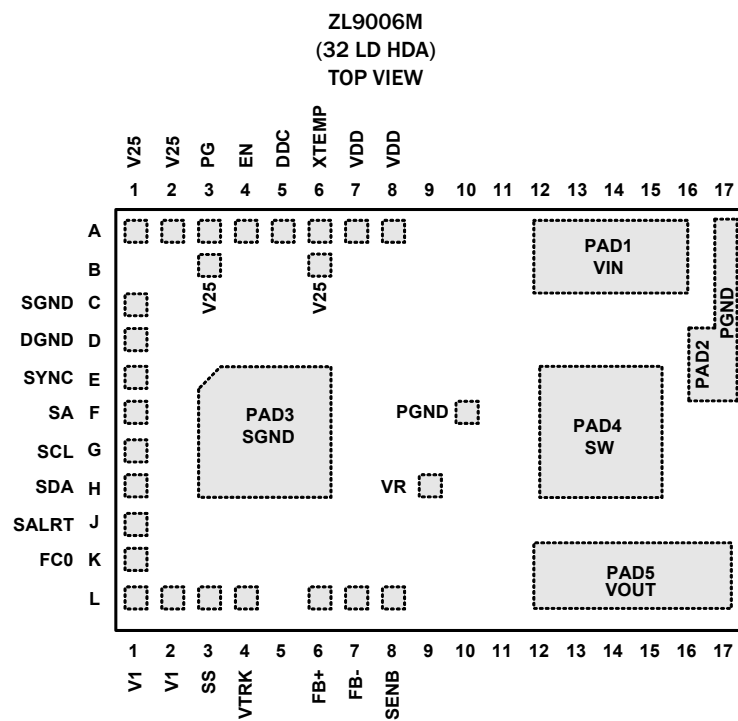

Pin Descriptions

| PIN | LABEL | TYPE | DESCRIPTION |
|----------------|-------|------|---|
| A1, A2, B3, B6 | V25 | PWR | Internal 2.5V reference. It is used to power internal circuitry. |
| A3 | PG | 0 | Power-good output. Provide open-drain power-good signal. By default, the PG pin asserts if the output is within +15/-10% of the target voltage. These limits and the polarity of the pin may be changed via the PMBus interface. |
| A4 | EN | I | Enable input. This pin is factory set as active high. Pull-up to enable the module switching and pull-down to disable switching. If the module is controlled through PMBus command, tie a 10kΩ resistor from this pin to SGND to avoid this pin floating. |
| A5 | DDC | I/O | Digital-DC bus (open drain). The DDC pin on all Digital modules in one application should be connected together. This dedicated bus provides the communication channel between modules for features such as sequencing, fault spreading, and current sharing. A pull-up resistor is required for this application. |
| A6 | XTEMP | I | External temperature sensor input. Connect to an external 2N3904 transistor with a diode configuration (see Figure 25 on page 24). |
| A7, A8 | VDD | PWR | Controller input voltage. Tie to VIN directly. |
| C1 | SGND | PWR | Signal ground. Connect to low impedance ground plane. Refer to "Layout Guide" on page 25 . |
| D1 | DGND | PWR | Digital ground. Common return for digital signals. Connect to low impedance ground plane. Refer to "Layout Guide" on page 25 . |
| E1 | SYNC | I/O | Clock synchronization. Used for synchronization to external frequency reference and for setting switching frequency. Refer to Table 7 on page 17 . |
| F1 | SA | I | Serial address select pin. Used to assign unique PMBus address to each module and phase spreading. |
| F10 | PGND | PWR | Power ground. Connect to low impedance ground plane. |
| G1 | SCL | I/O | Serial clock. PMBus interface pin. |
| H1 | SDA | I/O | Serial data. PMBus interface pin. |
| H9 | VR | PWR | Internal 5V reference. Used to power internal drivers. The current limit for the VR pin is 10mA. Please consider this when using the VR pin for driving external circuitry. |
| J1 | SALRT | 0 | Serial alert. PMBus interface pin. |

Pin Descriptions (Continued)


| PIN | LABEL | TYPE | DESCRIPTION |
|--------|-------|------|--|
| K1 | FC0 | I | Mode Setting. Used to set the single-phase/current sharing mode, auto compensation, and SYNC configuration (see Table 9 on page 19). |
| L1, L2 | V1 | I | Output voltage selection pin. Used to program the output voltage through pin-strap setting or connecting a resistor from the V1 pin to SGND (see Table 4 on page 15). The set voltage on this pin is the maximum allowed output voltage in PMBus programming. |
| L3 | SS | I | Soft-start pin. Set SS pin by pin-strapping or connecting a resistor to SGND using the appropriate resistor. The pin can program the delay from when EN is asserted until the output voltage starts to ramp, the output voltage ramp time during turn on/off, and input undervoltage lockout (UVLO) level (see Table on page 17). This pin can also set tracking ratio and upper track limit (see Table 10 on page 21). |
| L4 | VTRK | I | Tracking sense input. Used to track an external voltage source. |
| L6 | FB+ | I | Output voltage positive feedback. Positive inputs of differential remote sense for the regulator. Connect to the output rail or the regulation point of load/processor. This pin is noise sensitive. Please refer to " Layout Guide " on page 25. |
| L7 | FB- | I | Output voltage negative feedback. Negative input of the differential remote sense for the regulator. Connect to the negative rail or ground of the load/processor. |
| L8 | ISENB | TEST | Test pin. For factory test use. Solder down the pin for mechanical strength, but do not connect the pin. |
| PAD1 | VIN | PWR | Power inputs. Input voltage range: 4.5V to 13.2V. Tie directly to the input rail. When the input is between 4.5V to 5.5V, VIN should be tied directly to VCC. |
| PAD2 | PGND | PWR | Power ground. Power ground pins for both input and output returns. |
| PAD3 | SGND | PWR | Signal ground. Connect to low impedance ground plane (see Figure 26 on page 25). |
| PAD4 | SW | PWR | Switch node. Use for monitoring switching frequency. SW pad should be floating or used for snubber connections. To achieve better thermal performance, the SW planes can also be used for heat removal with thermal vias connected to large inner layers (see Figure 26 on page 25). |
| PAD5 | VOUT | PWR | Power Output. Apply output load between these pins and PGND pins. Output voltage range: 0.6V to 3.6V. |

Ordering Information


| PART NUMBER (Notes 1, 2, 3) | PART MARKING | FIRMWARE REVISION (Note 4) | TEMP RANGE (°C) | PACKAGE (RoHS Compliant) | PKG. DWG. # |
|--------------------------------|--------------|-------------------------------|--------------------|-----------------------------|----------------|
| ZL9006MIRZ | ZL9006M | FE03 | -40 to +85 | 32 Ld 17.2x11.45 HDA | Y32.17.2x11.45 |
| ZL9006MAIRZ | ZL9006M | FE04 | -40 to +85 | 32 Ld 17.2x11.45 HDA | Y32.17.2x11.45 |

NOTES:

1. Add "-T*" suffix for tape and reel. Please refer to [TB347](#) for details on reel specifications.
2. These Intersil plastic packaged products are RoHS compliant by EU exemption 7C-I and employ special Pb-free material sets; molding compounds/die attach materials and NiPdAu plate - e4 termination finish which is compatible with both SnPb and Pb-free soldering operations. Intersil RoHS compliant products are MSL classified at Pb-free peak reflow temperatures that meet or exceed the Pb-free requirements of IPC/JEDEC J STD-020.
3. For Moisture Sensitivity Level (MSL), please see device information page for [ZL9006M](#). For more information on MSL please see Tech Brief [TB363](#).
4. See "[Firmware Revision History](#)" on page 64; only the latest firmware revision is recommended for new designs.

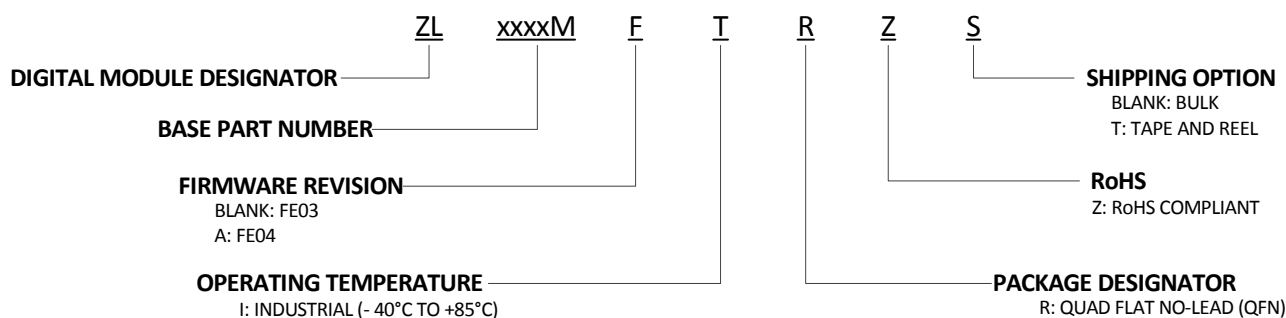

Pinout Internal Circuit

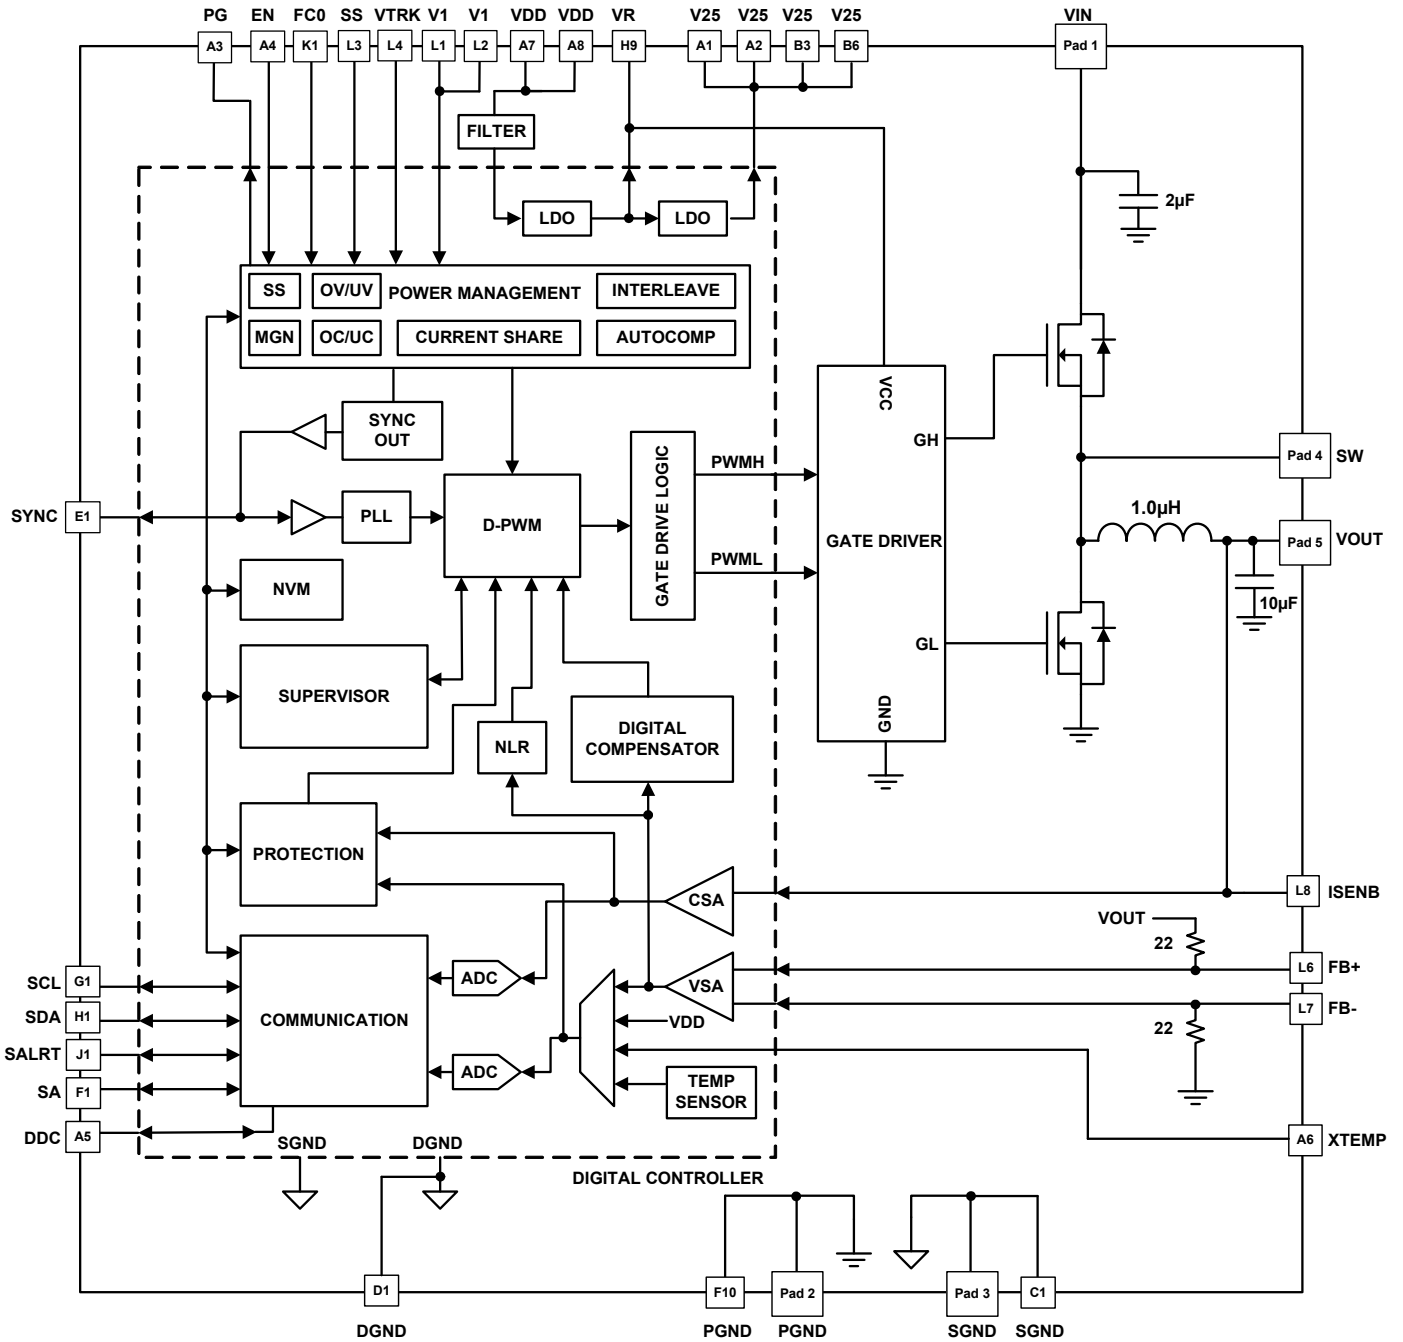

Absolute Maximum Ratings (Note 5)

| | |
|--|----------------------|
| DC Supply Voltage for VDD Pin | -0.3V to 17V |
| Input Voltage for VIN Pin | -0.3V to 17V |
| MOSFET Drive Reference for VR Pin | -0.3V to 6.5V |
| 2.5V Logic Reference for V25 Pin | -0.3V to 3V |
| Logic I/O Voltage for PG, EN, DDC, SYNC, PG, SCL, SDA, SALRT, FCO, V1, SS Pins | -0.3V to 6V |
| Analog Input Voltages XTEMP, VTRK, FB+, FB-, ISENB Pins | -0.3V to 6V |
| Switch Node for SW Pin | |
| Continuous | (PGND - 0.3V) to 30V |
| Transient (<100ns) | (PGND - 5V) to 30V |
| Ground Voltage Differential (DGND - SGND, PGND - SGND) for DGND, SGND and PGND Pins | -0.3V to +0.3V |
| ESD Rating | |
| Human Body Model (Tested per JESD22-A114F) | 2000V |
| Machine Model (Tested per JESD22-A115C) | 200V |
| Charged Device Model (Tested per JESD22-C110D) | 1000V |
| Latch-up (Tested per JESD78C; Class 2, Level A) | 100mA |

CAUTION: Do not operate at or near the maximum ratings listed for extended periods of time. Exposure to such conditions may adversely impact product reliability and result in failures not covered by warranty.

NOTES:

- Voltage measured with respect to SGND.
- V_{IN} supplies the power FETs. V_{DD} supplies the controller. V_{IN} can be tied to V_{DD}. For V_{DD} ≤ 5.5V, V_{DD} should be tied to VR.
- Includes ±10% margin limits.
- θ_{JA} is simulated in free air with device mounted on a four-layer FR-4 test board (76.2 x 114.3 x 1.6mm) with 80% coverage, 2oz Cu on top and bottom layers, plus two, buried, one-ounce Cu layers with coverage across the entire test board area. Multiple vias were used, with via diameter = 0.3mm on 1.2mm pitch.
- For θ_{JC}, the “case” temperature is measured at the center of the package underside.

Thermal Information

| | | |
|--------------------------------|---------------------------|------------------------|
| Thermal Resistance (Typical) | θ _{JA} (°C/W) | θ _{JC} (°C/W) |
| 32 Ld HDA Package (Notes 8, 9) | 17 | 1 |
| Storage Temperature | -55°C to +150°C | |
| Pb-Free Reflow Profile | see TB493 | |

Recommended Operating Conditions

| | |
|---|-----------------|
| Input Supply Voltage Range, V _{IN} | 4.5V to 13.2V |
| Input Supply for Controller, V _{DD} (Note 6) | 4.5V to 13.2V |
| Driver Supply Voltage, VR | 4.5V to 5.5V |
| Output Voltage Range, V _{OUT} (Note 7) | 0.54V to 3.6V |
| Output Current Range, I _{OUT(DC)} (Note 20) | 0A to 6A |
| Operating Junction Temperature Range, T _J | -40°C to +125°C |

Electrical Specifications V_{IN} = V_{DD} = 12V, T_A = -40°C to +85°C, unless otherwise noted. Typical values are at T_A = +25°C. **Boldface limits apply across the operating temperature range, -40°C to +85°C.**

| PARAMETER | TEST CONDITIONS | MIN (Note 10) | TYP (Note 11) | MAX (Note 10) | UNITS |
|--|--|------------------|------------------|------------------|-------|
| INPUT AND SUPPLY CHARACTERISTICS | | | | | |
| Input Bias Supply Current, I _{DD} | V _{IN} = V _{DD} = 13.2V, f _{SW} = 400kHz, No load | - | 35 | 45 | mA |
| Input Bias Shutdown Current, I _{DDS} | EN = 0V, No PMBus activity | - | 15.5 | 20 | mA |
| Input Supply Current, I _{VIN} | V _{IN} = 12V, I _{OUT} = 6A, V _{OUT} = 1.2V, f _{SW} = 400kHz | - | 0.74 | - | A |
| VR Reference Output Voltage (Note 12) | V _{DD} > 6V | 4.5 | 5.2 | 5.7 | V |
| V25 Reference Output Voltage (Note 12) | V _R > 3V | 2.25 | 2.5 | 2.75 | V |
| OUTPUT CHARACTERISTICS | | | | | |
| Output Voltage Adjustment Range (Note 12) | V _{IN} > V _{OUT} . Does not include margin limits | 0.6 | - | 3.3 | V |
| Output Voltage Set-point Resolution | Set using resistors. (See Table 1 on page 13) | - | 50 - 200 | - | mV |
| | Set using PMBus with temperature compensation applied | - | ±0.025 | - | % FS |
| Output Voltage Accuracy (Notes 12, 13) | Includes line, load, temperature | -1 | - | 1 | % |
| VSEN Input Bias Current (Note 12) | VSEN = 5.5V | - | 110 | 200 | µA |
| Output Load Current (Note 20) | V _{IN} = 12V, V _{OUT} = 1.2V | - | 6 | - | A |
| Peak-to-peak Output Ripple Voltage, ΔV _{OUT} (Note 13) | I _{OUT} = 6A, V _{OUT} = 1.2V, C _{OUT} = 1000µF | - | 20 | - | mV |
| Soft-start Delay Duration Range (Notes 12, 14) | Set using SS pin or resistor | 5 | - | 20 | ms |
| | Set using PMBus | 0.005 | - | 500 | s |

Electrical Specifications $V_{IN} = V_{DD} = 12V$, $T_A = -40^\circ C$ to $+85^\circ C$, unless otherwise noted. Typical values are at $T_A = +25^\circ C$. **Boldface limits apply across the operating temperature range, $-40^\circ C$ to $+85^\circ C$.** (Continued)

| PARAMETER | TEST CONDITIONS | MIN (Note 10) | TYP (Note 11) | MAX (Note 10) | UNITS |
|---|--|------------------|------------------|------------------|-------------|
| Soft-start Delay Duration Accuracy (Notes 12, 14) | Turn-on delay (Note 16) | - | -0.25/+4 | - | ms |
| | Turn-off delay (Note 16) | - | -0.25/+4 | - | ms |
| Soft-start Ramp Duration Range (Notes 12, 14) | Set using SS pin or resistor | 2 | - | 20 | ms |
| | Set using PMBus | 0 | - | 200 | ms |
| Soft-start Ramp Duration Accuracy (Note 12) | | - | 100 | - | μs |
| DYNAMIC CHARACTERISTICS | | | | | |
| Voltage Change for Positive Load Step | $I_{OUT} = 1.2A$ to $6A$, slew rate = $1.6A/\mu s$, $V_{OUT} = 1.2V$ (see Figure 19 on page 12) | - | 4 | - | % |
| Voltage Change for Negative Load Step | $I_{OUT} = 6A$ to $1.2A$, slew rate = $1.6A/\mu s$, $V_{OUT} = 1.2V$ (see Figure 19 on page 12) | - | 4 | - | % |
| OSCILLATOR AND SWITCHING CHARACTERISTICS (Note 12) | | | | | |
| Switching Frequency Range | | 300 | - | 1000 | kHz |
| Switching Frequency Set-point Accuracy | Predefined settings (See Table 1 on page 13) | -5 | - | 5 | % |
| Maximum PWM Duty Cycle | Factory setting (Note 19) | - | - | 95 | % |
| Minimum SYNC Pulse Width | | 150 | - | - | ns |
| Input Clock Frequency Drift Tolerance | External clock source | -13 | - | 13 | % |
| LOGIC INPUT/OUTPUT CHARACTERISTICS (Note 12) | | | | | |
| PMBus Speed | | - | 100 | - | kHz |
| Logic Input Bias Current | EN, PG, SCL, SDA pins | -10 | - | 10 | μA |
| Logic Input Low, V_{IL} | | - | - | 0.8 | V |
| Logic Input High, V_{IH} | | 2.0 | - | - | V |
| Logic Output Low, V_{OL} | $I_{OL} \leq 4mA$ (Note 18) | - | - | 0.4 | V |
| Logic Output High, V_{OH} | $I_{OH} \geq -2mA$ (Note 18) | 2.25 | - | - | V |
| TRACKING (Note 12) | | | | | |
| VTRK Input Bias Current | VTRK = 5.5V | - | 110 | 200 | μA |
| VTRK Tracking Ramp Accuracy | 100% Tracking, V_{OUT} -VTRK, no prebias | -100 | - | + 100 | mV |
| VTRK Regulation Accuracy | 100% Tracking, V_{OUT} -VTRK | -1 | - | 1 | % |
| FAULT PROTECTION CHARACTERISTICS (Note 12) | | | | | |
| UVLO Threshold Range | Configurable via PMBus | 2.85 | - | 16 | V |
| UVLO Set-point Accuracy | | -150 | - | 150 | mV |
| UVLO Hysteresis | Factory setting | - | 3 | - | % |
| | Configurable via PMBus | 0 | - | 100 | % |
| UVLO Delay | | - | - | 2.5 | μs |
| Power-good V_{OUT} Threshold | Factory setting | - | 90 | - | % V_{OUT} |
| Power-good V_{OUT} Hysteresis | Factory setting | - | 5 | - | % |
| Power-good Delay (Note 17) | Configurable via PMBus | 0 | - | 500 | s |
| VSEN Undervoltage Threshold | Factory setting | - | 85 | - | % V_{OUT} |
| | Configurable via PMBus | 0 | - | 110 | % V_{OUT} |

Electrical Specifications $V_{IN} = V_{DD} = 12V$, $T_A = -40^{\circ}C$ to $+85^{\circ}C$, unless otherwise noted. Typical values are at $T_A = +25^{\circ}C$. **Boldface limits apply across the operating temperature range, $-40^{\circ}C$ to $+85^{\circ}C$.** (Continued)

| PARAMETER | TEST CONDITIONS | MIN (Note 10) | TYP (Note 11) | MAX (Note 10) | UNITS |
|---|------------------------|------------------|------------------|------------------|-------------|
| VSEN Overvoltage Threshold | Factory setting | - | 115 | - | % V_{OUT} |
| | Configurable via PMBus | 0 | - | 115 | % V_{OUT} |
| VSEN Undervoltage Hysteresis | | - | 5 | - | % V_{OUT} |
| VSEN Undervoltage/Overvoltage Fault Response Time | Factory setting | - | 16 | - | μs |
| | Configurable via PMBus | 5 | - | 60 | μs |
| Thermal Protection Threshold (Controller Junction Temperature) | Factory setting | - | 125 | - | $^{\circ}C$ |
| | Configurable via PMBus | -40 | - | 125 | $^{\circ}C$ |
| Thermal Protection Hysteresis | | - | 15 | - | $^{\circ}C$ |

NOTES:

10. Compliance to datasheet limits is assured by one or more methods: production test, characterization and/or design.
11. Parameters with TYP limits are not production tested unless otherwise specified.
12. Parameters are 100% tested for internal controller prior to module assembly.
13. V_{OUT} measured at the termination of the FB+ and FB- sense points.
14. The device requires a delay period following an enable signal and prior to ramping its output.
15. Precise ramp timing mode is only valid when using the EN pin to enable the device rather than PMBus enable.
16. The devices may require up to a 4ms delay following the assertion of the enable signal (normal mode) or following the de-assertion of the enable signal.
17. Factory setting for power-good delay is set to the same value as the soft-start ramp time.
18. Nominal capacitance of logic pins is 5pF.
19. Maximum duty cycle is limited by the equation $MAX_DUTY(\%) = [1 - (150 \times 10^{-9} \times f_{SW})] \times 100$ and not to exceed 95%.
20. The load current is related to the thermal derating curves. The maximum allowed current is derated while the output voltage goes higher than 2.5V.

Typical Performance Curves

Operating conditions: $T_A = +25^\circ\text{C}$, No air flow, $C_{OUT} = 3 \times 100\mu\text{F} + 1 \times 330\mu\text{F}$. Typical values are used unless otherwise noted.

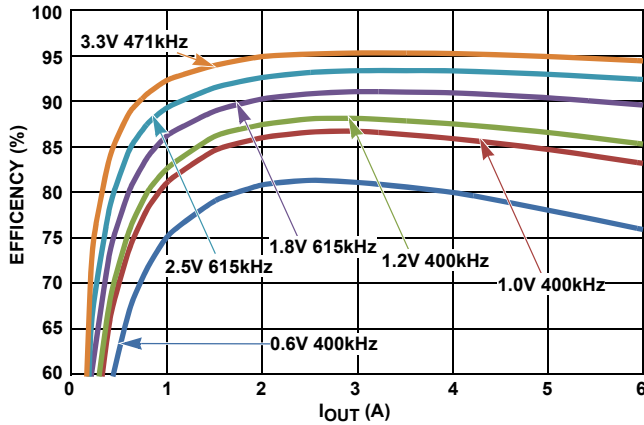


FIGURE 3. ZL9006M EFFICIENCY, $V_{IN} = 5\text{V}$

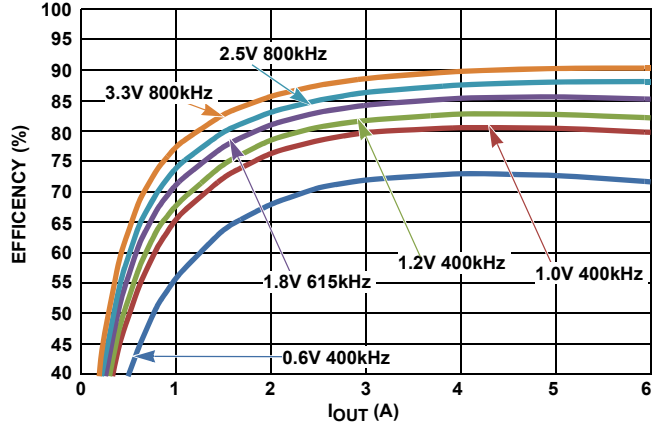


FIGURE 4. ZL9006M EFFICIENCY, $V_{IN} = 12\text{V}$

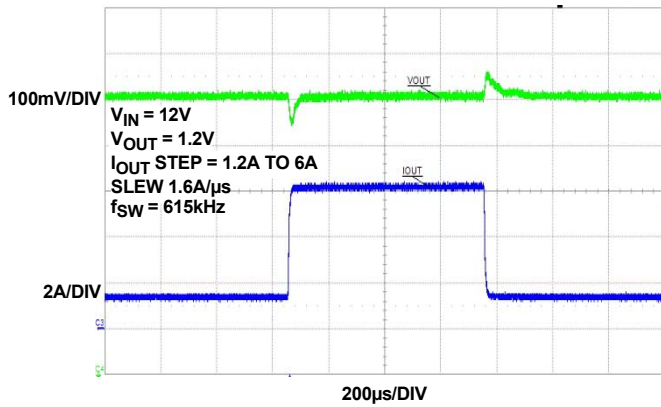


FIGURE 5. $V_{OUT} = 1.2\text{V}$ TRANSIENT RESPONSE

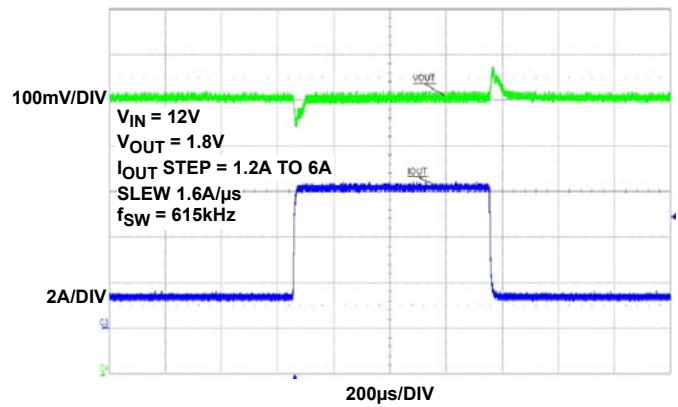


FIGURE 6. $V_{OUT} = 1.8\text{V}$ TRANSIENT RESPONSE

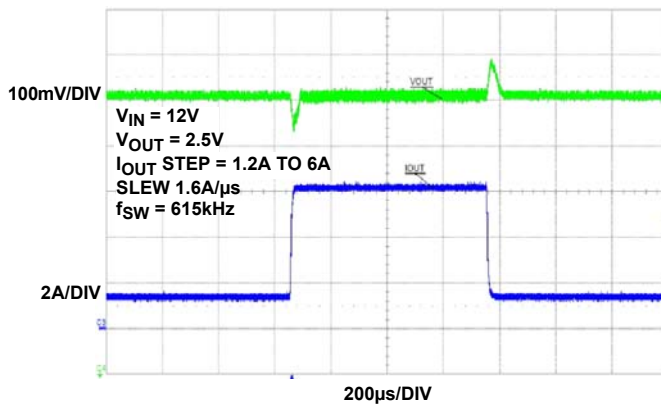


FIGURE 7. $V_{OUT} = 2.5\text{V}$ TRANSIENT RESPONSE

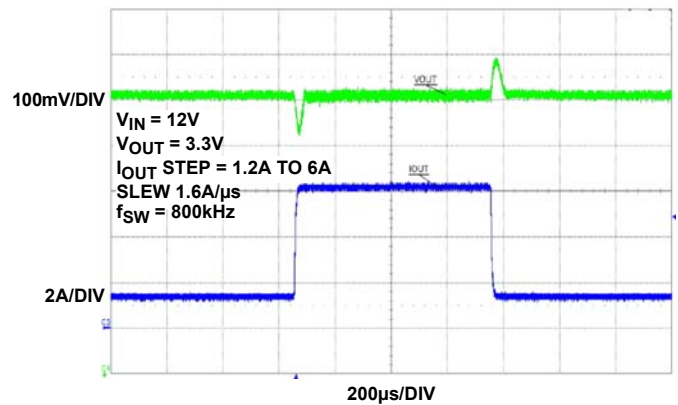


FIGURE 8. $V_{OUT} = 3.3\text{V}$ TRANSIENT RESPONSE

Typical Performance Curves

Operating conditions: $T_A = +25^\circ\text{C}$, No air flow, $C_{OUT} = 3 \times 100\mu\text{F} + 1 \times 330\mu\text{F}$. Typical values are used unless otherwise noted. (Continued)

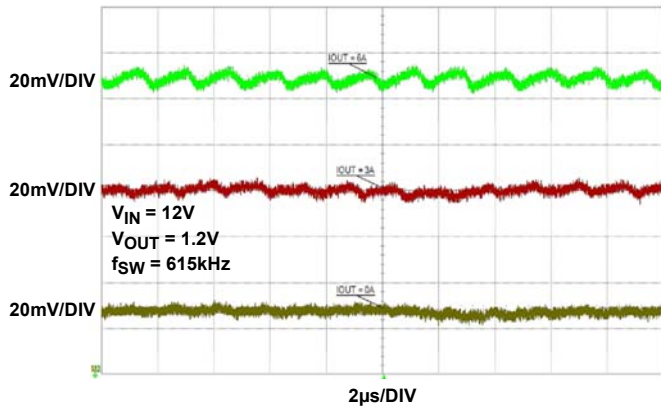


FIGURE 9. $V_{OUT} = 1.2\text{V}$ OUTPUT VOLTAGE RIPPLE

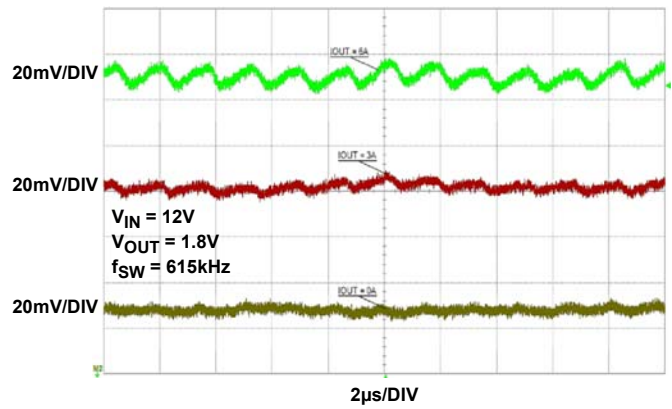


FIGURE 10. $V_{OUT} = 1.8\text{V}$ OUTPUT VOLTAGE RIPPLE

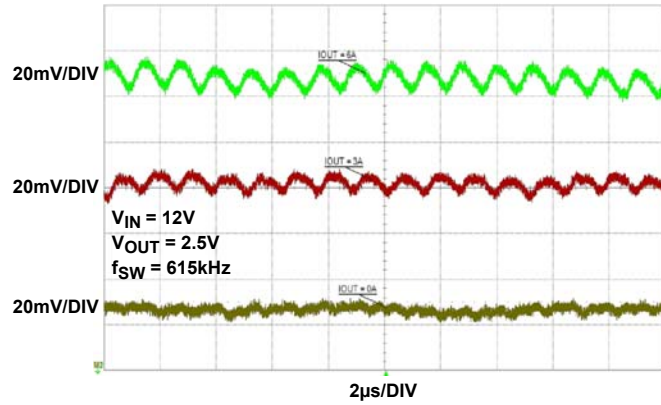


FIGURE 11. $V_{OUT} = 2.5\text{V}$ OUTPUT VOLTAGE RIPPLE

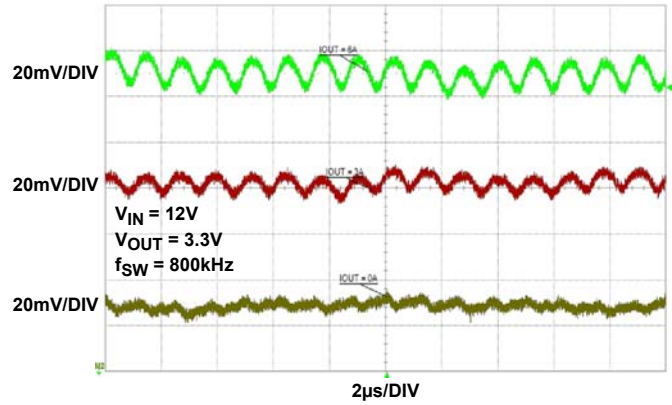


FIGURE 12. $V_{OUT} = 3.3\text{V}$ OUTPUT VOLTAGE RIPPLE

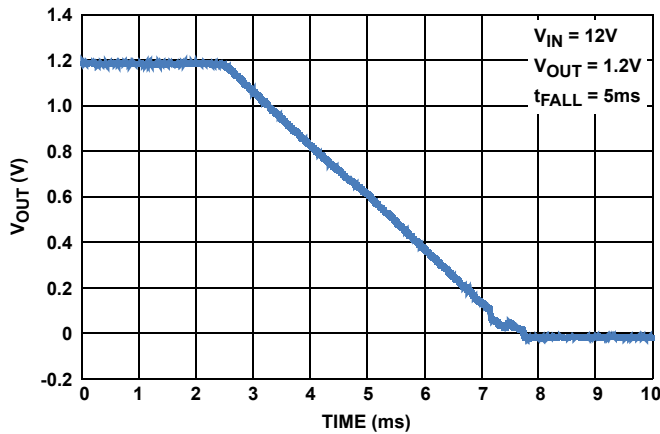


FIGURE 13. SOFT-STOP RAMP-DOWN

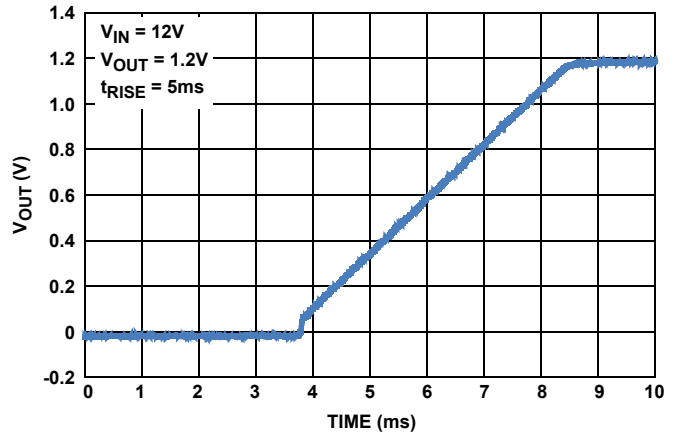


FIGURE 14. SOFT-START RAMP-UP

Derating and Power Loss Curves

Operating conditions: $T_A = +25^\circ\text{C}$, No air flow. f_{SW} corresponds to those used in Efficiency curves. $C_{\text{OUT}} = 3 \times 100\mu\text{F} + 1 \times 330\mu\text{F}$. Typical values are used unless otherwise noted.

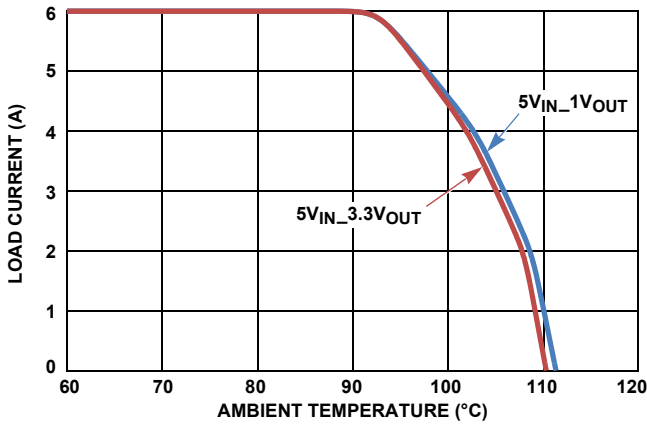


FIGURE 15. DERATING CURVE, 5V_{IN} FOR VARIOUS OUTPUT VOLTAGES, NO AIR FLOW

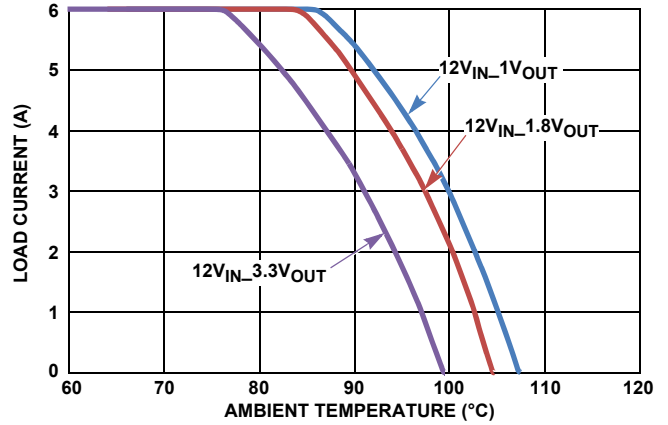


FIGURE 16. DERATING CURVE, 12V_{IN} FOR VARIOUS OUTPUT VOLTAGES, NO AIR FLOW

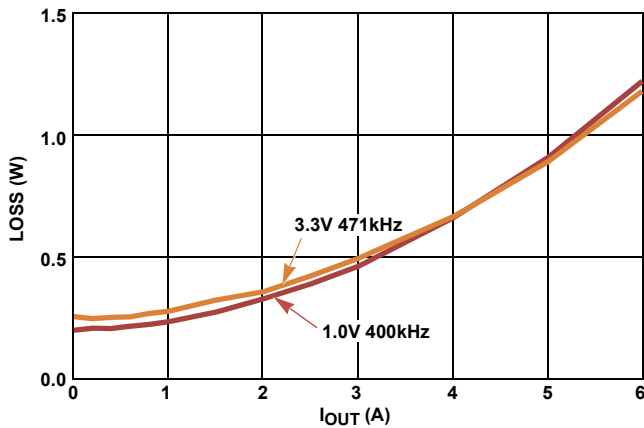


FIGURE 17. POWER LOSS CURVE, 5V_{IN} FOR VARIOUS OUTPUT VOLTAGES

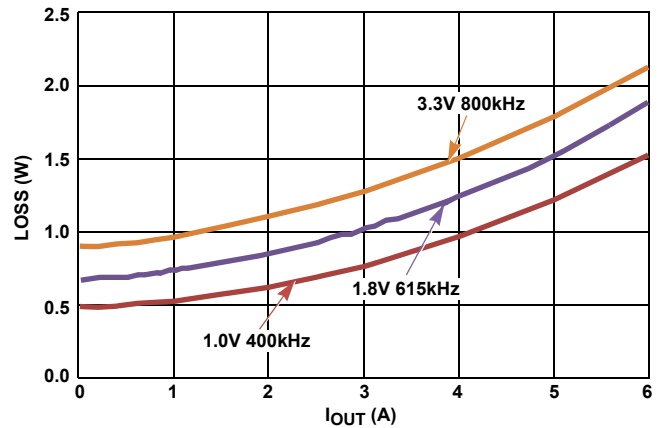


FIGURE 18. POWER LOSS CURVE, 12V_{IN} FOR VARIOUS OUTPUT VOLTAGES

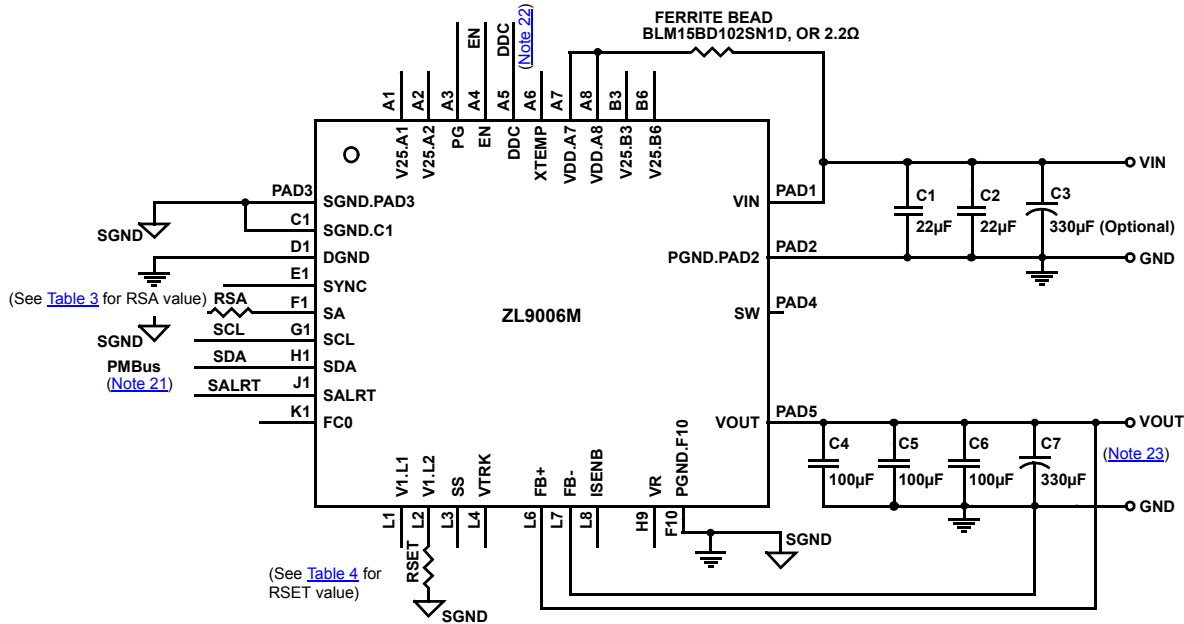


FIGURE 19. TEST CIRCUIT FOR ALL PERFORMANCE AND DERATING CURVES

NOTES:

- 21. The PMBus requires pull-up resistors. Please refer to the PMBus specifications for more details.
- 22. The DDC bus requires a pull-up resistor. The resistance will vary based on the capacitive loading of the bus (and on the number of devices connected). The 10kΩ default value, assuming a maximum of 100pF per device, provides the necessary 1μs pull-up rise time. Please refer to ["Digital-DC Bus" on page 23](#) for more details.
- 23. Additional capacitance may be required to meet specific transient response targets.

Application Information

Internal Bias and Input Voltage Considerations

Beside VIN supplying the main power conversion, the ZL9006M employs two internal low dropout (LDO) regulators to supply bias voltages for internal circuitry allowing it to operate from a single input supply. The internal bias regulators are as indicated in the following:

VR - The VR LDO provides a regulated 5V bias supply for the MOSFET driver circuits. It is powered from the VDD pin.

V25 - The V25 LDO provides a regulated 2.5V bias supply for the main controller circuitry. It is powered from an internal 5V node.

When the input supply (VDD) is higher than 5.5V, the VR pin should not be connected to any other pin. Due to the dropout voltage associated with the VR bias regulator, the VDD pin can be connected to the VR pin for designs operating from a supply below 5.5V. The internal bias regulators are not designed to be outputs for powering other circuitry, so keep current into the VDD pin below 80mA.

Typically, VDD is connected directly to VIN. In the case that VDD is powered separately from VIN, the recommended power sequence is to keep EN low, power VDD, and then VIN. When the voltage is applied to VIN, VDD should also be applied to avoid unintentional turn-on of the internal high-side MOSFET. If the VDD

voltage is different from VIN, Prebias start-up and auto compensation may not work correctly as the VDD voltage is used to measure input voltage as part of the Prebias and auto compensation calculation.

Preprogramming Configuration

The Intersil digital power module allows preprogramming before the main power rail is supplied to the VIN pins of the module. If the system bias (i.e., 3.3V bias) is available, the power module can be programmed to load the configuration file or change the settings without main power being on. See [Figure 20](#) for an example with 3.3V bias voltage and 12V input voltage for the main power rail. To preprogram the module without applying power to the VIN pin, the bias voltage 3.3V is applied to pin VR through a Schottky diode such that $3.0 \leq VR$ and $< VDD$ when VIN is applied. The body diode of the PMOS will be reverse biased, preventing back feeding to the VIN rail. When the main power rail 12V VIN is ON, the PMOS is ON to supply the power to the module. In this case, only a small voltage is dropped on the PMOS, so the controller can still detect the input voltage accurately. If there are more Intersil digital modules on the board, only one PMOS (as shown in [Figure 20](#)) is required to drive the VIN voltages of all modules.

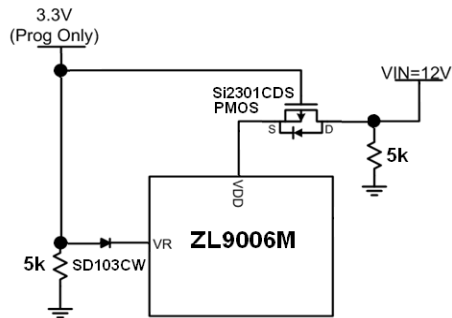


FIGURE 20. PREPROGRAMMING CONFIGURATION

Design Trade-Offs with Switching Frequency

For design of the buck power stage, there is a trade-off when choosing switching frequency to achieve higher power supply efficiency, output ripple, and transient response. For output voltages below 2.0V, a lower switching frequency results in higher efficiency. A lower output ripple and faster transient response is achieved with higher switching frequencies, and thereby can reduce the required amount of output capacitance. Also, given an input to output voltage relation, there is a limitation on the allowable switching frequency due to normal part operation. See [“Switching Frequency and PLL” on page 18](#) for more considerations.

To start the design with a goal of high efficiency, select a frequency based on [Table 1](#). To achieve good transient response, a minimum switching frequency of 615kHz is recommended.

TABLE 1. OPTIMAL SWITCHING FREQUENCY FOR EFFICIENCY

| V_O to V_{IN} | 3.3V (kHz) | 5V (kHz) | 12V (kHz) |
|-------------------|------------|----------|-----------|
| 0.6 - 1.5 | 300 | 400 | 400 |
| 1.5 - 2.5 | 300 | 615 | 615 |
| 2.5 - 3.6 | 300 | 400 | 800 |

Completing a Power Supply Design

To achieve a power supply design with digital capabilities using the ZL9006M, only input and output capacitors and two resistors are needed. The two resistors are installed on the SA and V1 pins for setting the PMBus address and output voltage, respectively.

Selection of the Input Capacitor

The input filter capacitor should be based on how much ripple the supply can tolerate on the DC input line. The larger the capacitor, the less ripple expected, but consideration should be taken for the higher surge current during power-up. The ZL9006M provides the soft-start function that controls and limits the current surge. The value of the input capacitor can be calculated by [Equation 1](#):

$$C_{IN(MIN)} = I_O \cdot \frac{D \cdot (1 - D)}{V_{P-P(MAX)} \cdot f_{SW}} \quad (\text{EQ. 1})$$

Where:

$C_{IN(MIN)}$ is the minimum input capacitance (μF) required

I_O is the output current (A)

D is the duty cycle (V_O/V_{IN})

$V_{P-P(MAX)}$ is the maximum peak-to-peak voltage (V)

f_{SW} is the switching frequency (Hz)

In addition to the bulk capacitance, some low Equivalent Series Resistance (ESR) ceramic capacitance should be placed as close as possible to decouple between the drain terminal of the high side MOSFET (VIN PAD1) and the source terminal of the low side MOSFET (PGND PAD2). This is used to reduce voltage ringing created by the switching current across parasitic circuit elements. This ripple's (I_{CINrms}) impact should be considered, and can be determined from [Equation 2](#):

$$I_{CINrms} = I_{OUT} \times \sqrt{D \times (1 - D)} \quad (\text{EQ. 2})$$

Without capacitive filtering near the power supply circuit, this current would flow through the supply bus and return planes, coupling noise into other system circuitry. The input capacitors should be rated at 1.2x the ripple current calculated in [Equation 2](#) to avoid overheating of the capacitors due to the high ripple current, which can cause premature failure.

Selection of the Output Capacitors

The ZL9006M is designed for low output voltage ripple. The output voltage ripple and transient requirements can be met with bulk output capacitors (C_{OUT}) with low ESR; the recommended minimum ESR is $<6\text{m}\Omega$. C_{OUT} can be a low ESR tantalum capacitor, a low ESR polymer capacitor or a ceramic capacitor.

The typical output capacitance range is from $200\mu\text{F}$ to $1200\mu\text{F}$, and decoupling ceramic output capacitors are used per phase. The optimized output capacitance is $700\mu\text{F}$ with an ESR of $5\text{m}\Omega$. The maximum recommended product of output capacitance and equivalent ESR value is given by $[C_{OUT} \times \text{ESR}] < 3600 (\mu\text{F} \times \text{m}\Omega)$.

With a step load faster than $0.2\text{A}/\mu\text{s}$, the recommended amount of output capacitor is $100\mu\text{F}$ per ampere of step load. Additional output filtering may be needed if further reduction of output ripple or dynamic transient spikes are required.

Functional Description

Multi-mode Pins

In order to simplify circuit design, the ZL9006M family incorporates patented multi-mode pins that allow the user to easily configure many aspects of the device without programming. Most power management features can be configured using these pins. The multi-mode pins can respond to two types of configurations summarized in [Table 2](#): pin strapping and resistor programming. These pins are sampled when power is applied or by issuing a PMBus RESTORE_FACTORY_ALL command (see [“PMBus Commands Description” on page 32](#)).

With pin strapping, parameters can be set by strapping the pins in one of three possible states: LOW, OPEN, or HIGH. These pins can be connected to SGND for logic LOW as this pin provides a voltage lower than 0.8V. For logic OPEN, they have no connection. These pins can be connected to the V25 pin for logic HIGH settings as this pin provides a regulated voltage higher than 2V when power is applied to the VDD pin.

Resistor programming allows a greater range of adjustability when connecting a finite value resistor (in a specified range) between the multi-mode pin and SGND. Standard 1% resistor values are used, and only every fourth standard resistor value is used so the device can reliably recognize the value of resistance

connected to the pin while eliminating the error associated with the resistor accuracy. Up to 31 unique selections are available using a single resistor.

TABLE 2. MULTI-MODE PIN CONFIGURATION

| PIN TIED TO | VALUE |
|-------------------|-----------------------|
| LOW (Logic LOW) | <0.8V _{DC} |
| OPEN (N/C) | No connection |
| HIGH (Logic HIGH) | >2.0V _{DC} |
| Resistor to SGND | Set by resistor value |

There are five multi-mode pins in ZL9006M: FC0, SA, SYNC, SS and V1. The multi-mode pin configuration can set ZL9006M power management features and mode of operation to both single-phase and current sharing without any programming. SA and V1 are the only two pins that must be set for a general single-phase operation, which use the default settings associated with the other three pins, or overriding other parameters via the PMBus.

SA sets the PMBus address, phase spreading, and Reference/Member assignment in current sharing mode. The effective phase spreading depends on the mode of operation. The Reference/Member is preassigned in current sharing mode, and up to 8 two-phase with 5 three-phase current-shared group is possible.

FC0 is used to distinguish between the two modes of operation, and is used in combination with SA in current sharing mode. FC0 pin strapping and resistor programming in the range of 10kΩ to 42.2kΩ set the operation to single-phase mode, while the range of 46.4kΩ to 178kΩ is for current sharing mode. FC0 also sets the Auto Comp and Sync configuration.

SYNC sets the switching frequency, and is only effective in single-phase mode, as SYNC pins are connected together in current-sharing mode.

SS sets the ramp timing, UVLO, and tracking. V1 sets the output voltage. SS and V1 are the same purpose in single-phase and current-share modes.

PMBus Communications

The ZL9006M provides an PMBus digital interface that enables the user to configure all aspects of the module operation as well as monitor the input and output parameters. The ZL9006M can be used with any PMBus host device. In addition, the module is compatible with PMBus version 2.0 and includes an SALRT line to help mitigate bandwidth limitations related to continuous fault monitoring. Pull-up resistors are required on the PMBus as specified in the PMBus 2.0 specification. The ZL9006M accepts most standard PMBus commands. When controlling the device with PMBus commands, it is recommended that the enable pin be tied to SGND.

The PMBus device address and VOUT_MAX are the only parameters that must be set by external pins. All other device parameters can be set via the PMBus. The device address is set using the SA pin. VOUT_MAX is determined as 10% greater than the voltage set by the V1 pin.

ZL9006M supports 100kHz and 400kHz PMBus clock speed with communication interval of 20ms between STORE and RESTORE commands and ~2ms for other general commands.

PMBus Module Address Selection

Each module must have its own unique serial address to distinguish between other devices on the bus. The module address is set by connecting a resistor between the SA pin and SGND. [Table 3](#) lists the available module addresses.

TABLE 3. PMBus ADDRESS VALUES

| R _{SA} (kΩ) | PMBus ADDRESS |
|----------------------|---------------|
| LOW | 0x23 |
| OPEN | 0x24 |
| HIGH | 0x25 |
| 10 | 0x50 |
| 11 | 0x51 |
| 12.1 | 0x52 |
| 13.3 | 0x53 |
| 14.7 | 0x54 |
| 16.2 | 0x55 |
| 17.8 | 0x56 |
| 19.6 | 0x57 |
| 21.5 | 0x58 |
| 23.7 | 0x59 |
| 26.1 | 0x5A |
| 28.7 | 0x5B |
| 31.6 | 0x5C |
| 34.8 | 0x5D |
| 38.3 | 0x5E |
| 42.2 | 0x5F |
| 46.4 | 0x60 |
| 51.1 | 0x61 |
| 56.2 | 0x62 |
| 61.9 | 0x63 |
| 68.1 | 0x64 |
| 75 | 0x65 |
| 82.5 | 0x66 |
| 90.9 | 0x67 |
| 100 | 0x68 |
| 110 | 0x69 |
| 121 | 0x6A |
| 133 | 0x6B |
| 147 | 0x6C |
| 162 | 0x6D |
| 178 | 0x6E |

Phase Spreading for a Single-Phase Mode of Operation

When multiple point-of-load converters share a common DC input supply, it is desirable to adjust the clock phase offset of each device such that not all devices start to switch simultaneously. Setting each converter to start its switching cycle at a different point in time can dramatically reduce input capacitance requirements and efficiency losses. Since the peak current drawn from the input supply is effectively spread out over a period of time, the peak current drawn at any given moment is reduced, and the power losses proportional to the I_{RMS}^2 are reduced dramatically.

To enable spreading, all converters must be synchronized to the same switching clock. The FCO pin is used to set the configuration of the SYNC pin for each device as described in [“Switching Frequency and PLL” on page 18](#).

Selecting the phase offset for the device in a standalone mode of operation is accomplished by selecting a device address according to the following equation:

$$\text{Phase offset} = \text{device address} \times 45^\circ$$

For example:

- A device address of 0x50 or 0x60 would configure no phase offset
- A device address of 0x51 or 0x61 would configure 45° of phase offset
- A device address of 0x52 or 0x62 would configure 90° of phase offset

The phase offset of each device may also be set to any value between 0° and 360° in 22.5° increments via the PMBus interface. Refer to [“PMBus Commands Description” on page 32](#) for further details.

Output Voltage Selection

The output voltage may be set to a voltage between 0.6V and 3.6V provided that the input voltage is higher than the desired output voltage by an amount sufficient to prevent the device from exceeding its maximum duty cycle specification.

The V1 pins are used to set the output voltage using a single resistor, R_{SET} between the V1 pins and SGND. [Table 4](#) lists the available output voltage settings with a single resistor.

TABLE 4. SINGLE RESISTOR V_{OUT} SETTING

| R_{SET} (k Ω) | V_{OUT} |
|-------------------------|-----------|
| LOW | 1.20 |
| OPEN | 1.50 |
| HIGH | 3.30 |
| 10 | 0.60 |
| 11 | 0.65 |
| 12.1 | 0.70 |
| 13.3 | 0.75 |
| 14.7 | 0.80 |

TABLE 4. SINGLE RESISTOR V_{OUT} SETTING (Continued)

| R_{SET} (k Ω) | V_{OUT} |
|-------------------------|-----------|
| 16.2 | 0.85 |
| 17.8 | 0.90 |
| 19.6 | 0.95 |
| 21.5 | 1.00 |
| 23.7 | 1.05 |
| 26.1 | 1.10 |
| 28.7 | 1.15 |
| 31.6 | 1.20 |
| 34.8 | 1.25 |
| 38.3 | 1.30 |
| 42.2 | 1.40 |
| 46.4 | 1.50 |
| 51.1 | 1.60 |
| 56.2 | 1.70 |
| 61.9 | 1.80 |
| 68.1 | 1.90 |
| 75 | 2.00 |
| 82.5 | 2.10 |
| 90.9 | 2.20 |
| 100 | 2.30 |
| 110 | 2.50 |
| 121 | 2.80 |
| 133 | 3.00 |
| 147 | 3.30 |
| 162 | 3.60 |

The output voltage may also be set to any value between 0.6V and 3.6V using a PMBus command over the PMBus interface. See [“PMBus Commands Description” on page 32](#) for details.

The R_{SET} resistors program places an upper limit in output voltage setting through PMBUS programming to 10% above the value set by the resistors.

Start-Up Procedure

The ZL9006M follows a specific internal start-up procedure after power is applied to the VDD pin. [Table 5](#) describes the start-up sequence.

If the device is to be synchronized to an external clock source, the clock frequency must be stable prior to asserting the EN pin. The device requires approximately 5ms to 6ms to check for specific values stored in its internal memory. If the user has stored values in memory, those values will be loaded. The device will then check the status of all multi-mode pins and load the values associated with the pin settings.

Once this process is completed, the device is ready to accept commands via the PMBus interface and the device is ready to be

enabled. Once enabled, the device requires a minimum delay period following an enable signal and prior to ramping its output, as described in [“Soft-Start Delay and Ramp Times” on page 17](#). If a soft-start delay period less than the minimum has been configured (using PMBus commands), the device will default to the minimum delay period. If a delay period greater than the minimum is configured, the device will wait for the configured delay period prior to starting to ramp its output.

After the delay period has expired, the output will begin to ramp towards its target voltage according to the preconfigured soft-start ramp time that has been set using the SS pin. It should be noted that if the EN pin is tied to VDD, the device will still require approximately 5ms to 6ms before the output can begin its ramp-up as described in [Table 5](#).

TABLE 5. ZL9006M START-UP SEQUENCE

| STEP # | STEP NAME | DESCRIPTION | TIME DURATION |
|--------|-----------------------|---|--|
| 1 | Power Applied | Input voltage is applied to the ZL9006M's VDD pin | Depends on input supply ramp time |
| 2 | Internal Memory Check | The device will check for values stored in its internal memory. This step is also performed after a Restore command. | Approximately 5ms to 6ms (device will ignore an enable signal or PMBus traffic during this period) |
| 3 | Multi-mode Pin Check | The device loads values configured by the multi-mode pins. | |
| 4 | Device Ready | The device is ready to accept an enable signal. | - |
| 5 | Preramp Delay | The device requires a minimum delay period following an enable signal and prior to ramping its output, as described in “Soft-Start Delay and Ramp Times” on page 17 . | - |

Soft-Start Delay and Ramp Times

It may be necessary to set a delay when an enable signal is received until the output voltage starts to ramp to its target value. In addition, the designer may wish to precisely set the time required for V_{OUT} to ramp to its target value after the delay period has expired. These features may be used as part of an overall in-rush current management strategy or to precisely control how fast a load IC is turned on. The ZL9006M gives the system designer several options for precisely and independently controlling both the delay and ramp time periods.

The soft-start delay period begins when the EN pin is asserted and ends when the delay time expires. The soft-start ramp timer enables a precisely controlled ramp to the nominal V_{OUT} value that begins once the delay period has expired. The ramp-up is guaranteed monotonic and its slope may be precisely set using the SS pin.

The soft-start delay and ramp times can be set to a custom value by pin-strapping or connecting a resistor from the SS pin to SGND using the appropriate resistor value from [Table 6](#). See [“Input Undervoltage Lockout” on page 20](#) for further explanation of UVLO setting using SS pin. The value of this resistor is measured upon start-up or restore and will not change if the resistor is varied after power has been applied to the ZL9006M.

TABLE 6. SOFT-START PIN-STRAP/RESISTOR SETTINGS

| R_{SS} (k Ω) | DELAY TIME (ms) | RAMP TIME (ms) | UVLO (V) |
|---------------------------|--------------------|-------------------|-------------|
| LOW | 5 | 2 | 4.5 |
| OPEN | 5 | 5 | |
| HIGH | 10 | 10 | |
| 10 | 5 | 2 | 3 |
| 11 | 5 | 5 | |
| 12.1 | 10 | 10 | |
| 13.3 | 20 | | |
| 14.7 | 5 | | |
| 16.2 | 10 | | |
| 17.8 | 20 | 4.5 | |
| 19.6 | 5 | | 2 |
| 21.5 | 10 | | 5 |
| 23.7 | 5 | | |
| 26.1 | 10 | | 10 |
| 28.7 | 20 | | |
| 31.6 | 5 | | |
| 34.8 | 10 | | |
| 38.3 | 20 | | |

TABLE 6. SOFT-START PIN-STRAP/RESISTOR SETTINGS (Continued)

| R_{SS} (k Ω) | DELAY TIME (ms) | RAMP TIME (ms) | UVLO (V) |
|---------------------------|--------------------|-------------------|-------------|
| 42.2 | 5 | 2 | 10.8 |
| 46.4 | 10 | | |
| 51.1 | 5 | 5 | |
| 56.2 | 10 | | |
| 61.9 | 20 | | |
| 68.1 | 5 | 10 | |
| 75 | 10 | | |
| 82.5 | 20 | | |

With the SS pin OPEN, the default value for delay time and ramp time is 5ms. The soft-start delay and ramp times are set to custom values via the PMBus interface. When the delay time is set to 0ms, the device begins its ramp-up after the internal circuitry has initialized (approximately 2ms). When the soft-start ramp period is set to 0ms, the output ramps up as quickly as the output load capacitance and loop settings allow. It is generally recommended to set the soft-start ramp to a value greater than 500 μ s to prevent inadvertent fault conditions due to excessive in-rush current.

The ZL9006M has a minimum t_{ON_DELAY} requirement that is a function of the operating mode. [Table 7](#) shows the different mode configurations and the minimum t_{ON_DELAY} required for each mode. Current sharing is configured with the ISHARE_CONFIG PMBus command, auto compensation is configured with the AUTO_COMP_CONFIG command, and Standby Mode is configured as Low Power with the USER_CONFIG command. See [“PMBus Commands Description” on page 32](#) for details. Resistor programming on the SS pin with a delay time of 20ms can be used to satisfied the minimum t_{ON_DELAY} of 15ms.

TABLE 7. MINIMUM t_{ON_DELAY} vs OPERATING MODE

| CURRENT SHARING | AUTOCOMP | LOW-POWER STANDBY | MIN. t_{ON_DELAY} (ms) |
|-----------------|----------|-------------------|------------------------------|
| X | Disabled | False | 5 |
| Disabled | Enabled | False | 5 |
| Disabled | X | True | 10 |
| Enabled | Disabled | True | 15 |
| Enabled | Enabled | X | 15 |

Power-Good

The ZL9006M provides a Power-Good (PG) signal that indicates the output voltage is within a specified tolerance of its target level and no fault condition exists. By default, the PG pin asserts if the output is within +15%/-10% of the target voltage. These limits and the polarity of the pin may be changed via the PMBus interface. See [“PMBus Commands Description” on page 32](#) for details.

A PG delay period is defined as the time when all conditions within the ZL9006M for asserting PG are met, to when the PG pin is actually asserted. This feature is commonly used instead of using an external reset controller to control external digital logic.

By default, the ZL9006M PG delay is set to 1ms, and may be changed using the PMBus as described in [“PMBus Commands Description” on page 32](#).

By default, the ZL9006M PG delay is set equal to the soft-start ramp time setting. Therefore, if the soft-start ramp time is set to 6ms, the PG delay is set to 6ms. The PG delay may be set independently of the soft-start ramp using the PMBus as described in [“PMBus Commands Description” on page 32](#).

If Auto Comp is enabled, the PG timing is further controlled by the PG assert parameter, as described in [“Loop Compensation” on page 19](#).

Switching Frequency and PLL

The ZL9006M incorporates an internal phase-locked loop (PLL) to clock the internal circuitry. The PLL can be driven by an external clock source connected to the SYNC pin. When using the internal oscillator, the SYNC pin can be configured as a clock source for other Intersil digital devices. With the FCO pin, the SYNC pin can be configured as input, Auto detect, and Output. Pinstrap resistor setting to “input” mode is applicable for member devices used in current sharing mode only.

When multiple modules are used together, connecting the SYNC pins together will force all devices to synchronize with each other. One device must set its SYNC pin as an output and the remaining devices must have their SYNC pins set as Auto Detect.

SYNC AUTO DETECT

In Auto Detect mode, the module will check for a clock signal on the SYNC pin immediately after power-up. In this case, the incoming clock signal must be in the range of 300kHz to 1.0MHz and must be stable within 10μs after V25 rises above 2.25V. If the device is in Low Power Mode, it will check for a clock signal on the SYNC pin immediately after EN goes true. In this case, the incoming clock signal must be in range and stable before EN goes true. If a clock signal is present, the ZL9006M's oscillator will then synchronize with the rising edge of the external clock.

If no incoming clock signal is present, the ZL9006M will configure the switching frequency according to an external resistor, R_{SYNC}, connected between SYNC and SGND using [Table 8](#), given that FCO used pin-strap or has a resistor R_{FCO} in the range of 10kΩ to 13.3kΩ. When FCO is OPEN, or used with resistor settings in the range, the switching frequency of the ZL9006M is set to a default of 615kHz. The module will only read the SYNC pin connection during the first start-up sequence; changes to SYNC pin connections will not affect f_{SW} until the power (VDD) is cycled

off and on. Frequency modifications without restarting the VDD power can disable the SYNC auto detect function.

SYNC OUTPUT

When the SYNC pin is configured as an output via PMBus, the device will run from its internal oscillator and will drive the resulting internal oscillator signal onto the SYNC pin so other devices can be synchronized to it. The SYNC pin will not be checked for an incoming clock signal while in this mode.

When FCO is used with resistor settings in the range of 14.7kΩ to 31.6kΩ, the ZL9006M drives the SYNC pin with frequency as described in [Table 9](#), and will ignore any resistor settings on the SYNC pin. Similarly, when FCO is used with a selected value of resistors in the range of 46.4kΩ to 178kΩ, the ZL9006M operates in current sharing mode with the SYNC pin providing clock out.

When FCO is used with resistor settings in the range of 34.8kΩ to 42.2kΩ, ZL9006M will first read the SYNC pin connection, and drives the SYNC pin with the frequency described in [Table 8](#). In this mode, the SYNC pin should not be pin strapped to LOW or HIGH (voltage source). It is recommended to connect a buffer with high impedance, as seen by the SYNC pin of the module providing the clock out, to subsequently drive the SYNC pin of other devices.

SYNC SETTING VIA PMBUS CONSIDERATION

The switching frequency can be set to any value between 300kHz and 1.0MHz using the PMBus interface. The available frequencies below 1.0MHz are defined by $f_{SW} = 8\text{MHz}/N$, where the whole number N is $8 \leq N \leq 27$.

If a value other than $f_{SW} = 8\text{MHz}/N$ is entered using a PMBus command, the internal circuitry will select the valid switching frequency value that is closest to the entered value. For example, if 810kHz is entered, the device will select 800kHz (N = 10).

TABLE 8. SWITCHING FREQUENCY PIN-STRAP/RESISTOR SETTINGS

| SYNC PIN/ R _{SYNC} (kΩ) | f _{SW} (kHz) | SYNC PIN/ R _{SYNC} (kΩ) | f _{SW} (kHz) |
|-------------------------------------|--------------------------|-------------------------------------|--------------------------|
| LOW | 400 | 23.7 | 471 |
| OPEN | 615 | 26.1 | 533 |
| HIGH | 800 | 28.7 | 571 |
| 14.7 | 296 | 31.6 | 615 |
| 16.2 | 320 | 34.8 | 727 |
| 17.8 | 364 | 38.3 | 800 |
| 19.6 | 400 | 46.4 | 889 |
| 21.5 | 421 | 51.1 | 1000 |

Loop Compensation

The ZL9006M operates as a voltage-mode synchronous buck controller with a fixed frequency PWM scheme. The module is internally compensated via the PMBus interface. The auto compensation feature measures the characteristics of the power train and calculates the proper tap coefficients, and can be configured according to an external resistor, R_{FCO} , connected between FCO and SGND in [Table 9](#).

If the device is configured to store auto comp values, the calculated compensation values will be saved in the Auto Comp Store and may be read back through the PID_TAPS command. If repeat mode is enabled, the first Auto Comp results after the first ramp will be stored; the values calculated periodically are not stored in the Auto Comp Store. When compensation values are saved in the Auto Comp Store, the device will use those compensation values on subsequent ramps. In repeat mode, the latest Auto Comp results will always be used during operation. Stored Auto Comp results can only be cleared by disabling Auto Comp Store, which is not permitted while the output is enabled. However, sending the AUTOCOMP_CONTROL command while enabled in Store mode will cause the next results to be stored, overwriting previously stored values. If auto compensation is disabled, the device will use the compensation parameters that are stored in the DEFAULT_STORE or USER_STORE.

If the PG assert parameter is set to "Use PG Delay," PG will be asserted according to the POWER_GOOD_DELAY command, after which Auto Comp will begin. When Auto Comp is enabled, the user must not program a Power-Good Delay that will expire before the ramp is finished. If PG assert is set to "After Auto Comp," PG will be asserted immediately after the first Auto Comp cycle completes (POWER_GOOD_DELAY will be ignored).

The routine can be set via the PMBus interface to execute one time after ramp or periodically while regulating, and have either PG assert behavior described earlier. Note that the auto compensation feature requires a minimum t_{ON_DELAY} as described in ["Soft-Start Delay and Ramp Times"](#) on page 17.

The Auto Comp Gain control scales the Auto Comp results to allow a trade-off between transient response and steady-state duty cycle jitter. A setting of 100% will provide the fastest transient response while a setting of 10% will produce the lowest jitter.

With resistor settings, auto compensation can only be set to execute one time after ramp with option to store auto comp values. With auto compensation disabled, PG is asserted according to POWER_GOOD_DELAY. With auto compensation executed once and auto comp values not stored, PG is asserted after auto compensation is complete at every start-up event. With auto compensation executed once and auto comp values stored, PG is asserted after auto compensation is complete at the first start-up event, and is asserted according to POWER_GOOD_DELAY for subsequent start-up event along with using the stored auto comp values from the first start-up. By default with FCO OPEN, auto compensation is configured to execute one time after ramp with 70% Auto Comp Gain, PG asserted immediately after the first Auto Comp cycle completes, and auto comp values not stored.

Note that if Auto Comp is enabled, for best results V_{IN} must be stable before Auto Comp begins, as shown in [Equation 3](#).

$$\frac{\Delta V_{in}}{V_{inNom}} (in\%) \leq \frac{100\%}{1 + \frac{256 \cdot V_{out}}{V_{inNom}}} \quad (EQ. 3)$$

The auto compensation function can also be configured via the AUTO_COMP_CONFIG command and controlled using the AUTO_COMP_CONTROL command over the PMBus interface. Please refer to ["PMBus Commands Description"](#) on page 32 for further details.

TABLE 9. FCO PIN-STRAP/RESISTOR SETTINGS

| FCO PIN/ R_{FCO} (kΩ) | AUTOCOMP CONFIG | | | SYNC PIN CONFIG | SYNC OVERRIDE |
|----------------------------|--------------------------|------------|----------------|--------------------|--------------------|
| | AC SINGLE/ DISABLE | AC GAIN | STORE VALUES | | |
| LOW | Auto Comp Disabled | | | Auto Detect | |
| OPEN | Single | 70 | Not Stored | | |
| HIGH | | | Store in Flash | | |
| 10 | Single | 50 | Not Stored | Auto Detect | |
| 11 | | | Store in Flash | | |
| 12.1 | | 90 | Not Stored | | |
| 13.3 | | | Store in Flash | | |
| 14.7 | Auto Comp Disabled | | | Output | 400kHz |
| 16.2 | Single | 70 | Not Stored | | |
| 17.8 | | | Store in Flash | | |
| 19.6 | Auto Comp Disabled | | | | 615kHz |
| 21.5 | Single | 70 | Not Stored | | |
| 23.7 | | | Store in Flash | | |
| 26.1 | Auto Comp Disabled | | | | 800kHz |
| 28.7 | Single | 70 | Not Stored | | |
| 31.6 | | | Store in Flash | | |
| 34.8 | Auto Comp Disabled | | | | Depend on RSYNC |
| 38.3 | Single | 70 | Not Stored | | |
| 42.2 | | | Store in Flash | | |

Adaptive Diode Emulation

Adaptive diode emulation mode turns off the low-side FET gate drive at low load currents to prevent the inductor current from going negative, reducing the energy losses and increasing overall efficiency. Diode emulation is available to single-phase devices only.

Note: the overall bandwidth of the device may be reduced when in diode emulation mode. Disabling the diode emulation prior to applying significant load steps is recommended.

Input Undervoltage Lockout

The input undervoltage lockout (UVLO) prevents the ZL9006M from operating when the input falls below a preset threshold, indicating the input supply is out of its specified range.

The UVLO threshold (V_{UVLO}) can be set between 2.85V and 16V using the PMBus interface.

Once an input undervoltage fault condition occurs, the device can respond in a number of ways, as follows:

1. Continue operating without interruption.
2. Continue operating for a given delay period, followed by shutdown if the fault still exists. The device remains in shutdown until instructed to restart.
3. Initiate an immediate shutdown until the fault is cleared. The user can select a specific number of retry attempts.

The default response from a UVLO fault is an immediate shutdown of the module. The controller continuously checks for the presence of the fault condition. If the fault condition is no longer present, the ZL9006M is re-enabled.

Output Overvoltage Protection

The ZL9006M offers an internal output overvoltage protection circuit that can be used to protect sensitive load circuitry from being subjected to a voltage higher than its prescribed limits. A hardware comparator is used to compare the actual output voltage (seen at the FB+ pin) to a threshold set to 15% higher than the target output voltage (the default setting). If the FB+ voltage exceeds this threshold, the PG pin deasserts, and the controller can then respond in a number of ways, as follows:

1. Initiate an immediate shutdown until the fault is cleared. The user can select a specific number of retry attempts.
2. Turn off the high-side and turn on the low-side MOSFETs until the device attempts a restart.

The default response from an overvoltage fault is to immediately shut down. The controller continuously checks for the presence of the fault condition, and when the fault condition no longer exists, the device is re-enabled.

For continuous overvoltage protection when operating from an external clock, the only allowed response is an immediate shutdown.

Please refer to [“PMBus Commands Description” on page 32](#) for details on how to select specific overvoltage fault response options via PMBus.

Output Prebias Protection

An output prebias condition exists when an externally applied voltage is present on a power supply’s output before the power supply’s control IC is enabled. Certain applications require that the converter not be allowed to sink current during start-up if a prebias condition exists at the output. The ZL9006M provides prebias protection by sampling the output voltage prior to initiating an output ramp.

If a prebias voltage lower than the target voltage exists after the preconfigured delay period has expired, the target voltage is set to match the existing prebias voltage, and both drivers are

enabled. The output voltage is then ramped to the final regulation value at the preconfigured ramp rate.

The actual time the output takes to ramp from the prebias voltage to the target voltage varies, depending on the prebias voltage, but the total time elapsed from when the delay period expires and when the output reaches its target value will match the preconfigured ramp time (see [Figure 21](#)).

If a prebias voltage higher than the target voltage exists after the preconfigured delay period has expired, the target voltage is set to match the existing prebias voltage, and both drivers are enabled with a PWM duty cycle that would ideally create the prebias voltage.

Once the preconfigured soft-start ramp period has expired, the PG pin is asserted (assuming the prebias voltage is not higher than the overvoltage limit). The PWM then adjusts its duty cycle to match the original target voltage, and the output ramps down to the preconfigured output voltage.

If a prebias voltage higher than the overvoltage limit exists, the device does not initiate a turn-on sequence and declares an overvoltage fault condition to exist. In this case, the device responds based on the output overvoltage fault response method that has been selected. See [“Output Overvoltage Protection” on page 20](#) for response options due to an overvoltage condition.

Note that prebias protection is not offered for current sharing groups that also have tracking enabled. V_{DD} must be the same voltage as V_{IN} for proper prebias start-up in single module operation.

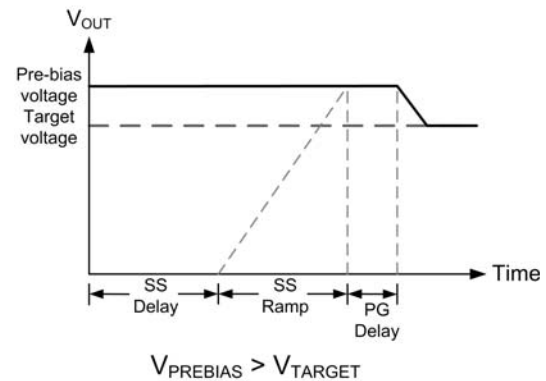
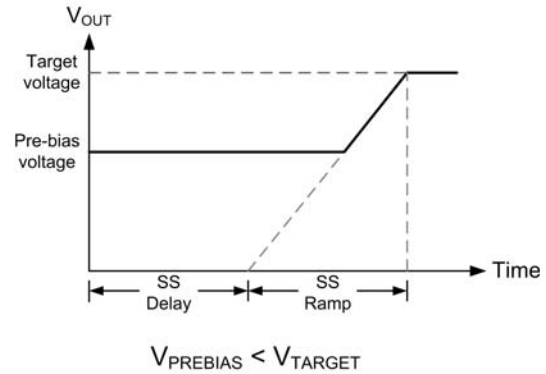


FIGURE 21. OUTPUT RESPONSES TO PREBIAS VOLTAGES

Output Overcurrent Protection

The ZL9006M can protect the power supply from damage if the output is shorted to ground or if an overload condition is imposed on the output. The following overcurrent protection response options are available:

1. Initiate a shutdown and attempt to restart an infinite number of times with a preset delay period between attempts.
2. Initiate a shutdown and attempt to restart a preset number of times with a preset delay period between attempts.
3. Continue operating for a given delay period, followed by shutdown if the fault still exists.
4. Continue operating through the fault (this could result in permanent damage to the power supply).
5. Initiate an immediate shutdown.

The default response from an overcurrent fault is an immediate shutdown of the controller. The controller continuously checks for the presence of the fault condition, and if the fault condition no longer exists, the device is re-enabled.

Please refer to [“PMBus Commands Description” on page 32](#) for details on how to select specific overcurrent fault response options via PMBus.

Thermal Overload Protection

The ZL9006M includes a thermal sensor that continuously measures the internal temperature of the module and shuts down the controller when the temperature exceeds the preset limit. The default temperature limit is set to +125°C in the factory, but the user may set the limit to a different value if desired. See [“PMBus Commands Description” on page 32](#) for details. Note that setting a higher thermal limit via the PMBus interface may result in permanent damage to the controller. Once the module has been disabled due to an internal temperature fault, the user may select one of several fault response options as follows:

1. Initiate a shutdown and attempt to restart an infinite number of times with a preset delay period between attempts.
2. Initiate a shutdown and attempt to restart a preset number of times with a preset delay period between attempts.
3. Continue operating for a given delay period, followed by shutdown if the fault still exists.
4. Continue operating through the fault (this could result in permanent damage to the power supply).
5. Initiate an immediate shutdown.

If the user has configured the module to restart, the controller waits the preset delay period (if configured to do so) and then checks the module temperature. If the temperature has dropped below a threshold that is approximately +15°C lower than the selected temperature fault limit, the controller attempts to restart. If the temperature still exceeds the fault limit, the controller waits the preset delay period and retries again.

The default response from a temperature fault is an immediate shutdown of the module. The controller continuously checks for the fault condition, and once the fault has cleared, the ZL9006M is re-enabled.

Please refer to [“PMBus Commands Description” on page 32](#) for details on how to select specific temperature fault response options via PMBus.

Voltage Tracking

Numerous high performance systems place stringent demands on the order in which the power supply voltages are turned on. This is particularly true when powering FPGAs, ASICs, and other advanced processor devices that require multiple supply voltages to power a single die. In most cases, the I/O interface operates at a higher voltage than the core and therefore the core supply voltage must not exceed the I/O supply voltage according to the manufacturers' specifications. Voltage tracking protects these sensitive ICs by limiting the differential voltage between multiple power supplies during the power-up and power down sequence.

The ZL9006M integrates a lossless tracking scheme that allows its output to track a voltage that is applied to the VTRK pin with no external components required. The VTRK pin is an analog input that, when tracking mode is enabled, configures the voltage applied to the VTRK pin to act as a reference for the device's output regulation. [Figure 22](#) illustrates the typical connection of two tracking modules.

The ZL9006M offers two modes of tracking as follows, and can be configured according to an external resistor, R_{SS} , connected between SS and SGND in [Table 10](#) or via PMBus. The t_{ON_DELAY} time is set to 5ms, and t_{OFF_DELAY} time is set to 35ms. The RAMP time is set to 2ms, but can track to a slower RAMP time, i.e., >2ms.

TABLE 10. TRACKING RESISTOR SETTINGS

| R_{SS} (k Ω) | TRACK RATIO (%) | UPPER TRACK LIMIT | RAMP-UP/DOWN BEHAVIOR |
|---------------------------|----------------------------|----------------------|------------------------------------|
| 90.9 | 100 | Limited by target | Output does not decrease before PG |
| 100 | | | Output always follows VTRK |
| 110 | | Limited by VTRK | Output does not decrease before PG |
| 121 | Output always follows VTRK | | |
| 133 | 50 | Limited by target | Output does not decrease before PG |
| 147 | | | Output always follows VTRK |
| 162 | | Limited by VTRK | Output does not decrease before PG |
| 178 | Output always follows VTRK | | |

1. **Coincident.** This mode configures the module to ramp its output voltage at the same rate as the voltage applied to the VTRK pin. Two options are available for this mode:
 - Track at 100% V_{OUT} limited. Member rail tracks the reference rail and stops when the member reaches its target voltage ([Figure 23A](#)).
 - Track at 100% VTRK limited. Member rail tracks the reference at the instantaneous voltage value applied to the VTRK pin ([Figure 23B](#)).

2. **Ratiometric.** This mode configures the module to ramp its output voltage at a rate that is a percentage of the voltage applied to the VTRK pin. The default setting is 50%, but an external resistor string may be used to configure a different tracking ratio:

- Track at 50% V_{OUT} limited. Member rail tracks the reference rail and stops when the member reaches 50% of the target voltage (Figure 24A).
- Track at 50% VTRK limited. Member rail tracks the reference at the instantaneous voltage value applied to the VTRK pin until the member rail reaches 50% of the reference rail voltage, or if the member is configured to less than 50% of the reference the member will achieve its configured target (Figure 24B).

The master module device in a tracking group is defined as the device that has the highest target output voltage within the group. This master device will control the ramp rate of all tracking devices and is not configured for tracking mode. A delay of at least 6ms must be configured into the master device, and the user may also configure a specific ramp rate. Any device that is configured for tracking mode will ignore its soft-start delay and its output will take on the turn-on/turn-off characteristics of the reference voltage present at the VTRK pin. All of the ENABLE pins in the tracking group must be connected together and driven by a single logic source. Tracking is configured via the PMBus interface by using the TRACK_CONFIG PMBus command. Please refer to “PMBus Commands Description” on page 32 for further details on configuring tracking mode using PMBus.

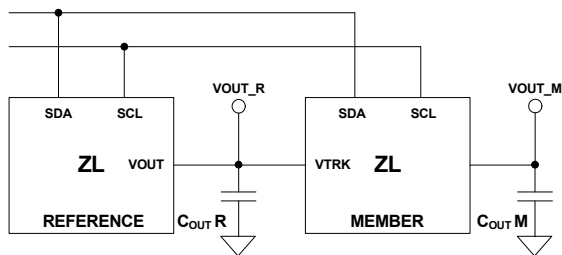


FIGURE 22. PMBus TRACKING CONFIGURATION

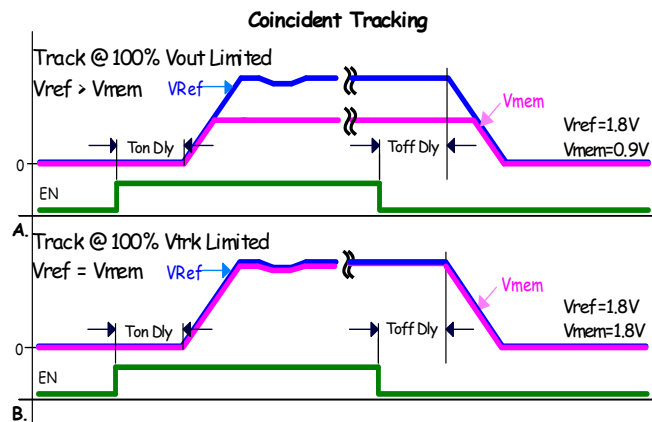


FIGURE 23. COINCIDENT TRACKING

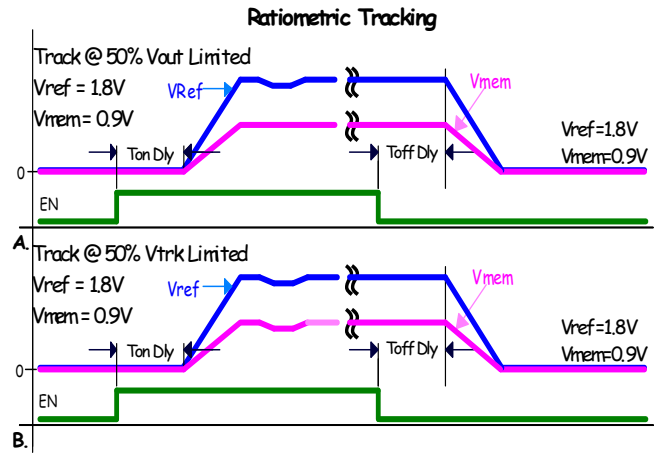


FIGURE 24. RATIOMETRIC TRACKING

When the ZL9006M is configured to the voltage tracking mode, the voltage applied to the VTRK pin acts as a reference for the member device(s) output regulation. When the Auto Compensation algorithm is used the soft-start values (rise/fall times) are used to calculate the loop gain used during the turn-on/turn-off ramps. If current sharing is used, constrain the rise/fall time between 5 and 20ms to ensure current sharing while ramping.

Tracking Groups

In a tracking group, the device configured to the highest voltage within the group is defined as the reference device. The device(s) that track the reference is called member device(s). The reference device will control the ramp delay and ramp rate of all tracking devices and is not placed in the tracking mode. The reference device is configured to the highest output voltage for the group and all other device(s) output voltages are meant to track and never exceed the reference device output voltage. The reference device must be configured to have a minimum Time-On Delay and Time-On Rise as shown in Equation 4:

$$t_{ON_DLY}(REF) \geq t_{ON_DLY}(MEM) + t_{ON_RISE}(REF) + 5ms \geq t_{ON_DLY}(MEM) + 6ms \tag{EQ. 4}$$

This delay allows the member device(s) to prepare their control loops for tracking following the assertion of ENABLE.

The member device time-off delay has been redefined to describe the time that the VTRK pin will follow the reference voltage after enable is deasserted. The delay setting sets the timeout for the member's output voltage to turn off in the event that the reference output voltage does not achieve zero volts.

The member device(s) must have a minimum time-off delay of as shown in Equation 5:

$$t_{OFF_DLY}(MEM) \geq t_{OFF_DLY}(REF) + t_{OFF_FALL}(REF) + 5ms \tag{EQ. 5}$$

All of the ENABLE pins must be connected together and driven by a single logic source or a PMBus Broadcast Enable command may be used.

The configuration settings for [Figures 23](#) and [24](#) are shown in [Tables 11](#) through [14](#). In each case the reference and member rise times are set to the same value.

TABLE 11. TRACKING CONFIGURATION (Figure 23A)

| RAIL | V _{OUT} (V) | t _{ON DLY} (ms) | t _{ON RISE} (ms) | t _{OFF DLY} (ms) | t _{OFF FALL} (ms) | MODE |
|-----------|----------------------|--------------------------|---------------------------|---------------------------|----------------------------|-------------------------------|
| Reference | 1.8 | 15 | 5 | 5 | 5 | Tracking Disabled |
| Member | 0.9 | 5 | 5 | 15 | 5 | 100% V _{OUT} Limited |

TABLE 12. TRACKING CONFIGURATION (Figure 23B)

| RAIL | V _{OUT} (V) | t _{ON DLY} (ms) | t _{ON RISE} (ms) | t _{OFF DLY} (ms) | t _{OFF FALL} (ms) | MODE |
|-----------|----------------------|--------------------------|---------------------------|---------------------------|----------------------------|-------------------------------|
| Reference | 1.8 | 15 | 5 | 5 | 5 | Tracking Disabled |
| Member | 1.8 | 5 | 5 | 15 | 5 | 100% V _{TRK} Limited |

TABLE 13. TRACKING CONFIGURATION (Figure 24A)

| RAIL | V _{OUT} (V) | t _{ON DLY} (ms) | t _{ON RISE} (ms) | t _{OFF DLY} (ms) | t _{OFF FALL} (ms) | MODE |
|-----------|----------------------|--------------------------|---------------------------|---------------------------|----------------------------|------------------------------|
| Reference | 1.8 | 15 | 5 | 5 | 5 | Tracking Disabled |
| Member | 0.9 | 5 | 5 | 15 | 5 | 50% V _{OUT} Limited |

TABLE 14. TRACKING CONFIGURATION (Figure 24B)

| RAIL | V _{OUT} (V) | t _{ON DLY} (ms) | t _{ON RISE} (ms) | t _{OFF DLY} (ms) | t _{OFF FALL} (ms) | MODE |
|-----------|----------------------|--------------------------|---------------------------|---------------------------|----------------------------|------------------------------|
| Reference | 1.8 | 15 | 5 | 5 | 5 | Tracking Disabled |
| Member | 1.8 | 5 | 5 | 15 | 5 | 50% V _{TRK} Limited |

Voltage Margining

The ZL9006M offers a simple means to vary its output higher or lower than its nominal voltage setting in order to determine whether the load device is capable of operating over its specified supply voltage range. The MGN command is set through the PMBus interface.

The module's output will be forced higher than its nominal set point when the MGN command is set HIGH, and the output will be forced lower than its nominal set point when the MGN command is set LOW. Default margin limits of V_{NOM} ±5% are preloaded in the factory, but the margin limits can be modified through the PMBus interface to as high as V_{NOM} + 10% or as low as 0V, where V_{NOM} is the nominal output voltage set point determined by the V1 pin.

The margin limits and the MGN command can both be set individually through the PMBus interface. Additionally, the transition rate between the nominal output voltage and either margin limit can be configured through the PMBus interface. Please refer to [“PMBus Commands Description” on page 32](#) for further instructions on modifying the margining configurations.

Digital-DC Bus

The Digital-DC Communications (DDC) bus is used to communicate between Intersil Digital-DC modules and devices. This dedicated bus provides the communication channel between devices for features such as sequencing, fault spreading, and current sharing. The DDC pin on all Digital-DC devices in an application should be connected together. A pull-up resistor is required on the DDC bus in order to guarantee the rise time as shown in [Equation 6](#):

$$\text{Rise Time} = R_{PU} * C_{LOAD} \approx 1\mu\text{s} \quad (\text{EQ. 6})$$

where R_{PU} is the DDC bus pull-up resistance and C_{LOAD} is the bus loading. The pull-up resistor may be tied to an external 3.3V or 5V supply as long as this voltage is present prior to or during device power-up. As a rule of thumb, each device connected to the DDC bus presents approximately 10pF of capacitive loading, and each inch of FR4 PCB trace introduces approximately 2pF. The ideal design uses a central pull-up resistor that is well-matched to the total load capacitance. The minimum pull-up resistance should be limited to a value that enables any device to assert the bus to a voltage that ensures a logic 0 (typically 0.8V at the device monitoring point), given the pull-up voltage and the pull-down current capability of the ZL9006M (nominally 4mA).

Output Sequencing

A group of Digital-DC modules or devices may be configured to power-up in a predetermined sequence. This feature is especially useful when powering advanced processors, FPGAs, and ASICs that require one supply to reach its operating voltage prior to another supply reaching its operating voltage in order to avoid latch-up. Multidevice sequencing can be achieved by configuring each device through the PMBus interface.

Multiple device sequencing is configured by issuing PMBus commands to assign the preceding device in the sequencing chain as well as the device that follows in the sequencing chain.

The Enable pins of all devices in a sequencing group must be tied together and driven high to initiate a sequenced turn-on of the group. Enable must be driven low to initiate a sequenced turnoff of the group.

Refer to [“PMBus Commands Description” on page 32](#) for details on sequencing via the PMBus interface.

Fault Spreading

Digital DC modules and devices can be configured to broadcast a fault event over the DDC bus to the other devices in the group. When a nondestructive fault occurs and the device is configured to shut down on a fault, the device shuts down and broadcasts the fault event over the DDC bus. The other devices on the DDC bus shut down together, if configured to do so, and attempt to restart in their prescribed order.

Monitoring Via PMBus

A system controller can monitor a wide variety of different ZL9006M system parameters through the PMBus interface. The device can monitor for fault conditions by monitoring the SALRT pin, which will be pulled low when any number of preconfigured fault conditions occur.

The module can be monitored continuously for any number of power conversion parameters including the following:

- Input voltage
- Output voltage
- Output current
- Internal temperature
- External temperature
- Switching frequency
- Duty cycle

The PMBus host should respond to SALRT as follows:

1. ZL device pulls SALRT low.
2. PMBus host detects that SALRT is now low, performs transmission with Alert Response Address to find which ZL device is pulling SALRT low.
3. PMBus host talks to the ZL device that has pulled SALRT low. The actions that the host performs are up to the system designer.

If multiple devices are faulting, SALRT will still be low after doing the above steps and will require transmission with the Alert Response Address repeatedly until all faults are cleared.

Please refer to [“PMBus Commands Description” on page 32](#) for details on how to monitor specific parameters via the PMBus interface.

Temperature Monitoring Using the XTEMP Pin

The ZL9006M supports measurement of an external device temperature using either a thermal diode integrated in a processor, FPGA or ASIC, or using a discrete diode-connected 2N3904 NPN transistor. [Figure 25](#) illustrates the typical connections required.

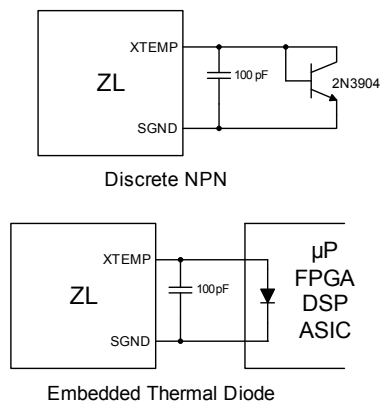


FIGURE 25. EXTERNAL TEMPERATURE MONITORING

SnapShot Parameter Capture

The ZL9006M offers a special feature that enables the user to capture parametric data during normal operation or following a fault. The SnapShot functionality is enabled by setting Bit 1 of MISC_CONFIG command to 1. The SnapShot feature enables the user to read parameters via a block read transfer through the SMBus. This can be done during normal operation, although it should be noted that reading the 32 bytes occupies the SMBus for a period of time.

The SNAPSHOT_CONTROL command enables the user to store the SnapShot parameters to flash memory in response to a pending fault, as well as to read the stored data from flash memory after a fault has occurred. In order to read the stored data from flash memory, two conditions must apply:

1. The module should be disabled.
2. SnapShot mode should be disabled by changing bit 1 of MISC_CONFIG to 0. This is to prevent firmware from updating RAM values after the fault with current values.

[Table 15](#) describes the usage of SNAPSHOT_CONTROL command. Automatic writes to flash memory following a fault are triggered when any fault threshold level is exceeded, provided that the specific fault's response is to shut down (writing to flash memory is not allowed if the device is configured to retry following the specific fault conditions).

TABLE 15. SNAPSHOT_CONTROL COMMAND

| DATA VALUE | DESCRIPTION |
|------------|--|
| 1 | Copies current SNAPSHOT values from flash memory to RAM for immediate access using SNAPSHOT command. |
| 2 | Writes current SNAPSHOT values to Flash memory. Only available when device is disabled. |

It should be noted that the device's VDD voltage must be maintained during the time when the device is writing the data to flash memory; a process that requires up to 1400µs. Undesirable results may be observed if the device's VDD supply drops below 3.0V during the process.

The following is a recommended procedure for using the SnapShot parameter capture after a fault:

1. Configure the module using config file (optional).
2. Enable the SnapShot mode by setting bit 1 of MISC_CONFIG command to 1. This can be done before or after the module is enabled. Note: do not store MISC_CONFIG: SNAPSHOT setting in default/user store.
3. At this point the module starts capturing operational parameters in RAM for SNAPSHOT, every firmware cycle.
4. The module is configured to capture operational parameters after a fault during operation.
5. After the fault, disable the SnapShot mode by setting bit 1 of MISC_CONFIG command to 0. This is to prevent firmware from updating RAM values after the fault with current values.
6. Disable the module.

7. Send `SNAPSHOT_CONTROL` command 1 to read the stored data from flash memory into RAM at any time. Issue a `SNAPSHOT` command to read the data from RAM via SMBus.
8. Repeat step 7 to retrieve `SNAPSHOT` parameters after a power cycle. It is important to make sure SnapShot mode is disabled in `MISC_CONFIG` command.

Nonvolatile Memory and Device Security Features

The ZL9006M has internal nonvolatile memory where user configurations are stored. Integrated security measures ensure that the user can only restore the module to a level that has been made available to them.

During the initialization process, the ZL9006M checks for stored values contained in its internal nonvolatile memory. The ZL9006M offers two internal memory storage units that are accessible by the user as follows:

1. **Default Store:** The ZL9006M has a default configuration that is stored in the default store in the controller. The module can be restored to its default settings by issuing a `RESTORE_DEFAULT_ALL` command over the PMBus.
2. **User Store:** The user can modify certain power supply settings as described in this data sheet. The user stores their configuration in the user store.

Please refer to [“PMBus Commands Description” on page 32](#) for details on how to set specific security measures via the PMBus interface.

Layout Guide

To achieve stable operation, low losses, and good thermal performance, some layout considerations are necessary ([Figure 26](#)).

- Establish a continuous ground plane connecting the DGND pin and PGND pin F10 with via directly to the ground plane.
- Establish SGND island connecting (Pad 3, Pin C1) and the return path of analog signals and resistor programming pin signals.
- Establish PGND island connecting PGND (Pad 2, 5, Pin F10).
- Make a single point connection between SGND and PGND islands.
- Place a high frequency ceramic capacitor between (1) VIN and PGND (Pad 2) (2) VOUT and PGND (Pad 5) as close to the module as possible to minimize high frequency noise. High frequency ceramic capacitors close to the module between VOUT and PGND will help to minimize noise at the output ripple.
- Use large copper areas for power path (VIN, PGND, VOUT, SW) to minimize conduction loss and thermal stress. Also, use multiple vias to connect the power planes in different layers.
- Connect remote sensed traces FB+ and FB- to the regulation point to achieve a tight output voltage regulation, and keep them in parallel. Route a trace from FB- to a location near the

load ground, and a trace from FB+ to the point-of-load where the tight output voltage is desired.

- Avoid routing any sensitive signal traces, such as the VOUT, FB+, FB- sensing point near the SW pad.

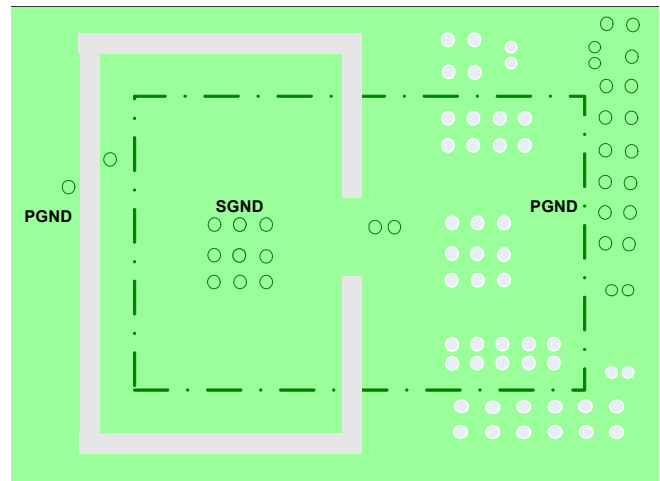
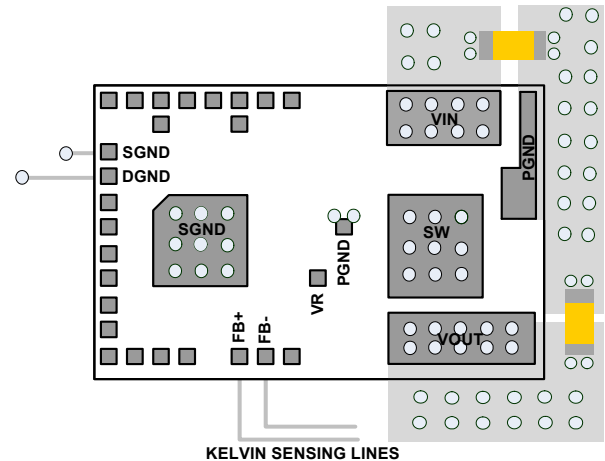


FIGURE 26. RECOMMENDED LAYOUT

Thermal Considerations

Experimental power loss curves along with θ_{JA} from thermal modeling analysis can be used to evaluate the thermal consideration for the module. The derating curves are derived from the maximum power allowed while maintaining the temperature below the maximum junction temperature of +125°C. In actual application, other heat sources and design margin should be considered.

Package Description

The structure of ZL9006M belongs to the High Density Array (HDA) package. This kind of package has advantages, such as good thermal and electrical conductivity, low weight and small size. The HDA package is applicable for surface mounting technology. The ZL9006M contains several types of devices, including resistors, capacitors, inductors and control ICs. The ZL9006M is a copper leadframe based package with exposed copper thermal pads, which have good electrical and thermal conductivity. The copper lead frame and multicomponent assembly is overmolded with polymer mold compound to protect these devices.

The package outline and typical PCB layout pattern design and typical stencil pattern design are shown in the package outline drawing Y32.17.2x11.45 on page 66. The module has a small size of 17.2mm x 11.45mm x 2.5mm. [Figure 27](#) shows typical reflow profile parameters. These guidelines are general design rules. Users could modify parameters according to their application.

PCB Layout Pattern Design

The bottom of the ZL9006M is a leadframe footprint, which is attached to the PCB by surface mounting process. The PCB layout pattern is shown in the Package Outline Drawing Y32.17.2x11.45 on [page 66](#). The PCB layout pattern is essentially 1:1 with the HDA exposed pad and I/O termination dimensions. The thermal lands on the PCB layout should match 1:1 with the package exposed die pads.

Thermal Vias

A grid of 1.0mm to 1.2mm pitch thermal vias, which drops down and connects to buried copper plane(s), should be placed under the thermal land. The vias should be about 0.3mm to 0.33mm in diameter with the barrel plated to about 1.0 ounce copper. Although adding more vias (by decreasing via pitch) will improve the thermal performance, diminishing returns will be seen as more and more vias are added. Simply use as many vias as practical for the thermal land size and your board design rules allow.

Stencil Pattern Design

Reflowed solder joints on the perimeter I/O lands should have about a 50µm to 75µm (2mil to 3mil) standoff height. The solder paste stencil design is the first step in developing optimized, reliable solder joints. Stencil aperture size to land size ratio should typically be 1:1. The aperture width may be reduced slightly to help prevent solder bridging between adjacent I/O lands. To reduce solder paste volume on the larger thermal lands, it is recommended that an array of smaller apertures be used instead of one large aperture. It is recommended that the stencil printing area cover 50% to 80% of the PCB layout pattern. A typical solder stencil pattern is shown in the Package Outline Drawing Y32.17.2x11.45 on [page 66](#). The gap width pad to pad is 0.6mm. The user should consider the symmetry of the whole stencil pattern when designing its pads. A laser cut, stainless steel stencil with electropolished trapezoidal walls is recommended. Electropolishing “smooths” the aperture walls resulting in reduced surface friction and better paste release which reduces voids. Using a trapezoidal section aperture (TSA) also promotes paste release and forms a “brick-like” paste deposit that assists in firm component placement. A 0.1mm to 0.15mm stencil thickness is recommended for this large pitch (1.3mm) HDA.

Reflow Parameters

Due to the low mount height of the HDA, “No Clean” Type 3 solder paste per ANSI/J-STD-005 is recommended. Nitrogen purge is also recommended during reflow. A system board reflow profile depends on the thermal mass of the entire populated board, so it is not practical to define a specific soldering profile just for the HDA. The profile given in [Figure 27](#) is provided as a guideline, to be customized for varying manufacturing practices and applications.

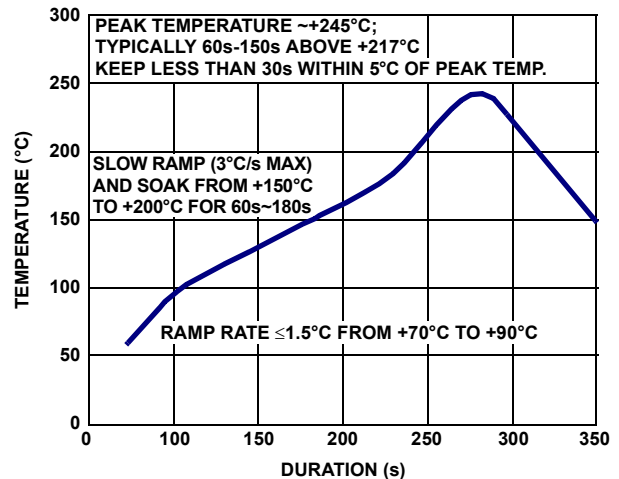


FIGURE 27. TYPICAL REFLOW PROFILE

PMBus Command Summary

| COMMAND CODE | COMMAND NAME | DESCRIPTION | TYPE | DATA FORMAT | DEFAULT VALUE | DEFAULT SETTING | PAGE |
|--------------|------------------------|--|-----------|-------------|---------------|--------------------------------|-------------------------|
| 01h | OPERATION | Sets Enable, Disable and VOUT margin modes. | R/W BYTE | BIT | | | page 32 |
| 02h | ON_OFF_CONFIG | Configures device to enable from EN pin or OPERATION command. | R/W BYTE | BIT | 16h | Pin Enable Soft Off | page 33 |
| 03h | CLEAR_FAULTS | Clears fault indications. | SEND BYTE | | | | page 33 |
| 11h | STORE_DEFAULT_ALL | Stores all PMBus values written since last restore at default level. | SEND BYTE | | | | page 33 |
| 12h | RESTORE_DEFAULT_ALL | Restores PMBus settings that were stored at default level. | SEND BYTE | | | | page 34 |
| 15h | STORE_USER_ALL | Stores all PMBus values written since last restore at user level. | SEND BYTE | | | | page 34 |
| 16h | RESTORE_USER_ALL | Restores PMBus settings that were stored in user level. | SEND BYTE | | | | page 34 |
| 20h | VOUT_MODE | Preset to defined data format of VOUT commands. | READ BYTE | BIT | 13h | Linear Mode, Exponent = -13 | page 34 |
| 21h | VOUT_COMMAND | Sets the nominal value of VOUT. | R/W WORD | L16u | | Pin Strap | page 34 |
| 22h | VOUT_TRIM | Sets trim value of VOUT. | R/W WORD | L16s | 0000h | 0V | page 35 |
| 23h | VOUT_CAL_OFFSET | Applies a fixed offset voltage to the VOUT_COMMAND. | R/W WORD | L16s | 0000h | 0V | page 35 |
| 24h | VOUT_MAX | Sets the maximum possible value of VOUT. | R/W WORD | L16u | | 1.1*VOUT Pin Strap | page 35 |
| 25h | VOUT_MARGIN_HIGH | Sets the value of the VOUT during a margin high. | R/W WORD | L16u | | 1.05*VOUT Pin Strap | page 35 |
| 26h | VOUT_MARGIN_LOW | Sets the value of the VOUT during a margin low. | R/W WORD | L16u | | 0.95*VOUT Pin Strap | page 35 |
| 27h | VOUT_TRANSITION_RATE | Sets the transition rate during margin or other change of VOUT. | R/W WORD | L11 | BA00h | 1V/ms | page 36 |
| 28h | VOUT_DROOP | Sets the loadline (V/I Slope) resistance for the rail. | R/W WORD | L11 | 0000h | 0mV/A | page 36 |
| 32h | MAX_DUTY | Sets the maximum allowable duty cycle. | R/W WORD | L11 | EAD6h | 90.75% | page 36 |
| 33h | FREQUENCY_SWITCH | Sets the switching frequency. | R/W WORD | L11 | | Pin Strap | page 36 |
| 37h | INTERLEAVE | Configures a phase offset between devices sharing a SYNC clock. | R/W WORD | BIT | | Based on PMBus address | page 37 |
| 38h | IOUT_CAL_GAIN | Sense resistance for inductor DCR current sensing. | R/W WORD | L11 | C2EEh | 2.93mV/A | page 37 |
| 39h | IOUT_CAL_OFFSET | Sets the current-sense offset. | R/W WORD | L11 | B667h | -0.4A | page 37 |
| 40h | VOUT_OV_FAULT_LIMIT | Sets the VOUT overvoltage fault threshold. | R/W WORD | L16u | | 1.15*VOUT Pin Strap | page 37 |
| 41h | VOUT_OV_FAULT_RESPONSE | Configures the VOUT overvoltage fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 38 |
| 44h | VOUT_UV_FAULT_LIMIT | Sets the VOUT undervoltage fault threshold. | R/W WORD | L16u | | 0.8*VOUT Pin Strap | page 38 |
| 45h | VOUT_UV_FAULT_RESPONSE | Configures the VOUT undervoltage fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 39 |

PMBus Command Summary (Continued)

| COMMAND CODE | COMMAND NAME | DESCRIPTION | TYPE | DATA FORMAT | DEFAULT VALUE | DEFAULT SETTING | PAGE |
|--------------|-----------------------|---|-----------|-------------|---------------|-----------------------|-------------------------|
| 46h | IOUT_OC_FAULT_LIMIT | Sets the IOUT average overcurrent fault threshold. | R/W WORD | L11 | D340h | 13A | page 39 |
| 4Bh | IOUT_UC_FAULT_LIMIT | Sets the IOUT average undercurrent fault threshold. | R/W WORD | L11 | D4C0h | -13A | page 39 |
| 4Fh | OT_FAULT_LIMIT | Sets the over-temperature fault threshold. | R/W WORD | L11 | EBE8h | +125 °C | page 40 |
| 50h | OT_FAULT_RESPONSE | Configures the over-temperature fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 40 |
| 51h | OT_WARN_LIMIT | Sets the over-temperature warning limit. | R/W WORD | L11 | EB70h | +110 °C | page 40 |
| 52h | UT_WARN_LIMIT | Sets the under-temperature warning limit. | R/W WORD | L11 | E580h | -40 °C | page 41 |
| 53h | UT_FAULT_LIMIT | Sets the under-temperature fault threshold. | R/W WORD | L11 | E490h | -55 °C | page 41 |
| 54h | UT_FAULT_RESPONSE | Configures the under-temperature fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 41 |
| 55h | VIN_OV_FAULT_LIMIT | Sets the VIN overvoltage fault threshold. | R/W WORD | L11 | D3A0h | 14.5V | page 41 |
| 56h | VIN_OV_FAULT_RESPONSE | Configures the VIN overvoltage fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 42 |
| 57h | VIN_OV_WARN_LIMIT | Sets the VIN overvoltage warning limit. | R/W WORD | L11 | D360h | 14.0V | page 42 |
| 58h | VIN_UV_WARN_LIMIT | Sets the VIN undervoltage warning limit. | R/W WORD | L11 | CA40h | 4.5V | page 42 |
| 59h | VIN_UV_FAULT_LIMIT | Sets the VIN undervoltage fault threshold. | R/W WORD | L11 | CA00h | 4.0V | page 43 |
| 5Ah | VIN_UV_FAULT_RESPONSE | Configures the VIN undervoltage fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 43 |
| 5Eh | POWER_GOOD_ON | Sets the voltage threshold for power-good indication. | R/W WORD | L16u | | 0.9*VOUT Pin Strap | page 43 |
| 60h | TON_DELAY | Sets the delay time from ENABLE to start of VOUT rise. | R/W WORD | L11 | CA80h | 5ms | page 43 |
| 61h | TON_RISE | Sets the rise time of VOUT after ENABLE and TON_DELAY. | R/W WORD | L11 | CA80h | 5ms | page 44 |
| 64h | TOFF_DELAY | Sets the delay time from DISABLE to start of VOUT fall. | R/W WORD | L11 | CA80h | 5ms | page 44 |
| 65h | TOFF_FALL | Sets the fall time for VOUT after DISABLE and TOFF_DELAY. | R/W WORD | L11 | CA80h | 5ms | page 44 |
| 78h | STATUS_BYTE | Summary of most critical faults. | READ BYTE | BIT | 00h | No Faults | page 44 |
| 79h | STATUS_WORD | Summary of critical faults. | READ WORD | BIT | 0000h | No Faults | page 45 |
| 7Ah | STATUS_VOUT | Reports VOUT warnings/faults. | READ BYTE | BIT | 00h | No Faults | page 45 |
| 7Bh | STATUS_IOUT | Reports IOUT warnings/faults. | READ BYTE | BIT | 00h | No Faults | page 46 |
| 7Ch | STATUS_INPUT | Reports INPUT warnings/faults. | READ BYTE | BIT | 00h | No Faults | page 46 |
| 7Dh | STATUS_TEMPERATURE | Reports temperature warnings/faults. | READ BYTE | BIT | 00h | No Faults | page 46 |

PMBus Command Summary (Continued)

| COMMAND CODE | COMMAND NAME | DESCRIPTION | TYPE | DATA FORMAT | DEFAULT VALUE | DEFAULT SETTING | PAGE |
|--------------|---------------------|--|-----------|-------------|---------------|---------------------------------|-------------------------|
| 7Eh | STATUS_CML | Reports communication, memory, logic errors. | READ BYTE | BIT | 00h | No Faults | page 47 |
| 80h | STATUS_MFR_SPECIFIC | Reports voltage monitoring/clock sync faults. | READ BYTE | BIT | 00h | No Faults | page 47 |
| 88h | READ_VIN | Reports input voltage measurement. | READ WORD | L11 | | | page 47 |
| 8Bh | READ_VOUT | Reports output voltage measurement. | READ WORD | L16u | | | page 48 |
| 8Ch | READ_IOUT | Reports output current measurement. | READ WORD | L11 | | | page 48 |
| 8Dh | READ_TEMPERATURE_1 | Reports temperature reading internal to the device. | READ WORD | L11 | | | page 48 |
| 8Eh | READ_TEMPERATURE_2 | Reports temperature reading external to the device. | READ WORD | L11 | | | page 48 |
| 94h | READ_DUTY_CYCLE | Reports actual duty cycle. | READ WORD | L11 | | | page 48 |
| 95h | READ_FREQUENCY | Reports actual switching frequency. | READ WORD | L11 | | | page 48 |
| 98h | PMBUS_REVISION | Returns the revision of the PMBus. | READ BYTE | HEX | | | page 48 |
| 99h | MFR_ID | Sets a user defined identification. | R/W BLOCK | ASC | | <null> | page 49 |
| 9Ah | MFR_MODEL | Sets a user defined model. | R/W BLOCK | ASC | | <null> | page 49 |
| 9Bh | MFR_REVISION | Sets a user defined revision. | R/W BLOCK | ASC | | <null> | page 49 |
| 9Ch | MFR_LOCATION | Sets a user defined location identifier. | R/W BLOCK | ASC | | <null> | page 49 |
| 9Dh | MFR_DATE | Sets a user defined date. | R/W BLOCK | ASC | | <null> | page 49 |
| 9Eh | MFR_SERIAL | Sets a user defined serialized identifier. | R/W BLOCK | ASC | | <null> | page 50 |
| B0h | USER_DATA_00 | Sets a user defined data. | R/W BLOCK | ASC | | <null> | page 50 |
| BCh | AUTO_COMP_CONFIG | Configures the auto compensation features. | R/W BYTE | CUS | 69h | Auto Comp enabled gain = 70% | page 50 |
| BDh | AUTO_COMP_CONTROL | Causes the auto comp algorithm to initiate. | Send BYTE | | | | page 50 |
| BFh | DEADTIME_MAX | Sets the maximum deadtime values. | R/W WORD | CUS | 3838h | H-L = 56ns L-H = 56ns | page 51 |
| D0h | MFR_CONFIG | Configures several manufacturer-level features. | R/W WORD | BIT | 6A11h | Refer to description | page 51 |
| D1h | USER_CONFIG | Configures several user-level features. | R/W WORD | BIT | 2011h | Refer to description | page 52 |
| D2h | ISHARE_CONFIG | Configures the device for current sharing communication. | R/W WORD | BIT | 0000h | Current share disabled | page 53 |
| D3h | DDC_CONFIG | Configures the DDC bus. | R/W WORD | BIT | 0001h | Set Based on PMBus Address | page 53 |
| D4h | POWER_GOOD_DELAY | Sets the delay PG threshold and asserting the PG pin. | R/W WORD | L11 | BA00h | 1ms | page 53 |
| D5h | PID_TAPS | Configures control loop compensator coefficients. | R/W BLOCK | CUS | | Calculated by Auto Comp | page 54 |

PMBus Command Summary (Continued)

| COMMAND CODE | COMMAND NAME | DESCRIPTION | TYPE | DATA FORMAT | DEFAULT VALUE | DEFAULT SETTING | PAGE |
|--------------|----------------------------|---|------------|-------------|---------------|--|-------------------------|
| D6h | INDUCTOR | Informs the device of circuit's inductor value. | R/W WORD | L11 | BA00h | 1 μ H | page 54 |
| D7h | NLR_CONFIG | Configures the nonlinear response control parameters. | R/W BLOCK | BIT | 00000000h | Refer to description | page 55 |
| D8h | OVUV_CONFIG | Configures output voltage OV/UV fault detection. | R/W BYTE | BIT | 00h | Faster response, no crowbar | page 55 |
| D9h | XTEMP_SCALE | Scalar value that is for calibrating the external temperature. | R/W WORD | L11 | BA00h | 1 °C | page 56 |
| DAh | XTEMP_OFFSET | Offset value for calibrating the external temperature. | R/W WORD | L11 | 8000h | 0 °C | page 56 |
| DCh | TEMPCO_CONFIG | Sets Tempco settings. | R/W BYTE | CUS | 28h | 4000ppm/°C with internal temperature sensor correction | page 56 |
| DDh | DEADTIME | Sets default deadtime settings. | R/W WORD | BIT | 1014h | H-L = 16ns L-H = 20ns | page 57 |
| DEh | DEADTIME_CONFIG | Configures the adaptive dead time optimization mode. | R/W WORD | CUS | 8686h | Adaptive deadtime disabled | page 57 |
| E0h | SEQUENCE | DDC rail sequencing configuration. | R/W WORD | BIT | 0000h | Prequel and sequel Disabled | page 57 |
| E1h | TRACK_CONFIG | Configures voltage tracking modes. | R/W BYTE | BIT | 00h | Tracking disable | page 58 |
| E2h | DDC_GROUP | Configures group ID, fault spreading, OPERATION and VOUT. | R/W BLOCK | BIT | 00000000h | Ignore fault spread | page 58 |
| E4h | DEVICE_ID | Returns the device identifier string. | READ BLOCK | ASC | | Reads device version | page 58 |
| E5h | MFR_IOUT_OC_FAULT_RESPONSE | Configures the IOUT overcurrent fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 59 |
| E6h | MFR_IOUT_UC_FAULT_RESPONSE | Configures the IOUT undercurrent fault response. | R/W BYTE | BIT | 80h | Disable and no retry | page 59 |
| E7h | IOUT_AVG_OC_FAULT_LIMIT | Sets IOUT average overcurrent fault threshold. | R/W WORD | L11 | D249h | 9.14A | page 60 |
| E8h | IOUT_AVG_UC_FAULT_LIMIT | Sets IOUT average undercurrent fault threshold. | R/W WORD | L11 | D5B7h | -9.14A | page 60 |
| E9h | MISC_CONFIG | Sets options pertaining to advanced features. | R/W WORD | BIT | 2000h | Broadcast disabled | page 60 |
| EAh | SNAPSHOT | Returns 32-byte read-back of parametric and status values. | READ BLOCK | BIT | | N/A | page 61 |
| EBh | BLANK_PARAMS | Indicates recently saved parameter values. | READ BLOCK | BIT | FF...FFh | | page 61 |
| F0h | PHASE_CONTROL | Controls phase adding/dropping for current sharing configuration. | R/W BYTE | BIT | 00h | All phases disabled | page 61 |
| F3h | SNAPSHOT_CONTROL | Controls how SnapShot values are handled. | R/W BYTE | BIT | | | page 62 |
| F4h | RESTORE_FACTORY | Restores device to the factory default values. | SEND BYTE | | | | page 62 |


PMBus Command Summary (Continued)

| COMMAND CODE | COMMAND NAME | DESCRIPTION | TYPE | DATA FORMAT | DEFAULT VALUE | DEFAULT SETTING | PAGE |
|--------------|------------------|--|-----------|-------------|---------------|-----------------------|-------------------------|
| FAh | SECURITY_LEVEL | Reports the security level. | READ BYTE | HEX | 1 | Public security level | page 62 |
| FBh | PRIVATE_PASSWORD | Sets the private password string. | R/W BLOCK | ASC | 00...00h | | page 63 |
| FCh | PUBLIC_PASSWORD | Sets the public password string. | R/W BLOCK | ASC | 0000h | | page 64 |
| FDh | UNPROTECT | Identifies which commands are protected. | R/W BLOCK | CUS | FF...FFh | | page 64 |

PMBus™ Data Formats

Linear-11 (L11)

L11 data format uses 5-bit two's complement exponent (N) and 11-bit two's complement mantissa (Y) to represent real world decimal value (X).

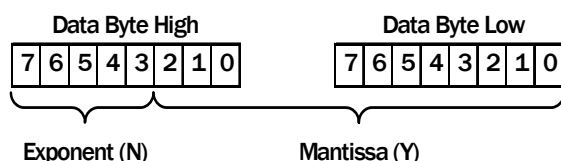

Relation between real world decimal value (X), N and Y is: $X = Y \cdot 2^N$

Linear-16 Unsigned (L16u)

L16u data format uses a fixed exponent (hard-coded to $N = -13$) and a 16-bit unsigned integer mantissa (Y) to represent real world decimal value (X). Relation between real world decimal value (X), N and Y is: $X = Y \cdot 2^{-13}$

Linear-16 Signed (L16s)

L16s data format uses a fixed exponent (hard-coded to $N = -13$) and a 16-bit two's complement mantissa (Y) to represent real world decimal value (X).

Relation between real world decimal value (X), N and Y is: $X = Y \cdot 2^{-13}$

Bit Field (BIT)

Break down of Bit Field is provided in [“PMBus Commands Description” on page 32](#).

Custom (CUS)

Break down of Custom data format is provided in [“PMBus Commands Description” on page 32](#). A combination of Bit Field and integer are common type of Custom data format.

ASCII (ASC)

A variable length string of text characters uses ASCII data format.

PMBus Use Guidelines

The PMBus is a powerful tool that allows the user to optimize circuit performance by configuring devices for their application. When configuring a device in a circuit, the device should be disabled whenever most settings are changed with PMBus commands. Some exceptions to this recommendation are OPERATION, ON_OFF_CONFIG, CLEAR_FAULTS, VOUT_COMMAND, VOUT_MARGIN_HIGH, VOUT_MARGIN_LOW, and ASCCR_CONFIG. While the device is enabled any command can be read. Many commands do not take effect until after the device has been re-enabled, hence the recommendation that commands that change device settings are written while the device is disabled.

When sending the STORE_DEFAULT_ALL, STORE_USER_ALL, RESTORE_DEFAULT_ALL, and RESTORE_USER_ALL commands, it is recommended that no other commands are sent to the device for 100ms after sending STORE or RESTORE commands.

In addition, there should be a 2ms delay between repeated READ commands sent to the same device. When sending any other command, a 5ms delay is recommended between repeated commands sent to the same device.

Summary

All commands can be read at any time.

Always disable the device when writing commands that change device settings. Exceptions to this rule are commands intended to be written while the device is enabled, for example, VOUT_MARGIN_HIGH.

To be sure a change to a device setting has taken effect, write the STORE_USER_ALL command, then cycle input power and re-enable.

PMBus Commands Description

OPERATION (01h)

Definition: Sets Enable, Disable and V_{OUT} Margin settings. Data values of OPERATION that force margin high or low only take effect when the MGN pin is left open (i.e., in the NOMINAL margin state).

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value:

Units: N/A

| COMMAND | OPERATION (01h) | | | | | | | |
|---------------|---------------------|-----|-----|-----|-----|-----|-----|-----|
| Format | Bit Field | | | | | | | |
| Bit Position | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Access | R/W | R/W | R/W | R/W | R/W | R/W | R/W | R/W |
| Function | See Following Table | | | | | | | |
| Default Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

| BITS 7:6 | BITS 5:4 | BITS 3:0 (NOT USED) | UNIT ON OR OFF | MARGIN STATE |
|----------|----------|------------------------|----------------------------------|--------------|
| 00 | 00 | 0000 | Immediate off (No sequencing) | N/A |
| 01 | 00 | 0000 | Soft off (With sequencing) | N/A |
| 10 | 00 | 0000 | On | Nominal |
| 10 | 01 | 0000 | On | Margin Low |
| 10 | 10 | 0000 | On | Margin High |

NOTE: Bit combinations not listed above may cause command errors.

ON_OFF_CONFIG (02h)

Definition: Configures the interpretation and coordination of the OPERATION command and the ENABLE pin (EN).

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 16h (Device starts from ENABLE pin with immediate off)

Units: N/A

| COMMAND | ON_OFF_CONFIG (02h) | | | | | | | |
|---------------|---------------------|-----|-----|-----|-----|-----|-----|-----|
| Format | Bit Field | | | | | | | |
| Bit Position | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Access | R/W | R/W | R/W | R/W | R/W | R/W | R/W | R/W |
| Function | See Following Table | | | | | | | |
| Default Value | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 |

| BIT NUMBER | PURPOSE | BIT VALUE | MEANING |
|------------|--|-----------|---|
| 7:5 | Not Used | 000 | Not Used |
| 4:2 | Sets the default to either operate any time power is present or for the on/off to be controlled by ENABLE pin, OPERATION command, or when both the Enable pin and OPERATION command are valid. | 000 | Device starts any time power is present regardless of ENABLE pin or OPERATION command states. |
| | | 101 | Device starts from ENABLE pin only. |
| | | 110 | Device starts from OPERATION command only. |
| | | 111 | Device starts when the ENABLE pin is active and OPERATION "on" command has been sent. |
| 1 | Polarity of the ENABLE pin | 0 | Active low (Pull pin low to start the device) |
| | | 1 | Active high (Pull pin high to start the device) |
| 0 | ENABLE pin action when commanding the unit to turn off | 0 | Use the programmed ramp down settings |
| | | 1 | Turn off the output immediately |

CLEAR_FAULTS (03h)

Definition: Clears all fault bits in all registers and releases the SALRT pin (if asserted) simultaneously. If a fault condition still exists, the bit will reassert immediately. This command will not restart a device if it has shut down, it will only clear the faults.

Data Length in Bytes: 0

Data Format: N/A

Type: Send Byte

Default Value: N/A

Units: N/A

Reference: N/A

STORE_DEFAULT_ALL (11h)

Definition: Stores, at the DEFAULT level, all PMBus values that were written since the last restore command. To clear the DEFAULT store, perform a RESTORE_FACTORY then STORE_DEFAULT_ALL. To add to the DEFAULT store, perform a RESTORE_DEFAULT_ALL, write commands to be added, then STORE_DEFAULT_ALL. Wait 20ms after a STORE command.

Data Length in Bytes: 0

Data Format: N/A

Type: Send Byte

Default Value: N/A

Units: N/A

RESTORE_DEFAULT_ALL (12h)

Definition: Restores PMBus™ settings from the nonvolatile DEFAULT Store memory into the operating memory. These settings are loaded at power-up if not superseded by settings in USER store. Security level is changed to level 1 following this command. This command should not be used during device operation.

Data Length in Bytes: 0

Data Format: N/A

Type: Send Byte

Default Value: N/A

Units: N/A

STORE_USER_ALL (15h)

Definition: Stores all PMBus settings from the operating memory to the nonvolatile USER store memory. To clear the USER store, perform a RESTORE_FACTORY then STORE_USER_ALL. To add to the USER store, perform a RESTORE_USER_ALL, write commands to be added, then STORE_USER_ALL. This command can be used during device operation, but the device will be unresponsive for 20ms while storing values.

Data Length in Bytes: 0

Data Format: N/A

Type: Send Byte

Default Value: N/A

Units: N/A

RESTORE_USER_ALL (16h)

Definition: Restores all PMBus settings from the USER store memory to the operating memory. Command performed at power-up. Security level is changed to Level 1 following this command. This command can be used during device operation.

Data Length in Bytes: 0

Data Format: N/A

Type: Send Byte

Default Value: N/A

Units: N/A

VOUT_MODE (20h)

Definition: Reports the V_{OUT} mode and prides the exponent used in calculating several V_{OUT} settings. Fixed with linear mode with default exponent (N) = -13

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 13h (Linear Mode, N = -13)

Units: N/A

VOUT_COMMAND (21h)

Definition: This command sets or reports the target output voltage. This command cannot set a value higher than either VOUT_MAX or 110% of the pin strap V_{OUT} setting.

Data Length in Bytes: 2

Data Format: L16u

Type: R/W

Default Value: Pin strap setting

Units: Volts

Range: 0V to VOUT_MAX

VOUT_TRIM (22h)

Definition: Sets VOUT trim value. The two bytes are formatted as a two's complement binary mantissa, used in conjunction with the exponent set in VOUT_MODE.

Data Length in Bytes: 2

Data Format: L16s

Type: R/W Word

Default Value: 0000h (0V)

Units: Volts

Range: -4V to 4V

VOUT_CAL_OFFSET (23h)

Definition: The VOUT_CAL_OFFSET command is used to apply a fixed offset voltage to the output voltage command value. This command is typically used by the user to calibrate a device in the application circuit.

Data Length in Bytes: 2

Data Format: L16s

Type: R/W Word

Default Value: 0000h (0V)

Units: Volts

Range: -4V to 4V

VOUT_MAX (24h)

Definition: The VOUT_MAX command sets an upper limit on the output voltage the unit can command regardless of any other commands or combinations. The intent of this command is to provide a safeguard against a user accidentally setting the output voltage to a possibly destructive level rather than to be the primary output overprotection.

Data Length in Bytes: 2

Data Format: L16u

Type: R/W Word

Default Value: 1.10xVOUT_COMMAND pin strap setting

Units: Volts

Range: 0V to 4V

VOUT_MARGIN_HIGH (25h)

Definition: Sets the value of the V_{OUT} during a margin high. This VOUT_MARGIN_HIGH command loads the unit with the voltage to which the output is to be changed when the OPERATION command is set to "Margin High".

Data Length in Bytes: 2

Data Format: L16u

Type: R/W Word

Default value: 1.05 x VOUT_COMMAND pin strap setting

Units: Volts

Range: 0V to VOUT_MAX

VOUT_MARGIN_LOW (26h)

Definition: Sets the value of the V_{OUT} during a margin low. This VOUT_MARGIN_LOW command loads the unit with the voltage to which the output is to be changed when the OPERATION command is set to "Margin Low".

Data Length in Bytes: 2

Data Format: L16u

Type: R/W Word

Default value: 0.95 x VOUT_COMMAND pin strap setting

Units: Volts

Range: 0V to VOUT_MAX

VOUT_TRANSITION_RATE (27h)

Definition: This command sets the rate at which the output should change voltage when the device receives an OPERATION command (Margin High, Margin Low) that causes the output voltage to change. The maximum possible positive value of the two data bytes indicates that the device should make the transition as quickly as possible.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default value: BA00h (1.0 V/ms)

Units: V/ms

Range: 0.1 to 4V/ms

VOUT_DROOP (28h)

Definition: The VOUT_DROOP sets the effective load line (V/I slope) for the rail in which the device is used. It is the rate, in mV/A, at which the output voltage decreases (or increases) with increasing (or decreasing) output current for use with Adaptive Voltage Positioning requirements and passive current sharing schemes.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default value: 0000h (0mV/A)

Units: mV/A

Range: 0 to 40 mV/A

MAX_DUTY (32h)

Definition: Sets the maximum allowable duty cycle of the switching frequency.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: EAD6h (90.75%)

Units: %

FREQUENCY_SWITCH (33h)

Definition: Sets the switching frequency of the device. Initial default value is defined by a pin strap and this value can be overridden by writing this command via PMBus. If an external SYNC is utilized, this value should be set as close as possible to the external clock value. The output must be disabled when writing this command.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: Pin strap setting

Units: kHz

Range: 300kHz to 1000kHz

INTERLEAVE (37h)

Definition: Configures the phase offset of a device that is sharing a common SYNC clock with other devices. A value of 0 for the Number in Group field is interpreted as 16, to allow for phase spreading groups of up to 16 devices. For current sharing rails, INTERLEAVE is used to set the initial phase of the rail. The current share devices then automatically distributes their phase relative to the INTERLEAVE setting.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Default Value: Set based on pin-strap PMBus address

Units: N/A

| BITS | PURPOSE | VALUE | DESCRIPTION |
|-------|-------------------|---------|---|
| 15:12 | Reserved | 0 | Reserved |
| 11:8 | Group Number | 0 to 15 | Sets a number to a group of interleaved rails |
| 7:4 | Number in Group | 0 to 15 | Sets the number of rails in the group A value of 0 is interpreted as 16 |
| 3:0 | Position in Group | 0 to 15 | Sets position of the device's rail within the group |

IOUT_CAL_GAIN (38h)

Definition: Sets the effective impedance across the current sense circuit for use in calculating output current at +25°C.

Data Length in Bytes: 2

Data Format: L11.

Type: R/W Word

Default Value: C2EEh (2.93mΩ)

Units: mΩ

IOUT_CAL_OFFSET (39h)

Definition: Used to null out any offsets in the output current sensing circuit, and to compensate for delayed measurements of current ramp due to Isense blanking time.

Data Length in Bytes: 2

Data Format: L11.

Type: R/W Word

Default Value: B667h (-0.4A)

Units: A

VOUT_OV_FAULT_LIMIT (40h)

Definition: Sets the V_{OUT} overvoltage fault threshold.

Data Length in Bytes: 2

Data Format: L16u

Type: R/W Word

Default Value: 1.15xVOUT_COMMAND pin strap setting

Units: Volts

Range: 0V to VOUT_MAX

VOUT_OV_FAULT_RESPONSE (41h)

Definition: Configures the V_{OUT} overvoltage fault response. Note that the device cannot be set to ignore this fault mode. The retry time is the time between restart attempts.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable and no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault) |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

VOUT_UV_FAULT_LIMIT (44h)

Definition: Sets the V_{OUT} undervoltage fault threshold. This fault is masked during ramp or when the device is disabled.

Data Length in Bytes: 2

Data Format: L16u

Type: R/W Word

Default Value: 0.8xVOUT_COMMAND pin strap setting

Units: Volts

Range: 0V to VOUT_MAX

VOUT_UV_FAULT_RESPONSE (45h)

Definition: Configures the V_{OUT} undervoltage fault response.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable, no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault) |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

IOUT_OC_FAULT_LIMIT (46h)

Definition: Sets the inductor peak overcurrent fault threshold. This limit is applied to current measurement samples taken after the current sense blanking time has expired. A fault occurs after this limit is exceeded for the number of consecutive samples as defined in MFR_CONFIG.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: D340h (13A)

Units: A

Range: -13 to 13A

IOUT_UC_FAULT_LIMIT (4Bh)

Definition: Sets the inductor valley undercurrent fault threshold. This limit is applied to current measurement samples taken after the current sense blanking time has expired. A fault occurs after this limit is exceeded for the number of consecutive samples as defined in MFR_CONFIG.

Data Length in Bytes: 2

Data Format: L11

Type: R/W

Default Value: D4C0h (-1xIOUT_OC_FAULT_LIMIT,-13A)

Units: A

Range: -13 to 13A

OT_FAULT_LIMIT (4Fh)

Definition: The OT_FAULT_LIMIT command sets the temperature at which the device should indicate an over-temperature fault. Note that the temperature must drop below OT_WARN_LIMIT to clear this fault.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: EBE8h (+125°C)

Units: Celsius

Range: 0°C to +175°C

OT_FAULT_RESPONSE (50h)

Definition: Instructs the device on what action to take in response to an over-temperature fault. The delay time is the time between restart attempts.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

fault Value: 80h (Disable and no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault) |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

OT_WARN_LIMIT (51h)

Definition: The OT_WARN_LIMIT command sets the temperature at which the device should indicate an er-temperature warning alarm. In response to the OT_WARN_LIMIT being exceeded, the device: Sets the TEMPERATURE bit in STATUS_WORD, Sets the OT_WARNING bit in STATUS_TEMPERATURE, and notifies the host.

Data Length in Bytes: 2

Data Format: L11.

Type: R/W Word

Default Value: EB70h (+110°C)

Units: Celsius

Range: 0°C to +175°C

UT_WARN_LIMIT (52h)

Definition: The UT_WARN_LIMIT command set the temperature at which the device should indicate an under-temperature Warning alarm. In response to the UT_WARN_LIMIT being exceeded, the device: Sets the TEMPERATURE bit in STATUS_WORD, Sets the UT_WARNING bit in STATUS_TEMPERATURE, and notifies the host.

Data Length in Bytes: 2

Data Format: L11.

Type: R/W Word

Default Value: E580h (-40 °C)

Units: Celsius

Range: -55 °C to +25 °C

UT_FAULT_LIMIT (53h)

Definition: Sets the temperature at which the device should indicate an under-temperature fault. Note that the temperature must rise above UT_WARN_LIMIT to clear this fault.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: E490h (-55 °C)

Units: Celsius

Range: -55 °C to +25 °C

UT_FAULT_RESPONSE (54h)

Definition: Instructs the device on what action to take in response to an under-temperature fault. The delay time is the time between restart attempts.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable, no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault) |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

VIN_OV_FAULT_LIMIT (55h)

Definition: Sets the VIN overvoltage fault threshold.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: D3A0h (14.5V)

Units: Volts

Range: 0V to 16V

VIN__OV_FAULT_RESPONSE (56h)

Definition: Configures the VIN overvoltage fault response. The delay time is the time between restart attempts.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable and no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault) |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

VIN__OV_WARN_LIMIT (57h)

Definition: Sets the VIN overvoltage warning threshold as defined by the table below. In response to the _WARN_LIMIT being exceeded, the device: Sets the NONE OF THE ABE and INPUT bits in STATUS_WORD, Sets the VIN__WARNING bit in STATUS_INPUT, and notifies the host.

Data Length in Bytes: 2

Data Format: L11.

Type: R/W Word

Default Value: D360h (14.0V)

Units: Volts

Range: 0V to 16V

VIN__UV_WARN_LIMIT (58h)

Definition: Sets the VIN undervoltage warning threshold. If a VIN_UV_FAULT occurs, the input voltage must rise above VIN_UV_WARN_LIMIT to clear the fault, which prides hysteresis to the fault threshold. In response to the UV_WARN_LIMIT being exceeded, the device: Sets the NONE OF THE ABE and INPUT bits in STATUS_WORD, Sets the VIN_UV_WARNING bit in STATUS_INPUT, and notifies the host.

Data Length in Bytes: 2

Data Format: Linear-11.

Type: R/W Word

Default Value: 4.5V

Units: Volts

Range: 0V to 12V

VIN_UV_FAULT_LIMIT (59h)

Definition: Sets the VIN undervoltage fault threshold.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: Pin strap setting

Units: Volts

Range: 0V to 12V

VIN_UV_FAULT_RESPONSE (5Ah)

Definition: Configures the V_{IN} undervoltage fault response as defined by the following table. The delay time is the time between restart attempts.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable and no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault) |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

POWER_GOOD_ON (5Eh)

Definition: Sets the voltage threshold for power-good indication. Power-good asserts when the output voltage exceeds POWER_GOOD_ON and de-asserts when the output voltage is less than VOUT_UV_FAULT_LIMIT.

Data Length in Bytes: 2

Data Format: L16u

Type: R/W Word

Default Value: 0.9xVOUT_COMMAND pin strap setting

Units: Volts

TON_DELAY (60h)

Definition: Sets the delay time from when the device is enabled to the start of VOUT rise.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: CA80h (5ms)

Units: ms

Range: 0 to 500ms

TON_RISE (61h)

Definition: Sets the rise time of VOUT after ENABLE and TON_DELAY.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: CA80h (5ms)

Units: ms

Range: 0 to 200ms

TOFF_DELAY (64h)

Definition: Sets the delay time from DISABLE to start of VOUT fall.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: CA80h (5ms)

Units: ms

Range: 0 to 500ms

TOFF_FALL (65h)

Definition: Sets the fall time for VOUT after DISABLE and TOFF_DELAY.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: CA80h (5ms)

Units: ms

Range: 0 to 200ms

STATUS_BYTE (78h)

Definition: The STATUS_BYTE command returns one byte of information with a summary of the most critical faults.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 00h

Units: N/A

| BIT | STATUS BIT NAME | MEANING |
|-----|-------------------|--|
| 7 | BUSY | A fault was declared because the device was busy and unable to respond. |
| 6 | OFF | This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled. |
| 5 | VOUT__OV_FAULT | An output overvoltage fault has occurred. |
| 4 | IOUT_OC_FAULT | An output overcurrent fault has occurred. |
| 3 | VIN_UV_FAULT | An input undervoltage fault has occurred. |
| 2 | TEMPERATURE | A temperature fault or warning has occurred. |
| 1 | CML | A communications, memory or logic fault has occurred. |
| 0 | NONE OF THE ABOVE | A fault or warning not listed in bits 7:1 has occurred. |

STATUS_WORD (79h)

Definition: The STATUS_WORD command returns two bytes of information with a summary of the unit's fault condition. Based on the information in these bytes, the host can get more information by reading the appropriate status registers. The low byte of the STATUS_WORD is the same register as the STATUS_BYTE (78h) command.

Data Length in Bytes: 2

Data Format: BIT

Type: Read Word

Default Value: 0000h

Units: N/A

| BIT | STATUS BIT NAME | MEANING |
|-----|-------------------|--|
| 15 | VOUT | An output voltage fault or warning has occurred. |
| 14 | IOUT/POUT | An output current or output power fault or warning has occurred. |
| 13 | INPUT | An input voltage, input current, or input power fault or warning has occurred. |
| 12 | MFG_SPECIFIC | A manufacturer specific fault or warning has occurred. |
| 11 | POWER_GOOD# | The POWER_GOOD signal, if present, is negated. |
| 10 | FANS | A fan or airflow fault or warning has occurred. |
| 9 | OTHER | A bit in STATUS_OTHER is set. |
| 8 | UNKNOWN | A fault type not given in bits 15:1 of the STATUS_WORD has been detected. |
| 7 | BUSY | A fault was declared because the device was busy and unable to respond. |
| 6 | OFF | This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled. |
| 5 | VOUT__OV_FAULT | An output overvoltage fault has occurred. |
| 4 | IOUT_OC_FAULT | An output overcurrent fault has occurred. |
| 3 | VIN_UV_FAULT | An input undervoltage fault has occurred. |
| 2 | TEMPERATURE | A temperature fault or warning has occurred. |
| 1 | CML | A communications, memory or logic fault has occurred. |
| 0 | NONE OF THE ABOVE | A fault or warning not listed in bits 7:1 has occurred. |

STATUS_VOUT (7Ah)

Definition: The STATUS_VOUT command returns one data byte with the status of the output voltage.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 00h

Units: N/A

| BIT | STATUS BIT NAME | MEANING |
|-----|---------------------|--|
| 7 | VOUT__OV_FAULT | Indicates an output overvoltage fault. |
| 6 | VOUT__WARNING | Indicates an output overvoltage warning. |
| 5 | VOUT_UV_WARNING | Indicates an output undervoltage warning. |
| 4 | VOUT_UV_FAULT | Indicates an output undervoltage fault. |
| 3 | VOUT_MAX_WARNING | An attempt has been made to set the output voltage to value higher than allowed by the VOUT_MAX command. |
| 2 | TON_MAX_FAULT | Indicates T _{ON} Max fault |
| 1 | TOFF_MAX_FAULT | Indicates T _{OFF} Max fault |
| 0 | VOUT_TRACKING_ERROR | Indicates V _{OUT} Tracking error. (Note 24) |

NOTE:

24. The conditions that cause the VOUT Tracking Error bit to be set is defined by each device manufacturer. This status bit is intended to allow the device to notify the host that there was error in output voltage tracking during the most recent power or power-down event.

STATUS_IOUT (7Bh)

Definition: The STATUS_IOUT command returns one data byte with the status of the output current.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 00h

Units: N/A

| BIT | STATUS BIT NAME | MEANING |
|-----|---------------------------|---|
| 7 | IOUT_OC_FAULT | An output overcurrent fault has occurred. |
| 6 | IOUT_OC_LV_FAULT | An output overcurrent and low voltage fault has occurred. |
| 5 | IOUT_UC_WARNING | An output overcurrent warning has occurred. |
| 4 | IOUT_UC_FAULT | An output undercurrent fault has occurred. |
| 3 | ISHARE_FAULT | An current share fault occurred (Note 25). |
| 2 | POWER_LIMITING_MODE_FAULT | An P _{OUT} limiting mode fault occurred (Note 26). |
| 1 | POUT_OP_FAULT | An P _{OUT} over power fault occurred. |
| 0 | POUT_OP_WARNING | Indicates P _{OUT} over power warning. |

NOTES:

25. The conditions that cause the Current Share Fault bit to be set are defined by each device manufacturer.

26. The bit is to be asserted when the unit is operating with the output in constant power mode at the power set by the POUT_MAX command

STATUS_INPUT (7Ch)

Definition: The STATUS_INPUT command returns input voltage and input current status information.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 00h

Units: N/A

| BIT | STATUS BIT NAME | MEANING |
|-----|--------------------------------|---|
| 7 | VIN_OV_FAULT | An input overvoltage fault has occurred. |
| 6 | VIN_OV_WARNING | An input overvoltage warning has occurred. |
| 5 | VIN_UV_WARNING | An input undervoltage warning has occurred. |
| 4 | VIN_UV_FAULT | An input undervoltage fault has occurred. |
| 3 | UNIT OFF FOR LOW INPUT VOLTAGE | Unit is off for insufficient Input voltage. |
| 2 | IIN OC FAULT | An I _{IN} overcurrent fault occurred. |
| 1 | IIN OC WARNING | An I _{IN} overcurrent warning occurred |
| 0 | PIN OP WARNING | An P _{IN} overpower warning occurred. |

STATUS_TEMP (7Dh)

Definition: The STATUS_TEMP command returns one byte of information with a summary of any temperature related faults or warnings.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 00h

Units: N/A

| BIT | STATUS BIT NAME | MEANING |
|-----|-----------------|--|
| 7 | OT_FAULT | An over-temperature fault has occurred. |
| 6 | OT_WARNING | An over-temperature warning has occurred. |
| 5 | UT_WARNING | An under-temperature warning has occurred. |
| 4 | UT_FAULT | An under-temperature fault has occurred. |
| 3:0 | N/A | These bits are not used. |

STATUS_CML (7Eh)

Definition: The STATUS_CML command returns one byte of information with a summary of any Communications, Logic and/or Memory errors.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default Value: 00h

Units: N/A

| BIT | MEANING |
|-----|---|
| 7 | Invalid or unsupported PMBus command was received. |
| 6 | The PMBus command was sent with invalid or unsupported data. |
| 5 | A packet error was detected in the PMBus command. |
| 4 | Memory fault detected (Note 27). |
| 3 | Processor fault detected (Note 28). |
| 2 | Reserved |
| 1 | A PMBus command tried to write to a read-only or protected command, or a communication fault other than the ones listed in this table has occurred. |
| 0 | Other Memory or Logic Fault has occurred (Note 29). |

NOTES:

27. The conditions that cause the memory fault detected bit to be set, and the response this condition, are defined by each device manufacturer. One example of an error that would cause this bit to be set is a CRC of the memory that does not match the initial CRC value.

28. The conditions that cause the processor fault detected bit to be set, and the response this condition, are defined by each device manufacturer.

29. The conditions that cause the other memory or logic fault detected bit to be set, and the response this condition, are defined by each device manufacturer.

STATUS_MFR_SPECIFIC (80h)

Definition: Returns the Communication, Logic and Memory specific status.

Data Length in Bytes: 1

Data Format: BIT

Type: Read Byte

Default value: 00h

Units: N/A

| BIT | FIELD NAME | MEANING |
|-----|------------|--|
| 7:6 | Reserved | Reserved |
| 5 | Reserved | Reserved |
| 4 | Reserved | Reserved |
| 3 | TSW | Loss of external clock synchronization has occurred. |
| 2 | Reserved | Reserved |
| 1 | Reserved | Reserved |
| 0 | Reserved | Reserved |

READ_VIN (88h)

Definition: Returns the input voltage reading.

Data Length in Bytes: 2

Data Format: L11

Type: Read Word

Units: Volts

READ_VOUT (8Bh)

Definition: Returns the output voltage reading.

Data Length in Bytes: 2

Data Format: L16u

Type: Read Word

Units: Volts

READ_IOUT (8Ch)

Definition: Returns the output current reading.

Data Length in Bytes: 2

Data Format: L11

Type: Read Word

Default Value: N/A

Units: A

READ_TEMPERATURE_1 (8Dh)

Definition: Returns the controller junction temperature reading from internal temperature sensor.

Data Length in Bytes: 2

Data Format: L11

Type: Read Word

Units: °C

READ_TEMPERATURE_2 (8Eh)

Definition: Returns the temperature reading from the external temperature device connected to XTEMP pins.

Data Length in Bytes: 2

Data Format: L11

Type: Read Word

Units: °C

READ_DUTY_CYCLE (94h)

Definition: Reports the actual duty cycle of the converter during the enable state.

Data Length in Bytes: 2

Data Format: L11

Type: Read Word

Units:%

READ_FREQUENCY (95h)

Definition: Reports the actual switching frequency of the converter during the enable state.

Data Length in Bytes: 2

Data Format: L11

Type: Read Word

Units: kHz

PMBUS_REVISION (98h)

Definition: Returns the revision of the PMBus implemented in the device

Data Length in Bytes: 1

Data Format: HEX

Type: Read Byte

Default Value: 01h

Units: N/A

MFR_ID (99h)

Definition: MFR_ID sets user defined identification. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASCII

Type: Block R/W

Default Value: null

Units: N/A

MFR_MODEL (9Ah)

Definition: MFR_MODEL sets a user defined model. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASC

Type: Block R/W

Default Value: null

Units: N/A

MFR_REVISION (9Bh)

Definition: MFR_REVISION sets a user defined revision. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASC

Type: Block R/W

Default Value: null

Units: N/A

MFR_LOCATION (9Ch)

Definition: MFR_LOCATION sets a user defined location identifier. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASC

Type: Block R/W

Default Value: null

Units: N/A

MFR_DATE (9Dh)

Definition: MFR_DATE sets a user defined date. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASC

Type: Block R/W

Default Value: null

Units: N/A

MFR_SERIAL (9Eh)

Definition: MFR_SERIAL sets a user defined serialized identifier. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASC

Type: Block R/W

Default Value: null

Units: N/A

USER_DATA_00 (B0h)

Definition: USER_DATA_00 sets a user defined data. The sum total of characters in MFR_ID, MFR_MODEL, MFR_REVISION, MFR_LOCATION, MFR_DATE, MFR_SERIAL and USER_DATA_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

Data Length in Bytes: user defined

Data Format: ASCII

Type: Block R/W

Default Value: null

Units: N/A

AUTO_COMP_CONFIG (BCh)

Definition: Controls configuration of Auto Compensation features.

Data Length in Bytes: 1

Data Format: CUS

Type: R/W Byte

Default Value: 69h

Units: N/A

| BITS | PURPOSE | VALUE | DESCRIPTION |
|------|---------------------------|-------|---|
| 7:4 | Auto Comp Gain Percentage | G | Scale the Gain of the auto compensation results by a factor of $(G+1)*10\%$, where $0 = G = 9$. $G = 0$ yields lowest jitter; $G = 9$ yields tightest transient response. |
| 3 | Power-good Assertion | 0 | Use PG_DELAY. |
| | | 1 | Assert PG after Auto Comp completes. |
| 2 | Auto Comp Store | 0 | Do not store Auto Comp results. |
| | | 1 | Store Auto Comp results for use on future ramps. |
| 1:0 | Auto Comp Mode | 0 | Off (Disabled). Compensation stored in PID_TAPS will be used. |
| | | 1 | Once (results are storable). |
| | | 2 | Repeat every ~1 second (only the first results are storable). |
| | | 3 | Repeat every ~1 minute (only the first results are storable). |

AUTO_COMP_CONTROL (BDh)

Definition: Causes the Auto Comp algorithm to initiate, if the Auto Comp feature is enabled in AUTO_COMP_CONFIG.

Data Length in Bytes: 1

Data Format: BIT

Type: Send Byte

Default Value:

Units: N/A

DEADTIME_MAX (BFh)

Definition: Sets the maximum dead time value for the PWMH and PWML outputs. This limit applies during frozen or adaptive dead time algorithm modes (see DEADTIME_CONFIG).

Data Length in Bytes: 2

Data Format: CUS

Type: R/W Word

Default Value: 3838h (56ns)

Range: 0 to 60ns

Units: ns

| BIT | PURPOSE | VALUE | DESCRIPTION |
|------|----------------------------------|-------|--|
| 15 | n/a | 0 | NOT used |
| 14:8 | Sets the Maximum H-to-L Deadtime | H | Limits the maximum allowed H-to-L dead time when using the adaptive dead time algorithm. dead time = Hns (signed). |
| 7 | n/a | 0 | Not used |
| 6:0 | Sets the Maximum L-to-H Deadtime | L | Limits the maximum allowed L-to-H dead time when using the adaptive dead time algorithm. dead time = Lns (signed). |

MFR_CONFIG (D0h)

Definition: Configures several manufacturer-level features.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Default Value: 6A11h

Units: N/A

| BIT | PURPOSE | VALUE | DESCRIPTION |
|-------|--|-------|--|
| 15:11 | Current Sense Blanking Delay | D | Sets the delay, D, in 32ns steps. |
| 10:8 | Current Sense Fault Count | C | Sets the number of consecutive OC or UC violations required for a fault to 2C+1. |
| 7 | Enable XTEMP Measurements | 0 | No temperature measurements are performed on XTEMP. |
| | | 1 | Temperature measurements are performed on XTEMP. |
| 6 | Temperature Sensor Control (Note 30) | 0 | The internal temperature sensor is used for warning and fault checks. |
| | | 1 | An external 2N3904 NPN on XTEMP is used for warning and fault checks. |
| 5:4 | Current Sense Control | 00 | Current sense uses GND-referenced, down-slope sense. |
| | | 01 | Current sense uses VOUT-referenced, down-slope sensing. |
| | | 10 | Current sense uses VOUT-referenced, up-slope sensing. |
| | | 11 | Reserved |
| 3 | NLR During Ramp | 0 | Wait for PG. |
| | | 1 | Always on. |
| 2 | Alternate Ramp Control | 0 | Alternate Ramp Disabled. |
| | | 1 | Alternate Ramp Enabled. |
| 1 | PG Pin Output Control | 0 | PG is open drain. |
| | | 1 | PG is push-pull. |
| 0 | SYNC Pin Output Control | 0 | SYNC is open drain. |
| | | 1 | SYNC is push-pull. |

NOTE:

30. When selecting XTEMP (bit 6), be sure to have the XTEMP enabled in bit 7.

USER_CONFIG (D1h)

Definition: Configures several user-level features.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Default Value: 2011h

Units: N/A

| BIT | PURPOSE | VALUE | DESCRIPTION |
|-------|----------------------------|-------|---|
| 15:14 | Minimum Duty Cycle | N | Sets the minimum duty cycle $((N+1)/(2^8))$ during a ramp when "Minimum Duty Cycle" (Bit 13) is enabled. For example, if Minimum Duty Cycle input N is set to 3, the minimum duty cycle is $(3+1)/(2^8) = (1/64)$. |
| 13 | Minimum Duty Cycle Control | 0 | Minimum Duty Cycle is Disabled. |
| | | 1 | Minimum Duty Cycle is Enabled. |
| 12 | Reserved | - | Reserved |
| 11 | SYNC Time-out Enable | 0 | SYNC output remains on after device is disabled. |
| | | 1 | SYNC turns off 500ms after device is disabled. |
| 10 | Reserved | - | Reserved |
| 9 | PID Feed-Forward Control | 0 | PID Coefficients are corrected for VDD variations. |
| | | 1 | PID Coefficients are not corrected for VDD variations. |
| 8 | Fault Spreading Mode | 0 | If sequencing is disabled, this device will ignore faults from other devices. If sequencing is enabled, the devices will sequence down from the failed device outward. |
| | | 1 | Faults received from any device selected by the DDC_GROUP command will cause this device to shut down immediately. |
| 7 | Reserved | - | Reserved |
| 6 | SYNC Utilization Control | 0 | Auto-configure using the SYNC pin and FREQUENCY_SWITCH parameter. |
| | | 1 | Switch using the SYNC input. |
| 5 | SYNC Output Control | 0 | Configure the SYNC pin as an input-only. |
| | | 1 | Drive the switch clock out of SYNC when using the internal oscillator. |
| 4 | Reserved | - | Reserved |
| 3 | Reserved | - | Reserved |
| 2 | OFF Low-side Control | 0 | The low-side drive is off when device is disabled. |
| | | 1 | The low-side drive is on when device is disabled. |
| 1:0 | Standby Mode | 00 | Enter low-power mode when device is disabled (no READ_xxxx data available). |
| | | 01 | Monitor for faults when device is disabled (READ_xxxx data available). |
| | | 10 | Reserved |
| | | 11 | Monitor for faults using pulsed mode (READ_xxxx data available upon read command). |

ISHARE_CONFIG (D2h)

Definition: Configures the device for current sharing communication over the DDC bus.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Default Value: 0000h

Units: N/A

| BIT | PURPOSE | VALUE | DESCRIPTION |
|------|-------------------|---------------------------|--|
| 15:8 | IShare DDC ID | 0 to 31 (0x00 to 0x1F) | Sets the current share rail's DDC ID for each device within a current share rail. Set to the same DDC ID as in DDC_CONFIG. This DDC ID is used for sequencing and fault spreading when used in a current share rail. |
| 7:5 | Number of Members | 0 to 7 | Number of devices in current share rail -1. Example: 3 device current share rail, use 3 - 1 = 2. |
| 4:2 | Member Position | 0 to 7 | Position of device within current share rail. |
| 1 | Reserved | 0 | Reserved |
| 0 | I-Share Control | 1 | Device is a member of a current share rail. |
| | | 0 | Device is not a member of a current share rail. |

DDC_CONFIG (D3h)

Definition: Configures DDC addressing.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Default Value: 0001h

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-------|-----------------|---------------------|--|
| 15:13 | Reserved | 0 | Reserved |
| 12:8 | Broadcast Group | 0 to 31 | Group number used for broadcast events. (i.e., Broadcast Enable and Broadcast Margin) Set this number to the same value for all rails/devices that should respond to each other's broadcasted event. This function is enabled by the bits 15 and 14 in the MISC_CONFIG command. |
| 7:6 | Reserved | 0 | Reserved |
| 5 | DDC TX Inhibit | 0 | DDC Transmission. |
| | | 1 | DDC Transmission Enabled. |
| 4:0 | Rail ID | 0 to 31 (00 to 1Fh) | Sets the rail's DDC ID for sequencing and fault spreading. For the current-sharing applications, set this value the same as the ID value in ISHARE_CONFIG for all devices in the current sharing rail. |

POWER_GOOD_DELAY (D4h)

Definition: Sets the delay applied between the output exceeding the PG threshold (POWER_GOOD_ON) and asserting the PG pin. The delay time can range from 0ms up to 500s, in steps of 125ns. A 1ms minimum configured value is recommended to apply proper debounce to this signal.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: BA00h (1ms)

Units: ms

Range: 0 to 5s

PID_TAPS (D5h)

Definition: this command configures the control loop compensator coefficients.

Data Length in Bytes: 9

Data Format: CUS

Units: N/A

Type: R/W

Default Value: Auto Comp stores when algorithm is initiated during start up. When Auto Comp is disabled PID_TAPS can be stored via PMBus.

The PID algorithm implements the following Z-domain function in [Equation 7](#):

$$\frac{A + Bz^{-1} + Cz^{-2}}{1 - z^{-1}} \quad (\text{EQ. 7})$$

The coefficients A, B, and C are represented using a pseudo-floating point format similar to the V_{OUT} parameters (with the addition of a sign bit), defined as [Equation 8](#):

$$A = (-1)^S \cdot 2^E \cdot M \quad (\text{EQ. 8})$$

where M is a two-byte unsigned mantissa, S is a sign-bit, and E is a 7-bit two's-complement signed integer. The 9-byte data field is defined in table below. S is stored as the MSB of the E byte.

| BYTE | PURPOSE | DEFINITION |
|------|------------------|-----------------------------------|
| 8 | Tap C - E | Coefficient C exponent + S |
| 7 | Tap C - M [15:8] | Coefficient C mantissa, high-byte |
| 6 | Tap C - M [7:0] | Coefficient C mantissa, low-byte |
| 5 | Tap B - E | Coefficient B exponent + S |
| 4 | Tap B - M [15:8] | Coefficient B mantissa, high-byte |
| 3 | Tap B - M [7:0] | Coefficient B mantissa, low-byte |
| 2 | Tap A - E | Coefficient A exponent + S |
| 1 | Tap A - M [15:8] | Coefficient A mantissa, high-byte |
| 0 | Tap A - M [7:0] | Coefficient A mantissa, low-byte |

NOTE: Data bytes are transmitted on the PMBus in the order of Byte 0 through Byte 8.

INDUCTOR (D6h)

Definition: Informs the device of circuit's inductor value. This is used in adaptive algorithm calculations relating to the inductor ripple current.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: BA00h (1μH)

Units: μH

NLR_CONFIG (D7h)

Definition: Configures the non-linear response (NLR) control parameters.

Data Length in Bytes: 4

Data Format: BIT

Type: R/W

Default Value: 00000000h

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-------|---|-------|---|
| 31:30 | Outer Threshold Multiplier | 0 | Sets multiplier of inner threshold for outer threshold setting, O*LI and O*UI. |
| 29:27 | NLR Comparator Threshold: Loading-Inner | LI | Sets inner threshold for a loading event to $\sim 0.5\% \cdot (LI+1) \cdot V_{OUT}$. |
| 26:24 | NLR Comparator Threshold: Unloading-Inner | UI | Sets inner threshold for an unloading event to $\sim 0.5\% \cdot (UI+1) \cdot V_{OUT}$. |
| 23:20 | Loading-Outer Threshold Max Correction Time | LOT | Sets outer threshold, maximum correction time for a loading event to $LOT \cdot tsw / 64(s)$. |
| 19:16 | Loading-Inner Threshold Max Correction Time | LIT | Sets inner threshold, maximum correction time for a loading event to $LIT \cdot tsw / 64(s)$. |
| 15:12 | Unloading-Outer Threshold Max Correction Time | UOT | Sets outer threshold, maximum correction time for an unloading event to $UOT \cdot tsw / 64(s)$. |
| 11:8 | Unloading-Inner Threshold Max Correction Time | UIT | Sets inner threshold, maximum correction time for an unloading event to $UIT \cdot tsw / 64(s)$. |
| 7:4 | Load Blanking Time Control | LB | Sets NLR blanking time for a loading event. |
| 3:0 | Unload Blanking Time Control | UB | Sets NLR blanking time for an unloading event. |

TABLE 16. LOADING/UNLOADING BLANKING TIMES

| LB or UB | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
|--------------|---|---|---|---|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|
| tsw/64 UNITS | 1 | 2 | 3 | 5 | 9 | 17 | 33 | 49 | 65 | 81 | 97 | 129 | 161 | 177 | 193 | 225 |

OVUV_CONFIG (D8h)

Definition: Configures the output voltage OV and UV fault detection feature. The default value of 00h is recommended.

Data Length in Bytes: 1

Data Format: Bit

Type: R/W

Default Value: 00h

Units: N/A

| BIT | PURPOSE | VALUE | DEFINITION |
|-----|--|-------|---|
| 7 | Controls How an OV Fault Response Shutdown Sets the Output Driver State | 0 | An OV fault does not enable the low-side power device |
| | | 1 | An OV fault enables the low-side power device |
| 6:4 | Not used | 0 | Not used |
| 3:0 | Defines the Number of Consecutive Limit Violations Required to Declare an OV or UV Fault | N | N+1 consecutive OV or UV violations initiate a fault response |

XTEMP_SCALE (D9h)

Definition: Sets a scalar value that is used for calibrating the external temperature. The constant is applied in [Equation 9](#) to produce the read value of XTEMP via the PMBus command READ_TEMPERATURE_2.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: BA00h (1 °C)

Units: °C

NOTE: This value must be = to 1.

$$\text{READ_TEMPERATURE_2} = \left(\text{External Temperature} \cdot \frac{1}{\text{XTEMP_SCALE}} \right) + \text{XTEMP_OFFSET} \quad (\text{EQ. 9})$$

XTEMP_OFFSET (DAh)

Definition: Sets an offset value that is used for calibrating the external temperature. The constant is applied in [Equation 10](#) to produce the read value of XTEMP via the PMBus command READ_TEMPERATURE_2.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: 8000h (0 °C)

Units: °C

$$\text{READ_TEMPERATURE_2} = \left(\text{External Temperature} \cdot \frac{1}{\text{XTEMP_SCALE}} \right) + \text{XTEMP_OFFSET} \quad (\text{EQ. 10})$$

TEMPCO_CONFIG (DCh)

Definition: Configures the correction factor and temperature measurement source when performing temperature coefficient correction for current sense. TEMPCO_CONFIG values are applied as negative correction to a positive temperature coefficient.

Data Length in Bytes: 1

Data Format: CUS

Type: R/W Byte

Default Value: 28h (4000ppm/°C)

Units: N/A

To determine the hex value of the Tempco Correction factor (TC) for current scale of a power stage using $I_{DC(ON)}$ current sensing, first determine the temperature coefficient of resistance for the conductor, α . This is found with [Equation 11](#):

$$\alpha = \frac{R_{REF} - R}{R_{REF}(T_{REF} - T)} \quad (\text{EQ. 11})$$

Where: R = Conductor resistance at temperature "T"

R_{REF} = Conductor resistance at reference temperature T

α = Temperature coefficient of resistance for the conductor material

T = Temperature measured by temperature sensor, in °C

T_{REF} = Reference temperature that α is specified at for the conductor material

After α is determined, convert the value in units of 100ppm/°C. This value is then converted to a hex value with [Equation 12](#).

$$\text{TC} = \frac{\alpha \times 10^6}{100} \quad (\text{EQ. 12})$$

Typical Values: Copper = 3900ppm/°C (27h), silicon = 4800ppm/°C (30h)

Range: 0 to 6300ppm/°C

| BIT | PURPOSE | VALUE | DEFINITION |
|-----|--|-------|---|
| 7 | Selects the Temp Sensor Source for Tempco Correction | 0 | Selects the internal temperature sensor. |
| | | 1 | Selects the XTEMP pin for temperature measurements. |
| 6:0 | Sets the Tempco Correction in Units of 100ppm/°C for IOUT_CAL_GAIN | TC | $R_{SEN(DCR)} = \text{IOUT_CAL_GAIN} * (1 + \text{TC} * (T - 25))$ where R_{SEN} = resistance of sense element. |

DEADTIME (DDh)

Definition: Sets the nonoverlap between PWM transitions using a 2-byte data field. The most significant byte controls the high-side to low-side dead time value as a single 2's-complement signed value in units of ns. The least significant byte controls the low-side to high-side dead time value. Positive values imply a non-overlap of the FET drive on-times. Negative values imply an overlap of the FET drive on-times. The device will operate at the dead time values written to this command when adaptive dead time is disabled, between the minimum dead time specified in DEADTIME_CONFIG and the maximum dead time specified in DEADTIME_MAX. When switching from adaptive dead time mode to frozen mode (by writing to bit 15 of DEADTIME_CONFIG) the frozen dead time will be whatever the last dead time was before the device switches to frozen dead time mode.

Data Length in Bytes: 2

Data Format: CUS

Type: R/W Word

Default Value: 1014h (H-L = 16ns, L-H = 20ns)

Units: ns

Range: -15ns to 60ns

DEADTIME_CONFIG (DEh)

Definition: Configures the deadtime optimization mode. Also sets the minimum deadtime value for the adaptive deadtime mode range.

Data Length in Bytes: 2

Data Format: CUS

Type: R/W Word

Default Value: 8686h (Adaptive deadtime disabled)

Units: N/A

| BIT | PURPOSE | VALUE | DESCRIPTION |
|------|---|--------|---|
| 15 | Sets the High to Low Transition Deadtime Mode | 0 | Adaptive H-to-L deadtime control. |
| | | 1 | Freeze the H-to-L deadtime. |
| 14:8 | Sets the Minimum H-to-L Deadtime | 0-126d | Limits the minimum allowed H-to-L dead time when using the adaptive dead time algorithm (2ns resolution). |
| 7 | Sets the Low to High Transition Deadtime Mode | 0 | Adaptive L-to-H deadtime control. |
| | | 1 | Freezes the L-to-H deadtime. |
| 6:0 | Sets the Minimum L-to-H Deadtime | 0-126d | Limits the minimum allowed L-to-H dead time when using the adaptive dead time algorithm (2ns resolution). |

SEQUENCE (E0h)

Definition: Identifies the Rail DDC ID of the prequel and sequel rails when performing multi-rail sequencing. The device will enable its output when its EN or OPERATION enable states, as defined by ON_OFF_CONFIG, is set and the prequel device has issued a power-good event on the DDC bus. The device will disable its output (using the programmed delay values) when the sequel device has issued a power down event on the DDC bus.

The data field is a two-byte value. The most-significant byte contains the 5-bit Rail DDC ID of the prequel device. The least-significant byte contains the 5-bit Rail DDC ID of the sequel device. The most significant bit of each byte contains the enable of the prequel or sequel mode. This command overrides the corresponding sequence configuration set by the CONFIG pin settings.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Default Value: 0000h (Prequel and Sequel disabled)

| BIT | FIELD NAME | VALUE | SETTING | DESCRIPTION |
|-------|---------------------|---------|----------|---|
| 15 | Prequel Enable | 0 | Disable | Disable, no prequel preceding this rail. |
| | | 1 | Enable | Enable, prequel to this rail is defined by bits 12:8. |
| 14:13 | Reserved | 0 | Reserved | Reserved |
| 12:8 | Prequel Rail DDC ID | 0 to 31 | DDC ID | Set to the DDC ID of the prequel rail. |
| 7 | Sequel Enable | 0 | Disable | Disable, no sequel following this rail. |
| | | 1 | Enable | Enable, sequel to this rail is defined by bits 4:0. |
| 6:5 | Reserved | 0 | Reserved | Reserved |
| 4:0 | Sequel Rail DDC ID | 0 to 31 | DDC ID | Set to the DDC ID of the sequel rail. |

TRACK_CONFIG (E1h)

Definition: Configures the voltage tracking modes of the device.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 00h (Tracking Disabled)

| BIT | FIELD NAME | VALUE | SETTING | DESCRIPTION |
|-----|--------------------------|-------|----------------|---|
| 7 | Enables Voltage Tracking | 0 | Disable | Tracking is disabled. |
| | | 1 | Enable | Tracking is enabled. |
| 6:3 | Reserved | - | Reserved | Reserved |
| 2 | Tracking Ratio Control | 0 | 100% | Output tracks 100% ratio of VTRK input. |
| | | 1 | 50% | Output tracks 50% ratio of VTRK input. |
| 1 | Tracking Upper Limit | 0 | Target Voltage | Output Voltage is limited by Target Voltage. |
| | | 1 | VTRK Voltage | Output Voltage is limited by VTRK Voltage. |
| 0 | Ramp-up Behavior | 0 | Track after PG | The output is not allowed to track VTRK down before power-good. |
| | | 1 | Track always | The output is allowed to track VTRK down before power-good. |

DDC_GROUP (E2h)

Definition: This command sets which rail DDC IDs a device should listen to for fault spreading information. A device can follow multiple DDC ID rails. Example is provided in following table.

| DDC ID | CONFIGURATION | DDC_GROUP | DESCRIPTION |
|--------|---------------------------|-----------|---|
| 0 | 3xZL9006M Current Sharing | 0000000Ah | This rail will listen to Rail-1 and Rail-3. |
| 1 | 2xZL9006M Current Sharing | 00000004h | This rail will listen to Rail-2. |
| 2 | 1xZL9006M Single Phase | 00000000h | This rail will ignore fault spread. |
| 3 | 1xZL9006M Single Phase | 00000002h | This rail will listen to Rail-1. |

The device/rail's own DDC ID should not be set within the DDC_GROUP command for that device/rail. All devices in a current share rail must shutdown for the rail to report a shutdown.

If fault spread mode is enabled in USER_CONFIG (Bit8 set to 1), the device will immediately shut down if one of its DDC_GROUP members fail. The device/rail will attempt its configured restart only after all devices/rails within the DDC_GROUP have cleared their faults.

If fault spread mode disabled in USER_CONFIG (Bit 8 cleared to 0), the device will perform a sequenced shutdown as defined by the SEQUENCE command setting. The rails/devices in a sequencing set only attempt their configured restart after all faults have cleared within the DDC_GROUP. If fault spread mode is disabled and sequencing is also disabled, the device will ignore faults from other devices and stay enabled.

Data Length in Bytes: 4

Data Format: BIT

Type: R/W

Default Value: 00000000h (Ignore fault spread)

DEVICE_ID (E4h)

Definition: Returns the 16-byte (character) device identifier string.

Data Length in Bytes: 16

Data Format: ASC

Type: Read Block

Default Value: Current firmware revision

MFR_IOUT_OC_FAULT_RESPONSE (E5h)

Definition: Configures the IOUT overcurrent fault response as defined by the following table. Sets the overcurrent status bit in STATUS_IOUT.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable, and no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault). |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

MFR_IOUT_UC_FAULT_RESPONSE (E6h)

Definition: Configures the IOUT undercurrent fault response as defined by the table below. Sets the undercurrent status bit in STATUS_IOUT.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 80h (Disable and no retry)

Units: N/A

| BIT | FIELD NAME | VALUE | DESCRIPTION |
|-----|--|---------|---|
| 7:6 | Response Behavior: Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 00 | Continuous operation (Ignore fault). |
| | | 01 | Delay, disable and retry. Delay time is specified by Bits[2:0] and retry attempt is specified in Bits[5:3]. |
| | | 10 | Disable and retry according to the setting in Bits[5:3]. |
| | | 11 | Output is disabled while the fault is present. Output is enabled when the fault condition no longer exists. |
| 5:3 | Retry Setting | 000 | No retry. The output remains disabled until the device is restarted. |
| | | 001-110 | The PMBus device attempts to restart the number of times set by these bits. The time between the start is set by the value in Bits[2:0]. |
| | | 111 | Attempts to restart continuously, without checking if the fault is still present, until it is disabled, bias power is removed, or another fault condition causes the unit to shut down. |
| 2:0 | Retry and Delay Time | 000-111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device. |

IOUT_AVG_OC_FAULT_LIMIT (E7h)

Definition: Sets the IOUT average overcurrent fault threshold. For down-slope sensing, this corresponds to the average of all the current samples taken during the (1-D) time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the 1-D interval). For up-slope sensing, this corresponds to the average of all the current samples taken during the D time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the D interval). This feature shares the OC fault bit operation (in STATUS_IOUT) and OC fault response with IOUT_OC_FAULT_LIMIT.

Data Length in Bytes: 2

Data Format: L11

Type: R/W Word

Default Value: D249h (9.14A)

Units: A

IOUT_AVG_UC_FAULT_LIMIT (E8h)

Definition: Sets the IOUT average undercurrent fault threshold. For down-slope sensing, this corresponds to the average of all the current samples taken during the (1-D) time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the 1-D interval). For up-slope sensing, this corresponds to the average of all the current samples taken during the D time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the D interval). This feature shares the UC fault bit operation (in STATUS_IOUT) and UC fault response with IOUT_UC_FAULT_LIMIT.

Data Length in Bytes: 2

Data Format: L11

Type: R/W WORD

Default Value: D5B7h (-9.14A)

Units: A

MISC_CONFIG (E9h)

Definition: This command is used to set options for SYNC output configurations.

Data Length in Bytes: 2

Data Format: BIT

Type: R/W Word

Units: N/A

Default Value: 2000h

| BITS | PURPOSE | VALUE | DESCRIPTION |
|-------|--------------------------------------|-------|--|
| 15 | Broadcast Margin (see DDC_CONFIG) | 0 | Disabled |
| | | 1 | Enable |
| 14 | Broadcast Enable (see DDC_CONFIG) | 0 | Disabled |
| | | 1 | Enable |
| 13 | Phase Enable Select | 0 | Use PH_EN pin to add/drop current-share phases. |
| | | 1 | Use PHASE_CONTROL command to add/drop phases. |
| 12 | Reserved | - | Reserved |
| 11:10 | Reserved | - | Reserved |
| 9 | Reserved | - | Reserved |
| 8 | Reserved | - | Reserved |
| 7 | Reserved | - | Reserved |
| 6 | Diode Emulation | 0 | Disabled |
| | | 1 | Enabled, enter diode emulation at light loads to improve efficiency. |
| 5:3 | Reserved | - | Reserved |
| 2 | Minimum GL Pulse | 0 | Disabled |
| | | 1 | Enabled, GL pulse width limited to 10%*T _{SW} minimum during diode emulation. |
| 1 | SnapShot | 0 | Disabled |
| | | 1 | Enable |
| 0 | Reserved | - | Reserved |

SNAPSHOT (EAh)

Definition: The SNAPSHOT command is a 32-byte read-back of parametric and status values. It allows monitoring and status data to be stored to flash either during a fault condition or via a system-defined time using the SNAPSHOT_CONTROL command. In case of a fault, last updated values are stored to the flash memory. Use SNAPSHOT_CONTROL command to read stored values.

Data Length in Bytes: 32

Data Format: Bit

Type: Block Read

| BYTE NUMBER | VALUE | PMBUS COMMAND | FORMAT |
|-------------|-----------------------------------|----------------------------|--------|
| 31:22 | Reserved | Reserved | 00h |
| 21 | Manufacturer Specific Status Byte | STATUS_MFR_SPECIFIC (80h) | Byte |
| 20 | CML Status Byte | STATUS_CML (7Eh) | Byte |
| 19 | Temperature Status Byte | STATUS_TEMPERATURE (7Dh) | Byte |
| 18 | Input Status Byte | STATUS_INPUT (7Ch) | Byte |
| 17 | I _{OUT} Status Byte | STATUS_IOUT (7Bh) | Byte |
| 16 | V _{OUT} Status Byte | STATUS_VOUT (7Ah) | Byte |
| 15:14 | Switching Frequency | READ_FREQUENCY (95h) | L11 |
| 13:12 | External Temperature | READ_EXTERNAL_TEMP_2 (8Eh) | L11 |
| 11:10 | Internal Temperature | READ_INTERNAL_TEMP_1 (8Dh) | L11 |
| 9:8 | Duty Cycle | READ_DUTY_CYCLE (94h) | L11 |
| 7:6 | Peak Current | N/A | L11 |
| 5:4 | Load Current | READ_IOUT (8Ch) | L11 |
| 3:2 | Output Voltage | READ_VOUT (8Bh) | L16u |
| 1:0 | Input Voltage | READ_VIN (88h) | L11 |

BLANK_PARAMS (EBh)

Definition: Returns a 16-byte string which indicates which parameter values were either retrieved by the last RESTORE operation or have been written since that time. Reading BLANK_PARAMS immediately after a restore operation allows the user to determine which parameters are stored in that store. Index to read BLANK_PARAM is provided in [“PMBus Command Summary” on page 27](#). One indicates the parameter is not present in the store and has not been written since the RESTORE operation.

Data Length in Bytes: 16

Data Format: BIT

Type: Block Read

Default Value: FF...FFh

Units: N/A

PHASE_CONTROL (F0h)

Definition: This command controls Phase adding/dropping when the device is setup for current sharing.

Data Length in Bytes: 1

Data Format: BIT

Type: R/W Byte

Default Value: 00h

Units: N/A

| VALUE | DESCRIPTION |
|-------|--|
| 00h | The device phase is disabled or dropped. |
| 01h | The device phase is active or added. |

SNAPSHOT_CONTROL (F3h)

Definition: Writing a 01 will cause the device to copy the current SnapShot values from NVRAM to the 32-byte SnapShot parameters. Writing a 02 will cause the device to write the current SnapShot values to NVRAM. Read from NVRAM (writing a 01) does not work if SNAPSHOT is enabled in MISC_CONFIG. To read from NVRAM, the device has to be disabled.

Data Length in Bytes: 1

Data Format: Bit

Type: R/W Byte

| VALUE | DESCRIPTION |
|-------|---|
| 01h | Move parametric and status values from Flash to the RAM. |
| 02h | Move latest parametric and status values from RAM to the Flash. |

RESTORE_FACTORY (F4h)

Definition: Restores the device to the hard-coded Factory default values and pin strap definitions. The device retains the DEFAULT and USER stores for restoring. Security level is changed to Level 1 following this command.

Data Length in Bytes: 0

Data Format: N/A

Type: Send Byte

Default Value: N/A

Units: N/A

SECURITY_LEVEL (FAh)

Definition: The device provides write protection for individual commands. Each bit in the UNPROTECT parameter controls whether its corresponding command is writable (commands are always readable). If a command is not writable, a password must be entered in order to change its parameter (i.e., to enable writes to that command). There are two types of passwords, public and private. The public password provides a simple lock-and-key protection against accidental changes to the device. It would typically be sent to the device in the application prior to making changes. Private passwords allow commands marked as non-writable in the UNPROTECT parameter to be changed. Private passwords are intended for protecting Default-installed configurations and would not typically be used in the application. Each store (USER and DEFAULT) can have its own UNPROTECT string and private password. If a command is marked as non-writable in the DEFAULT UNPROTECT parameter (its corresponding bit is cleared), the private password in the DEFAULT Store must be sent in order to change that command. If a command is writable according to the Default UNPROTECT parameter, it may still be marked as non-writable in the User Store UNPROTECT parameter. In this case, the User private password can be sent to make the command writable.

The device supports four levels of security. Each level is designed to be used by a particular class of users, ranging from module manufacturers to end users, as discussed below. Levels 0 and 1 correspond to the public password. All other levels require a private password. Writing a private password can only raise the security level. Writing a public password will reset the level down to 0 or 1. [Figure 28](#) shows the algorithm used by the device to determine if a particular command write is allowed.

Security Level 3 – Module Vendor

Level 3 is intended primarily for use by Module vendors to protect device configurations in the Default Store. Clearing a UNPROTECT bit in the Default Store implies that a command is writable only at Level 3 and above. The device's security level is raised to Level 3 by writing the private password value previously stored in the Default Store. To be effective, the module vendor must clear the UNPROTECT bit corresponding to the STORE_DEFAULT_ALL and RESTORE_DEFAULT commands. Otherwise, Level 3 protection is ineffective since the entire store could be replaced by the user, including the enclosed private password.

Security Level 2 – User

Level 2 is intended for use by the end user of the device. Clearing a UNPROTECT bit in the User Store implies that a command is writable only at Level 2 and above. The device's security level is raised to Level 2 by writing the private password value previously stored in the User Store. To be effective, the user must clear the UNPROTECT bit corresponding to the STORE_USER_ALL, RESTORE_DEFAULT_ALL, STORE_DEFAULT_ALL, and RESTORE_DEFAULT commands. Otherwise, Level 2 protection is ineffective since the entire store could be replaced, including the enclosed private password.

Security Level 1 – Public

Level 1 is intended to protect against accidental changes to ordinary commands by providing a global write-enable. It can be used to protect the device from erroneous bus operations. It provides access to commands whose UNPROTECT bit is set in both the Default and User Store. Security is raised to Level 1 by writing the public password stored in the User Store using the PUBLIC_PASSWORD command. The public password stored in the Default Store has no effect.

Security Level 0 - Unprotected

Level 0 implies that only commands, which are always writable (e.g., PUBLIC_PASSWORD) are available. This represents the lowest authority level and hence the most protected state of the device. The level can be reduced to 0 by using PUBLIC_PASSWORD to write any value which does not match the stored public password.

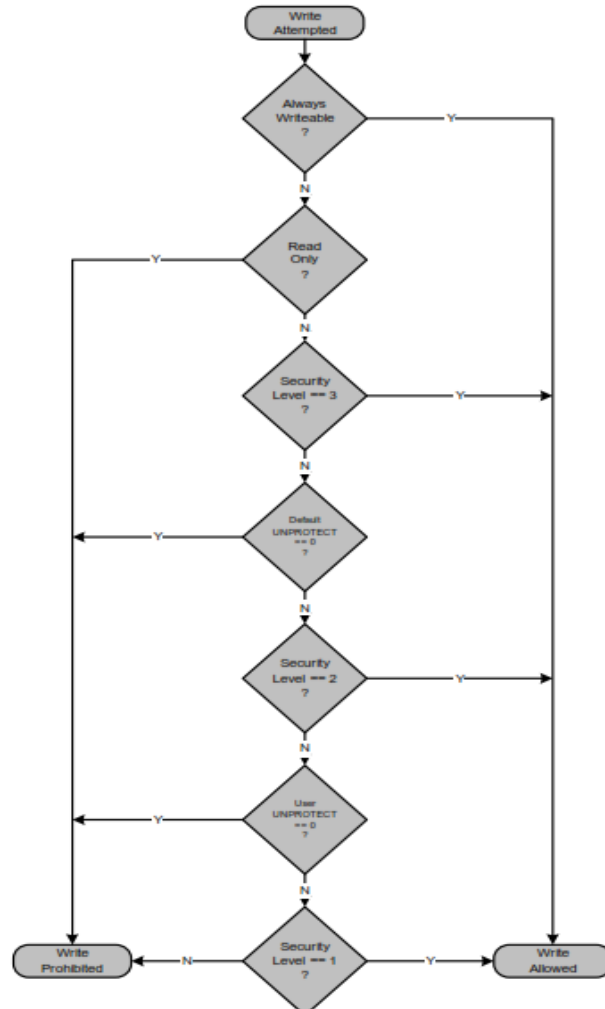


FIGURE 28. ALGORITHM USED TO DETERMINE WHEN A COMMAND IS WRITABLE

Data Length in Bytes: 1

Data Format: HEX

Type: Read Byte

Default Value: 01h

PRIVATE_PASSWORD (FBh)

Definition: Sets the private password string.

Data Length in Bytes: 9

Data Format: ASCII. ISO/IEC 8859-1

Type: R/W Block

Default Value: 000..00h

PUBLIC_PASSWORD (FCh)**Definition:** Sets the public password string.**Data Length in Bytes:** 4**Data Format:** ASCII. ISO/IEC 8859-1**Type:** R/W Block**Default Value:** 00...00h**UNPROTECT (FDh)**

Definition: Sets a 256-bit (32-byte) parameter which identifies which commands are to be protected against write-access at lower security levels. Each bit in this parameter corresponds to a command according to the command's code. The command with a code of 00h (PAGE) is protected by the least significant bit of the least significant byte, followed by the command with a code of 01h and so forth. Note that all possible commands have a corresponding bit regardless of whether they are protected or supported by the device. Clearing a command's UNPROTECT bit indicates that write access to that command is only allowed if the device's security level has been raised to an appropriate level. The UNPROTECT bits in the DEFAULT store require a security level 3 or greater to be writable. The UNPROTECT bits in the USER store require a security level of 2 or higher.

Data Length in Bytes: 32**Data Format:** CUS**Type:** Block R/W**Default Value:** FF...FFh**Firmware Revision History**

| FIRMWARE REVISION CODE | CHANGE DESCRIPTION | NOTE |
|------------------------|---|----------------------------------|
| FE03 | | Not recommended for new designs. |
| FE04 | 3. VIN_OV_WARN_LIMIT = 14.0V 4. VIN_UV_FAULT_LIMIT = 4.0V 5. OT_WARN_LIMIT = 110 °C 6. OT_FAULT_LIMIT = 125 °C 7. VIN_UV_WARN_LIMIT = 4.5V 8. DEADTIME = 1014h (H-L = 16ns, L-H = 20ns) 9. DEADTIME_MAX = 3838h (Max H-L = 56ns, Max L-H = 56ns) | Recommended for new designs. |

© Copyright Intersil Americas LLC 2013-2016. All Rights Reserved.

All trademarks and registered trademarks are the property of their respective owners.

For additional products, see www.intersil.com/en/products.html

Intersil products are manufactured, assembled and tested utilizing ISO9001 quality systems as noted in the quality certifications found at www.intersil.com/en/support/qualandreliability.html

Intersil products are sold by description only. Intersil may modify the circuit design and/or specifications of products at any time without notice, provided that such modification does not, in Intersil's sole judgment, affect the form, fit or function of the product. Accordingly, the reader is cautioned to verify that datasheets are current before placing orders. Information furnished by Intersil is believed to be accurate and reliable. However, no responsibility is assumed by Intersil or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Intersil or its subsidiaries.

For information regarding Intersil Corporation and its products, see www.intersil.com

Revision History

The revision history provided is for informational purposes only and is believed to be accurate, but not warranted. Please go to web to make sure you have the latest revision.

| DATE | REVISION | CHANGE |
|------------------|----------|---|
| March 16, 2016 | FN7959.2 | Added "PMBus Use Guidelines" on page 32. |
| October 30, 2014 | FN7959.1 | <p>Removed I²C throughout entire datasheet. Removed all references to AN2033 and AN2034 throughout entire datasheet. Added references to refer to the "PMBus Commands Description" section throughout datasheet.</p> <p>On Page 1: Removed related literature. Added "overcurrent/undercurrent protection" bullet to the Features section. Removed "current sharing" from one of the Features bullets. Updated Figure 1 (removed EPAD, I2C, and RTN from diagram).</p> <p>On page 3: Added more verbiage to Pin description to be more accurate.</p> <p>On page 4: Updated Note 2 from "These Intersil Pb-free plastic packaged products employ special Pb-free material sets; molding compounds/die attach materials and NiPdAu plate -e4 termination finish, which is RoHS compliant and compatible with both SnPb and Pb-free soldering operations. Intersil Pb-free products are MSL classified at Pb-free peak reflow temperatures that meet or exceed the Pb-free requirements of IPC/JEDEC J STD-020." to "These Intersil plastic packaged products are RoHS compliant by EU exemption 7C-I and employ special Pb-free material sets; molding compounds/die attach materials and NiPdAu plate - e4 termination finish which is compatible with both SnPb and Pb-free soldering operations. Intersil RoHS compliant products are MSL classified at Pb-free peak reflow temperatures that meet or exceed the Pb-free requirements of IPC/JEDEC J STD-020."</p> Added Firmware Revision to Ordering Information table. Added Note 4. <p>On page 6: Corrected typo of Note reference on Output Current Range, IOUT(DC) under Recommended Operating Conditions from "Note 19" to "Note 20". Updated Charged Device Model ESD rating from "750V" to "1000V".</p> <p>On page 24: "SnapShot Parameter Capture" section has been rewritten.</p> <p>From page 27 through page 64: Added "PMBus Command Summary", "PMBus™ Data Formats" and "PMBus Commands Description" sections.</p> <p>On page 64: Added "Firmware Revision History" section. Updated About Intersil Verbiage.</p> |
| March 5, 2013 | FN7959.0 | Initial Release |

About Intersil

Intersil Corporation is a leading provider of innovative power management and precision analog solutions. The company's products address some of the largest markets within the industrial and infrastructure, mobile computing and high-end consumer markets.

For the most updated datasheet, application notes, related documentation and related parts, please see the respective product information page found at www.intersil.com.




You may report errors or suggestions for improving this datasheet by visiting www.intersil.com/ask.

Reliability reports are also available from our website at www.intersil.com/support.

Package Outline Drawing Y32.17.2x11.45


32 I/O 17.2mm x 11.45mm x 2.5mm HDA MODULE


Rev 1, 11/12

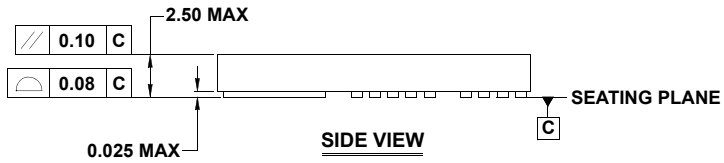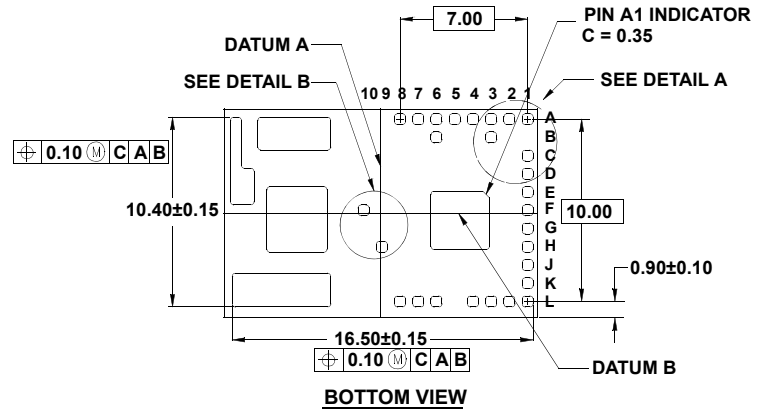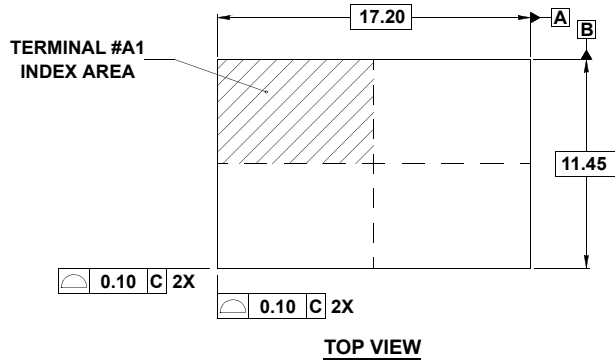

NOTES:


1. All dimensions are in millimeters.
2. 1.0mmx1.0mm represents the basic land grid pitch.
3. "27" is the total number of I/O (excluding large pads). All 27 I/O's are centered in a fixed row and column matrix at 1.0mm pitch BSC.
4. Dimensioning and tolerancing per ASME Y14.5M-1994.
5. Tolerance for exposed DAP edge location dimension on page 2 is ±0.1mm.

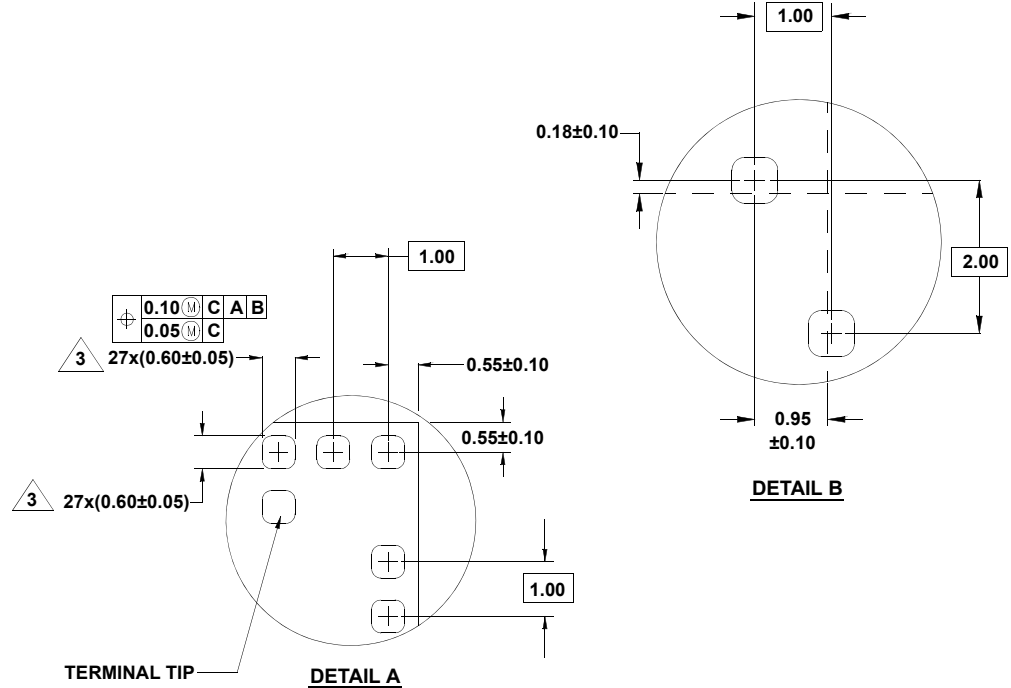

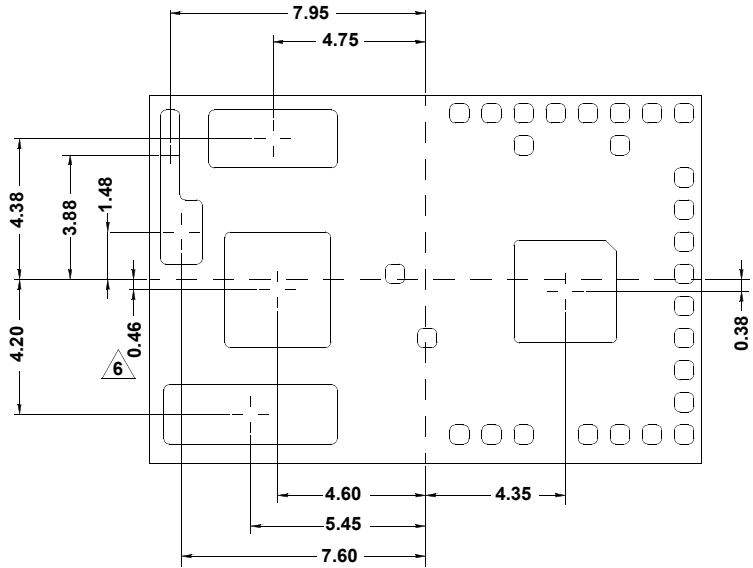

CENTERLINE POSITION DETAILS FOR THE 5 EXPOSED DAPS

BOTTOM VIEW


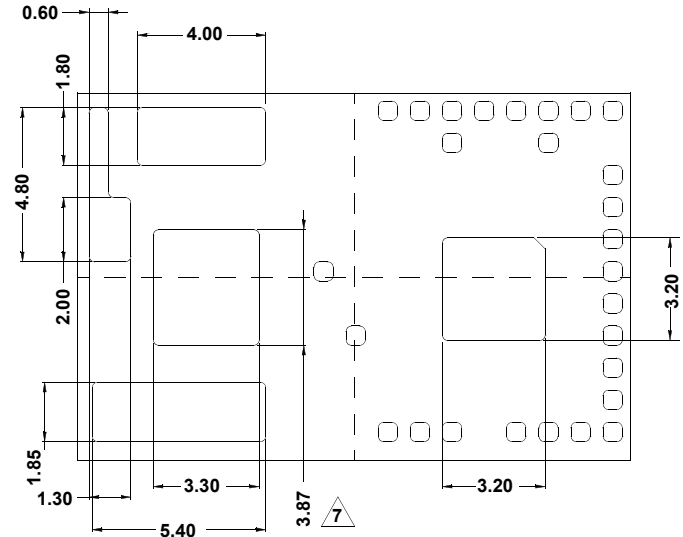


SIZE DETAILS FOR THE 5 EXPOSED DAPS

BOTTOM VIEW

NOTES:

6. Shown centerline measurement of 0.46mm applies to ZL9006M module. For the ZL9010M module, this measurement is 0.33mm. All other measures identical for both the ZL9006M and ZL9010M modules.
7. Shown pad edge measurement of 3.87mm applies to ZL9006M module. For the ZL9010M module, this measurement is 3.60mm. All other measurements are identical for both the ZL9006M and ZL9010M modules.

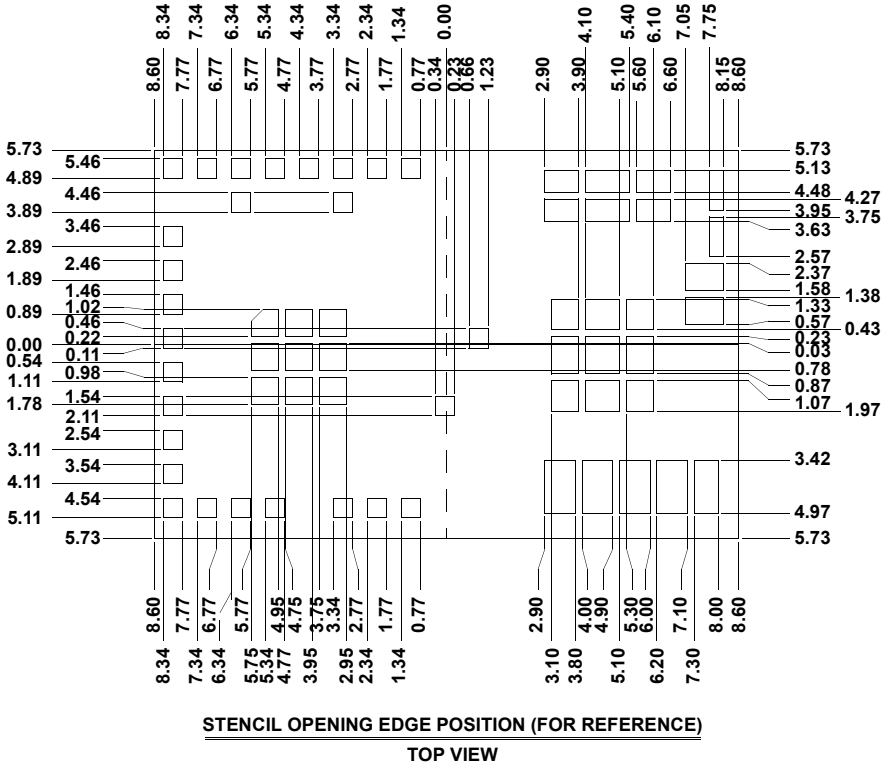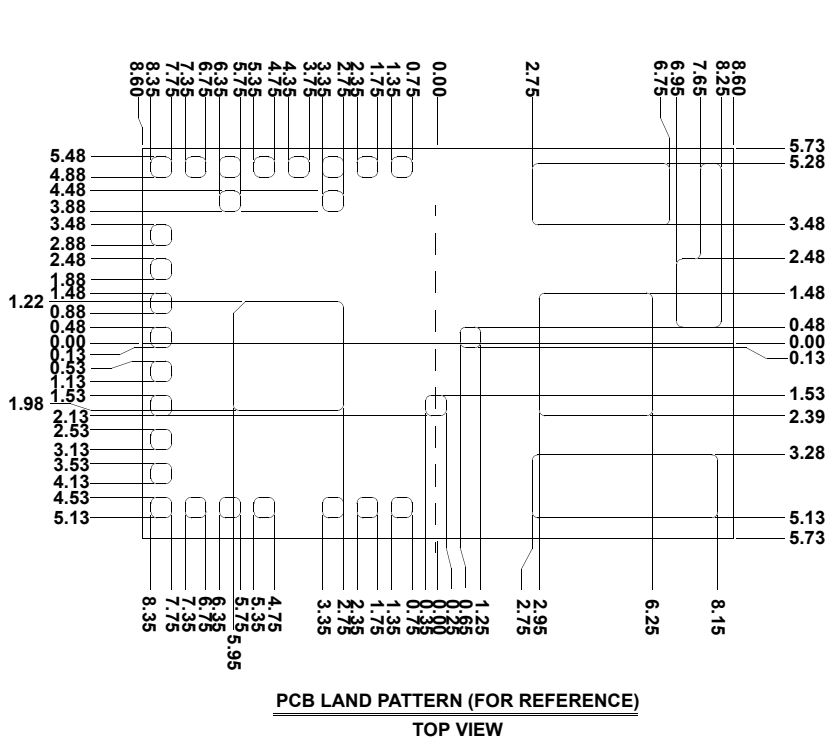

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru