After use
Storage and maintenance: when the unit is to be stored for a long period, remove the power supply and bit, open the carbon
brush cover and blow out any accumulated carbon brush dust with compressed air, and wipe the exterior clean. Then store the
screwdriver carefully in a dry, dust-free place away from direct sunlight. Store the bit in grease. To ensure continued
serviceability, periodically check and maintain the screwdriver.
Troubleshooting
If the screwdriver does not work properly, check the list below. If you cannot solve the problem do not open the unit. Contact
one of our authorized agents as soon as possible.
☐ If the screwdriver does not run
Check that the power supply is outputting power.
$^{\circ}$ Check that the power supply plug is inserted properly and that output plug terminals No.1 (-) and NO.4 (+)
show 30VDC (approximate) between them. If no output is shown, change the power supply.
 Check for a open or short circuit in the 6p-6p cord connecting the screwdriver to the power supply. If an open
or short circuit is found change the cord or plug. (use plug type 2G2022(6p) or purchase equivalent type)
 Check that the fuse is intact. Caution: when changing the fuse, unplug the power supply.
 Check that the carbon brush is undamaged, that the carbon brush guide cord with the rotor to become too small.
Anyone of these factors could cause the screwdriver to stop rotating or rotate abnormally.
Inspection method: open the carbon brush cover and use a non-conductive insulated rod to gently press the brush. If the
screwdriver resumes rotating, the carbon brush has reached the end of its useful life and must be replaced immediately.
 Check that the rotation direction switch are working properly. If no 'click' is heard when a trigger is depressed,
it is not working and must be replaced. (make sure to perform this check in a quiet place)
If the screwdriver is not rotating normally
• There is a protective circuit within the power supply. Power is only supplied normally from 3 to 5 seconds after
current flow begins.
• If the motor only runs intermittently during 'Forward' operation, try 'Reverse' operation, or rotate the anvil
90 degrees until a 'click' is heard, then re-attempt 'Forward' operation.
• Long-term use causes the motor's commutator to wear down. In this case, it must be replaced.
(this repair must be performed by one of our authorized agents)
☐ If the bit falls out easily or wobbles
• check that the bit matches our specifications. If not, change the bit to one that does.
• If the bit tends to wobble, remove the bit, rotate it 60 or 180 degrees and re-insert it.
If the screwdriver does not stop when the selected torque is reached
 An excessive torque setting can cause the screw to strip the threads, with the result that the clutch does not
activate. Lower the torque to a level that does not cause stripping.
• Differences in size between the bit tip and screw slot lengths can cause slopping. Change to a suitable bit tip.
 The brake circuit may be damaged or the sensor switch may have shifted.
(this repair must be performed by one of our authorized agents)
Warranty
We provide a one-year free repair service warranty with this product. The warranty is good for one year from the date of
purchase entered on the Product Information Form. The retailer's stamp must appear on the form to confirm the date. However,
the following circumstances we will charge the user for any parts and labor cost associated with repairs. For repairs involving normal wear to parts including carbon brushes, bits and power cord, and also to the exterior surface.
If the screwdriver was connected to a power source of the incorrect voltage.
☐ If there was inappropriate use or an attempt to repair the unit by the user.
After the period of the guarantee, or if the user cannot present the manual with stamped Product Information Form.
- The the period of the gammer, or if the test cannot present the manual with sample it to date the control of the period of the
Retailer's
Stamp
Specifications and design may be changed without notice for improvement(A-4)

Serial 1	ATa .	
Seriai	NO.:	

ASA Industrial Electric Screwdriver User's Manual (for full-automatic models—low volt. DC motor with soft start controller)

\square Δ	Word	of The	nks to Ou	r Customers	c

Thank you for choosing lightweight and powerful electric screwdrivers. In order to insure maximum performance and product life, please read through this manual before using your screwdriver.

Feature

Our screwdrivers are designed for use with precision torque locking screws. It can be used for assembly of middle and
large range items such as home appliances, computers furniture and car industry etc.

Low vibration, low noise, meets environmental protection demands.

Low-voltage electronic braking circuit for precision torque control, low breakdown rate and long product life.

Low-voltage DC motor for safety and prevention of electric shocks.

Design features separation of screwdriver and control for low repair costs and higher serviceability rate.

Switching power supply plugs directly into screwdriver and builds a soft start circuit, provide more accurate torque, longer motor life and safe operation.


Right-angel (90°) head adapter attaches easily to screwdriver for use in small spaces (>60mm), operates smoothly. (Optional for 1/4" hex shank only)


Ergonomically designed exterior reduces work fatigue and increases productivity.

Specifications

_ Ѕресніс	auons								
N	Model	ASA-6000	ASA-6000PS	ASA-6500	ASA-6500PS	ASA-6800	ASA-6800PS		
Pow	er source	30VDC							
Torque range Kgf-cm/lbf-in		2.0-12.0 / 1.7-10.4 4.0-20.0 / 3.5-17.4		/ 3.5-17.4	5.0-25.0 / 4.3-21.7				
Ac	ccuracy			±	3%				
No load	speed / rpm	1150	1000	10	000	700			
Torque setting		Stepless							
Available	Machine screw mm / in	2.0-3.0 / 0.08-0.12		2.6-4.0 / 0.10-0.16		3.0-5.0 / 0.12-0.20			
Available	Machine screw mm / in 2.0-2.6 / 0.08-0.10		2.3-3.5 / 0.09-0.14		2.6-4.0 / 0.10-0.16				
Wei	ight g/lb			490) / 1.1				
Leng	gth mm/in	228 / 9.0	237 / 9.3	228 / 9.0	237 / 9.3	228 / 9.0	237 / 9.3		
Available bit shank			5 φ	/5mm Hex shar	nk \ 1/4" Hex sha	ank			
Power consumption		30 40		40					
Available power supply		APS-30UA、APS-30UE,APT-65							
Cluto	ch impact	Just one time when torque up							

Outline (this drawing applies only to 1/4" hex. bit shank screwdrivers)

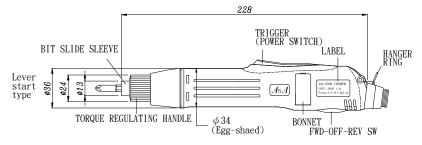


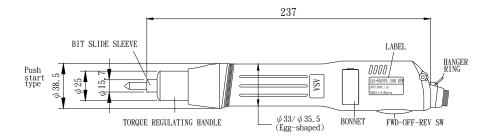

Accessories

This product comes supplied with a pair of carbon brush and two bits.

☐ Bits(one set per screwdriver)



	ϕ 5.0			1/4"Hex	Available	
Tip NO.	Tip Diameter D	P#	Tip NO.	Tip Diameter D	P#	Screwdriver Model
#1	ϕ 3.0	7W3644	#1	ϕ 3.0	7W6644	ASA6000
#2	ϕ 5.0	7W3864	#2	ϕ 4.5	7W6764	ASA6000PS
#1	ϕ 3.0	7W3644	#1	ϕ 3.0	7W6644	ASA6500
#2	ϕ 5.0	7W3864	#2	ϕ 6.0	7W6964	ASA6500PS
#1	ϕ 5.0	7W3844	#1	ϕ 4.5	7W6744	ASA6800
#2	ϕ 5.0	7W3864	#2	ϕ 6.0	7W6964	ASA6800PS

Power supply(optional)

Model	Dime	ension	mm	Operation volt	Output volt	Weight	
Wiodei	L	W	Н	(AC)	(DC)	(g/lb)	
APS-30UA	154	84	52	100-120V	30V(constant)	620/1.36	
APS-30UE	134	04	32	220-240V	30 v (constant)	020/1.30	
APT-65	220	118	96	115V	30V/20V	3400/7.5	
AF 1-03	220	110	90	230V	30 V / 20 V	3400/1.3	

- APS-30UA/APS-30UE are switching circuit power supplies with 0.8"max time settable soft start circuit. They are light and small, consume little electricity and supply stabile voltage.
- Stabilizer accessories: 2 locking ties, 2 pieces of double-sides tape(only for APS-30UA/APS-30UE)

■ Before use, read the following

- ☐ Use the correct voltage: Carefully check the voltage shown on the power supply and this manual and determine the correct voltage. Only plug the unit into a power source of the correct voltage.
- Determine the appropriate torque range: choose the correct screwdriver for the torque you will require. To lengthen product life, avoid long-term high torque use.
- ☐ Make sure the screwdriver is undamaged: If the power code is scraped or damaged, it should be immediately unplugged and replaced to avoid electric shocks or a short circuit that could result in fire.
- ☐ Use in an appropriate work environment: To ensure safety, do not use in high temperature, high humidity environments or near flammable materials. Keep the power cord away from tools or equipment that might scrape or melt it.
- ☐ When plugging in or unplugging the power cord, hold the plug firmly. Never pull on the cord.
- **■** Method of operation and important points

- ☐ Brace fastened objects securely-Before operation, refer to "torque settings" item to determine the appropriate torque, and adjust the screwdriver to the appropriate torque. Make sure that the fastend objects are securely braced, and then begin operation. This procedure will avoid hazardous rapid rotation of the fastened objects due to excessive torque or insufficient bracing.
- □ Driving and removing screw: Before operation, set forward/reverse switch properly. To drive a screw, set the switch to the forward(FWD) position. To remove a screw, set it to the reverse(REV) position. Press the screwdriver onto the screw perpendicularly to being operation. Note: Don't operate the FWD/REV switch when the motor is running.
- □ Torque settings: Use the regulating handle to set the torque. Turning it in a clockwise direction into the screwdriver will increase the torque. Turning it counterclockwise out of the screwdriver will decrease the torque.

Note: The engraved markings on the engraving ring are for reference only and do not indicate torque output.


Torque output can only be determined by repeated testing with a torque meter or hand-held spanner torque meter. To prevent your torque setting from being changed we can provide a torque cover (optional) which covers and secures the regulating handle.

- ☐ Bit insertion: Use your finger to depress the slide sleeve into the screwdriver and insert an appropriate bit. When the slide sleeve is released, the bit will be automatically engaged.
- Note: Do not hammer the bit in or pull it out forcibly.
- □ Secure screwdriver during operation: During operation, hang the screwdriver up securely (as from balancer) in order to prevent it from being knocked down and suffering external cracking, internal damage, or a snapped power cord.
- □ Start and stop: For lever start type. The motor begins running when the lever is depressed and stops when it is released. For push to start type. When the screwdriver is pressed onto a screw perpendicularly, inwards pressure from the screwdriver bit engages the power switch, and the motor begins running. When the pressure on the screwdriver is released, the bit and power switch revert to their original positions and the motor stops running.
- ☐ When the selected torque is reached: This product features an internal clutch assembly. When a screw is driven and the selected torque is reached, the clutch assembly will automatically disengage and a 'click' will be heard. At this point, even if the 'trigger'lever or depress force is not released, the power to the motor will be automatically cut off.
 - Note: When driving screw, grasp the screwdriver firmly in order to prevent upwards recoil generated by the clutch release from forcing the screwdriver bit edge form the screw slot and damaging slot.
- ☐ When removing screws: when a previously driven screw cannot be removed using the same torque that it was driven with, raise the torque setting. After the screw is removed, return the regulating handle to its original setting. To simplify this operation, note the number 'click' sounds generated as the regulating handle is turned. When removing a screw, if the required torque is higher than the screwdriver's output torque, the clutch may not disengage, causing the user's hand and arm to be twisted. In this case immediately set the forward/reverse switch to "OFF" to cut the motor power and prevent injury.
- □ Changing the carbon brush: Insert a slotted hand screwdriver with a 2mm to 4mm head edge into the slot and lever up the carbon maintenance bonnet. Remove the used carbon brush and insert a new carbon brush of the same specifications in the empty space. To complete the operation, close the carbon brush cover tightly by pressure.


 (as shown below step 1 to step 4)


Note:


- When changing the carbon brush first unplug the screwdriver. Use a factory specification carbon brush.
- The notch on the carbon brush surface must face into the direction of the rotor rotation.

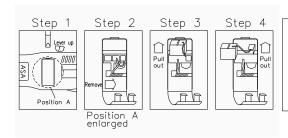





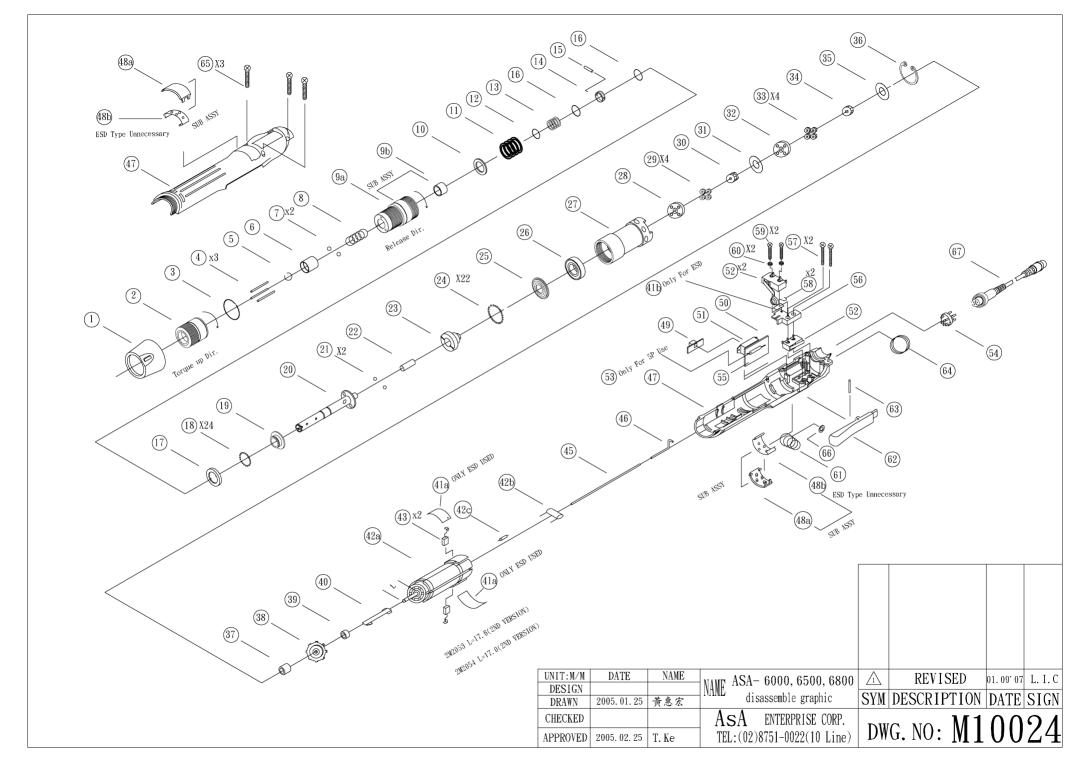

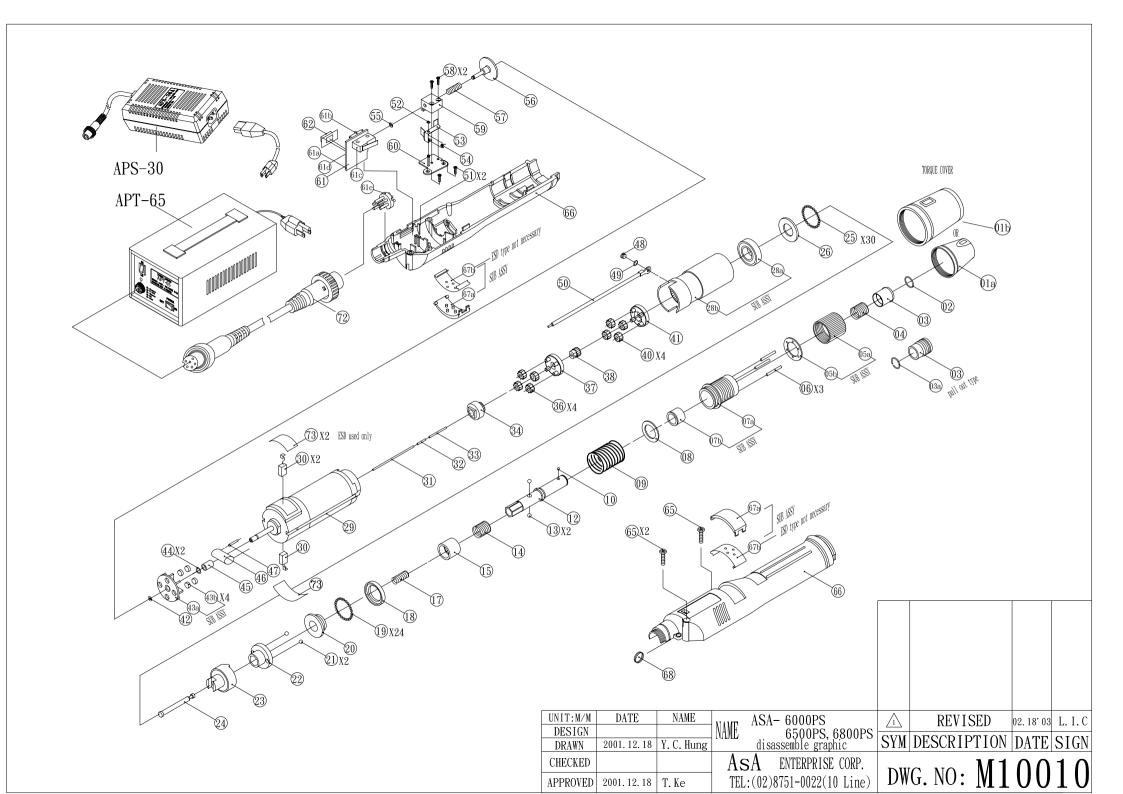



OOO «ЛайфЭлектроникс" "LifeElectronics" LLC

ИНН 7805602321 КПП 780501001 P/C 40702810122510004610 ФАКБ "АБСОЛЮТ БАНК" (ЗАО) в г.Санкт-Петербурге К/С 3010181090000000703 БИК 044030703

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный) Email: org@lifeelectronics.ru