

# DS28C40 Evaluation System Lite Version

Evaluates: DS28C40

## General Description

The DS28C40 evaluation system (EV system) provides the hardware and software necessary to exercise the features of the DS28C40. The EV system consists of five DS28C40 devices in a 10-pin TDFN package, a DS9121CQ+ evaluation TDFN socket board, and a DS9481P-300# USB-to-I<sup>2</sup>C/1-Wire<sup>®</sup> adapter. The evaluation software runs under Windows<sup>®</sup> 10, Windows 8, and Windows 7 operating systems, both 64- and 32-bit versions. It provides a handy user interface to exercise the features of the DS28C40.

## Features

- Demonstrates the Features of the DS28C40 DeepCover Secure Authenticator
- Logs 1-Wire/I<sup>2</sup>C Communication to Aid Firmware Designers Understanding of DS28C40
- 1-Wire/I<sup>2</sup>C USB Adapter Creates a Virtual COM Port on Any PC


- Fully Compliant with USB Specification v2.0
- Software Runs on Windows 10, Windows 8, and Windows 7 for Both 64- and 32-Bit Versions
- 3.3V  $\pm$ 3% I<sup>2</sup>C Operating Voltage
- Convenient On-Board Test Points, TDFN Socket
- Evaluation Software Available by Request

## EV Kit Contents

QTY	DESCRIPTION
5	DS28C40Q+ DeepCover secure authenticator with (10 TDFN)
1	DS9121CQ+ socket board (10 TDFN)
1	DS9481P-300# USB to 1W/I <sup>2</sup> C Adapter
1	USB Type-A to USB Mini Type-B cable

Ordering Information appears at end of data sheet.

## DS28C40 EV System with a USB Cable

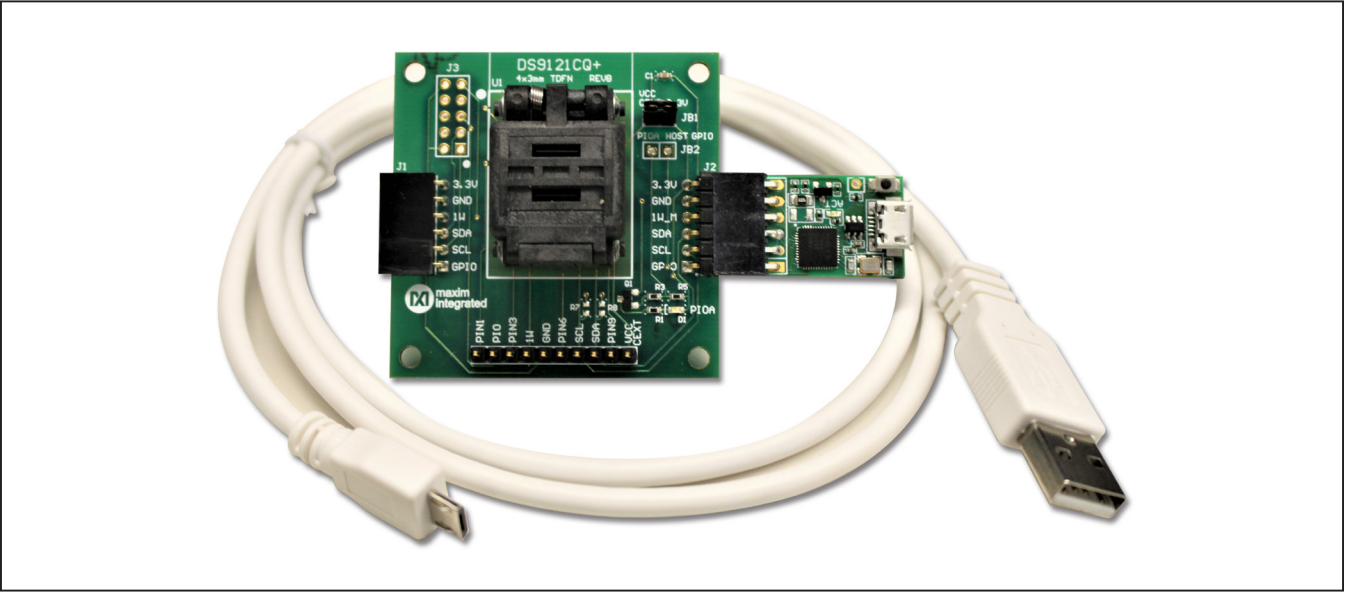

DeepCover is a registered trademark of Maxim Integrated Products, Inc.  
Windows is registered trademarks of Microsoft Corp.  
Windows is a registered trademark and registered service mark of Microsoft Corporation.

# DS28C40 Evaluation System Lite Version

Evaluates: DS28C40

## Quick Start

This section is intended to give the DS28C40 evaluator a list of recommended equipment and instructions on how to set up the Windows-based computer for the evaluation software.

### Recommended Equipment

- DS9481P-300# USB to 1W/I<sup>2</sup>C Adapter
- DS9121CQ+ TDFN socket board
- DS28C40Q+ (five devices included)
- USB Type A-to-USB Micro-Type B cable (included)
- Computer with a Windows 10, Windows 8, or Windows 7 operating system (64- or 32-bit) and a spare USB 2.0 or higher port
- DS28C40 EV kit software. If needed go to the Maxim website and search for the DS28C40 EV kit.

Click the **Design Resources** link. Then click the **DS28C40EVKIT Software Lite** link to download the **DS28C40\_Evaluation\_Kit\_Lite\_Version\_Setup\_V1\_2\_0.zip** file or newer version software.

**Note:** In the following sections, EV kit software related items are identified in **bold**. Windows operating system related items are identified in **bold and underline**.

### Hardware Setup and Driver Installation Quick Start

The following steps were performed on a Windows 7 PC to setup the DS28C40 EV kit hardware/software:

- 1) Obtain and unpack **DS28C40\_Evaluation\_Kit\_Lite\_Version\_Setup\_V1\_2\_0.zip** file or newer version.
- 2) In a file viewer, double click on the **DS28C40\_Evaluation\_Kit\_Lite\_Version\_Setup\_V1\_2\_0** to begin the installation.

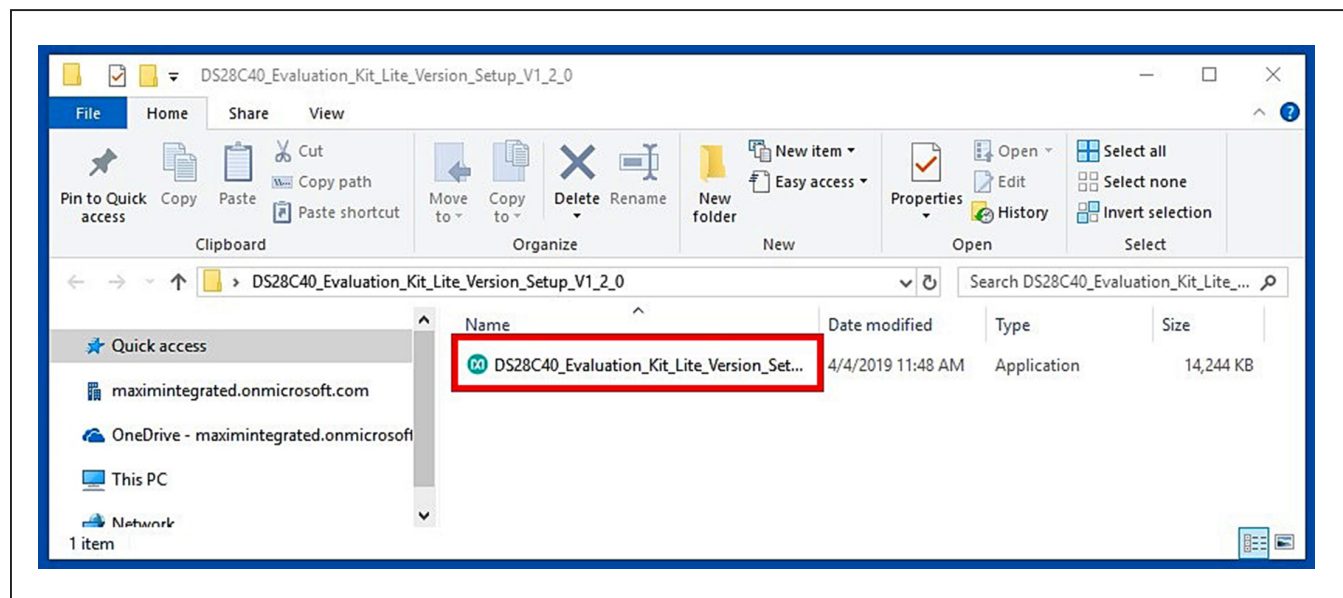


Figure 1. File Viewer

## DS28C40 Evaluation System Lite Version

Evaluates: DS28C40

- 3) The setup wizard opens. Click on **Next** (Figure 2):
- 4) Click **Next** (Figure 3) to install to the default folder.

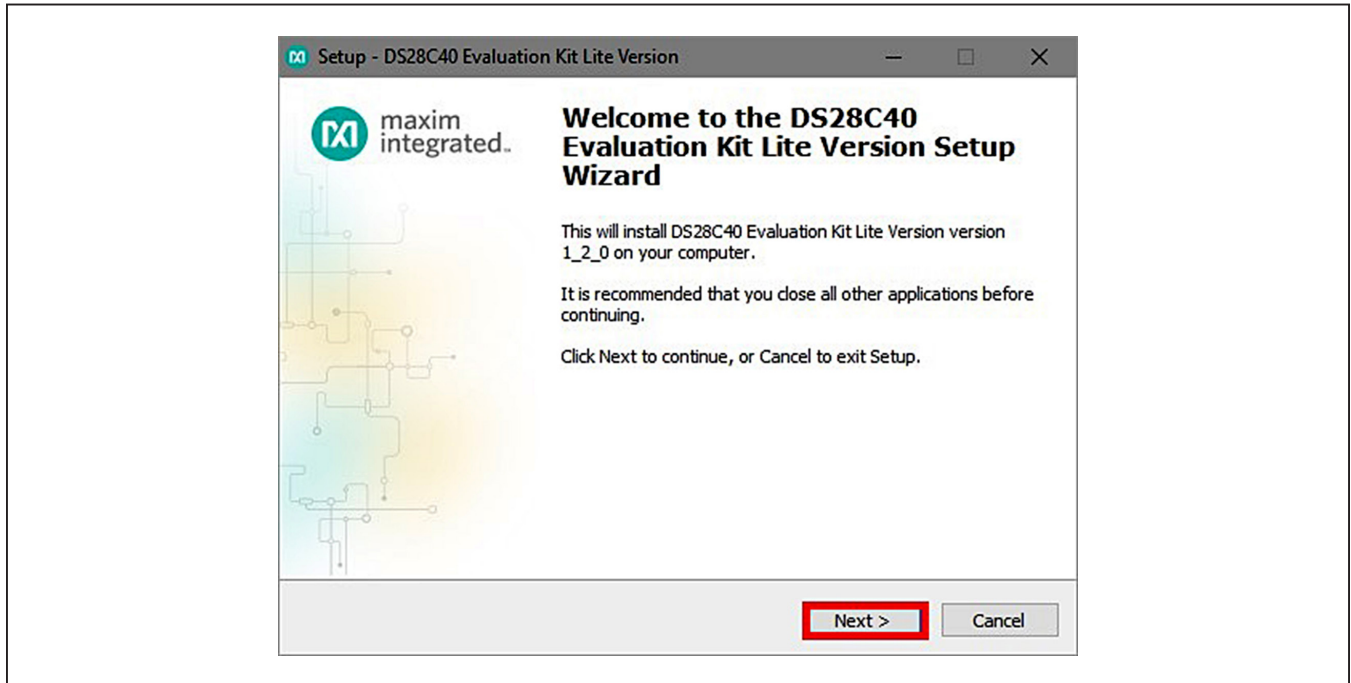


Figure 2. DS28C40 Setup Wizard

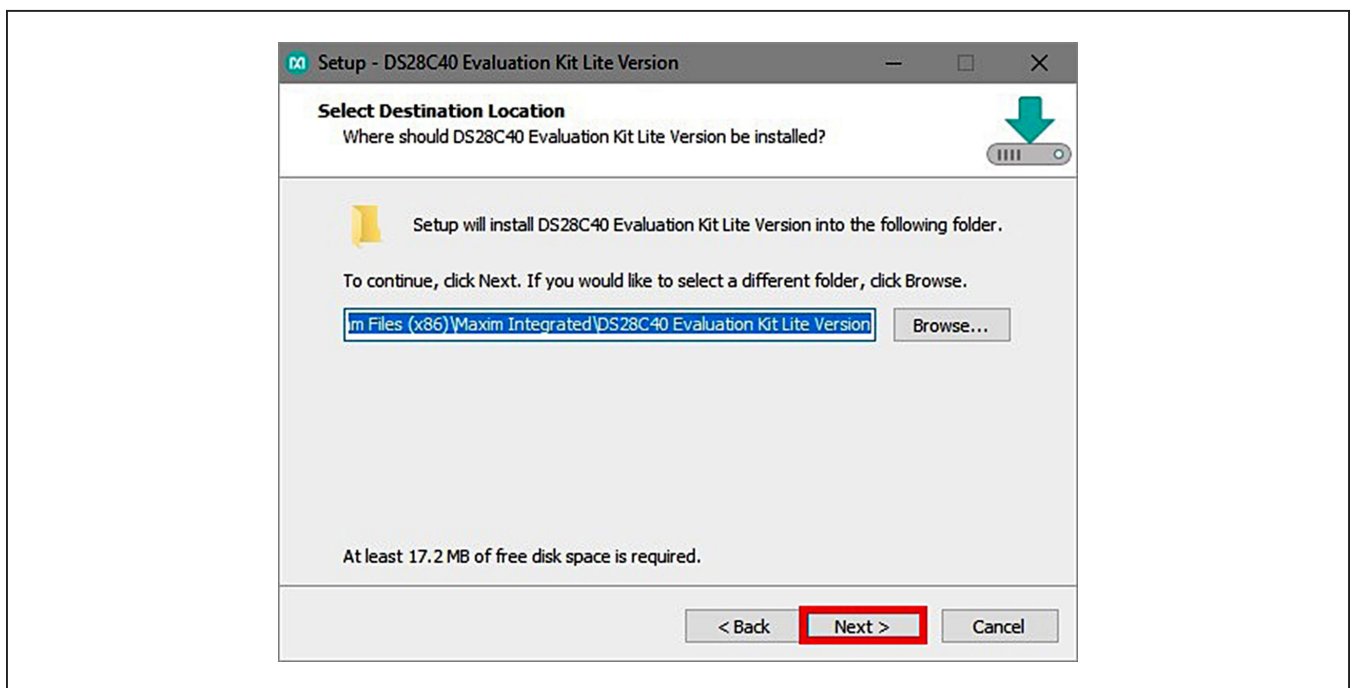


Figure 3. Install Folder Location

- 5) Click **Next** to install shortcuts to the default folder (Figure 4).
- 6) Unplug any Maxim adapter and click on **Next** (Figure 5) with the default settings checked. This action installs the DS9481P-300 driver that is needed to communicate through the USB by a virtual COM port.

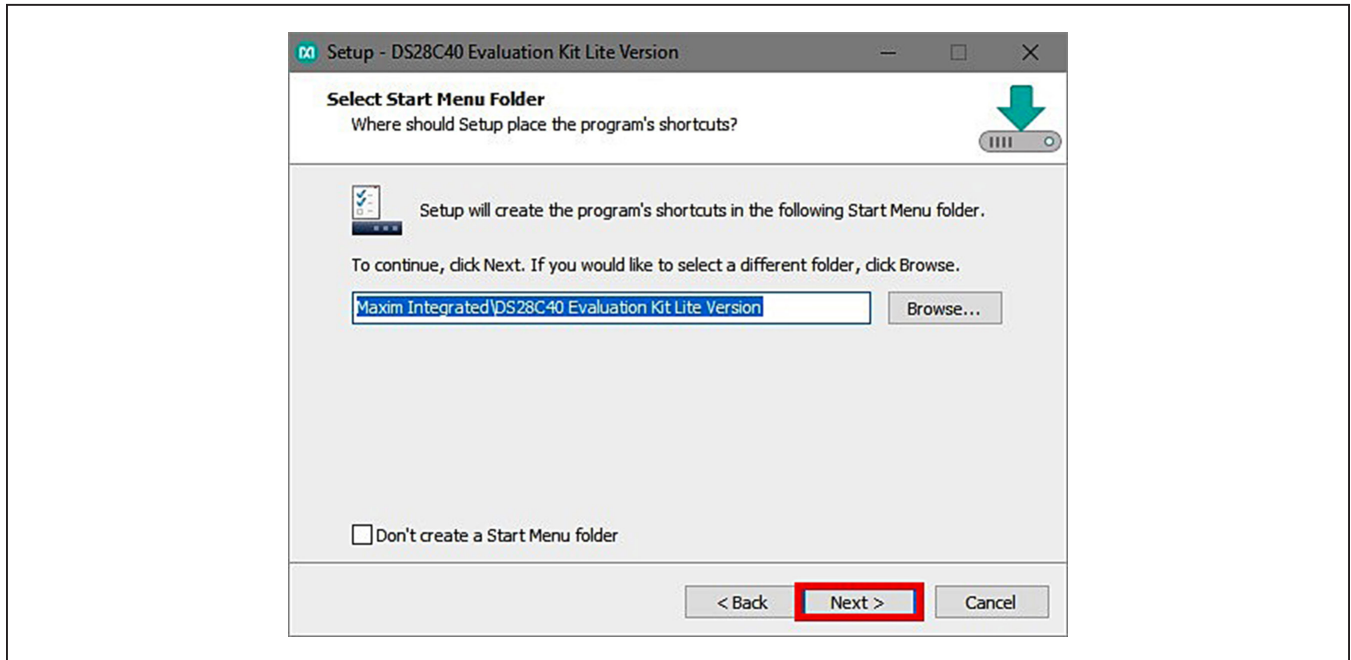


Figure 4. Program Shortcuts Location

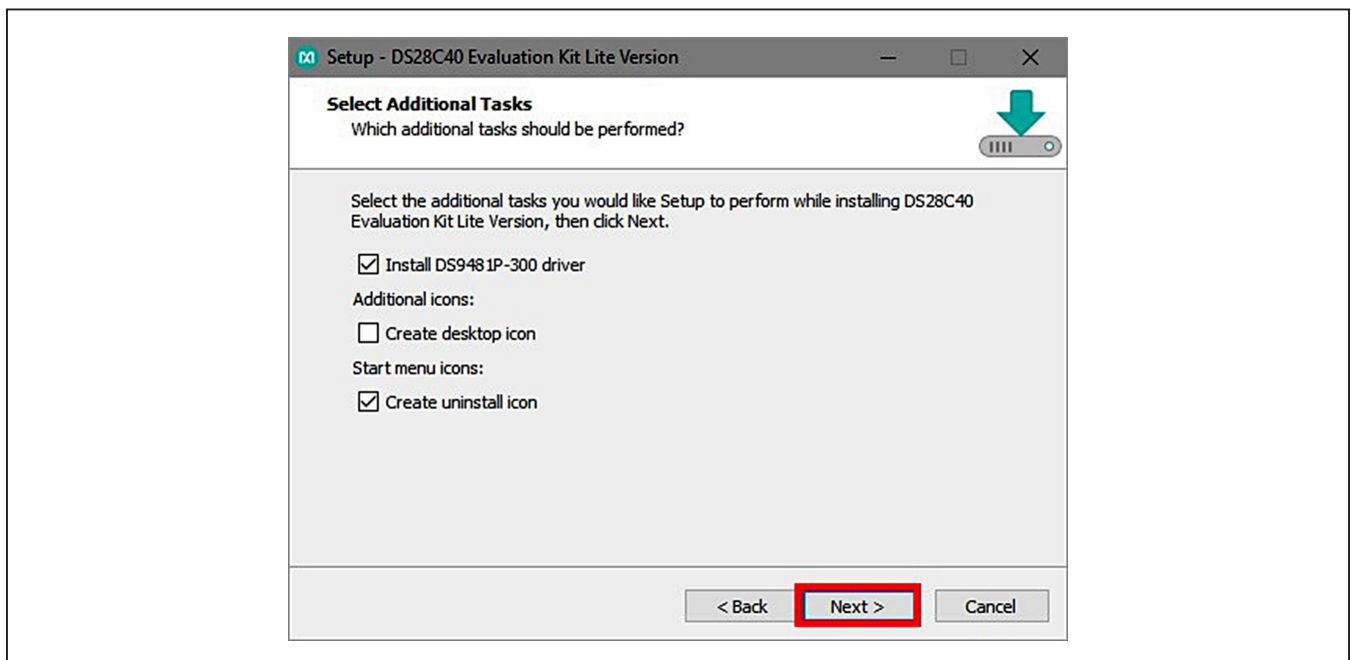


Figure 5. Select to Install the Driver



- 7) Next click on **Install** (Figure 6). A new window pops up to show progress of the installation.
- 8) Click on **Next** (Figure 7) when the **Device Driver Installation Wizard** appears.

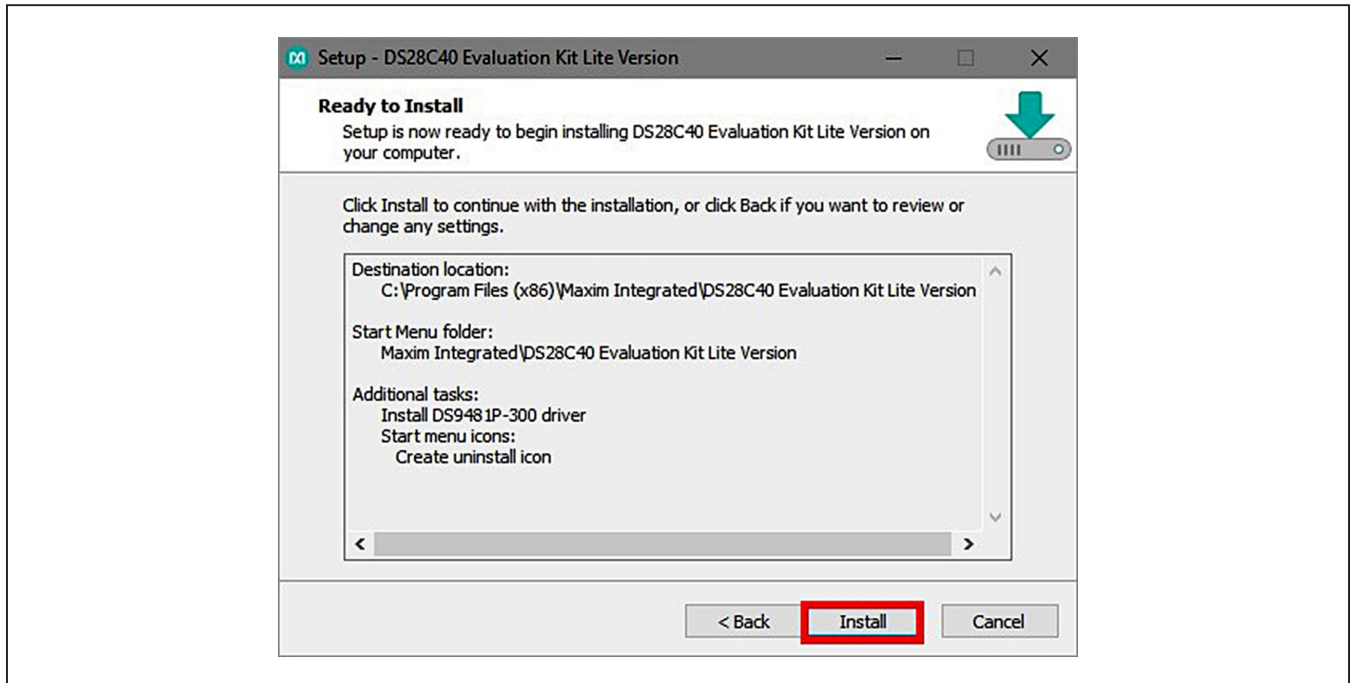


Figure 6. Ready to Install

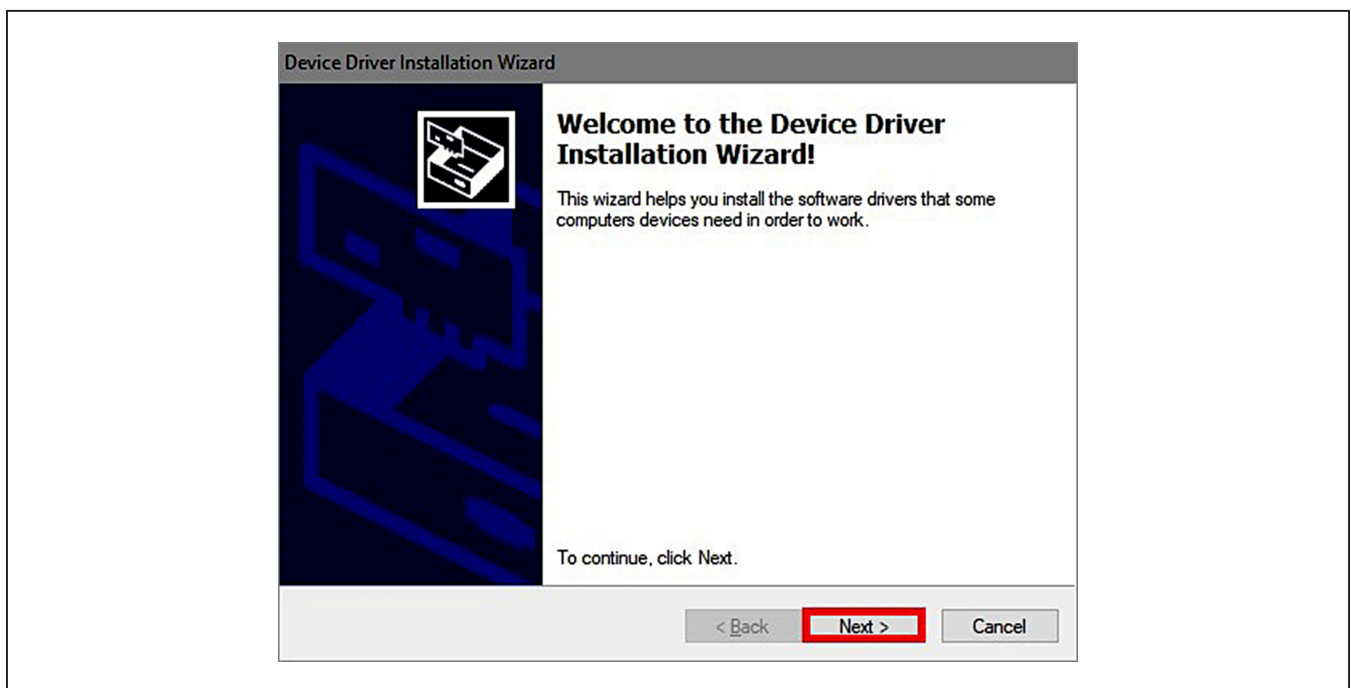


Figure 7. Device Driver

- 9) Click on **Finish** (Figure 8) to close the final window confirming the driver was installed correctly.
- 10) Now that the driver is installed, connect the hardware by doing the following:
  - a) Open the socket and insert a DS28C40 into one of the cavities, as shown in Figure 9. **Note:** The plus (+) on the package must be on aligned with the top of the marker in the socket.
  - b) Close the clamshell socket.
  - c) Connect the DS9121CQ J2, 10-pin male plug, into the DS9481P-300#, 10-pin female socket (Figure 10).
  - d) For the DS9121CQ+, insert jumper JB1 to use VCC (Figure 10).
  - e) Plug-in the DS9481P-300# using USB Type-A to USB Micro Type-B cable into the PC.

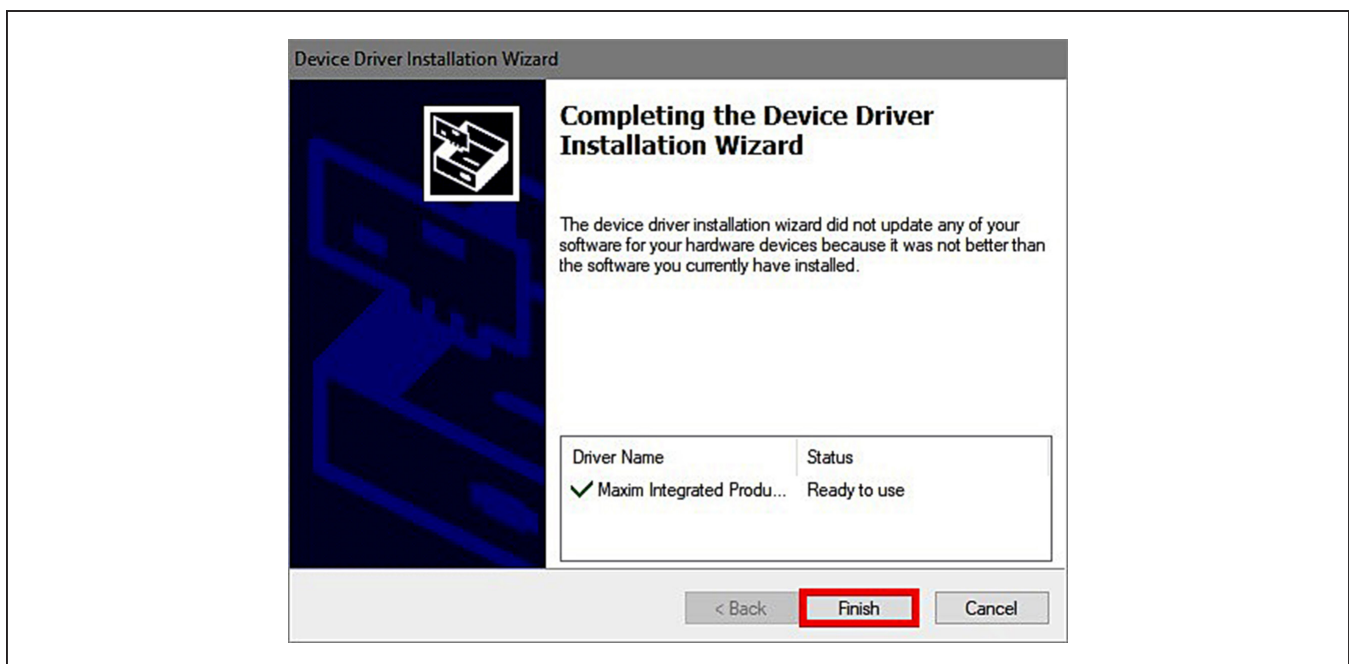


Figure 8. Device Driver Installed Finished

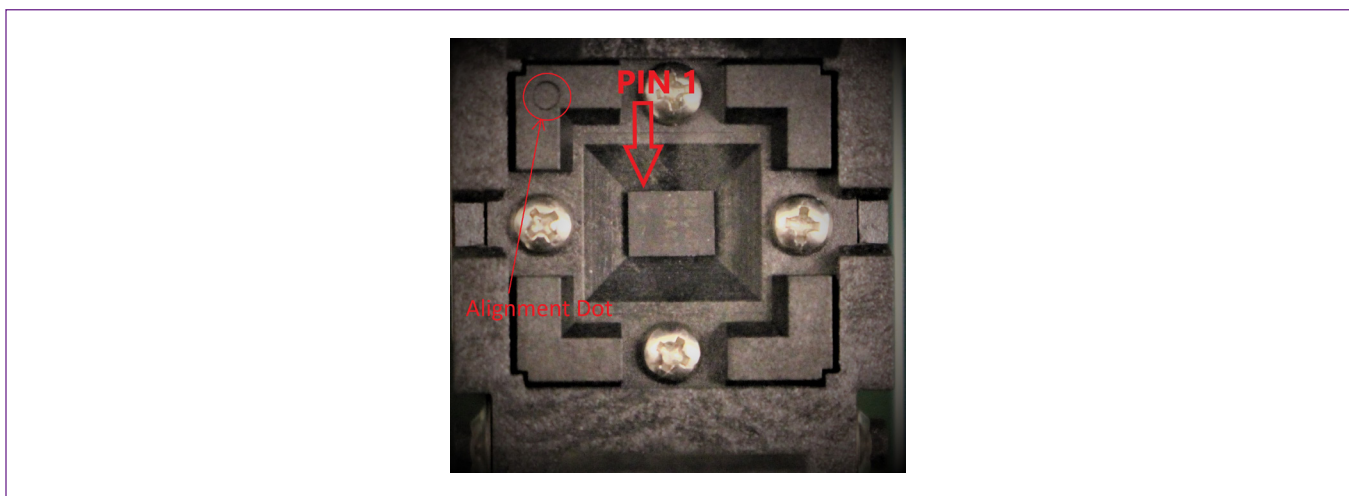


Figure 9. Orientation of the DS28C40 in the Clamshell Socket

## DS28C40 Evaluation System Lite Version

Evaluates: DS28C40

11) Click on **Finish** (Figure 11) to close the final window confirming the software was installed correctly.

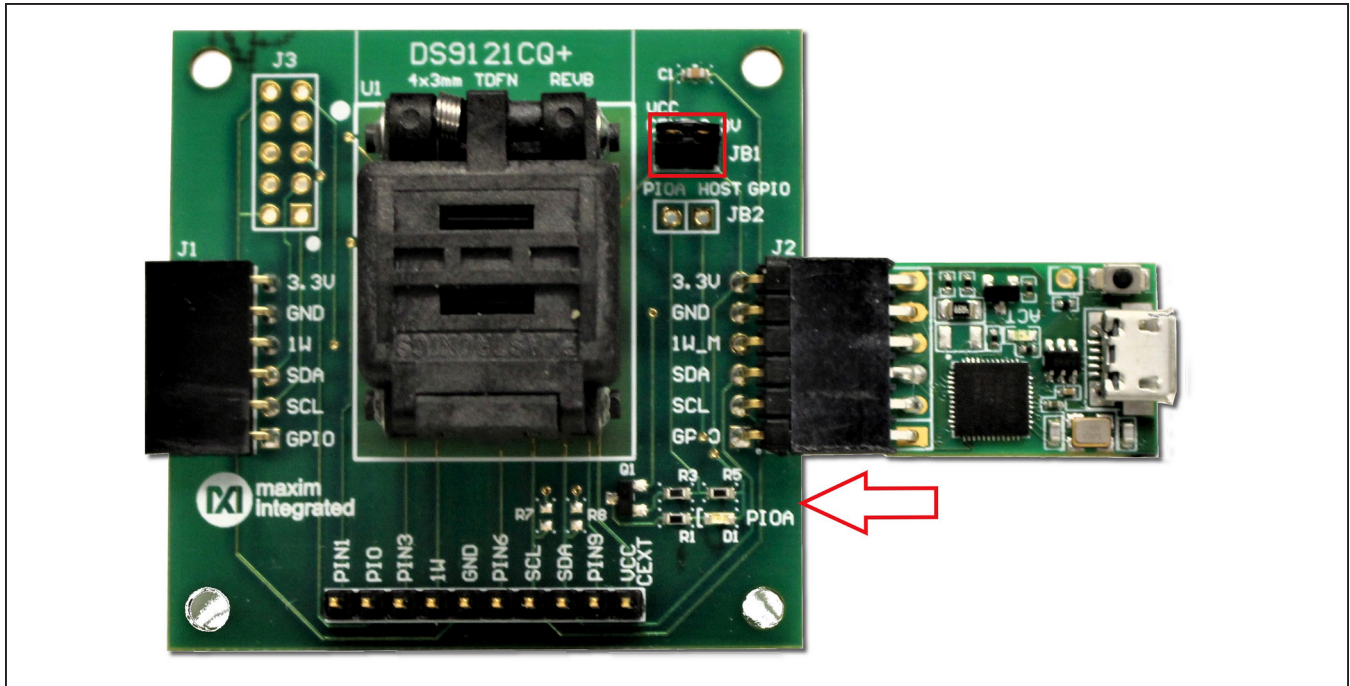


Figure 10. DS9481QA-300 and DS9121CQ

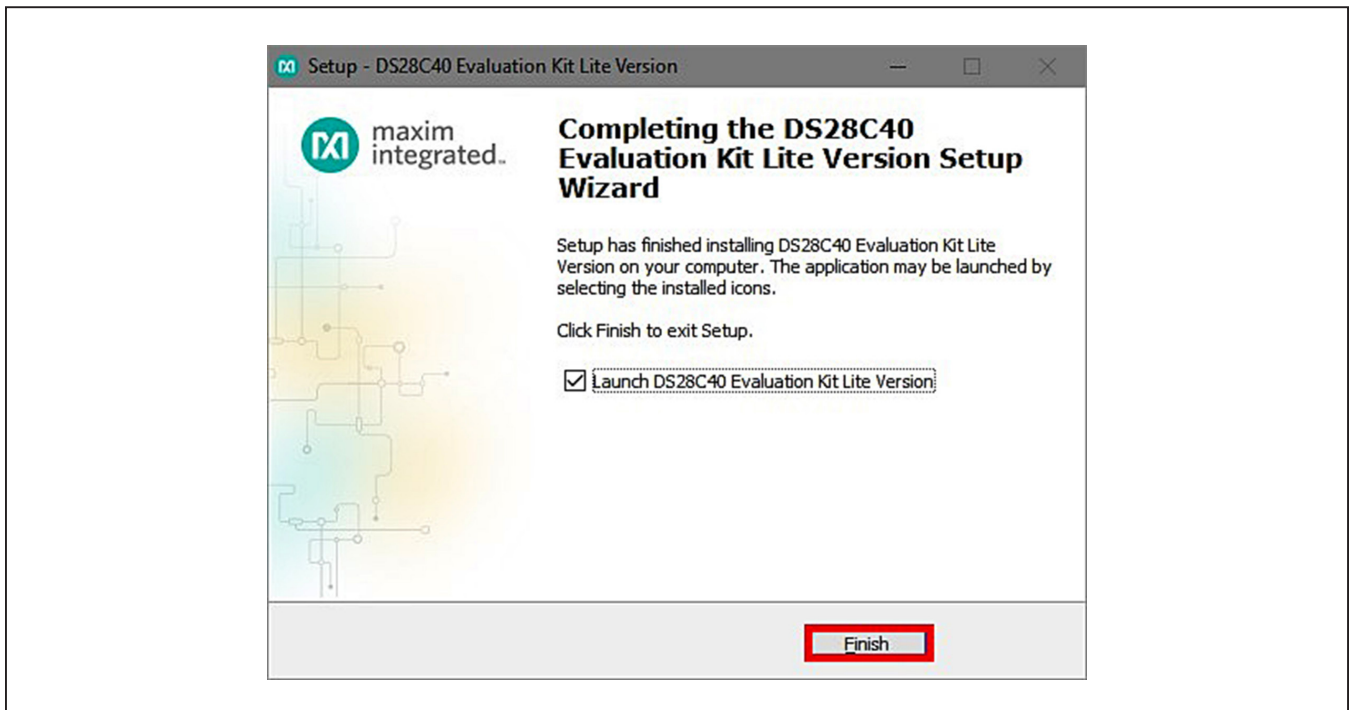


Figure 11. Software Installation Finished

12) The DS28C40 EV kit program now opens and connects to the DS9481P-300 COM port. This can be verified in the lower right corner of the window as shown in [Figure 12](#).

Available Options

The DS28C40 EV Kit Lite Program is designed as a usage example to show step by step how to use the

DS28C40 device. This version includes options to write, read, and run a compute authentication page using SHA2 or ECDSA. To access the full potential of the DS28C40, request the full version available under NDA request.

The GUI displays all the I<sup>2</sup>C sequences for each step performed to assist the firmware engineer.

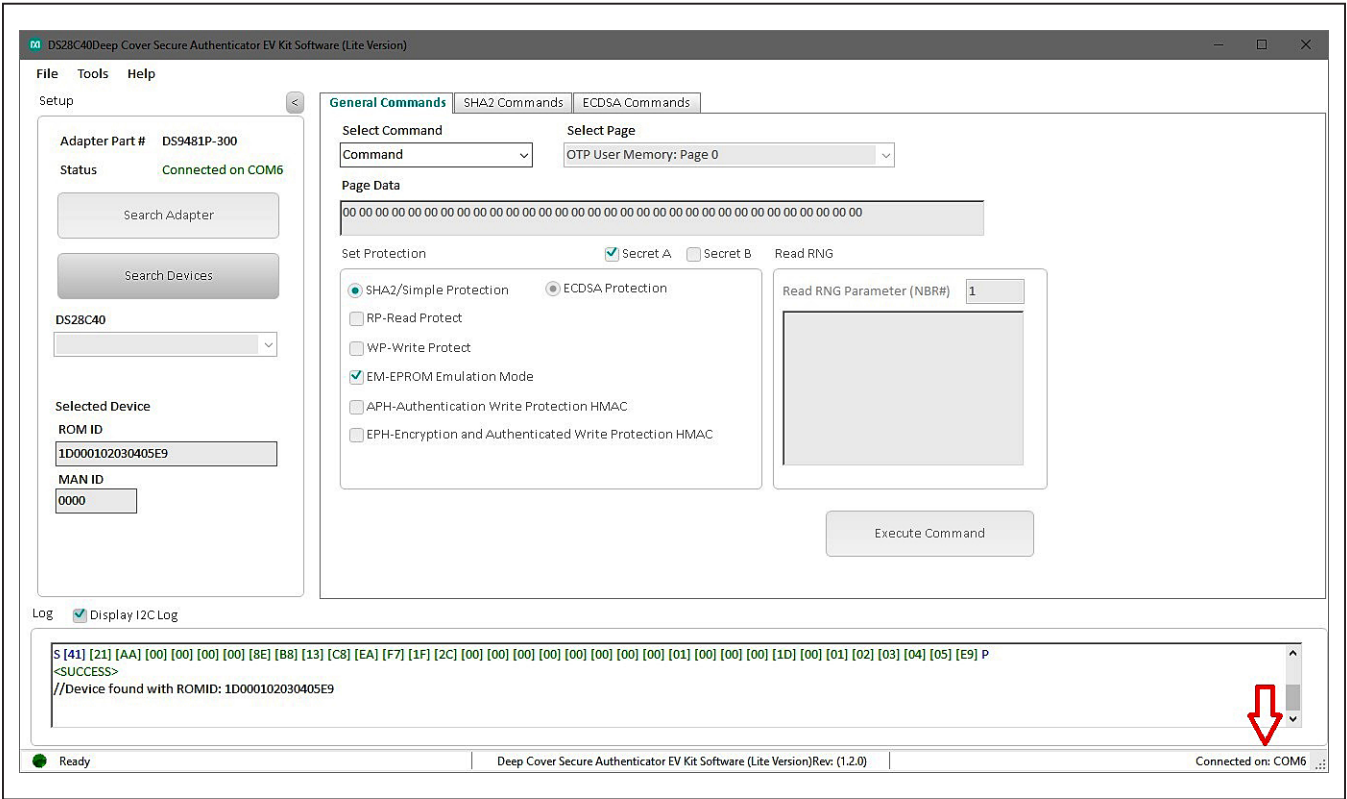


Figure 12. DS28C40 EV Kit Program (Default View upon Opening)

Usage Example—Feature Write Memory and Read Memory

- 1) Select the **General Commands** tab (Figure 13).
- 2) Select the **Write Memory** command from the combo box selection (Figure 13).

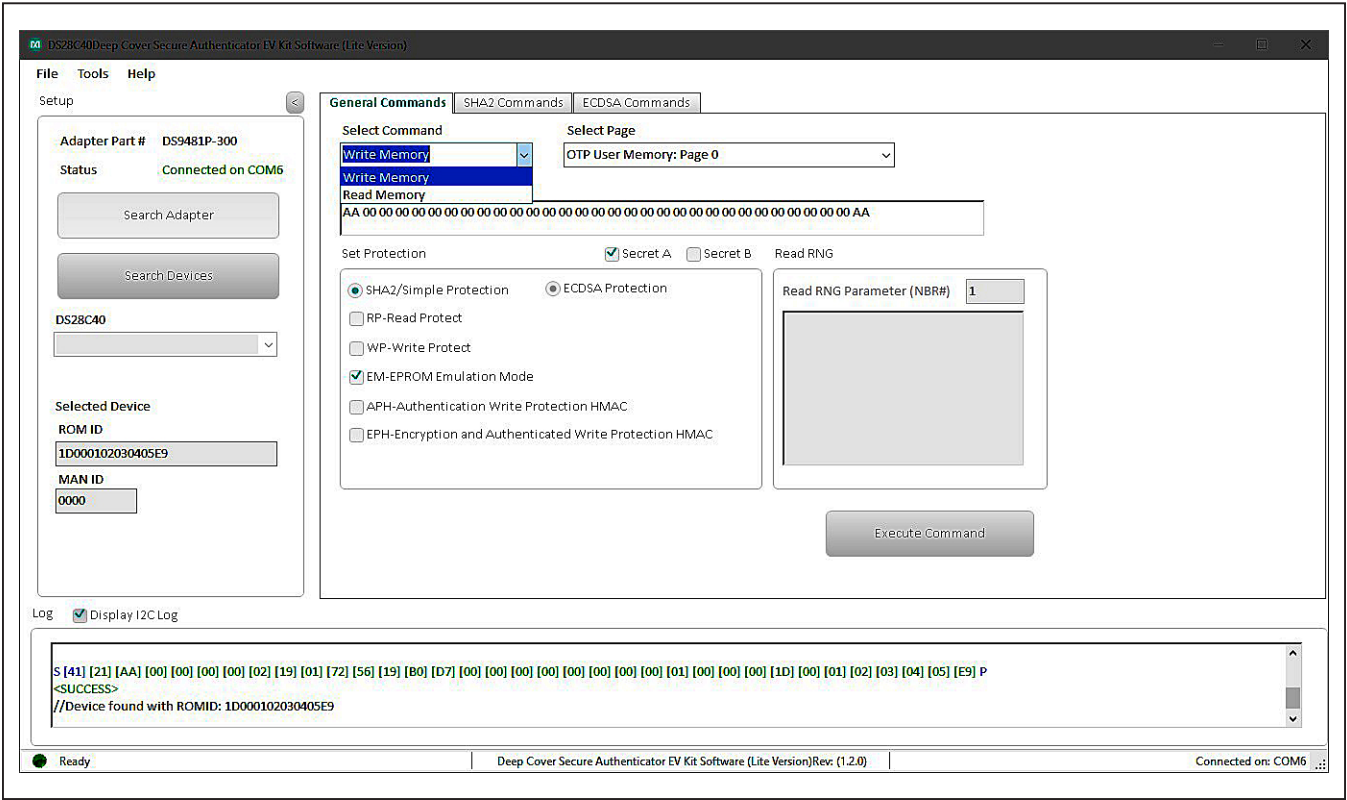


Figure 13. Selecting Command



3) Write the desired data on the **Page Data** textbox (Figure 14).

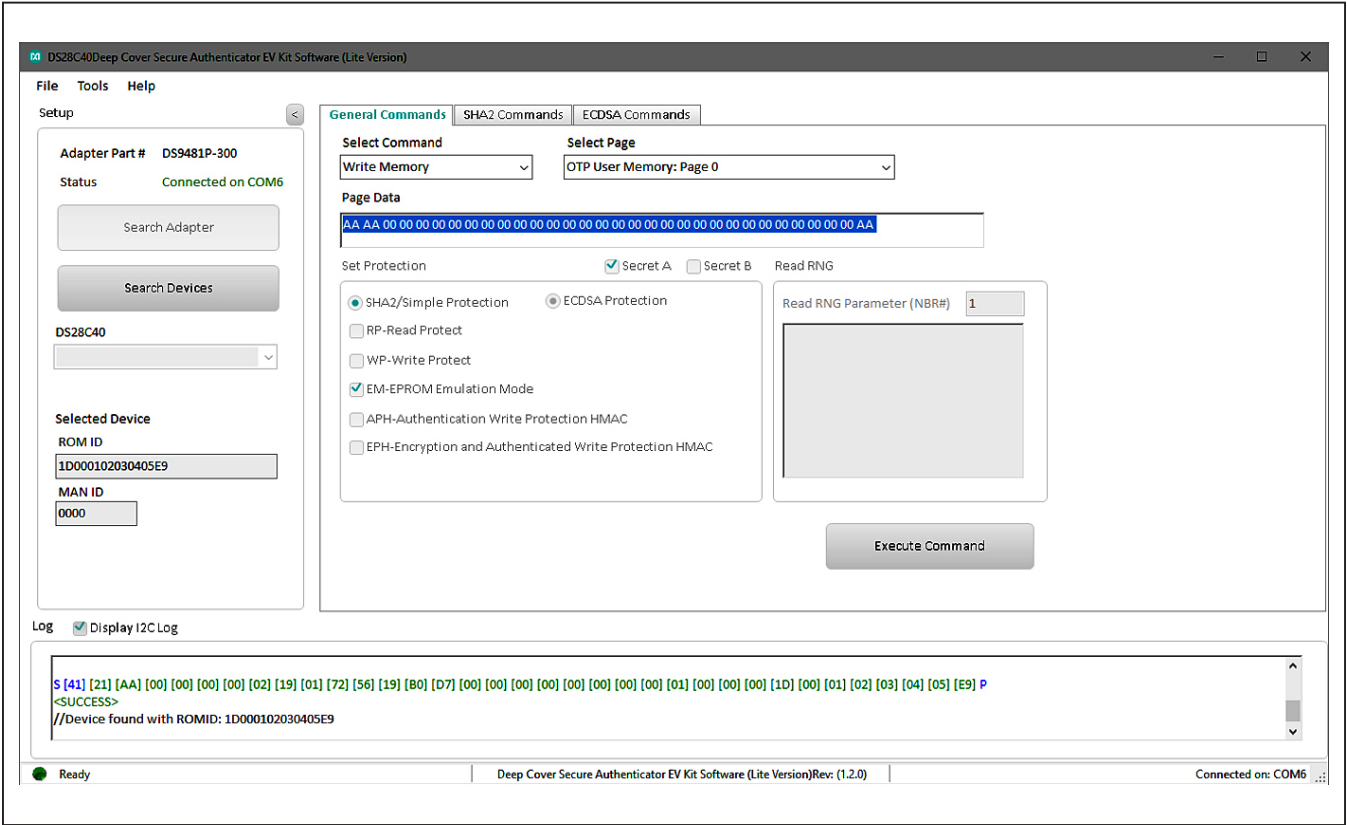


Figure 14. Write Data

4) Select the page for writing (Figure 15).

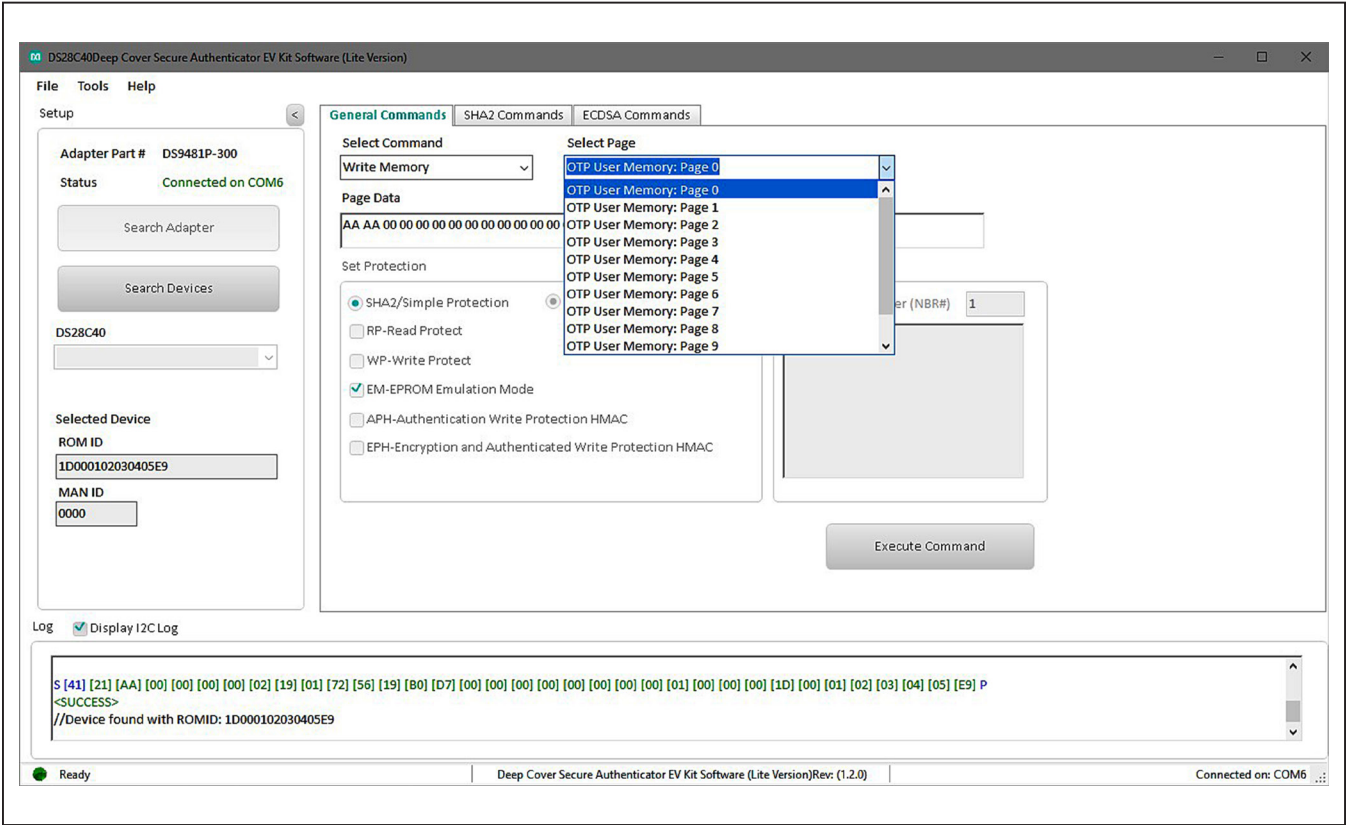


Figure 15. Select Page

- 
- The screenshot displays the 'DS28C40 Deep Cover Secure Authenticator EV Kit Software (Lite Version)' application. The interface includes a menu bar (File, Tools, Help), a 'Setup' section on the left for configuring the adapter and device, and a main workspace for commands. In the 'General Commands' tab, 'Write Memory' is selected, and 'OTP User Memory: Page 0' is chosen. The 'Page Data' field contains a hexadecimal string. Below this, protection settings are configured, with 'Secret A' checked and 'EM-EPROM Emulation Mode' selected. A 'Read RNG' section is also present. The 'Execute Command' button is prominently highlighted with a red rectangle. The bottom log window shows a successful write operation with the message: 'S [41] [21] [AA] [00] [00] [00] [02] [19] [01] [72] [56] [19] [80] [D7] [00] [00] [00] [00] [00] [00] [00] [01] [00] [00] [00] [1D] [00] [01] [02] [03] [04] [05] [E9] P <SUCCESS> //Device found with ROMID: 1D000102030405E9'. The status bar at the bottom indicates the software is 'Ready' and 'Connected on COM6'.

[www.maximintegrated.com](http://www.maximintegrated.com)

## Usage Example—SHA2 Compute and Read Page Authentication

- 1) Under the **General Commands** tab, in the **Select Command** drop-down menu, select **Write Memory** (Figure 13).
- 2) Select the Secret A or B from **Select Page** drop-down menu for writing (Figure 17).
- 3) Write the desired secret on the **Page Data** text box and click **Execute Command** button (Figure 18).
- 4) Select the **SHA2 Commands** tab.
- 5) Select the **Compute and Read Page Authentication** command from the **Select Command** drop-down menu selection (Figure 19).

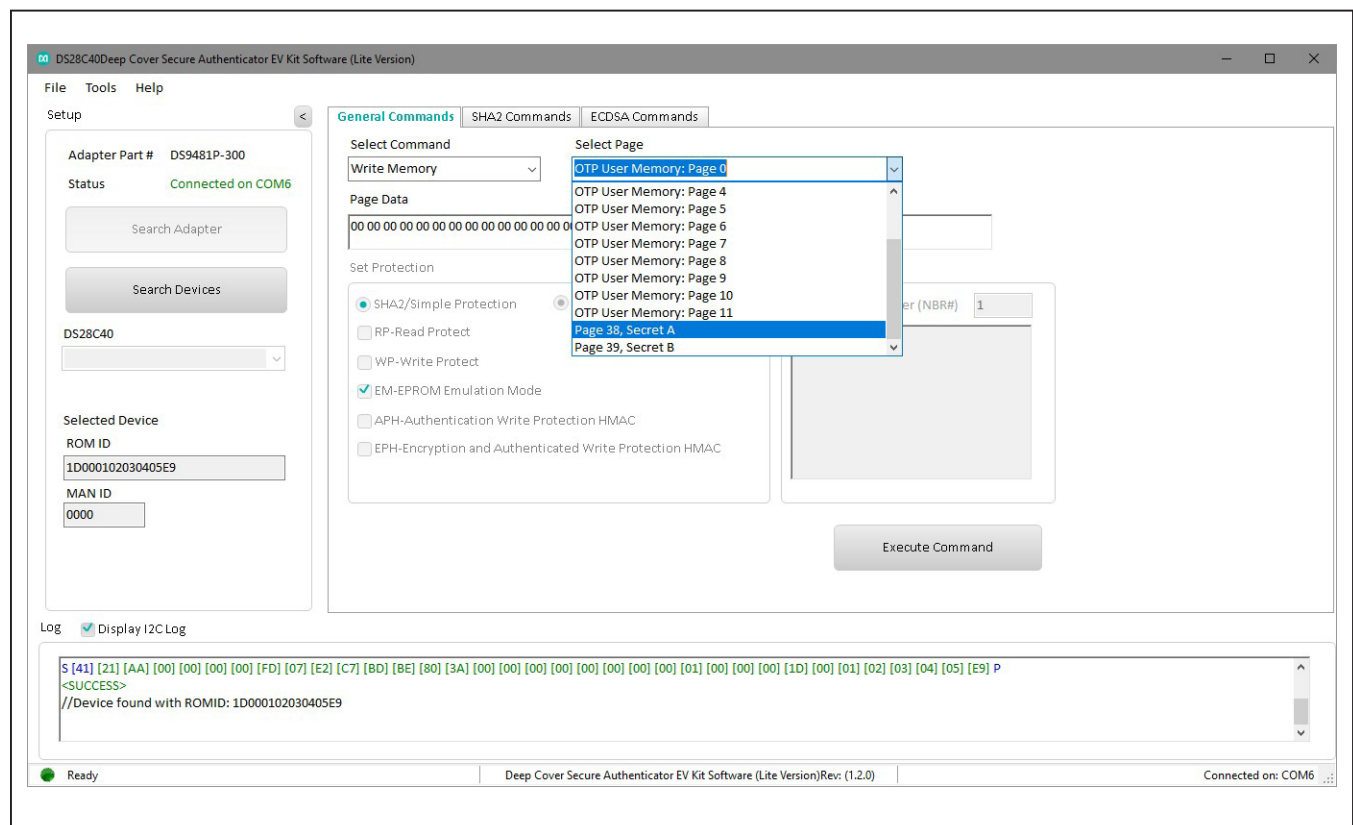


Figure 17. Selecting SHA2 Command

## Evaluates: DS28C40





6) From the **Select Page** drop-down menu, select a page to execute the command (Figure 20).

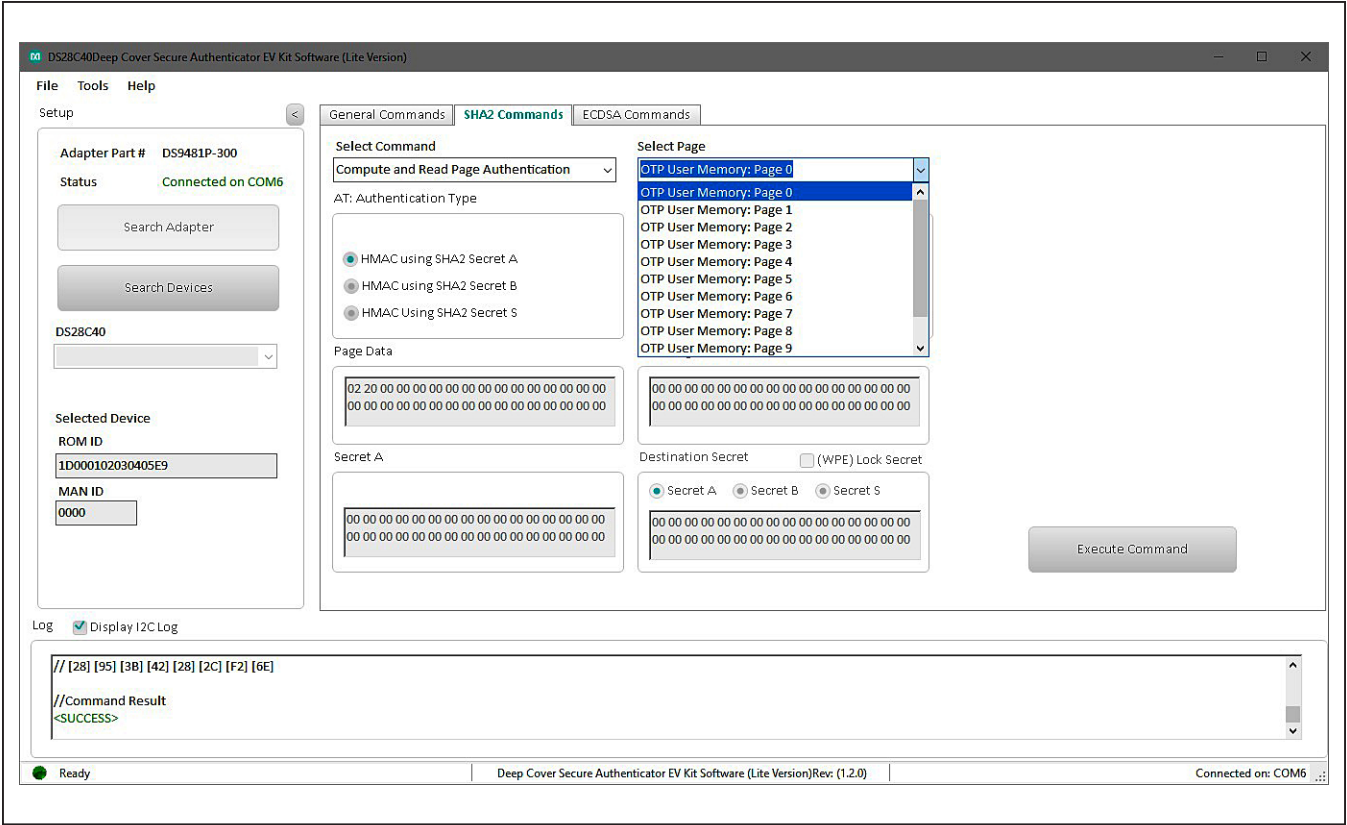


Figure 20. Select Page

7) In the **AT: Authentication Type** combo box, select a secret to compute the HMAC on selected page ([Figure 21](#)).

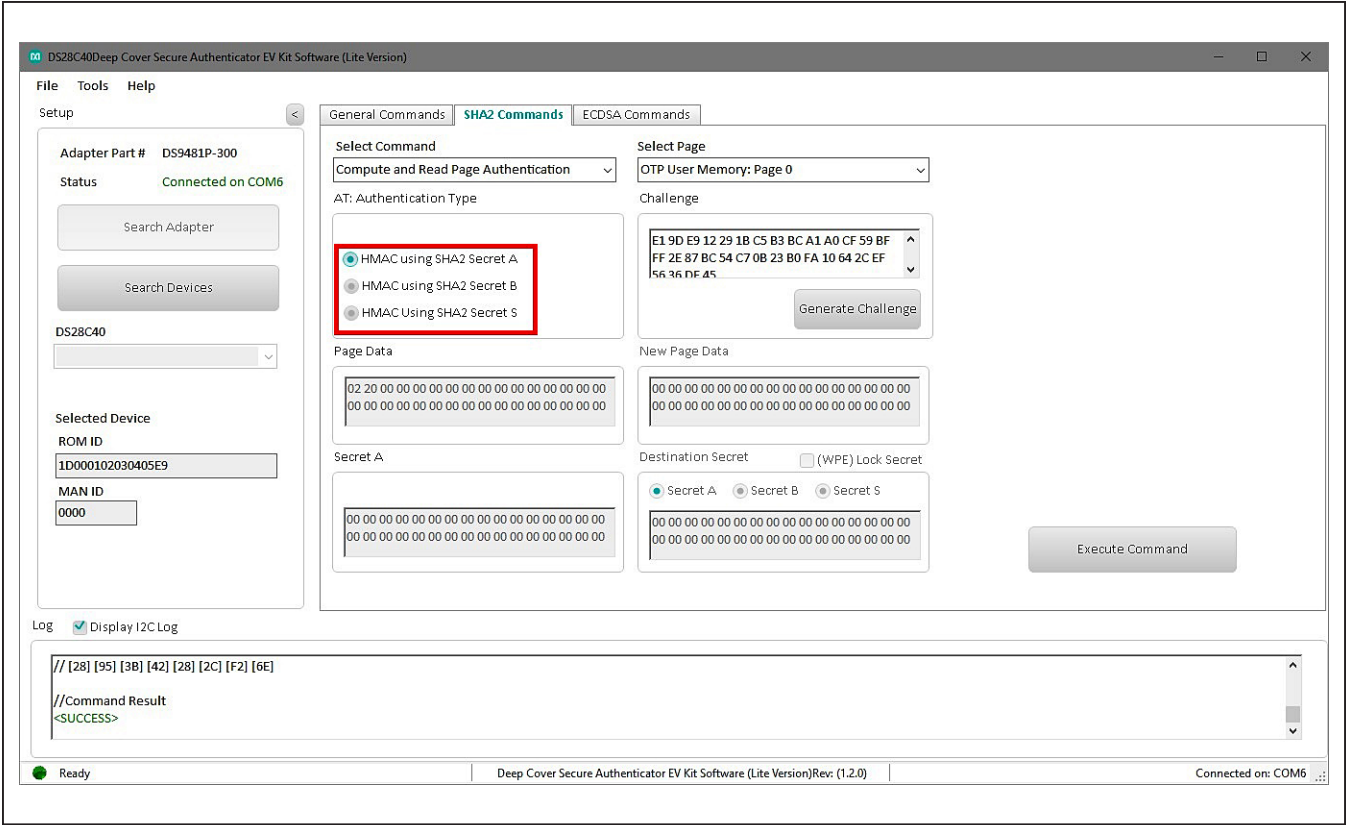


Figure 21. Select Secret

8) Click the **Generate Challenge** button to create a random challenge for command ([Figure 22](#)).

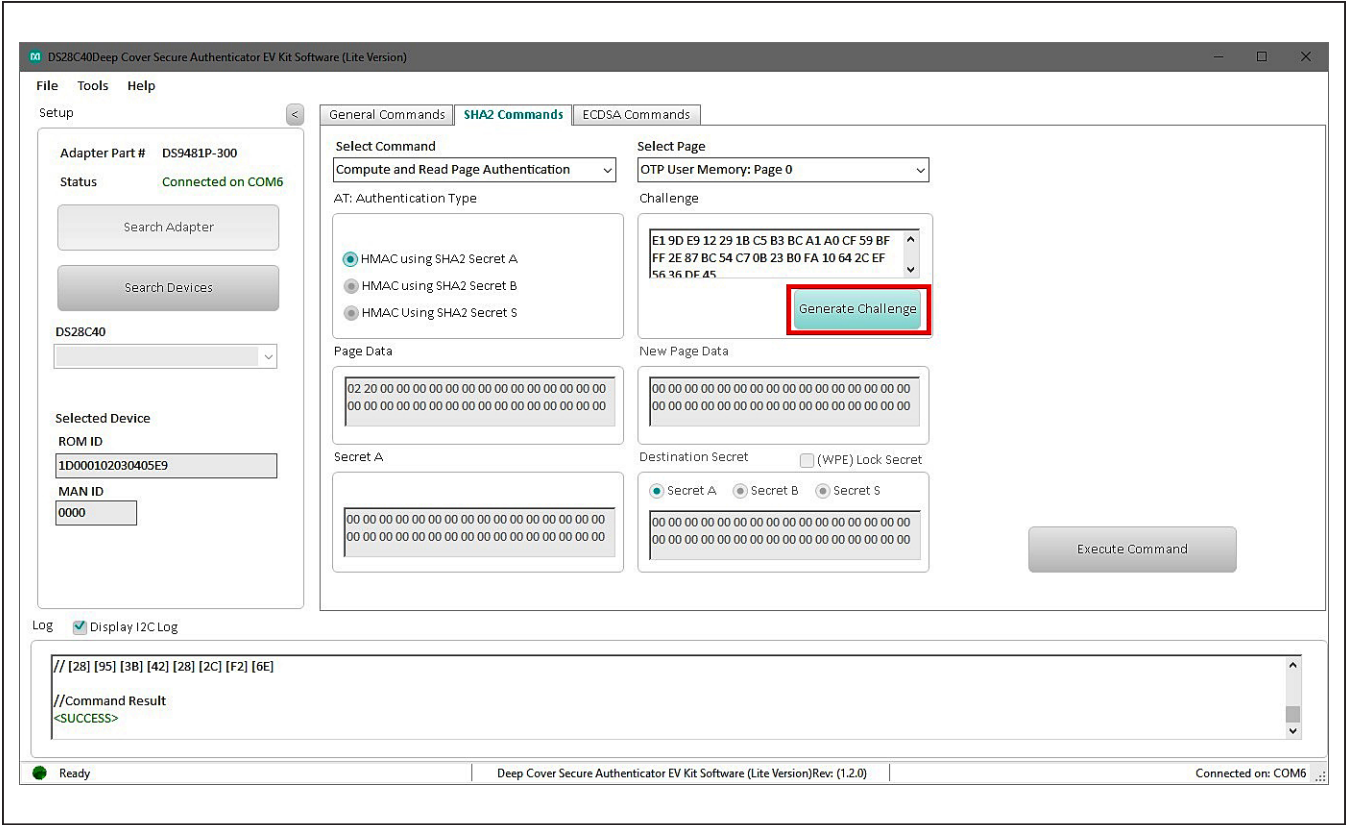


Figure 22. Generate Challenge

- 9) Click the **Execute Command** button to run the sequence (Figure 23). The command result is displayed on the **Log** box.

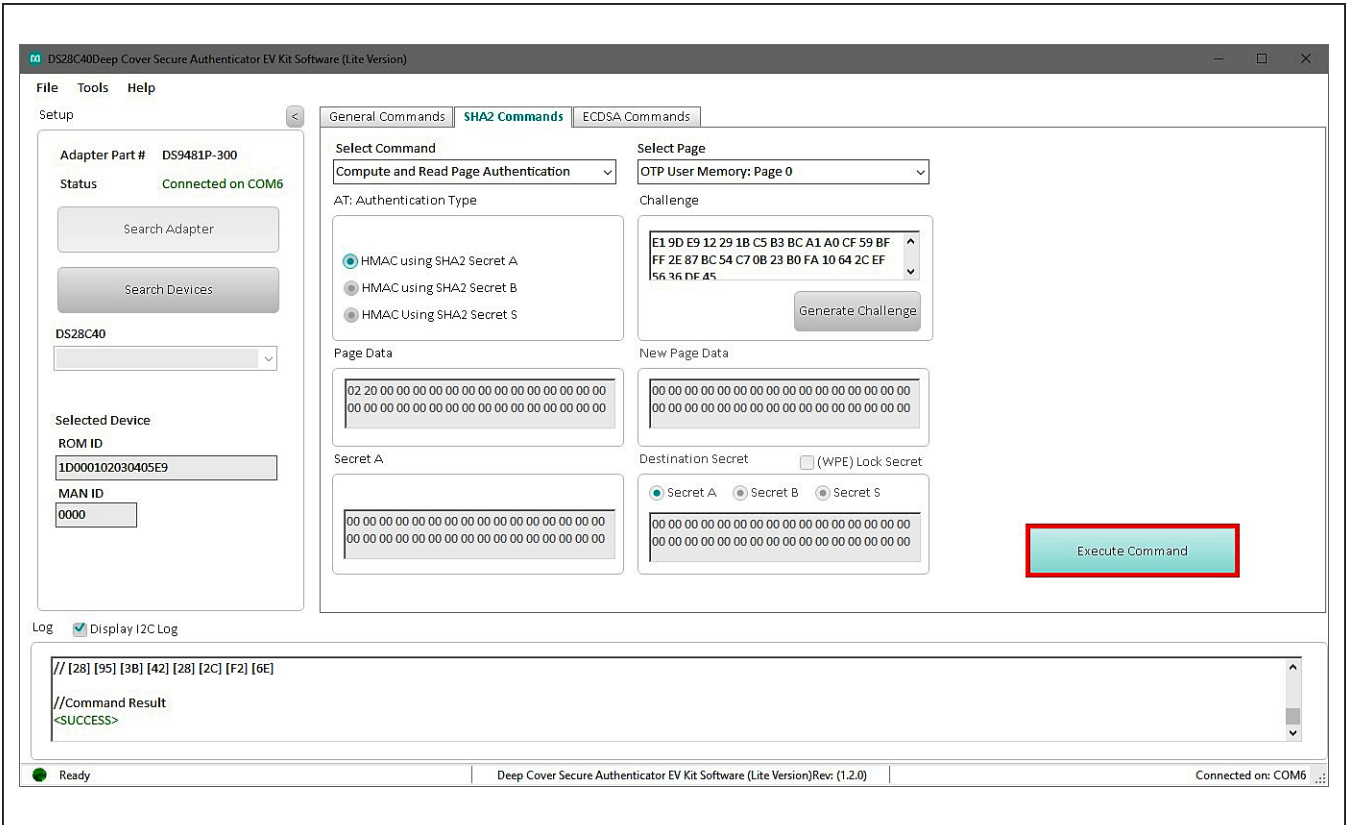


Figure 23. Execute Command

## Usage Example—ECDSA Compute and Read Page Authentication

- 1) Select the **ECDSA Commands** tab (Figure 24).
- 2) From the **Select Command** drop-down menu, select the **Generate ECC-256 Key Pair** and select the desired **Public/Private Key** from the **Key Selection** combo box (Figure 24).

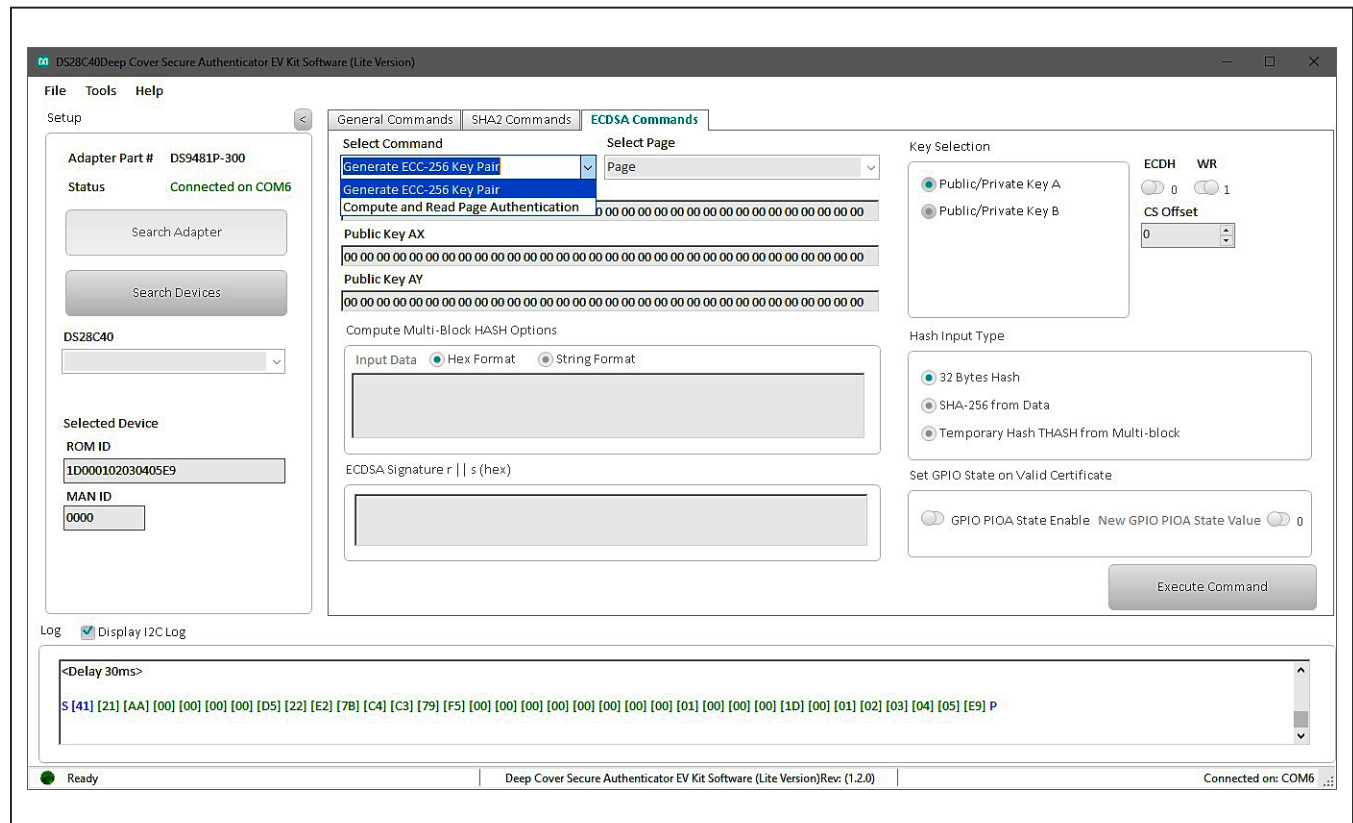


Figure 24. Generate ECC Key pair



3) Click the **Execute Command** button (Figure 25).

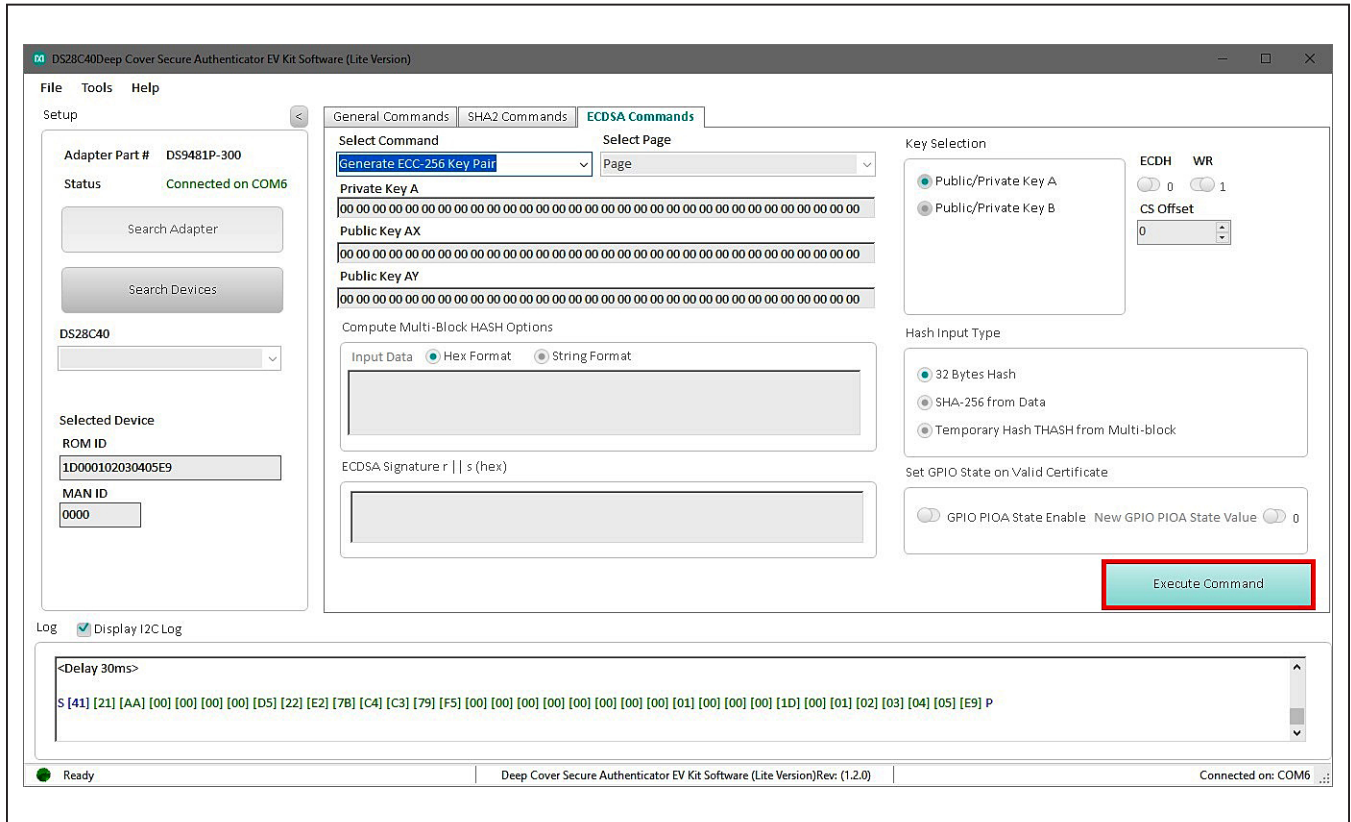


Figure 25. Execute Generate ECC Key

- 4) In the **Select Command** drop-down menu, select the **Compute and Read Page Authentication** command and the **Public/Private Key** from the **Key Selection** combo box (Figure 26).

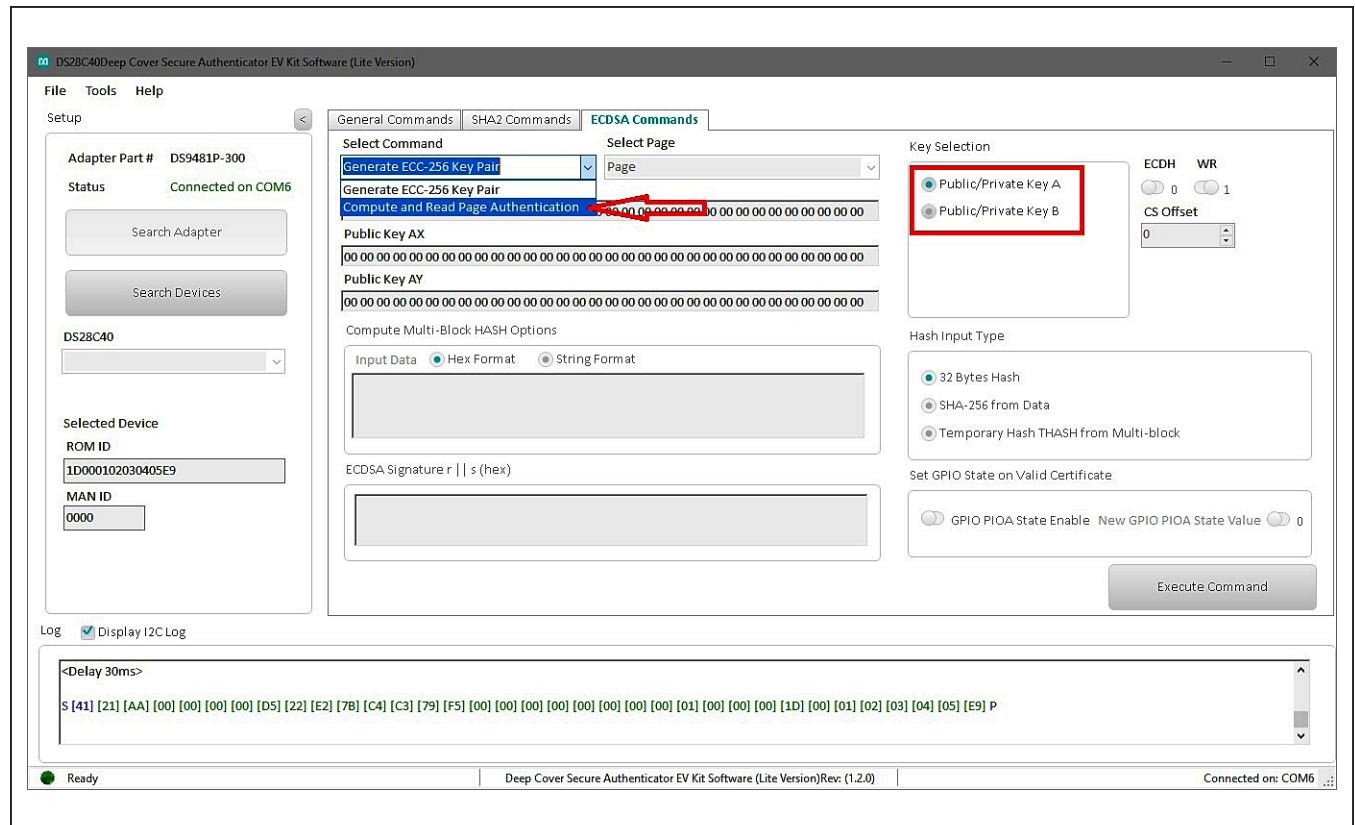


Figure 26. Selecting Command

- 5) From the **Select Page** drop-down menu, select the desired page and public key (Figure 27).
- 6) From the **AT: Authentication Type** combo box, select the private key (Figure 27).
- 7) Click the **Generate Challenge** button and then click **Execute Command** button to perform the sequence (Figure 28). Results are displayed in the **Log** box.

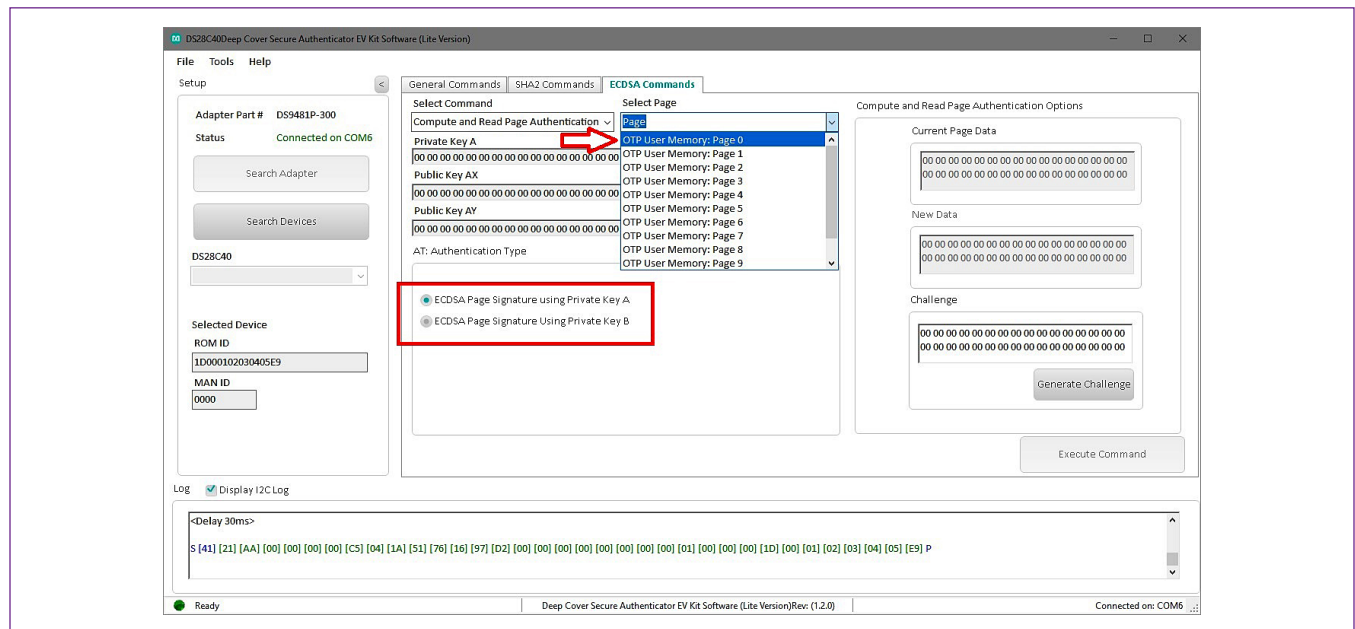


Figure 27. Selecting Page and Key

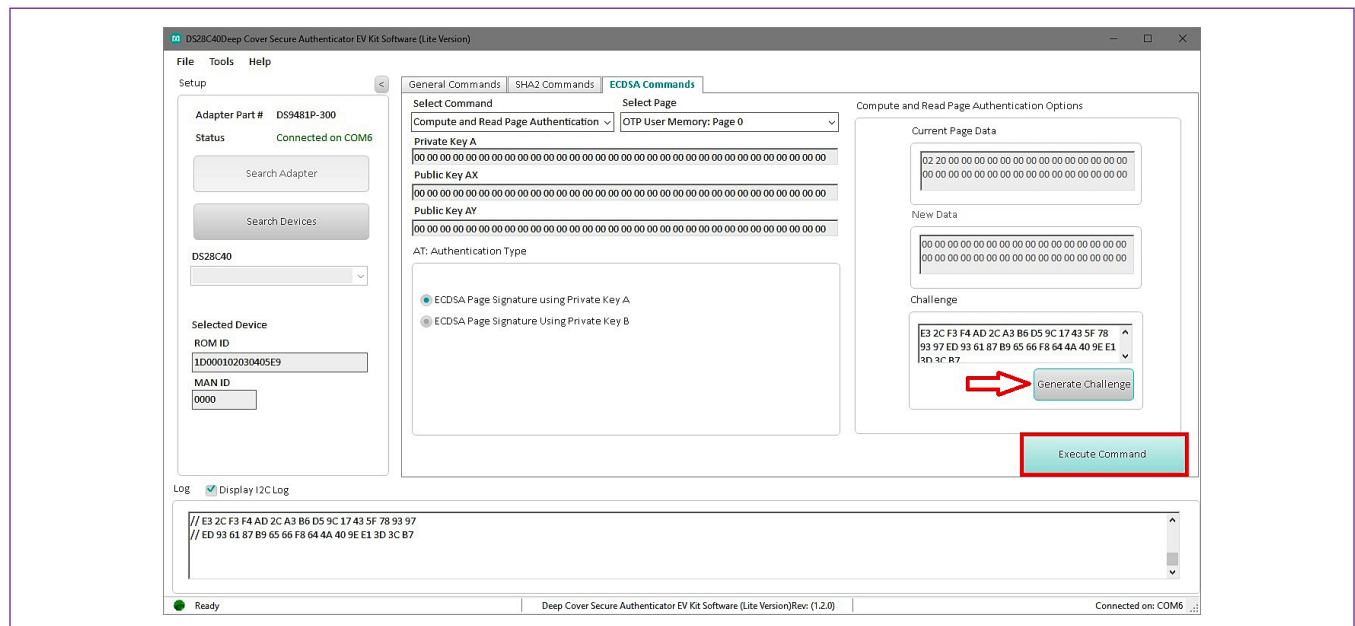


Figure 28. Execute Command

## Navigating

The DS28C40 EV Kit Lite Program is divided in five sections: the top menu bar, **Setup** panel, tab control, **Log**, and the status bar.

- **Menu Bar:** Provides additional software features and information used to support the software operation.
- **Setup Panel:** Information for hardware connection and device status.
- **Command Panel:** Main section for command execution and command option selection.
- **Log:** Software communication results for all commands and software transaction. Shows the I<sup>2</sup>C results and command's inputs and results.
- **Status Bar:** Displays the state of the software after connection the hardware necessary for operation

## Connecting and Detecting Hardware

The DS28C40 EV Kit Lite Program detects automatically the required hardware on initialization. To exercise a different DS28C40, open the DS9121CQ socket and replace the device ([Figure 9](#)). Then click the **Search Device** button to detect then new DS28C40.

If, for any reason, the DS9481P-300 is not detected during the initial software load, click the **Search Adapter** button to detect and initialize the USB adapter.

## DS28C40 Evaluation System Lite Version

Evaluates: DS28C40

### Ordering Information

PART	TYPE
DS28C40EVKIT#	EV System

#Denotes RoHS compliance.

### DS9121CQ EV Kit Bill of Materials

DESIGNATION	QTY	DESCRIPTION
Pack-Out	1	I2C AUTHENTICATOR AUTO, EV KIT DS28C40EVKIT#
Pack-Out	5	AUTOMOTIVE I2C AUTHENTICATOR, 6Kb DS28C40G/V+
Pack-Out	1	CABLE, USB A-TO-MICRO-B CABLE (1M) 68784-0001
Pack-Out	1	1W/I2C 4x3MM TDFN SOCKET BOARD DS9121CQ+
Pack-Out	1	BOX, BROWN, 9 3/16" X 7" X 1 1/4"
Pack-Out	1	FOAM, ANTI-STATIC PE 12X12X3.175MM
Pack-Out	2	LABEL, SATIN 1-3/4" X 1-3/8"
Pack-Out	1	2X3", STATISHIELDING, ZIPTOP
Pack-Out	1	INSERT+, MAXIM WEB INSTRUCTION
Pack-Out	1	DS9481P-300 EVAL KIT# DS9481P-300#
Pack-Out	1	1W/I2C 4X3MM TDFN SOCKET BOARD DS9121CQ+
DS9121CQ+ PCB	1	PCB+, DS9121CQ+
J4	1	CONN HEADER VERT 10POS 2.54MM 22284103
J2	0.1	CONN+,HEADER,50PS, 100 SGL, R/A, AU TSW-150-08-G-S-RA

DESIGNATION	QTY	DESCRIPTION
J1	1	CONN+, RCPT, 100" 6POS, R/A GOLD PPPC061LGBN-RC
U1	1	SOCKET+, IC, TDFN10, 4X3MM, CLAMSHELL 10QH50A14030-D
PACK-OUT	1	LABEL BLANK THT-1-423 0.75 X 0.25
PACK-OUT	1	BAG, STATIC SHIELDZIP4X6, W/ESD LO
C1	1	CAP+, 0.1µF, 10%, 10V, X7R, 0603 C0603C104K8RACTU
D1	1	LED+,GREEN CLEAR, 3.2V,20MA,0603 598-8081-107F
JB1	0.1	HEADER 36-40 PINS (CUT TO FIT) 22-28-4363
Populate to JB1	1	SHUNT+, LP W/HANDLE 2 POS 30AU 881545-2
Q1	1	MOSFET, N-CH ENHANCEMENT BSS138LT1G
R3	1	3.3KΩ 1% RESISTOR (0603 PB FREE) ERJ-3EKF3301V
R1, R5	2	RES,10KΩ 1% 0603 ERJ-3EKF1002V



## Evaluates: DS28C40

Exposed metal needs 30µin Hard Au over 300µin Ni over 1oz Cu

Hard Gold 30 microns  
Nickel 300 microns  
Copper 1oz  
FR4

DS9121CQ+				
Part Number: 90-28C40#K00				
Property of			Rev	
			B	
Drill and Mechanical Layer				
Date: JAN 10 2019 Units in mils				
SIZE	QTY	SYM	PLATED	TOLERANCE
13	15	□	YES	+/- 0.003
39	1	▽	NO	+/- 0.003
39	36	*	YES	+/- 0.003
47	1	⊗	NO	+/- 0.003
67	4	⊗	YES	+/- 0.003
125	4	*	NO	+/- 0.003


62mil PCB

**Notes:**


- N/A
- Material: RoHS Compliant FR-408 or similar laminate material
- Board Dimensions: (2000 x 2000 mils)
- Board Thickness: 62 mils +/- 10%
- Layers: 2 (Top, Bottom)
- Minimum Trace/Spacing: 10 trace - 5 space
- Copper Thickness: 1oz on all layers
- Surface mount pads: 28 Through Hole Pads: 36 Nonplated through holes: 6
- Soldermask: GREEN
- Legend: White, top side only
- Plating: 30 micron hard gold over 300 micron nickel over 1oz copper
- Finish: Most Economical Lead free and RoHS compliant process
- Vendor Logo & date code: Allowed on bottom side only
- Total Drill hole quantity: 61 Slot Holes: 0 Smallest hole size: 13mil
- Tolerances:
  - Plated-through holes +/- 3 mil
  - Pattern to pattern +/- 6 mil
  - Legend to legend no preference
  - Soldermask to pattern +/- 6 mil
- Electrical testing needed: YES

Maxim Integrated | 25

DS28C40 EV Kit PCB Layout Diagrams (continued)

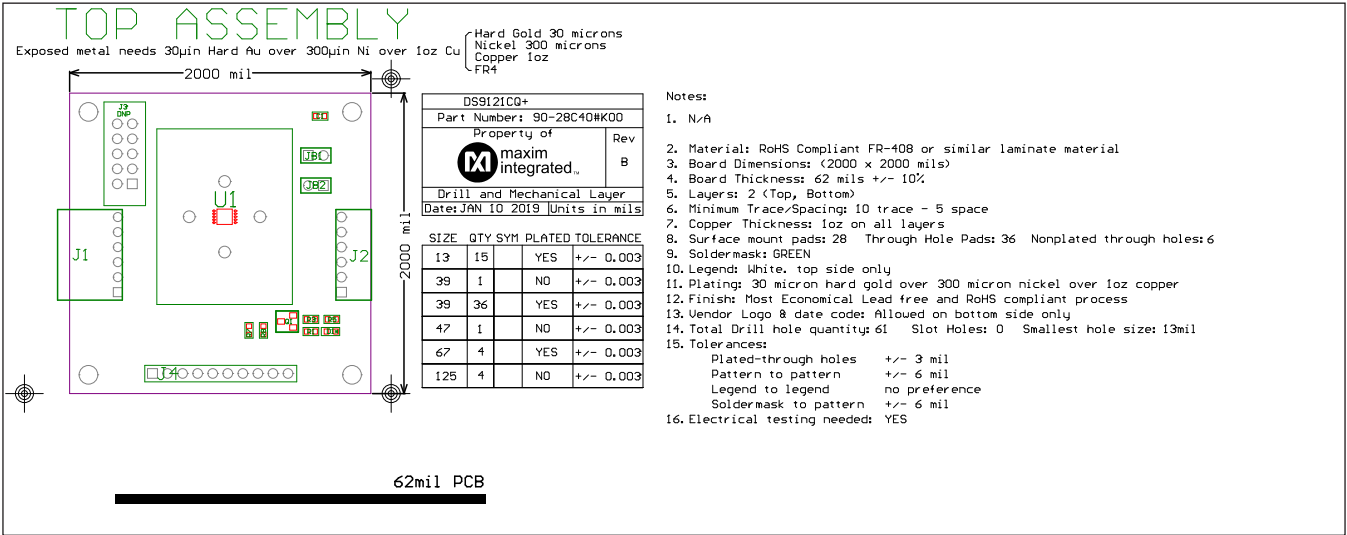

Drill and Mechanical Layer (2 of 3)

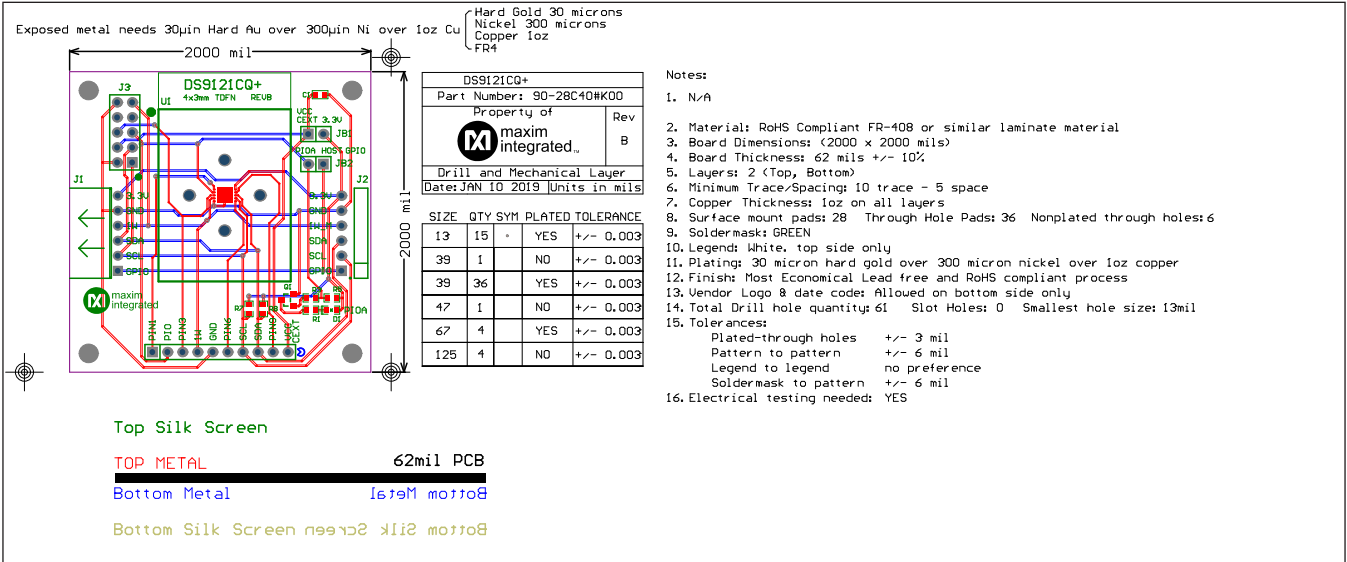

Drill and Mechanical Layer (3 of 3)

## Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	6/19	Initial release	—

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at <https://www.maximintegrated.com/en/storefront/storefront.html>.

*Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.*

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: [org@lifeelectronics.ru](mailto:org@lifeelectronics.ru)

[www.lifeelectronics.ru](http://www.lifeelectronics.ru)