

62 Max/62 Max + Infrared Thermometer

Calibration Information

Introduction

The Fluke 62 MAX and 62 MAX + Infrared Thermometers (the Product) can determine the surface temperature by measurement of the infrared energy radiated from the target surface.

Note

Japanese models indicate Celsius only.

⚠ Warning

To prevent personal injury, read all safety information before you use the Product.

Contact Fluke

To contact Fluke, call one of the following telephone numbers:

- Technical Support USA: 1-800-44-FLUKE (1-800-443-5853)
- Calibration/Repair USA: 1-888-99-FLUKE (1-888-993-5853)
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Europe: +31 402-675-200
- Japan: +81-03-6714-3114
- Singapore: +65-6799-5566
- Anywhere in the world: +1-425-446-5500

Or, visit Fluke's website at www.fluke.com.

To register your product, visit <http://register.fluke.com>.

To download manuals, or to see, print, or download the latest manual supplement, visit <http://us.fluke.com/usen/support/manuals>.

Safety Information

A **Warning** identifies conditions and procedures that are dangerous to the user. A **Caution** identifies conditions and procedures that can cause damage to the Product or the equipment under test.









The symbols used on the Product and in this manual are shown in Table 1.

Warning

To prevent eye damage and personal injury:

- Read all safety Information before you use the Product.
- Do not use the Product if it operates incorrectly.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.
- Before you use the Product, inspect the case. Do not use the Product if it appears damaged. Look for cracks or missing plastic.
- See emissivity information for actual temperatures. Reflective objects result in lower than actual temperature measurements. These objects pose a burn hazard.
- Do not look directly into the laser with optical tools (for example, binoculars, telescopes, microscopes). Optical tools can focus the laser and be dangerous to the eye.
- Do not look into the laser. Do not point laser directly at persons or animals or indirectly off reflective surfaces.
- Replace the batteries when the low battery indicator shows to prevent incorrect measurements.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.
- Use the Product only as specified or hazardous laser radiation exposure can occur.

Table 1. Symbols

Symbol	Meaning	Symbol	Meaning
	Risk of danger. Important information. See Manual.		This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste. Go to Fluke's website for recycling information.
	Warning. Laser.		Conforms to European Union directives.
	Battery		Conforms to relevant Australian standards.
 沪制01120009号	Conforms to China Metrology Certification		Conforms to relevant South Korean EMC standards.

Maintenance

⚠ Caution

To prevent damage to the Product, do not leave the Product on or near objects of high temperature.

Clean the Product

Use soap and water on a damp sponge or soft cloth to clean the Product case. Carefully wipe the lens surface with a moist cotton swab. The swab may be moistened with water. See Figure 1.

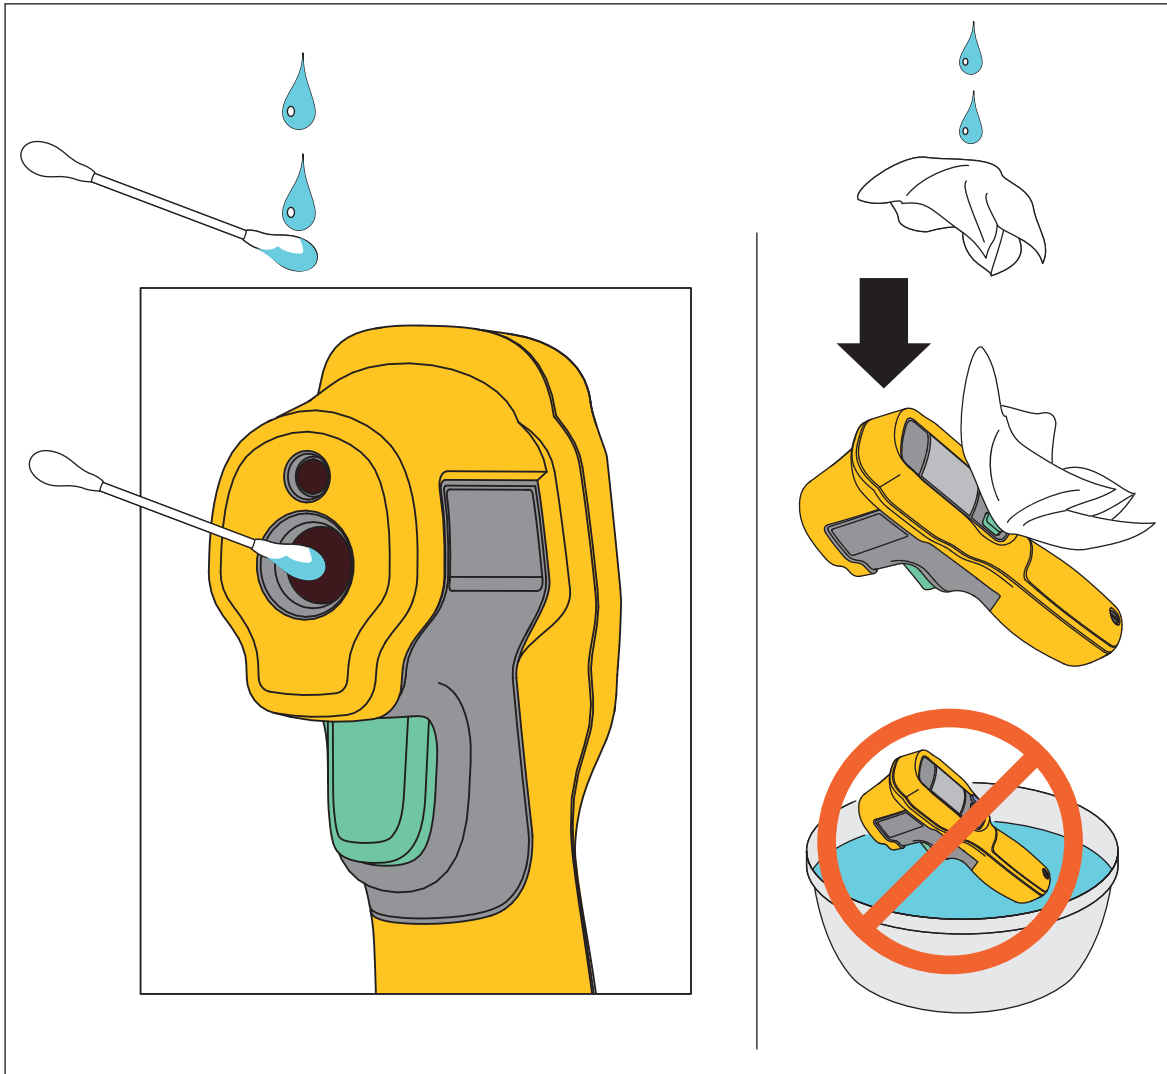


Figure 1. Clean the Product

hiy002.eps

Change the Battery

To install or change the AA IEC LR06 battery, use a flat-head screwdriver to remove the battery compartment door. Replace the battery as shown in Figure 2. Be sure to observe the correct polarity.

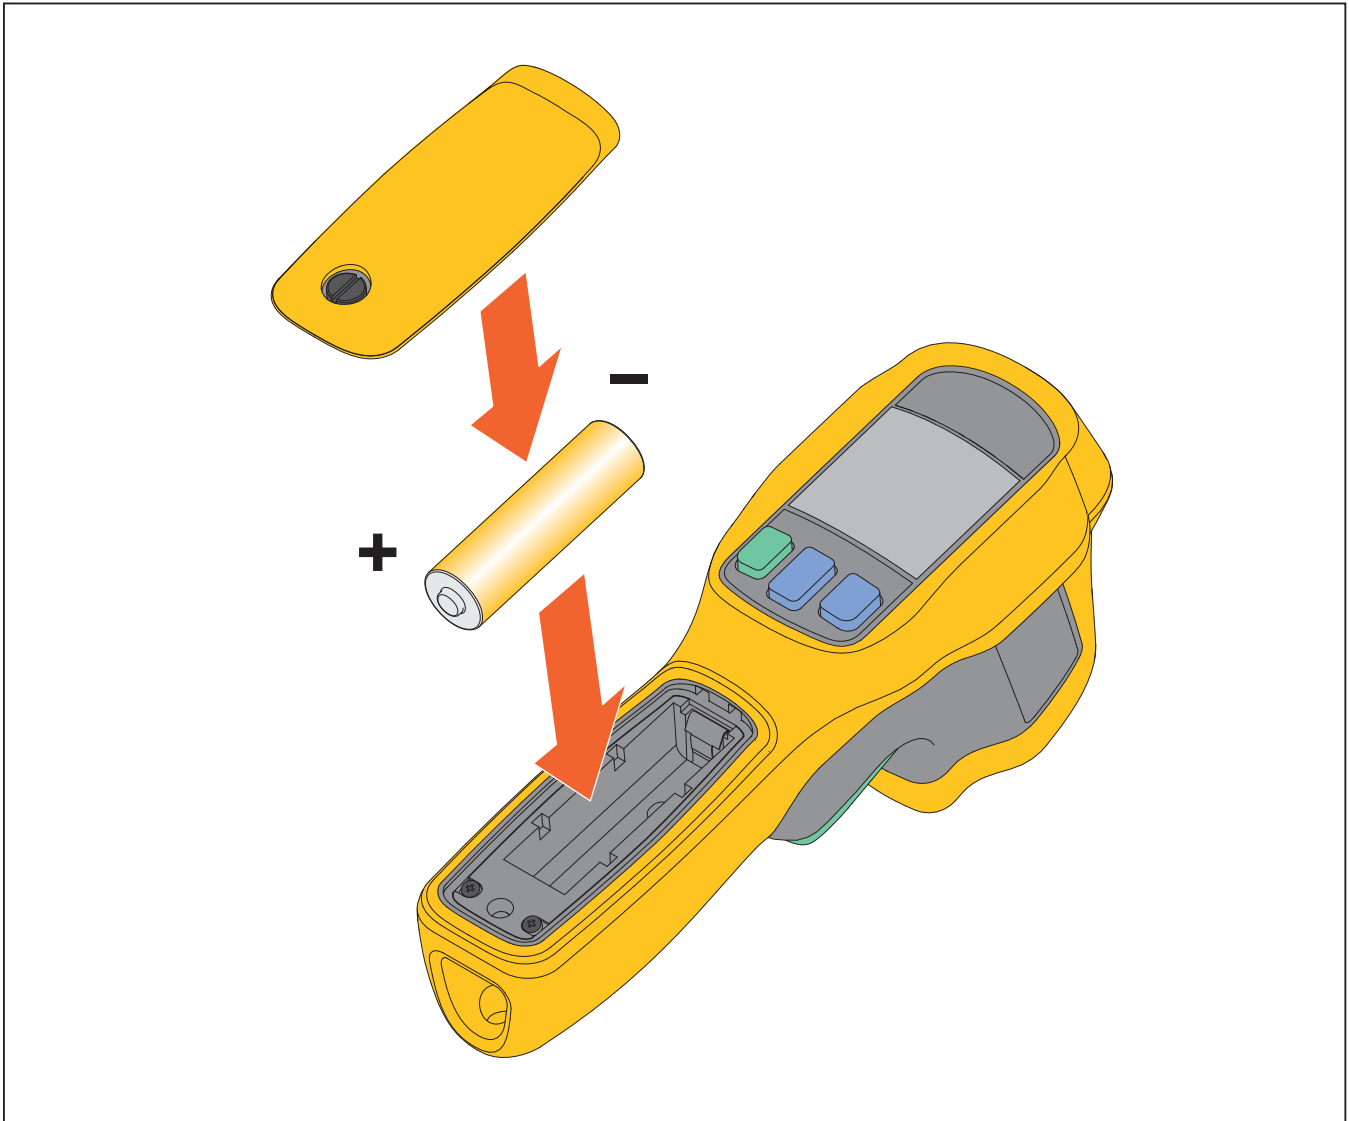


Figure 2. Change the Battery

hiy001.eps

Specifications

	62 MAX	62 MAX +
Temperature Range	-30 °C to 500 °C (-22 °F to 932 °F)	-30 °C to 650 °C (-22 °F to 1202 °F)
Accuracy (Calibration geometry with ambient temperature 23 °C ±2 °C)	≥0 °C: ±1.5 °C or ±1.5 % of reading, whichever is greater (≥32 °F: ±3 °F or ±1.5 % of reading, whichever is greater) ≥ -10 °C to <0 °C: ±2 °C (≥14 °F to <32 °F: ±4 °F) < -10 °C: ±3 °C (<14 °F: ±6 °F)	≥0 °C: ±1 °C or ±1 % of reading, whichever is greater (≥32 °F: ±2 °F or ±1 % of reading, whichever is greater) ≥ -10 °C to <0 °C: ±2 °C (≥14 °F to <32 °F: ±4 °F) < -10 °C: ±3 °C (<14 °F: ±6 °F)
Response Time (95 %)	<500 ms (95 % of reading)	<300 ms (95 % of reading)
Spectral Response	8 to 14 microns	
Emissivity	0.10 to 1.00	
Temperature Coefficient	±0.1 °C/°C or ±0.1 %/°C of reading (whichever is greater)	
Optical Resolution	10:1 (calculated at 90 % energy)	12:1 (calculated at 90 % energy)
Display Resolution	0.1 °C (0.2 °F)	
Repeatability (% of reading)	±0.8 % of reading or ±1.0 °C (2 °F), whichever is greater	±0.5 % of reading or ±0.5 °C (1 °F), whichever is greater
Power	1 AA IEC LR06 Battery	
Battery Life	10 hours with laser and backlight on	8 hours with laser and backlight on
Weight	255 g (8.99 oz)	
Size	(175 x 85 x 75) mm (6.88 x 3.34 x 2.95) inches	
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F)	
Storage Temperature	-20 °C to 60 °C (-4 °F to 140 °F), (without battery)	
Operating Humidity	10 % to 90 % RH non-condensing @ 30 °C (86 °F)	
Operating Altitude	2000 meters above mean sea level	
Storage Altitude	12,000 meters above mean sea level	
Drop Test	3 meters	
IP Rating	IEC 60529: IP 54	
Implement Standard	Q/SXAV37	
Laser Safety	IEC 60825-1, Class 2	
Electromagnetic Environment	IEC 61326-1: Portable	
Electromagnetic Compatibility	Applies to use in Korea only: Class A Equipment (Industrial Broadcasting & Communication Equipment) ^[1] [1] This product meets requirements for industrial (Class A) electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and is not to be used in homes.	

Performance Verification Tests

The subsequent performance tests verify the complete operation of the Product and check the accuracy of each function against Product specifications. If the Product fails any part of the test, calibration adjustment and/or repair is necessary. Product calibration can only be adjusted at the Fluke factory. To return your Product for calibration adjustment, call one of the numbers in the “Contact Fluke” section of this document.

Read the entire Performance Tests section before you make any adjustment.

Required Equipment

Table 2 shows the required equipment necessary for the performance tests.

Note

Fluke recommends plate blackbodies as verification equipment because cavity blackbodies have small field of view, which could increase uncertainty for a thermometer with low D:S. If cavity blackbodies are used to verify the Product, make sure that the distance between the cavity blackbody opening and the Product is equal to the diameter of the cavity blackbody opening \times 2. Where the temperature of the cavity tube near the outside is lower than the temperature of the cavity, readings will be lower. Moving the 62Max closer to the cavity opening may be necessary for the 62 Max to only measure the cavity temperature.

If other than Fluke blackbodies are used, the target should be checked for actual radiometric output with a more accurate device, such as a Heitronic KT19-82.

Table 2. Required Equipment

Item	Minimum Use Specifications	Calibration Equipment
2.1 Blackbody	Range: -10 °C to 100 °C	Fluke 4180
2.2 Blackbody	Range: 100 °C to 500 °C	Fluke 4181
2.3 Blackbody	Range: 500 °C to 650 °C	Plate Blackbody with 10 cm to 15 cm target. ^[1]
[1] Calibrate with an IR thermometer that has low uncertainty such as KT19 and TRT.		

Before the Performance Verification Tests

Before you do the performance verification tests:

- Performance verification tests are to be done within the temperature of 23 ± 3 °C and between 25 % and 60 % relative humidity.
- Make sure that all required calibration equipment has a valid calibration certificate and/or label.
- Make sure that any item(s) substituted for the equipment in Table 2 meets or exceeds the stated minimum use specifications.
- The correct radiometric temperature will need to be determined before blackbodies are used to make measurements.
- Make sure that the required calibration equipment is allowed a warm-up period as per manufacturer recommendations. See the documentation for the equipment.

To prepare the Unit Under Test (UUT) for verification:

1. Visually inspect the UUT outer case for cracks or damage.
2. Open the battery compartment and inspect the battery and battery compartment for corrosion or damage.
3. Install a new AA battery prior to verification.
4. Close the UUT battery compartment door.
5. Set the UUT temperature units for degrees Celsius ($^{\circ}\text{C}$) if necessary.
6. Push SEL until $^{\circ}\text{C}$ alone is shown. Change by pushing SET.

Performance Verification Test Procedures

Note

The subsequent verification test requires the blackbody emissivity to be set to 0.95 at all temperature points.

Note

For temperatures below ambient, to reduce the chance of condensation or ice buildup on the emitter plate of the 4180, it is recommended to install a clean dry air or nitrogen gas purge box on the front of the 4180 Blackbody. Although the purge box is recommended, it is optional. If temperature measurements are made without a purge box, refer to the 4180 User Manual for how to make proper temperature measurements below ambient. See Figure 3.

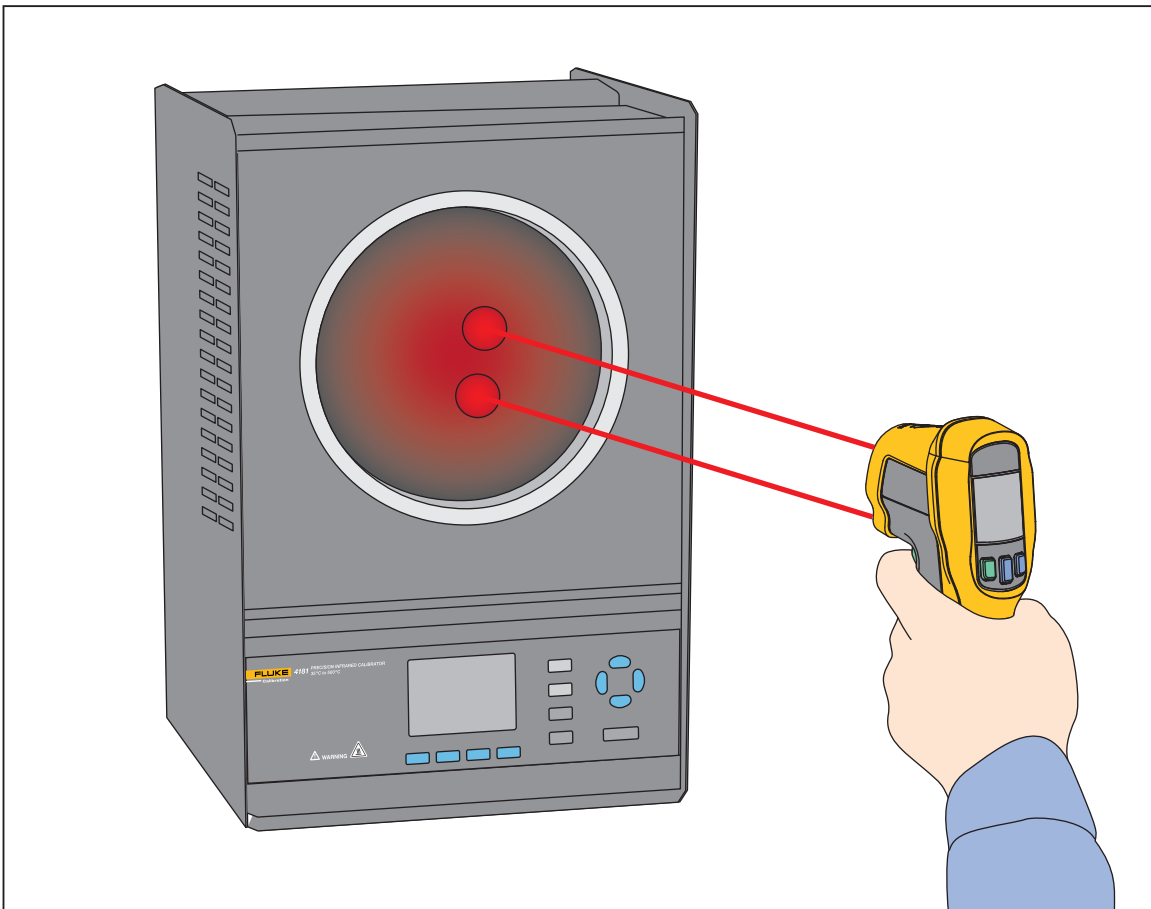


Figure 3. Aim the 62 Max + for Verification

hiy003.eps

1. Set blackbody emissivity and temperature for the first temperature listed in Table 3. Allow adequate time for the blackbody to stabilize. See the blackbody documentation.
2. Position the UUT at the correct distance from the blackbody listed in Table 3. Center the UUT laser(s) on the blackbody emitter plate. For the 62 MAX +, make sure that the midpoint of the two laser spots is centered on the blackbody plate. The 62 Max uses one laser.
3. Push and hold the UUT trigger for 5 to 6 seconds.
4. Release the trigger.
5. Record the UUT indication.
6. Move to a location that is not centered on the blackbody.
7. Make sure the UUT reading is within the limits listed in Table 3.
8. Repeat steps 1 through 7 for the remaining temperatures listed in the Temperature column of Table 3. The 62 Max is specified to 500 °C. 461 °C is the last temperature point to verify.
9. Set blackbodies to nominal values.

Table 3. Verification Tests

Distance (cm) ^[1]	Temperature (°C)	Emissivity	62 Max Limits (°C)	62 Max + Limits (°C)
Fluke 4180 points				
28	-10	0.95	-12.0 to -8.0	-12.0 to -8.0
28	0	0.95	-1.5 to 1.5	-1.0 to 1.0
28	65	0.95	63.5 to 66.5	64.0 to 66
Fluke 4181 point				
28	250	0.95	246.2 to 253.8	247.5 to 252.5
28	461	0.95	454.1 to 467.9	456.3 to 465.6
Fluke 62 Max + only above 500 °C				
25.5	580	0.95		574.2 to 585.8
[1] Distance is calculated based on the target size. Typically a spot size that is about 1/2 the target size provides the best results.				

Note

Fluke recommends plate blackbodies as verification equipment because cavity blackbodies have small field of view, which could increase uncertainty for a thermometer with low D:S. If cavity blackbodies are used to verify the Product, make sure that the distance between the cavity blackbody opening and the Product is equal to the diameter of the cavity blackbody opening × 2. Where the temperature of the cavity tube near the outside is lower than the temperature of the cavity, readings will be lower. Moving the 62Max closer to the cavity opening may be necessary for the 62 Max to only measure the cavity temperature.

Temperature verification is complete. If the Product does not pass the performance verification tests, calibration adjustment or repair is necessary. Product calibration can only be adjusted by Fluke. To return your Product for calibration adjustment, call one of the numbers in the “Contact Fluke” section of this document.

Blackbody Layout

Make sure that the distance between two blackbodies is more than 1 meter. Forced air or HVAC vents should not be near the surface of the radiation source. Do not have two blackbodies work face to face. For more detail about blackbody use, see the *Fluke 4180 Technical Guide*.

User-Replaceable Parts

To order replacement parts, call one of the numbers in the “Contact Fluke” section of this document. User-replaceable parts are listed in Table 4.

Table 4. User-Replaceable Parts

Description	Fluke Part Number	Quantity
Fluke 62 Max Rear Decal	4134155	1
Fluke 62 Max + Rear Decal	4134162	1
Fluke 62 Max Battery Door Assembly	4103199	1
Battery AA Alkaline	1311933	1
Fluke 62 Max + Carabineer Solid Aluminum, 2.3 in with spring hinge black finish	4149787	1
62 Max/62 Max + Users Manual	4060712	1

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for three years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

Компания «Life Electronics» занимается поставками электронных компонентов импортного и отечественного производства от производителей и со складов крупных дистрибьюторов Европы, Америки и Азии.

С конца 2013 года компания активно расширяет линейку поставок компонентов по направлению коаксиальный кабель, кварцевые генераторы и конденсаторы (керамические, пленочные, электролитические), за счёт заключения дистрибьюторских договоров

Мы предлагаем:

- Конкурентоспособные цены и скидки постоянным клиентам.
- Специальные условия для постоянных клиентов.
- Подбор аналогов.
- Поставку компонентов в любых объемах, удовлетворяющих вашим потребностям.
- Приемлемые сроки поставки, возможна ускоренная поставка.
- Доставку товара в любую точку России и стран СНГ.
- Комплексную поставку.
- Работу по проектам и поставку образцов.
- Формирование склада под заказчика.
- Сертификаты соответствия на поставляемую продукцию (по желанию клиента).
- Тестирование поставляемой продукции.
- Поставку компонентов, требующих военную и космическую приемку.
- Входной контроль качества.
- Наличие сертификата ISO.

В составе нашей компании организован Конструкторский отдел, призванный помогать разработчикам, и инженерам.

Конструкторский отдел помогает осуществить:

- Регистрацию проекта у производителя компонентов.
- Техническую поддержку проекта.
- Защиту от снятия компонента с производства.
- Оценку стоимости проекта по компонентам.
- Изготовление тестовой платы монтаж и пусконаладочные работы.



Тел: +7 (812) 336 43 04 (многоканальный)

Email: org@lifeelectronics.ru

www.lifeelectronics.ru